



MicroSurvey FieldGenius 2012 v6.0.6 (7/19/2013)

Copyright © 2013 MicroSurvey Software Inc.  
All Rights Reserved



---

## MicroSurvey End-User License Agreement

This MicroSurvey End-User License Agreement ("Agreement") is a legal and binding agreement between you ("Licensee") and MicroSurvey Software Inc., a BC corporation ("MICROSURVEY") concerning the use of the MicroSurvey products (the "Product"), the software provided in connection with the use and operation of the Product, including firmware and stored measurement data (collectively the "Software") and all related documentation provided in connection with the acquisition of the Product ("Documentation"). The Software includes software owned by, and licensed from, third party licensors.

By clicking the "**I ACCEPT**" check box and completing the process of installing the Software, LICENSEE consents to and agrees to be bound by all of the terms and conditions of this Agreement. BY CLICKING THE "I REJECT" CHECK BOX or IF LICENSEE disagrees with any of the terms or conditions of this Agreement, LICENSEE IS not permitted to install and/or use the Software, PRODUCT AND DOCUMENTATION. IF LICENSEE HAS ANY questions OR COMMENTS CONCERNING THIS AGREEMENT LICENSEE MAY CONTACT MICROSURVEY AT Westbank, BC Canada.

1. **Title to Product and Rights to Use Software and Documentation.** Title to the Product and the rights to use the Software and Documentation are conditioned upon the payment of the required purchase price and any applicable license and maintenance fees and Licensee's acceptance of the terms and conditions of this Agreement.
  
2. **License.**
  1. **License Grant.** MICROSURVEY hereby grants Licensee a nonexclusive, non-transferable, non-sublicensable right to (i) install and use one copy of the Software and Documentation on the Product and one copy for use on no more than one personal computer simultaneously, and , (ii) to access the stored measurement data generated by the Software, for Licensee's own internal business purposes and in accordance with the terms and conditions of this Agreement. MICROSURVEY also hereby grants Licensee a nonexclusive, non-sublicensable right to reproduce the Documentation, solely as necessary for Licensee's internal use of the Product and Software.
  2. **Conditions and Restrictions.** The following conditions and restrictions apply to the use of the Product, Software and Documentation:

- i. Licensee shall not, and shall not attempt to, reverse engineer, decompile, disassemble or otherwise attempt to identify the source code of any object code portions of, distribute, modify, encrypt, or create derivative works of the Software, Documentation, and/or any stored measurement data in whole or in part, including, but not limited to, stored measurement data.
  - ii. Licensee shall not use the Software or Documentation for any purpose not expressly permitted by this Agreement.
  - iii. Licensee shall not copy any part of the Software, except that Licensee may make one copy of the Software for backup purposes only.
  - iv. Licensee agrees not to remove or destroy any copyright, logo, trademark, trade name, proprietary markings, or confidentiality legends placed upon or contained within the Software or Documentation. Licensee shall not, and agree not to assist others to, circumvent or disable the license provisioning technology for the Software.
  - v. Licensee's license to the Software under this Agreement continues until it is terminated by Licensee or MICROSURVEY. Licensee may terminate the license by discontinuing use of all or any of the Software and by destroying all Licensee copies of the Software and Documentation.
  - vi. This Agreement will terminate automatically if (x) Licensee violate any of the terms or conditions of this Agreement, (y) MICROSURVEY publicly posts a written notice of termination on its website [www.microsurvey.com](http://www.microsurvey.com) (that, or any successor site, the "Site"); or (z) MICROSURVEY revokes this Agreement or issues a new agreement in writing or electronic form and conditions Licensee continued use of the Software upon acceptance of the new agreement.
3. **Ownership.** All rights, title and interest in and to the Software and Documentation including, without limitation, all copyright, patent, trade secret and other intellectual property rights shall at all times remain the property of MICROSURVEY, its licensors, or its suppliers, as applicable. The Software and Documentation are licensed, not sold, and are protected by copyright and other intellectual property laws and treaties. Licensee shall take appropriate steps reasonably calculated to notify others of MICROSURVEY and its licensor's/suppliers' ownership of the Software and Documentation.
4. **Warranty.** MICROSURVEY warrants that the Product will, for 90 days after the Effective Date (the "Warranty Period"), substantially conform to the Documentation; provided, that Licensee must notify MICROSURVEY in writing of any breach of the foregoing warranty

---

within the Warranty Period. For any breach of the foregoing warranty reported during the Warranty Period, MICROSURVEY will use reasonable efforts to promptly correct such defect without further charge. If MICROSURVEY is unable to correct such defect, then MICROSURVEY will refund the license fees paid for the Product. This represents MICROSURVEY'S exclusive liability and Licensee's sole and exclusive remedy in the event of a breach of the foregoing warranty.

5. **Warranty Disclaimer.** EXCEPT AS DESCRIBED IN SECTION 4 (WARRANTY), MICROSURVEY HEREBY DISCLAIMS ALL WARRANTIES RELATING TO THE PRODUCT, SOFTWARE, AND DOCUMENTATION, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE. MICROSURVEY DOES NOT REPRESENT THAT THE OPERATION OF THE PRODUCT AND/OR SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, MICROSURVEY MAKES NO WARRANTY THAT: (A) OPERATION OF THE PRODUCT AND/OR SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, (B) THE PRODUCT AND/OR SOFTWARE WILL MEET LICENSEE SPECIFIC NEEDS, (C) SPECIFIC RESULTS WILL BE ACHIEVED WITH THE PRODUCT AND/OR SOFTWARE, OR (D) ALL ERRORS OR FAILURES WILL BE CORRECTED. IN NO EVENT SHALL MICROSURVEY'S, ITS LICENSORS', OR ITS SUPPLIERS' LIABILITY TO LICENSEE FOR THE PRODUCT AND/OR SOFTWARE, WHETHER BASED ON CONTRACT, TORT, WARRANTY, OR ANY OTHER LEGAL THEORY, EXCEED THE AMOUNT OF PURCHASE PRICE PAID FOR THE PRODUCT AND ANY RELATED LICENSE OR MAINTENANCE FEES PAID BY LICENSEE.
6. **Exclusion of Damages.** TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL MICROSURVEY, ITS LICENSORS, OR ITS SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR OTHER DATA OR INFORMATION, OR FOR BUSINESS INTERRUPTION) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT AND/OR SOFTWARE, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF MICROSURVEY, ITS LICENSORS OR ANY SUPPLIERS, AND EVEN IF MICROSURVEY OR ANY OF ITS LICENSORS OR SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR

LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO LICENSEE.

7. **Limitation of Liability.** NOTWITHSTANDING ANY DAMAGES THAT LICENSEE MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF MICROSURVEY AND ANY OF ITS LICENSORS OR SUPPLIERS UNDER ANY PROVISION OF THIS AGREEMENT AND LICENSEE EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY LICENSEE FOR THE PRODUCT AND ANY RELATED LICENSE OR MAINTENANCE FEES PAID BY LICENSEE. THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS (INCLUDING SECTIONS 5 AND 6 ABOVE) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE. LICENSEE ACKNOWLEDGES THAT (A) THE PROVISION OF THE PRODUCT AND SOFTWARE IS CONDITIONAL UPON MICROSURVEY EXCLUDING AND/OR LIMITING ITS AND ITS LICENSORS' AND SUPPLIERS' LIABILITY TO LICENSEE IN ACCORDANCE WITH THIS AGREEMENT, AND (B) THE EXCLUSIONS AND LIMITATION CONTAINED IN THIS AGREEMENT ARE FAIR AND REASONABLE IN ALL THE CIRCUMSTANCES KNOWN AT THE DATE OF THIS AGREEMENT.
8. **Indemnification.** Licensee agrees to defend, indemnify and hold MICROSURVEY, its affiliates, distributors, licensors, and suppliers harmless from and against any and all losses, damages, costs or expenses (including reasonable attorney's fees) (a) suffered by Licensee related in any way to the Product, Software, or this Agreement and/or (b) related to any claim or demand made by any third party in connection with or arising out of (i) any breach by Licensee of any of the terms and conditions of this Agreement, (ii) Licensee use or misuse of the Product or Software, (iii) Licensee violation of applicable laws, and/or (iv) Licensee violation of the rights of any other person or entity. MICROSURVEY reserves the right, at its own expense, to assume the exclusive defense and control of (but not liability for) any matter otherwise subject to indemnification by Licensee. Licensee will be liable to MICROSURVEY for reasonable attorney's fees in any such case.
9. **Support.**

  - a. **General.** Except as set forth in Section 9(b) (Website Support) and 9(c) (Contract Support), MICROSURVEY shall have no obligation under this Agreement to maintain or

---

support the Software. Licensee may contact MICROSURVEY to inquire about MICROSURVEY'S commercially available support and maintenance services provided pursuant to separate agreements. This Agreement shall not obligate either party to enter into any such separate agreement. Any updates or error corrections to the Software that may be provided to Licensee from time-to-time, if any, shall be deemed Software hereunder and shall be licensed to Licensee under the terms and conditions of this Agreement. If any such updates or error corrections are made available to Licensee, then Licensee shall promptly (a) implement such updates or error corrections, (b) cease using the earlier versions without such updates or error corrections, and (c) make such updates or error corrections available to the users of the earlier versions. Licensee shall be solely responsible for procuring all hardware and third-party software necessary to operate the Software.

- b. Website Support. MICROSURVEY will use reasonable commercial efforts to host and maintain a web site (the "Support Site") for the Software during its commercial life (as reasonably determined by MICROSURVEY) that will include some or all of the following features:
- A "Frequently Asked Questions" section with answers to common questions about the Software.
  - A searchable "Helpdesk" section with general user instructions and information about the Software.
  - A link to allow end users of the Software to download any bug fixes, error corrections or other updates to the Software that MICROSURVEY may make available through the Site.
  - "Contact MICROSURVEY" electronic response capability. MICROSURVEY will use reasonable commercial efforts to respond within two (2) business days to a customer inquiry received via this system. Answers to such inquiries will be added to the FAQ's, as appropriate.
- c. Contract Support. Upon mutual agreement in writing between Licensee and MICROSURVEY, or between Licensee and one of MICROSURVEY'S authorized reseller's, MICROSURVEY will provide contracted support services to Licensee as may be agreed upon and related to the Software.

**10. Term and Termination.**

- a. This Agreement is effective until terminated. Licensee may terminate this Agreement at any time, with or without cause, upon notice to MICROSURVEY. MICROSURVEY may terminate this Agreement for Licensee's breach of this Agreement.
- b. Upon termination of this Agreement, Licensee shall immediately cease all use of the Software and Documentation and return to MICROSURVEY all copies of thereof within five (5) days after such termination. Upon MICROSURVEY'S request, Licensee will certify in writing to MICROSURVEY that all such copies have been returned to MICRO-SURVEY. The following provisions of this Agreement shall survive termination or expiration of this Agreement: Sections 2(b) (Restrictions), 3 (Ownership), 5 (Warranty Disclaimer), 6 (Exclusion of Damages), 7 (Limitation of Liability), 10 (Term and Termination), and 11 (General).

**11. General.**

- a. **Assignment.** MICROSURVEY may assign this Agreement without notice to Licensee. Licensee shall not assign this Agreement or transfer any of the rights, duties, or obligations arising under this Agreement without the prior written consent of MICRO-SURVEY. This Agreement shall be binding upon, and inure to the benefit of, the permitted successors and assigns of the parties thereto.
- b. **Amendments; Modifications.** Notices of changes to this Agreement or other matters may be made to Licensee by displaying notices or links to notices to Licensee generally on the Site.
- c. **Governing Law; Forum; Attorney's Fees, Injunctive Relief.** The terms of this Agreement shall be construed and governed exclusively by the laws of the province of British Columbia, excluding the application of its conflict of law provisions and rules. Any dispute, controversy or claim between the parties arising out of or relating to this Agreement or a breach of this Agreement shall be settled pursuant to the terms of this Section 11(c) by arbitration before three neutral arbitrators (selected from a panel of persons having experience with and knowledge of the computer business), provided at least one of which arbitrators shall be an attorney, and administered by the Arbitrators Association of British Columbia in accordance with its Commercial Arbitration Rules in Kelowna, British Columbia. Any provisional or equitable remedy which would be available from a court of law shall be available from the arbitrators to the parties. Judgment upon the award of the arbitrators may be enforced in any court having jurisdiction thereof. The parties hereby consent to the non-exclusive jurisdiction of the courts of the



---

Province of British Columbia for any action (i) to compel arbitration, (ii) to enforce the award of the arbitrators or (iii) prior to the appointment and confirmation of the arbitrators, for temporary, interim or provisional equitable remedies, and to service of process in any such action by registered mail, return receipt requested, or by any other means provided by law. The application of the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded.

- d. **Severability.** The illegality, invalidity or unenforceability of one or more provisions of this Agreement shall not affect the legality, validity or enforceability of any other provision, and this Agreement shall be construed in all respects as if such illegal, invalid or unenforceable provision were deemed amended to achieve as near as possible the same economic effect as the original in a legal, valid and enforceable manner if possible.
- e. **Further Relationships.** Neither party is obligated by this Agreement to enter into any further business relationship after the termination or expiration of this Agreement.
- f. **Notices.** All notices under this Agreement shall be in writing, and shall be deemed given when personally delivered, when received if by nationally recognized courier, or three days after being sent by postage prepaid, certified or registered Canadian Mail, as applicable, to MICROSURVEY at MICROSURVEY's address as set forth herein or to Licensee at the address that Licensee provided upon entering into this Agreement, or such other address as a party last provided to the other by written notice.
- g. **Independent Contractor.** MICROSURVEY and Licensee are independent contractors. No partnership, joint venture, or other joint relationship is created by this Agreement.
- h. **Entire Agreement.** This Agreement represents the entire agreement between the parties relating to its subject matter and supersedes all prior representations, discussions, negotiations and agreements. All changes, modifications, additions or deletions shall be effective immediately upon notice thereof, which may be given by means including, but not limited to, posting on the Site, or by electronic or conventional mail, or by any other means by which Licensee may obtain notice thereof. Use of the Product and/or Software after such notice constitutes acceptance of such changes, modifications or additions. This Agreement may be amended at any time by mutual agreement of the parties.

---

## **Technical Support**

MicroSurvey Software Technical Support is available to help you get the most out of your MicroSurvey program. The following information explains how to prepare for your call so that your inquiry can be answered promptly and accurately.

### **Please prepare yourself before you call for Technical Support**

Take a few minutes before you place your call to check the printed documentation and the online help files to see if the answer is already at your disposal. Our Web site on the Internet can also save time. Please check it for assistance if you can. Please have the following information available if requested: Hardware model, version of the program, and your Technical Support Number.

Please make sure that you have all the steps you completed prior to your problem and can explain them to the technical support representative. We may ask that you forward a copy of your data to us if we cannot find the problem immediately.

MicroSurvey offers a 90-day complimentary support period to all of our registered users, starting the date of purchase. Introductory support is available weekdays between 8:00 am and 5:00 pm (Pacific Time) excluding holidays.

### **Yearly Support**

For clients who have had their original 90-day complimentary support period expire and feel that they will need on going support over the next year, we have a Yearly Support Contact option available. This gives you the ability to contact us for technical support, as much as you require, and you pay a flat fee once a year. This option is not to be used in place of training but is to assist you on the occasions when you really need it. The charge for the Yearly Support Contract is to be billed and paid for prior to the support commencing. This rate is subject to change, call for current rates.

### **Electronic Support**

MicroSurvey maintains and provides at no charge, our Internet Web site at the following address: [www.microsurvey.com](http://www.microsurvey.com)

This web site has sections on frequently asked questions, Technical Notes, Technical Specifications, and as required, free updates and program fixes, along with a lot of other helpful information.

### **Training**

MicroSurvey Software Inc. can provide training to you, in your office or in a classroom situation (where facilities and numbers allow). MicroSurvey has training staff that will travel to almost anywhere and provide you with the professional skills you require to operate your MicroSurvey program. Please feel free to call and ask for a quotation or inquire about potential classroom situations. Your local dealer may also be able to setup or arrange a training session for you. Contact our head office for more information about training.



---

## **MicroSurvey Contact Information**

### **Corporate Head Office**

MicroSurvey Software Inc.  
205 – 3500 Carrington Road  
Westbank, BC V4T 3C1  
Canada

Office Hours: 8:00 am to 5:00 pm (Pacific Time)

(Monday to Friday, except holidays)

Sales & Technical Support 1-800-668-3312

International Voice: +1 250 707 0000

Fax: (250) 707-0150

---

### **Internet**

Website: [www.microsurvey.com](http://www.microsurvey.com)

Support Helpdesk: [www.microsurvey.com/helpdesk](http://www.microsurvey.com/helpdesk)

General Information E-Mail: [info@microsurvey.com](mailto:info@microsurvey.com)



# TABLE OF CONTENTS

MicroSurvey End-User License Agreement.....	3
Technical Support.....	10
MicroSurvey Contact Information.....	12
<b>Table of Contents.....</b>	<b>14</b>
<b>Getting Started.....</b>	<b>24</b>
Introduction.....	24
Hardware Requirements.....	24
Installing FieldGenius.....	26
Starting FieldGenius.....	26
Registration & Demo Mode.....	27
Activation.....	27
Available Modules.....	28
Run Demo Mode.....	28
Retrieve Lost Key Codes (passwords).....	29
Technical Support.....	29
Project Manager.....	29
Project Review.....	30
Quick Start: Open Existing Project.....	31
Quick Start: New Project.....	34
Common FieldGenius Buttons.....	42
FieldGenius Project Files.....	42
Automatic Save.....	43
Data Entry (Extended Edit Fields).....	43
Keypad.....	44
Distance Entry & Recall.....	45
Distance Entry.....	45
Distance Recall.....	46
Unit Modifiers.....	46
Distance Entry Examples.....	47

Using Math Operations.....	49
Direction Entry & Recall.....	49
Direction Entry.....	49
Direction Recall.....	50
Unit Modifiers.....	50
Direction Entry Examples.....	51
Using Math Operations.....	53
<b>Main Interface.....</b>	<b>54</b>
Main Interface.....	54
Display Toolbar.....	56
Observation Toolbar.....	57
Topo Toolbar.....	58
3D View Toolbar.....	60
Mini Toolbar.....	61
Instrument Toolbar.....	62
Robotic Instrument Toolbar.....	63
GPS Toolbar.....	65
Map Select Toolbar.....	66
<b>Points / Lines / Descriptions.....</b>	<b>68</b>
Points.....	68
Point Toolbar.....	68
Select Point Toolbar.....	70
Point Averaging.....	71
Point Database.....	71
AutoMap Library.....	72
Point Patterns.....	76
Pattern Toolbar.....	76
Pattern Editor.....	78
Partition Lines/Arcs.....	79
Notes.....	80
Feature List.....	82

---

Raw File Comment.....	84
Active Linework.....	85
Figures.....	87
Line Toolbar.....	88
Select Line Toolbar.....	89
Figure List.....	91
Using Active Figures.....	92
Figure Direction Marker.....	95
New Figure.....	96
Switching Active Figures.....	97
3-Point Arcs.....	98
Splines (Curvy) Figures.....	99
Closing Figures.....	100
End (complete) a Figure.....	101
Re-Activating Figures.....	101
Deleting Figures.....	102
Draw Option Defaults.....	103
Drawing Tool.....	105
Smart Tags.....	110
<b>Main Menu.....</b>	<b>111</b>
Main Menu.....	111
Project Manager.....	112
<b>Roads.....</b>	<b>114</b>
Roads Manager.....	114
<b>Settings Menu.....</b>	<b>117</b>
Settings Menu.....	117
Options.....	118
Unit Settings.....	130
Instrument Selection.....	132
Coordinate System Settings.....	134
Select Horizontal Coordinate System.....	136

---



Add Predefined System.....	137
New/ Edit user-defined System.....	138
Automatic Backup.....	141
Localization (Site Calibration).....	141
Additional Grid Shift Files and Geoids.....	141
Older FieldGenius Mapping Files.....	142
Keyboard Shortcuts.....	142
Project Information.....	145
<b>Survey Methods Menu.....</b>	<b>146</b>
Survey Methods Menu.....	146
Temporary (No Store).....	149
Occupy Point.....	149
Backsight Measure Modes.....	152
Backsight Summary.....	153
Sideshot.....	156
Sideshot (Auto Store).....	157
MultiSet.....	158
Resection.....	164
Check Point.....	169
Check Backsight.....	170
Horizontal Angle Offset.....	171
Vertical Angle Offset.....	174
Distance Offset.....	175
Manual Distance.....	177
Manual Entry.....	178
Two Line Intersection.....	179
Line - Angle Offset.....	181
Line - Distance Offset.....	183
Line - Perpendicular Point.....	187
Trilateration.....	190
Observe Benchmark.....	192

---

Add Invert .....	193
Vertical Plane Projection .....	194
Point Scanning .....	197
<b>Survey Tools Menu .....</b>	<b>199</b>
Survey Tools Menu .....	199
Store / Edit Points .....	200
Drawing Tool .....	203
Delete Last Saved Point .....	208
Raw File Viewer .....	208
COGO History Viewer .....	211
Traverse Report .....	212
Traverse Adjustment .....	217
Point Patterns .....	218
Pattern Toolbar .....	218
Pattern Editor .....	219
GPS Local Transformation .....	221
Transform Points - Helmerts Transformation .....	225
<b>Calculations Menu .....</b>	<b>231</b>
Calculations Menu .....	231
Traverse / Intersection .....	232
Inverse .....	236
Offset Intersection .....	238
Offset Tool .....	239
Rotate/Translate/Scale Points .....	242
Curve Calculator .....	247
Area Calculator .....	248
Defining an Area .....	248
Enclosed Area Calculation .....	249
Determine Area (Predetermined) .....	250
Triangle Calculator .....	257
Coordinate (Geodetic) Calculator .....	258

---

Calculator.....	260
Function.....	261
Converting Units.....	263
Basic Mathematical Operations.....	263
Advanced Mathematical Operations.....	264
<b>Staking Menu.....</b>	<b>266</b>
Staking Menu.....	266
Stake Points.....	267
Staking Toolbar.....	270
Stake Line/Arc.....	274
Stake Line.....	274
Stake Arc.....	277
Stake Surface.....	278
Staking List.....	279
Stake Alignment.....	282
Cut Sheet Reports.....	282
Stake Elevation.....	285
<b>Data Manager Menu.....</b>	<b>287</b>
Data Manager Menu.....	287
Point Database.....	288
Map Data Layers Manager.....	290
Surfaces.....	297
Surface Settings.....	300
Volume Calculation.....	302
Realtime DTM Surface.....	304
Creating a Realtime DTM in FieldGenius.....	304
Adding Breaklines to a Surface.....	306
Contouring.....	308
Import DTM Surface File (QSB).....	309
Parcels Manager (XML).....	309
<b>Import/Export Menu.....</b>	<b>311</b>

---

Import/Export Menu .....	311
<b>Import/Export Menu .....</b>	<b>313</b>
Import/Export Menu .....	313
ASCII Coordinate File Import .....	314
ASCII Coordinate File Export .....	318
DXF File Import .....	320
DXF File Export .....	321
LandXML File Import .....	322
LandXML File Export .....	325
Template Import .....	326
Template Export .....	327
Fieldbook File Export .....	329
SDR File Export .....	329
Shapefile Export .....	330
Import / Export User Defined Coordinate Systems .....	331
Backups .....	332
<b>About FieldGenius .....</b>	<b>333</b>
About FieldGenius .....	333
Target Manager .....	334
Target List .....	338
New Target .....	339
Edit Target .....	340
<b>Total Station Reference .....</b>	<b>342</b>
Conventional Total Station .....	342
Robotic Total Station .....	343
Instrument Selection .....	345
Make and Model Settings .....	346
Total Station Profile .....	347
Model and Communication .....	348
Radio Configuration .....	351
EDM Settings .....	352

---

Measurement Tolerance.....	355
Search Settings.....	356
No Communication.....	358
Instrument Toolbar.....	359
Robotic Instrument Toolbar.....	360
Instrument Settings.....	361
Target Manager.....	363
<b>Survey Methods Menu.....</b>	<b>368</b>
Survey Methods Menu.....	368
Set Angle.....	371
Check Level.....	372
Select GPS Profile.....	374
GPS Reference Profile.....	375
GPS Rover Profile.....	376
GPS Model and Communication.....	377
GPS Tolerance (Reference).....	380
GPS Tolerance Modes (Rover).....	381
Description.....	381
Masks.....	381
Real Time Tolerances.....	381
Standard Deviation.....	382
Point Tolerance.....	383
Post Processing Tolerances.....	383
GPS Antenna Height.....	384
GPS Auto Recording.....	385
Overview - Reference Receiver.....	385
Select Reference Position Modes.....	386
GNSS Measurement Modes - Reference (Base) Receiver.....	386
Overview Reference Position Modes.....	388
Overview - Rover Receiver.....	390
Rover Measurement Modes.....	391

---

GNSS Measurement Modes - Rover Receiver.....	391
Rover Measurement.....	393
GNSS Measurement Mode Offset.....	394
Measurement Mode Local Transformation Point.....	395
Use For Local Transformation.....	395
Check Point.....	395
GPS Toolbar.....	397
Correction Link.....	398
Correction Information.....	399
GPS Satellite Plot.....	400
GPS Satellite List.....	401
GPS Settings.....	402
Sensor Information.....	407
Position Information.....	407
Raw Data Logging.....	408
Command Console.....	409
Coordinate System Settings.....	410
Select Horizontal Coordinate System.....	412
Add Predefined System.....	413
New/ Edit user-defined System.....	414
Automatic Backup.....	417
Localization (Site Calibration).....	417
Additional Grid Shift Files and Geoids.....	417
Older FieldGenius Mapping Files.....	418
Datum Grid Editor.....	418
Import / Export User Defined Coordinate Systems.....	422
Backups.....	423
Geoid Models.....	423
Grid Shift Files.....	424
GPS Local Transformation.....	424
Local Transformation.....	428

---

Local Transformation Example A .....	431
Local Transformation Example B .....	436
Local Transformation Example C .....	440
<b>Roads</b> .....	<b>448</b>
Roads Manager .....	448
Manage Road .....	450
Manual Entry - Alignment C/L .....	451
Adding an Element .....	452
Manual Entry - Vertical Profile .....	458
Manual Entry - Template .....	463
Advanced Template Editing .....	467
Advanced Zone Edit – Widening Example .....	467
Advanced Zone Editing – Superelevation .....	470
LandXML Cross Sections .....	473
Alignment DTM Surface .....	474
Alignment Staking - Part 1 .....	474
Alignment Offset Staking .....	480
Alignment Slope Staking .....	485
<b>Connecting to Computer</b> .....	<b>492</b>
Microsoft ActiveSync / Windows Mobile Device Center .....	492
Installing ActiveSync / Windows Mobile Device Center .....	492
Connecting ActiveSync / Windows Mobile Device Center .....	493
MicroSurvey Transfer .....	496
Synchronize with MicroSurvey CAD or inCAD .....	497
<b>RAW File Reference</b> .....	<b>500</b>
Raw File Record Types .....	500
Conventional Raw Data Records .....	500
GPS Raw Data Records .....	507
<b>Index</b> .....	<b>512</b>

---

# GETTING STARTED

## Introduction

MicroSurvey FieldGenius was designed for Land Surveying, Civil Engineering, Seismic Surveying, and Construction Staking professionals to provide unequalled data collection simplicity and field calculating performance.

The Graphic User interface allows you to build the drawing as you measure, providing you with instant visual confirmation of accurate data collection and survey calculations. It includes the ability to draw linework as you measure from point to point without the need for cumbersome line coding.

FieldGenius takes advantage of the Windows CE touch screen capability by allowing you to tap points and lines in your drawing to open toolbars with all the function you need instantly. Functions that are not available directly from FieldGenius graphics display are available from a simple main menu which is organized by task. Please spend some time looking over this document or watch our movies to become familiar with the functionality of FieldGenius.

Once you've collected your data in the field you can export it directly out of FieldGenius using many different file types such as ASCII, DXF, XML, SDR, or ESRI Shapefiles. If you have MicroSurvey CAD or inCAD desktop software, then you can read your FieldGenius projects into it directly. FieldGenius raw file is based on the popular industry-standard TDS RW5 format which means you probably already have software that can import this raw file type and process it. This means you don't need to purchase expensive products to process your FieldGenius projects.

Importing data into FieldGenius is just as easy as exporting. You can import ASCII, XML and DXF files directly into FieldGenius.

Our instrument control is easy to use and very powerful. Access to your instrument controls is available on the main interface at all times so there is no need to swap to other screens or menus.

As always, MicroSurvey welcomes your comments and suggestions for our products.

## Hardware Requirements

FieldGenius 2012 may be installed on the following Windows CE, PocketPC, and Windows Mobile devices. We recommend that you purchase a compact flash sleeve for some of the devices and store your program and data files on the compact flash card. Some devices will lose data if you forget to charge the device for a few days. It is well worth the investment to have secure data!

FieldGenius 2012 may also be installed on any Desktop, Laptop, or Tablet PC running Windows XP SP3, Windows Vista SP2, or Windows 7.



- **Juniper Systems Allegro CX** - FieldGenius installs to C\_Drive by default which is secure.
- **Juniper Systems Allegro MX** - FieldGenius installs to secure RAM by default.
- **Juniper Systems Archer** - FieldGenius installs to secure RAM by default.
- **Juniper Systems Mesa** - FieldGenius installs to secure RAM by default.
- **MicroSurvey Tracker, Tracker Xtreme** - FieldGenius installs to SystemCF by default which is secure.
- **Nautiz X7** - FieldGenius installs to secure RAM by default.
- **Algiz 7** - FieldGenius installs to secure RAM by default.
- **Carlson Explorer** - FieldGenius installs to SystemCF by default which is secure.
- **Carlson Surveyor+** - FieldGenius installs to secure RAM by default.
- **Compaq iPAQ Pocket PC H4100/3600/3700/3800/3900** series or newer - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to a storage card. 64 MB of RAM required.
- **Compaq iPAQ Pocket PC H3210 and H3215** - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to a storage card.
- **HP iPAQ (Windows Mobile 2003 / 2003SE)** - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to a storage card.
- **HP iPAQ (Windows Mobile 5 / 6)** - FieldGenius installs to secure RAM by default; a storage card is not necessary for persistent storage.
- **Leica RX-1250** - FieldGenius installs to StorageCard by default which is secure.
- **Leica TS15, CS10 and CS15** - FieldGenius installs to secure RAM by default; a storage card is not necessary for persistent storage.
- **Sokkia SHC250** - FieldGenius installs to secure RAM by default.
- **Sokkia SHC2500** - FieldGenius installs to the SystemCF by default which is secure.
- **Sokkia SRX (onboard)** - FieldGenius must be installed to ROMDisk which is secure.
- **Symbol PDT 8100 Pocket PC** - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to a storage card.
- **TDS Nomad** - FieldGenius installs to secure RAM by default.
- **TDS Ranger (Windows Mobile 2003SE)** - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to Disk.
- **TDS Ranger (Windows Mobile 5)** - FieldGenius installs to secure RAM by default.

- **TDS Recon (Pocket PC)** - FieldGenius installs to volatile RAM by default which is not secure; you should install the program to Built-in Storage.
- **TDS Recon (Windows Mobile 5 / 6)** - FieldGenius installs to secure RAM by default.
- **Thales Mobile Mapper CE / CX** - FieldGenius installs to RAM by default which is not secure; you should install the program to a storage card.
- **Topcon FC-120, FC-200** - FieldGenius should be installed to Storage Card which is secure.
- **Topcon FC-250** - FieldGenius installs to secure RAM by default.
- **Topcon FC-2200, FC-2500** - FieldGenius installs to SystemCF by default which is secure.
- **Topcon GPT-9000 (onboard)** - FieldGenius installs to Internal Disk by default which is secure.
- **Trimble TSC2** - FieldGenius installs to secure RAM by default.
- **Trimble GeoXT** - FieldGenius should be installed to Disk which is secure.

Call MicroSurvey at 1-800-668-3312 or check our web site at [www.microsurvey.com](http://www.microsurvey.com) if your device is not listed here.

## Installing FieldGenius

If you purchased a new data collector with FieldGenius 2012 from MicroSurvey then FieldGenius comes pre-loaded on it.

If you are installing FieldGenius yourself onto an existing data collector, the first thing is to confirm that your hardware is supported by FieldGenius 2012. If you're reading this topic then you probably already know if FieldGenius will run on your data collector. If you're not sure, you can refer to the [hardware requirements](#) topic or call our technical support department.

To install onto your data collector you need to make sure you have a [Microsoft ActiveSync or Windows Mobile Device Center](#) connection established between your computer and your data collector.

There are two ways that you can install FieldGenius onto your device: it can be installed from the CD that came with your purchase, or it can be downloaded from our website at [www.microsurvey.com](http://www.microsurvey.com).

## Starting FieldGenius

During install, shortcuts are created and will be located in either your Start Menu, or Start Menu | Programs, or directly on your desktop. Simply press the shortcut to start the program.

### Auto Repair

Upon startup FieldGenius checks the registry for corruption, and also checks to make sure important system files are where they need to be for FieldGenius to run properly. If it detects any problems, it will automatically fix them for you.


### Hard Reset or Battery Drain

In these scenarios with other software, you would usually have to re-install your software. However, because FieldGenius can repair itself all you need to do is use the File Explorer or My Computer program on your data collector to browse to where FieldGenius is installed and find the programs folder. In there, if you run the "splash" program it will automatically fix all problems and re-install your short-cuts for you.

The splash program will be an executable file and it will include the word "splash" in it. For example on the Archer, the file is called **SplashPPC.exe**.

## Registration & Demo Mode

When you start FieldGenius for the first time you will see the registration screen which will list the machine ID. This ID is unique for each device that FieldGenius is installed on.

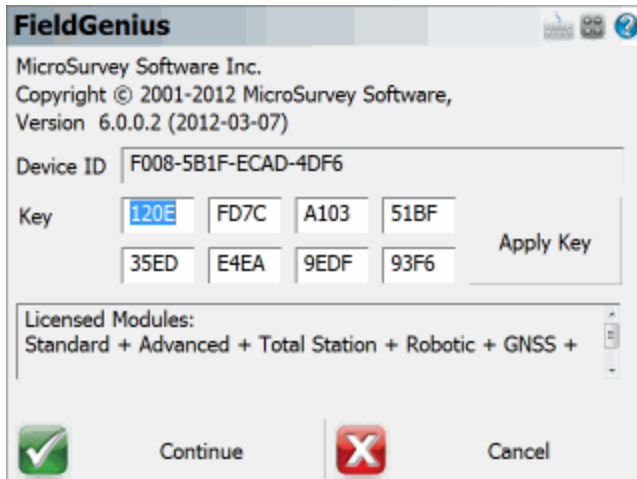

### Activation

To activate FieldGenius you need access to the Internet. With your purchase you should have received a GUID (Serial Number) that you will need along with the Device ID generated by FieldGenius.

A typical serial number will look something like the following:

## **D9C83164-FB0E-4713-B457-CE593EFEA296**

A typical device id will look something like the following:

**F008-F38C-4421-B482**

### **Step 1**

From a computer that has access to the internet, please visit the following web page:

[www.microsurvey.com/register](http://www.microsurvey.com/register)

Follow the instructions on the FieldGenius registration pages.

**NOTE:** Your serial number is valid for only one activation.

### **Step 2**

Using the Key generated by the online registration system, enter the key values into FieldGenius.

When done, press the Apply Key. You will see the words "Activation Key Valid" and it will list the modules that were registered. The **Run Demo Mode** button will also change to say **Continue**.

### **More Help or Purchase**

HELP: For online help, [click here](#).

To purchase FieldGenius 2012 please call MicroSurvey at 1-800-668-3312.

---

## **Available Modules**

There are several modules available for use on a data collector and they're as follows:

- **Standard** - Real-time Automated Linework, COGO Calculations, Traverse Closure and Adjustments, ASCII/DXF Import/Export, MicroSurvey Transfer, and more!
- **Total Station** - Adds non-robotic total station control.
- **GNSS** - adds RTK GNSS (GPS and Glonass) control, Coordinate Calculator, Helmerts' Transformations.
- **Advanced** - adds Surface Modeling, Roding, LandXML, GIS Attribute Collection, Pre-determined Area Calculations
- **Robotic** - adds Robotic Total Station control.

---

## **Run Demo Mode**

To run FieldGenius in demo mode press the **Run Demo Mode** button.

In Demo mode, FieldGenius is limited to storing only 30 points each time it is run, but otherwise it is fully functional.

## Retrieve Lost Key Codes (passwords)

The key code that was generated for a serial number can be accessed from the online registration page ([www.microsurvey.com/register](http://www.microsurvey.com/register)). Just enter the serial number you which to retrieve the key code for and the key code and the device id it is assigned to will be displayed.


## Technical Support

If you need help with FieldGenius please contact [Technical Support](#).

# Project Manager

## Main Menu | Project Manager

The Project Manager is used to create, open, or delete projects currently residing in your data collector. When you start FieldGenius this is always the first screen you will see.

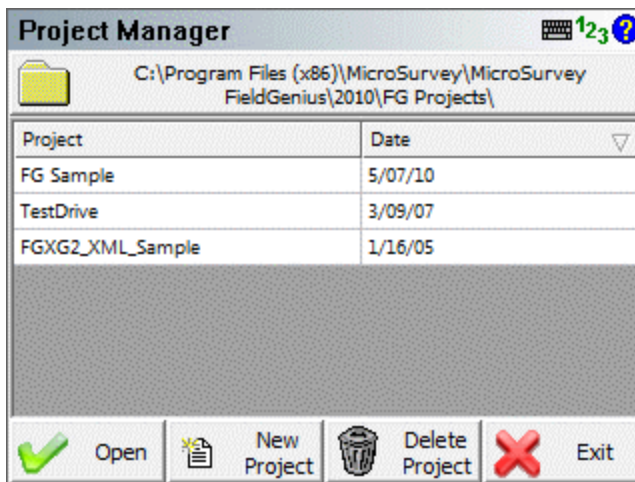

By default the project manager will display the contents of the FG Projects directory, which is the default location for all projects that you create. You can sort the list by project name or date by tapping on the column's header.

## FG Projects Folder

Press this button to specify a different project folder than the default. The default is FG Projects. Once you set the directory it is written to the msurvey.ini file so it is used for all subsequent projects.

## Open Project

To [open an existing project](#), simply select it in the list and press the **Open** button.

## **New Project**

To [create a new project](#), simply press the **New** button. You will then see the new project screen which will allow you to enter a name, , choose your automap library and set the units for the project.

## **Delete Project**

To delete a project you first need to select it in the list and then press the **Delete** button. You will be asked to confirm that you really want to delete the project.

### **Notes:**

- You can not delete a project that is currently open.
- Projects that have been deleted can not be restored.


## **Exit**

To exit from the project manager press the **Exit** button.

# **Project Review**

When you create a new or open an existing FieldGenius project you will always see the Project Review screen.

For most projects all you need to select is the Automap Library Template File that you want to use.

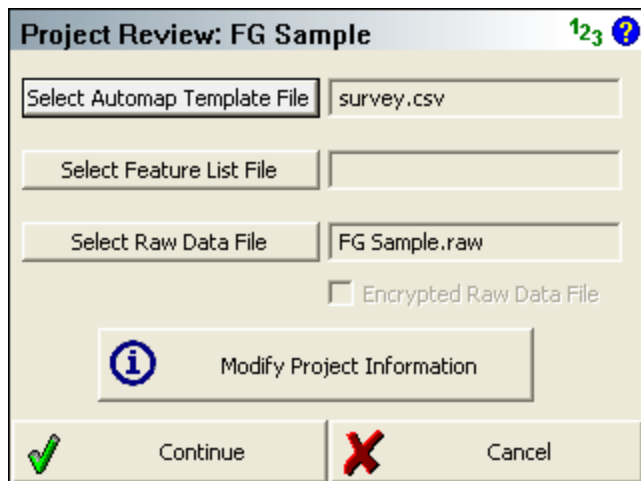

The screenshot shows a dialog box titled "Project Review: FG Sample" with a green "123" and a blue question mark icon in the top right corner. The dialog contains several input fields and buttons:

- A text box labeled "Select Automap Template File" containing the text "survey.csv".
- A text box labeled "Select Feature List File" which is currently empty.
- A text box labeled "Select Raw Data File" containing the text "FG Sample.raw".
- A checkbox labeled "Encrypted Raw Data File" which is currently unchecked.
- A button with an information icon (i) and the text "Modify Project Information".
- At the bottom, there are two buttons: "Continue" with a green checkmark icon and "Cancel" with a red X icon.

## **Select Automap Template File**

This indicates the Automap Library Template that will be loaded into the project. You can change it by pressing the button and either choosing a different template library or creating a new blank library.

Automap files contain pre-defined descriptions that can be used in FieldGenius. The template library that you select will be copied into the project's folder with a name of yourprojectname\_automap.csv, and any changes that you make to the Automap Library will affect only the project library, not the template library.

### **Select Feature List File**

Use this to select a feature list that you want to use with the project, for collecting GIS point attributes.

### **Select Raw Data File**

This indicates the name of the raw file that is going to be used. You can select a different one by pressing the button and either creating a new raw file or choosing the one to open.

The Encrypted option indicates whether or not this raw file is encrypted. You can only change this option when creating a new project; once set, this option can not be undone. Encrypting the raw file ensures that users can not accidentally or intentionally edit their raw files with a text editor or other software.

#### **Note:**

At this time, no other applications besides FieldGenius 2007 (or newer) and MicroSurvey CAD 2008 (or newer) can read an encrypted raw file. Previous versions of MicroSurvey CAD, inCAD, and FieldGenius will not be able to read FieldGenius encrypted raw files.


### **Modify Project Information**

This option will take you directly to the [Project Information](#) screen, where you can enter notes about the project. Please see the Project Information topic for further information.


## **Quick Start: Open Existing Project**

Start FieldGenius by running the icon contained either in your Start Menu or on the Desktop of your data collector.

If you start FieldGenius in demo mode, the first screen you will see is the [About screen](#), where you can enter a registration code to license your copy of FieldGenius. Press the **Run Demo Mode** button if you see this screen.

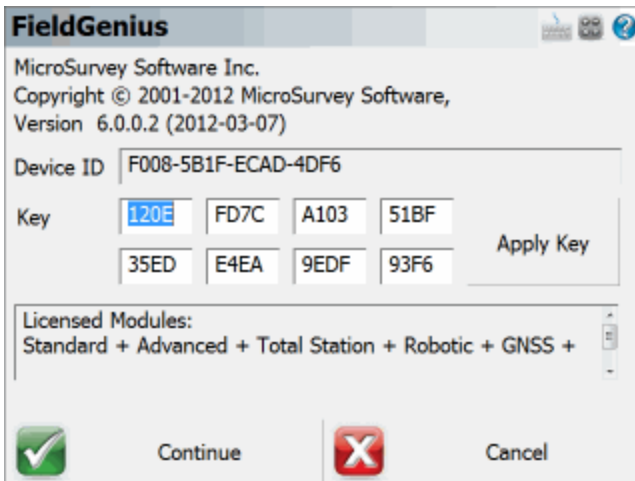


The next screen (which you may or may not see) is the Tip Of the Day screen, which contains a different helpful tip whenever you start FieldGenius. Press the **Continue** button if you see this screen.

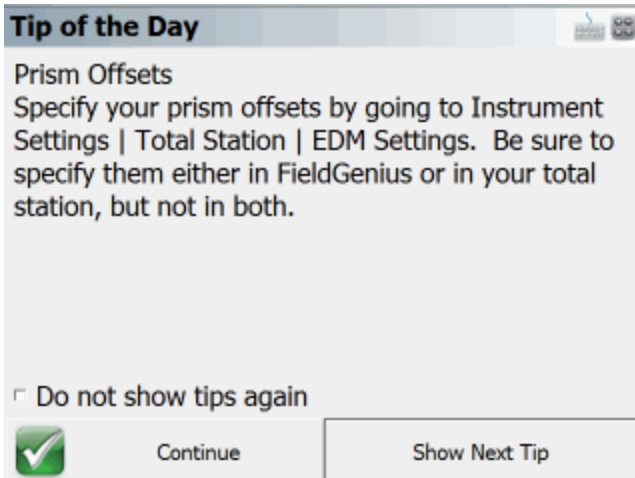


By default a project named FG Sample is installed. For this example let's open it by highlighting it and pressing the **Open** button. You can also double tap the file name which will also open it.



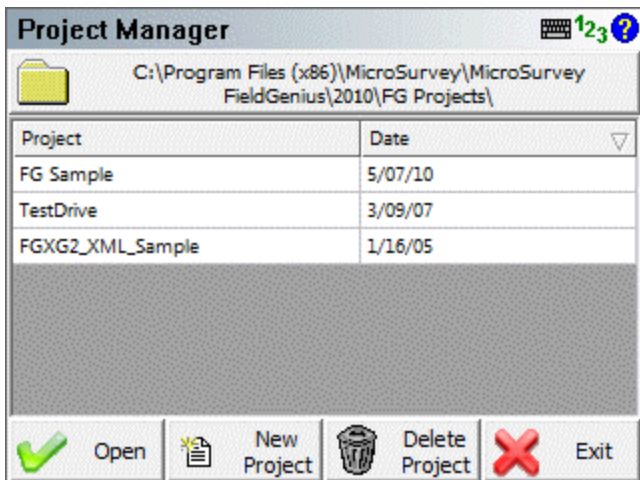


You will then have to review the project files and decide what you want to load. FieldGenius checks in the project's msurvey.ini file to determine which files should be opened. Press **Continue**.

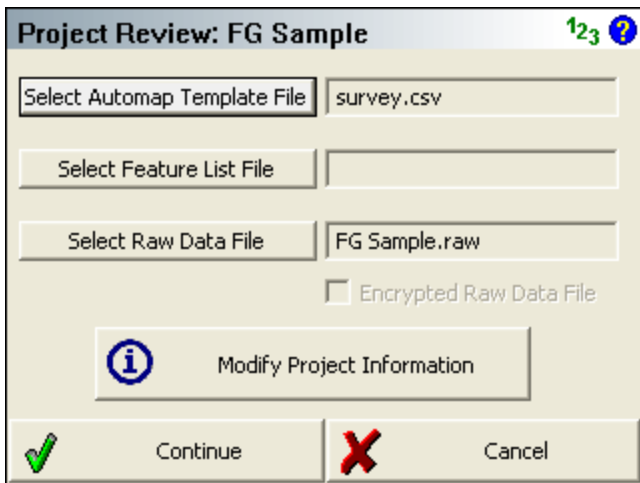

You are then prompted to select the instrument that you want to connect to. Let's set it to Total Station Demo and press **Connect** to continue. (Note, you will not see this screen if FieldGenius is running onboard your instrument.)

**Instrument Selection** 



Instrument Type


- Total Station
- Total Station Demo
- GPS Rover
- GPS Reference
- GPS Demo
- None

Instrument Profile

Profiles contain equipment settings and measurement tolerances.

Connect the data collector to the instrument and switch the power on prior to pressing the 'Connect' button.

**Instrument Selection** 

Instrument Type



- Total Station
- Total Station Demo
- Disto
- GPS Rover
- GPS Reference
- GPS Demo
- None

Instrument Profile

iCON Robot

Profiles contain equipment settings and measurement tolerances.

Connect the data collector to the instrument and switch the power on prior to pressing the 'Connect' button.


 

The Map screen will then be displayed. You should now see your project, here is what the FG Sample project should look like:


## Quick Start: New Project


Start FieldGenius by running the icon contained either in your Start Menu or on the Desktop of your data collector.

When you start FieldGenius in demo mode the first screen is the [About screen](#), where you can enter a registration code to license your copy of FieldGenius. Press the **Run Demo Mode** button if you see this screen.

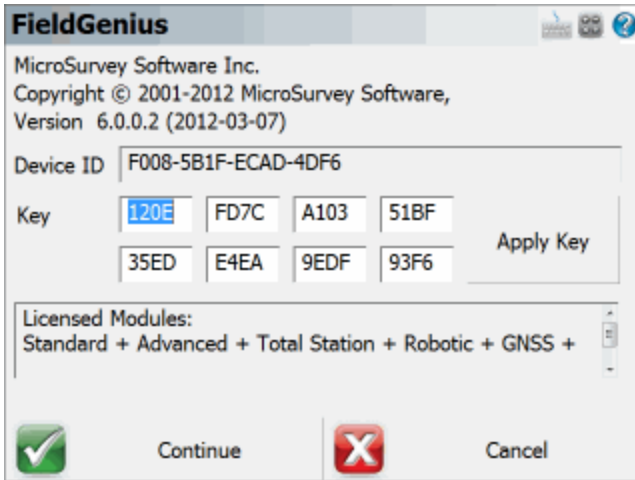


The next screen (which you may or may not see) is the Tip Of the Day screen, which contains a different helpful tip whenever you start FieldGenius. Press the **Continue** button if you see this screen.


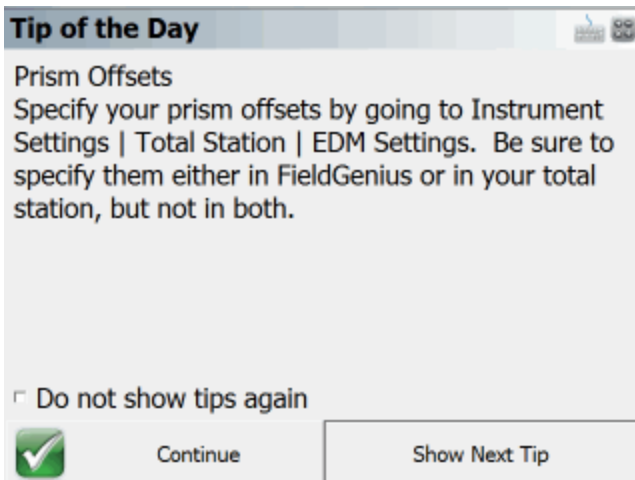


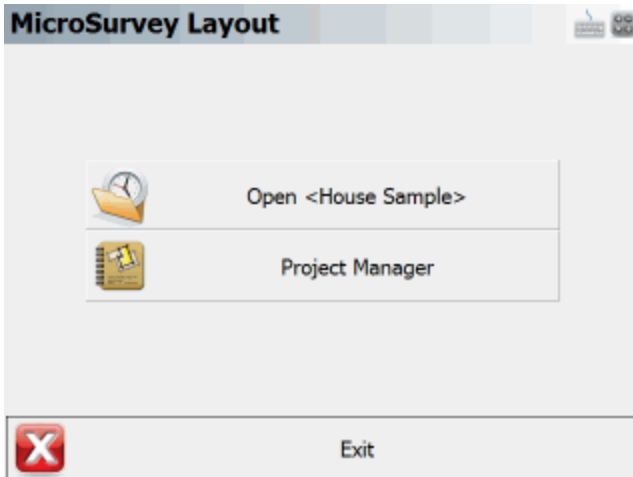

Press the **New** button to create a new project.

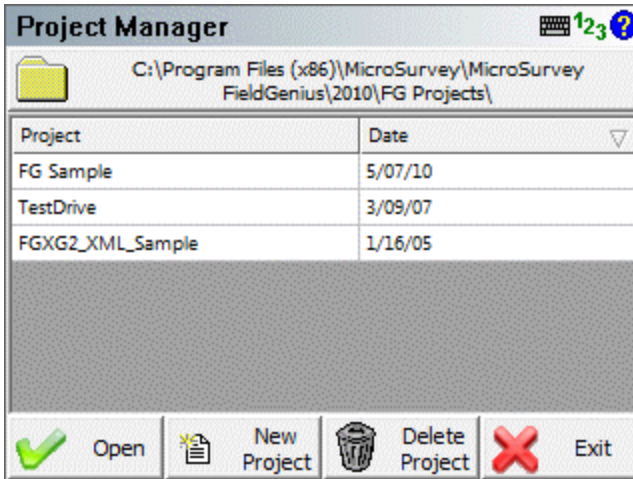

You will then have to enter a name for your new project, then press **OK** to continue.

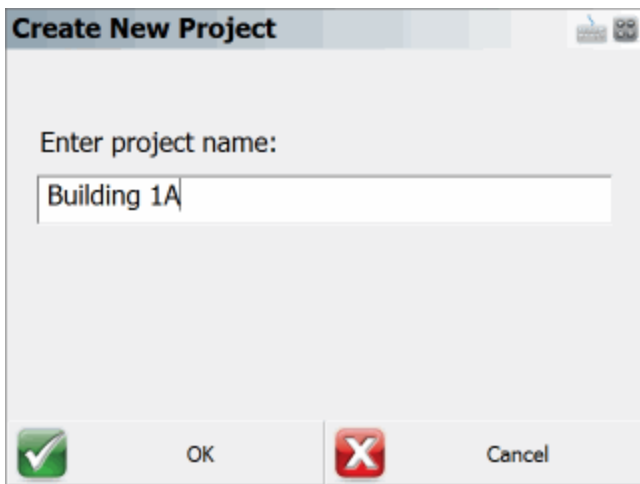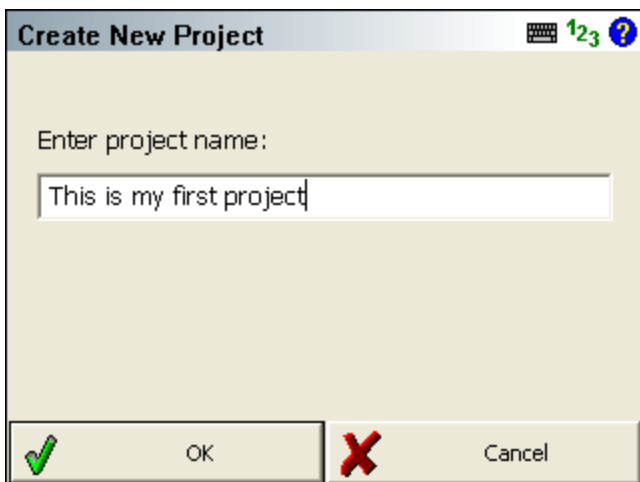

You will now see the [Project Review](#) screen. This is where you can specify which Automap Library Template File, Feature List File, and Raw File to use, whether you want your raw file to be encrypted, or enter project information. Press **Continue**.


**Project Review: This is my first project** 123 ?


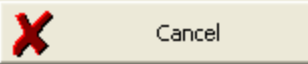 
Select Automap Template File

Select Feature List File

Select Raw Data File

Encrypted Raw Data File



Now the [Unit Settings](#) screen will appear allowing you to specify the units for your project. Set them as desired, then press the **Save As Default Settings** button to remember these settings for all subsequent new projects, then press **OK**.

**Unit Settings** 123 ?

Distance Unit:

Angle Unit:

 
Format:       Format:


Precision:       Precision:

Direction Format:

Scale Factor:

Curvature and Refraction Correction

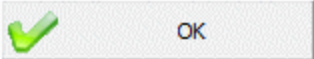


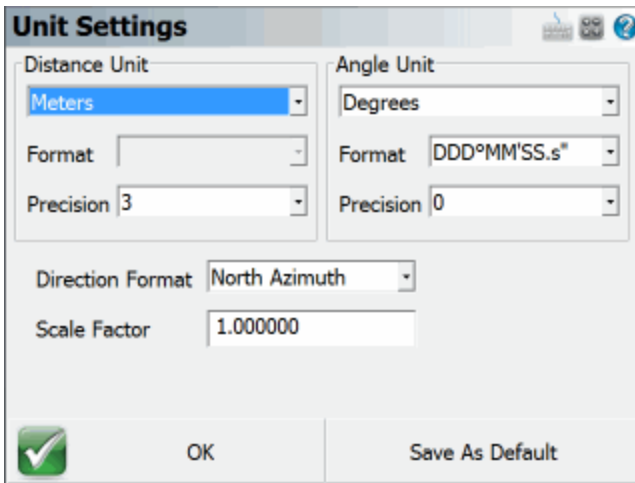

The **Unit Settings** dialog box contains the following controls:

- Distance Unit:** A dropdown menu with "Meters" selected.
- Angle Unit:** A dropdown menu with "Degrees" selected.
- Format:** Two dropdown menus. The first is empty, and the second is set to "DDD°MM'SS.s\".
- Precision:** Two dropdown menus. The first is set to "3", and the second is set to "0".
- Direction Format:** A dropdown menu with "North Azimuth" selected.
- Scale Factor:** A text input field containing "1.000000".
- Buttons:** A green checkmark icon, "OK", "Save As Default", and a question mark icon.


You will then be asked "Would you like to define a coordinate system now?" This will be used for Transformations and GPS Localizations. Press **No** to skip over this, or **Yes** to see the [Coordinate Settings](#) screen if you need to select a coordinate system.

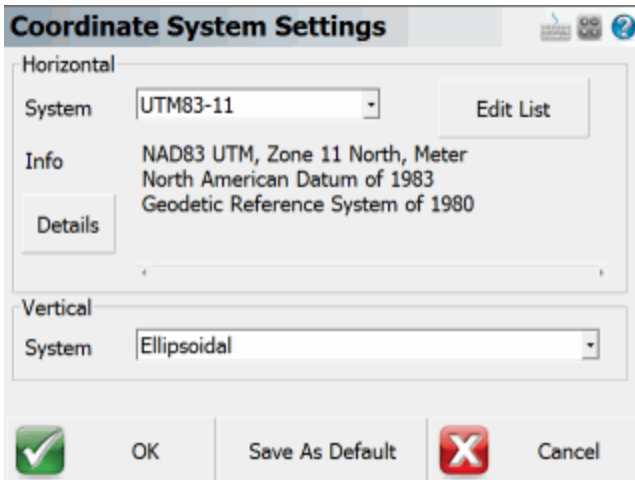



The **Coordinate System Settings** dialog box contains the following controls:

- Horizontal:**
  - System:** A dropdown menu with "UTM83-11" selected.
  - Edit List:** A button.
  - Info:** Text describing the system: "NAD83 UTM, Zone 11 North, Meter North American Datum of 1983 Geodetic Reference System of 1980".
  - Details:** A button.
- Vertical:**
  - System:** A dropdown menu with "Elipsoidal" selected.
- Buttons:** A green checkmark icon, "OK", "Save As Default", a red X icon, and "Cancel".

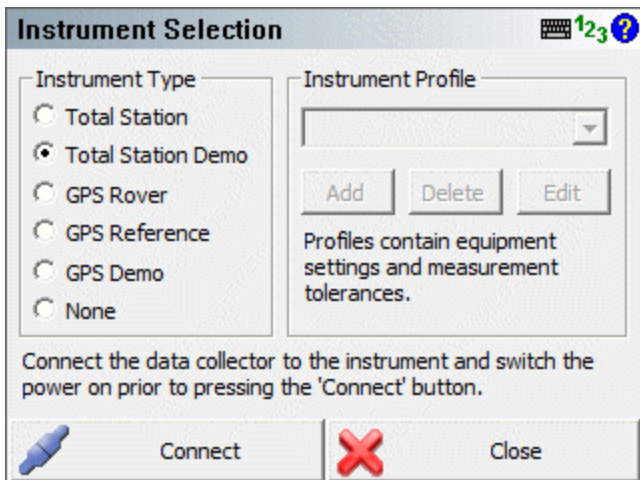You will then see the [Instrument Selection](#) screen where you are prompted to select the instrument that you want to connect to. Let's set it to Total Station Demo and press **Connect** to continue. (Note, you will not see this screen if FieldGenius is running onboard your instrument.)



**Instrument Selection**  123 

Instrument Type



- Total Station
- Total Station Demo
- GPS Rover
- GPS Reference
- GPS Demo
- None

Instrument Profile


Add Delete Edit



Profiles contain equipment settings and measurement tolerances.

Connect the data collector to the instrument and switch the power on prior to pressing the 'Connect' button.

 

 
 Connect  Close

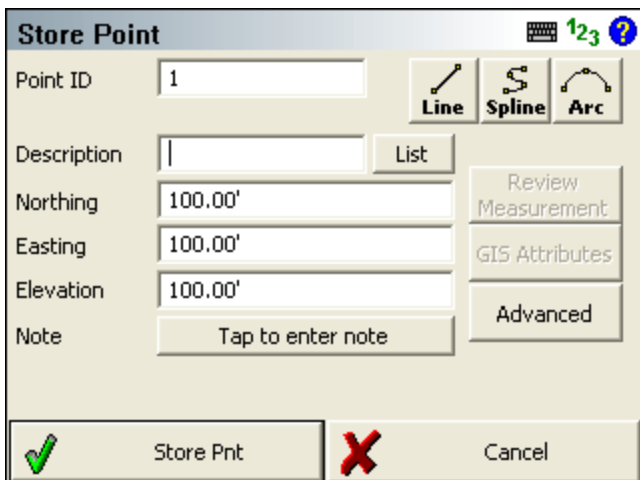If you selected Total Station or Total Station Demo, you will then see a message asking **"Would you like to create a new reference point which will be used to occupy the instrument?"** Press **Yes** if you would like to which will open the [Store / Edit Points](#) screen. The default coordinates that are displayed are retrieved from the msurvey.ini file found in the programs directory, and if you change these coordinates they will be remembered for next time. Selecting **No** will take you to the main interface.



**Store Point**  123 

Point ID

    
Line Spline Arc

Description  List



Northing

Easting

Elevation

Note

Review Measurement  
GIS Attributes  
Advanced


 Store Pnt  Cancel

If you chose to create a reference point in the step above, you will be asked **"Would you like to occupy the reference point you just created?"** Press **Yes** if you would like to do so which will



open the [Setup Occupy Point](#) screen for measuring your backsight. Selecting **No** will take you to the main interface.

Once you complete the setup routine and have measured your backsight, you will see your setup and backsight positions in the [map view](#).

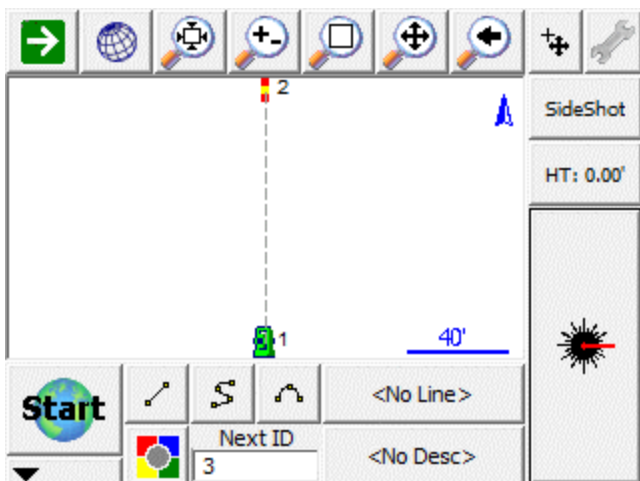

## Common FieldGenius Buttons

The FieldGenius interface has a consistent structure and to use it effectively the user needs to become familiar with several commonly used buttons.



Clicking on this button will open up the [keypad](#).



 
Clicking on this button will open up the Windows Start Menu. Available on Pocket PC and Windows Mobile devices only.




Clicking on this button will open up the [RPN Calculator](#).




Clicking on this button will open up the help page for whatever topic you are currently at. The help page will open up in an Internet Explorer window.

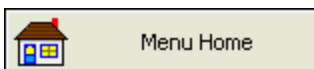

 
This button will take you back to the [main menu](#).

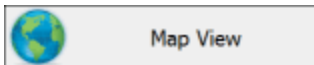

 
This button will take you back to the [map screen](#).

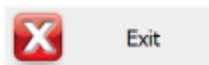

 This button will save your project and close FieldGenius.

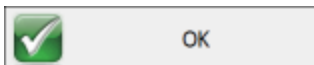

 This button will accept the changes you've made and will return you to the previous screen.

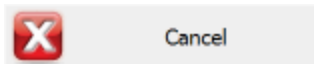

This button will close the current screen and return you to the previous screen without saving any changes.



Pressing this will close the currently open toolbar and return you to the previous screen.



Pressing this will open the [Point Chooser toolbar](#).

## FieldGenius Project Files

Every FieldGenius project will contain usually 7 files, but may contain more depending on what files you've exported or copied to the directory. Typically you will see that the file names will begin with the name of your project.

Filename.cdx	This is the index for the database file.
Filename.dbf	This is the database file that contains your coordinate information.
Filename.ini	This file contains information pertinent to your project.

Filename.raw or File- name.rae	This is the raw file that contains your observations. If the raw file is encrypted it will have a .rae extension. Note you can have more than one raw file.
Filename_fig- ures.dbf	This is the database for your figures in your project.
Filename_fig- ures.cdx	This is the index file for the figures database.
Filename_ automap.csv	This is the Automap Library for your project.

When you create a new project, the project name that you use will become the "folder" for your project files. By default, your project will be stored in the FG Projects directory.

**Note:**

After creating a new project, do not later rename the folder containing your project's files or the actual files, doing so will cause FieldGenius to not recognize the folder as a valid project and you will not be able to open it.

## Automatic Save

There are a few things to keep in mind when manually entering data in FieldGenius:

All stored data is automatically saved. There is no need for a Save function. Always close the program by going to the [Main Menu](#) and choose the Exit button to prevent loss of measurement data.

Input fields that are left blank are stored as undefined. For example, if you enter only a horizontal coordinate for a point and leave the elevation field blank, we do not automatically set the elevation as 0.000. The elevation remains undefined.

## Data Entry (Extended Edit Fields)

Throughout FieldGenius you will see edit fields for entering various values. These types of fields are called Extended Edit Fields, and can be used not only for typing values, but can also launch related commands such as the keypad, calculator, point chooser, inverse tool, etc. This type of functionality is unique to FieldGenius.

You can control how these Extended Edit Fields will be triggered by changing the "Extended Edit Boxes" option in the [Options](#) screen to require a single tap, a double tap, or to disable them so that you can only type values into them.

## Text Entry

For most text entry fields in the program, tapping in it will open up the [keypad](#).

On PocketPC and Windows Mobile devices you can select which keypad to display by changing the "SIP Type" option in the [Options](#) screen.

## Points

When you see an extended edit field for a point id, tapping in it will open the [point chooser toolbar](#).

## Distance and Angles


Tapping in other numeric fields such as those for directions and distances will open the [RPN Calculator](#), and some distance fields will open the [Inverse](#) tool.

## Multi-function Fields

Some fields will display a pop up menu if multiple functions can be opened from that field, just select the desired function from the list.

## Keypad

The keypad can be opened from any [extended edit entry field](#). This provides a method of easy text and numeric entry on devices that do not have a physical keypad but it can be used on any device.

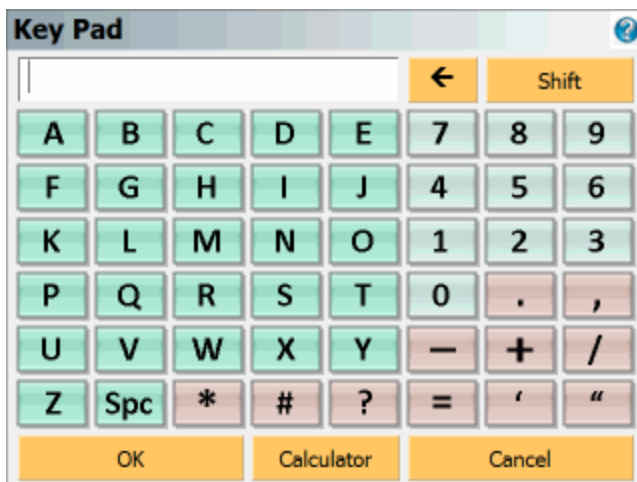

## Calculator

The RPN [Scientific Calculator](#) can be called up from the keypad by pressing the **Calculator** button. If you press the Calculator button, the value entered in the keypad entry field will be copied to the

calculator's command line (Note, it must be a numeric value, alpha portions will be stripped off in the calculator) where it can be used for any calculations. When you are done with the calculator, pressing its OK button will return the result back into the keypad.

### **OK**

Pressing the **OK** button will close the keypad, and set the entered value into the text field from which the keypad was opened.

### **Cancel**

Pressing the **Cancel** button will close the keypad without setting anything into the text field from which the keypad was opened.

---

## **Keypad Settings**

There are two important settings related to the keypad, which are both found in the [Options](#) screen.

### **SIP Type**

Use this to specify which SIP keypad type you want to use, such as the full screen MicroSurvey alphanumeric keypad, the small PocketPC qwerty keypad, or the small PocketPC MicroSurvey numeric keypad. Not all SIP types are available on all data collectors.

### **Extended Edit Boxes**

Use this to control how you want to bring up the selected keypad when tapping in an edit box: either with a single tap, a double tap, or off. Users of devices with a keyboard should leave this set to Single Click, and users of devices without a keyboard should set this to Double Click. Setting this to Off disables both the keypad and any other commands that may be started directly from the extended edit field, such as the Point Chooser or Inverse Tool, so that edit fields can only be used for typing values from your physical keypad.

---

## **Distance Entry & Recall**

### **Distance Entry**

You can customize FieldGenius to work with the direction input of your choice. See the [Units & Scale](#) topic for details.

The number you enter is assumed to be in the same units as your project, unless a unit modifier is specified (see below). So 5.25 would be interpreted as 5.25 feet, or 5.25 meters depending on your project's unit setting.

## **Distance Recall**

You can recall the distance between two points, by inputting in the form: <firstID>..<otherID> Example: 26..84 will be recognized as the distance computed between points 26 and 84. The distance will be returned in whichever format your units settings is set to.

## **Unit Modifiers**

Recognition of the unit symbols m, ', ft, usft, ftus are supported, and can be used to override the project's unit settings.

### **Meters**

You can specify that a distance is in meters by entering "m" after the value, for example 100m means 100 Meters, even if your project is in Feet. Therefore, if your project is in US Feet and you enter 100.00m in a distance field, you will see it automatically get converted to 328.08 feet.

### **Feet (International or US Survey)**

The ' symbol will be interpreted as either International Feet or US Survey Feet, whichever units the current project is in. For example, entering 1000' will match the feet units that your project is in, so it can mean either 1000 International Feet or 1000 US Survey Feet. If your project is in meters, then the ' symbol is interpreted as International Feet.

### **Fractional Feet**

When entering distances in a fractional format, use a ' symbol or a space between the feet and inches values to separate them. An " symbol is not required. For example, you can enter 10'6 or 10 6 which both mean 10'6". You can enter fractional inches by placing a space between the whole and fractional inches, and using a / symbol in the fraction. For example, 10'6 1/2 or 10 6 1/2 both mean 10'6.5". You can also enter decimal values, such as 10.5' to mean 10'6" or 10'6.5 (or just 10 6.5) to mean 10'6 ½".

### **International Feet**

You can specify that a distance is in International Feet by entering "ft" after the value, for example 1000ft means 1000 International Feet.

### **US Survey Feet**

You can specify that a distance is in US Survey Feet by entering "usft" or "ftus" after the value, for example 1000usft and 1000ftus both mean 1000 US Survey Feet.

## Distance Entry Examples

<b>Project Units:</b>	International Feet	
<b>Format:</b>	Decimal	
<b>User Entered Value:</b>	<b>Interpreted As:</b>	<b>Result (always matches project units):</b>
1000.23	1000.23 in project units	1000.23'
1000.23'	1000.23 in project units	1000.23'
1000.23usft 1000.23 usft 1000.23ftus 1000.23 ftus	1000.23 US Survey Feet	1000.25'
20.117m 20.117 m	20.117 meters	66.00'
10000m 10000 m	10000 meters	32808.40'
10 6 10'6 10'6"	10 feet 6 inches	10.50'
10 6 1/2 10'6 1/2	10 feet 6.5 inches	10.54'

<b>Project Units:</b>	US Survey Feet	
<b>Format:</b>	Decimal	
<b>User Entered Value:</b>	<b>Interpreted As:</b>	<b>Result (always matches project units):</b>
1000.23	1000.23 in project units	1000.23'
1000.23'	1000.23 in project units	1000.23'
10000.23usft 10000.23 usft 10000.23ftus 10000.23 ftus	10000.23 US Survey Feet	10000.23'

10000.23ft 10000.23 ft	10000.23 International Feet	10000.21'
20.117m 20.117 m	20.117 meters	66.00'
10000m 10000 m	10000 meters	32808.33'
10 6 10'6 10'6"	10 feet 6 inches	10.50'
10 6 1/2 10'6 1/2	10 feet 6.5 inches	10.54'

<b>Project Units:</b>	Meters	
<b>Format:</b>	Decimal	
<b>User Entered Value:</b>	<b>Interpreted As:</b>	<b>Result (always matches project units):</b>
1000.23	1000.23 in project units	1000.23m
1000.23'	1000.23 International Feet	304.870m
10000.23usft 10000.23 usft 10000.23ftus 10000.23 ftus	10000.23 US Survey Feet	3048.076m
10000.23ft 10000.23 ft	10000.23 International Feet	3048.070m
20.117m 20.117 m	20.117 meters	20.117m
10'6	10 feet 6 inches	3.200m
10'6 1/2	10 feet 6 1/2 inches	3.213m
10 6	Not allowed, must enter units for feet such as 10ft 6, or 10usft 6.	
10 6 1/2	Not allowed, must enter units for feet such as 10ft 6 ½, or 10usft 6 ½.	



## Using Math Operations

Math operators are now supported again. You are now permitted to use math operators in distance fields.

User Entered Value	Interpreted As	Result if Project Units Set to Feet	Result if Project Units set to Metric
3.5/2+1.2	3.5 divided by 2 plus 1.2	2.95 feet	2.950 metres
1..2/2+10 (assume 1..2 = 10)	((Distance from point 1 to 2) divided by 2) plus 10	15.00 feet	15.000 metres
8' + 3'	8 feet plus 3 feet	11.00'	3.353m
1'+2 3+1m	1 foot plus 2 feet 3 inches** plus 1 metre	6.53'	1.991m

\*\*Note: If your project is set to feet and you enter 2 3 (2 space 3), this will be interpreted as 2 feet 3 inches. This occurs if your project is set to either decimal or fractional feet.

You can also use the RPN Calculator to further manipulate distance values. For example, if you want to find the distance halfway between points 1 and 2, enter 1..2 into the distance field to recall that distance. Then double tap on that extended edit field to pull that recalled distance into the calculator, where you can divide the distance by 2 (or perform any other calculations with it). Then press the "OK" button in the calculator to copy the result back into the field you started from.

## Direction Entry & Recall

### Direction Entry

You can customize FieldGenius to work with the direction input of your choice. See the [Units & Scale Settings](#) topic for details.

To enter an angle using the format selected in your units settings, simply enter the angle. For example, 120.4530 means 120°45'30" if your project is in Degrees/Minutes/Seconds, 120°45.3' if your project is in Degrees/Minutes, or 120.453° if your project is in decimal degrees.

---

## **Direction Recall**

You can recall the direction between two points, by inputting in the form: <firstID>.<otherID> Example: 26..84 will be recognized as the direction computed between points 26 and 84. The direction will be returned in whichever format your units settings is set to.

---

## **Unit Modifiers**

You can always override your project's units setting by entering the bearing with the cardinal quadrant indicated before or after the direction. If there is no quadrant specified, then the input direction will be interpreted as an Azimuth.

### **Decimal Degrees**

You can always specify that an angle is in decimal degrees by entering "d" after the value, for example 45.5083d means 45.5083° or 45°30'30".

### **Degrees, Decimal Minutes**

You can always specify that an angle is in degrees and decimal minutes by entering "dm" after the value, for example 45.305dm means 45°30.5' or 45°30'30".

### **Degrees, Minutes, Decimal Seconds**

You can always specify that an angle is in degrees, minutes, and decimal seconds by entering "dms" after the value, for example 45.3030dms means 45°30'30".

### **Bearings**

To enter a bearing, use the cardinal quadrant letters (N, E, S, and W) before or after the angle. For example: NE60.4530, 60.4530NE, or N60.4530E means NE 60°45'30" if your project is in DMS, NE 60°45.3' if your project is in DM, or NE 60.453° if your project is in decimal degrees. It does not matter if you have spaces between the quadrant designation and the angle. You can also separate the degrees, minutes, and seconds values with a space. For example, N 60 45 30 E or N60.4530E both mean NE 60°45'30". You can of course also use any of the "d", "dm", or "dms" (or "g" or "r", see below) designators with a bearing entry, such as NE45.305dm to mean N 45°30'30" E.

### **Gons (Gradients)**

You can specify that an angle is in Gons/Gradients by entering "g" after the value, for example 100g means 100 Gradients (equals 90 degrees).

### **Radians**

You can specify that an angle is in Radians by entering "r" after the value, for example 1.57r and means 1.57 Radians (approximately 90 degrees).

---

## **Project set to Azimuth**

## Direction Entry Examples

<b>Angle Units:</b>	Degrees	
<b>Format:</b>	DDD°MM'SS.s"	
<b>Format:</b>	Azimuth	
<b>User Entered Value:</b>	<b>Interpreted As:</b>	<b>Result (always matches project units):</b>
90.5016	90 degrees, 50 minutes, 16 seconds	90°50'16"
NE45.3030 NE 45.3030 N45.3030E N 45.3030 E 45.3030NE 45.3030 NE	North East quadrant, 45 degrees, 30 minutes, 30 seconds	45°30'30"
SE45.3030 SE 45.3030 S45.3030E S 45.3030 E 45.3030SE 45.3030 SE	South East quadrant, 45 degrees, 30 minutes, 30 seconds	134°29'30"
SW45.3030 SW 45.3030 S45.3030W S 45.303 W 45.3030SW 45.3030 SW	South West quadrant, 45 degrees, 30 minutes, 30 seconds	225°30'30"
90.5016dm 90.5016 dm	90 degrees, 50.16 minutes	90°50'10"
90.5016d 90.5016 d	90.5016 degrees	90°30'06"
100g 100 g	100 gradians	90°00'00"
100.2345g	100.2345 gradians	90°12'40"

100.2345 g		
3.141593r	3.141593 radians	180°00'00"
3.141593 r		

### **Project Set to Bearings**

The angle codes below provide versatile direction input.

When your project is set to **Bearings**, you are permitted to use numeric and alpha character codes for angle and direction input.

1 or NE = North East bearing

2 or SE = South East bearing

3 or SW = South West bearing

4 or NW = North West bearing

<b>Angle Units:</b>	Degrees	
<b>Format:</b>	DDD°MM'SS.s"	
<b>Format:</b>	Bearing	
<b>User Entered Value:</b>	<b>Interpreted As:</b>	<b>Result (always matches project units):</b>
90.5016	90 degrees, 50 minutes, 16 seconds azimuth	S89°09'44"E
NE45.3030 NE 45.3030 N45.3030E N 45.3030 E 45.3030NE 45.3030 NE	North East quadrant, 45 degrees, 30 minutes, 30 seconds	N45°30'30"E
SE45.3030 SE 45.3030 S45.3030E S 45.3030 E 45.3030SE 45.3030 SE	South East quadrant, 45 degrees, 30 minutes, 30 seconds	S45°30'30"E

SW45.3030 SW 45.3030 S45.3030W S 45.303 W 45.3030SW 45.3030 SW	South West quadrant, 45 degrees, 30 minutes, 30 seconds	S45°30'30"W
90.5016dm 90.5016 dm	90 degrees, 50.16 minutes azi- muth	S89°09'50"E
90.5016d 90.5016 d	90.5016 degrees azimuth	S89°29'54"E
100g 100 g	100 gradians	S90°00'00"E
100.2345g 100.2345 g	100.2345 gradians	S89°47'20"E
3.141593r 3.141593 r	3.141593 radians	S0°00'00"W

## Using Math Operations

You can then use the calculator to further manipulate the angle. For example, if you want to determine 1..2 then add 90 degrees, enter 1..2 to recall that angle. Then double tap in the extended edit field to pull that recalled angle into the calculator, where you can add 90 to it (or perform any other calculations with it).


**Note:** You can perform advanced direction recall functions that include math operators directly in a direction field. For example, 1..2+90 is a valid entry. In this example the direction between points 1 and 2 will have 90 degrees added to it (if project is in degrees).

Math operations can also be done using the RPN calculator. Please refer to the [Calculator](#) section for more information on performing specific math operations.

# MAIN INTERFACE

## Main Interface

The FieldGenius interface is separated into various toolbars which contain common functions or tools that the user will use most often.

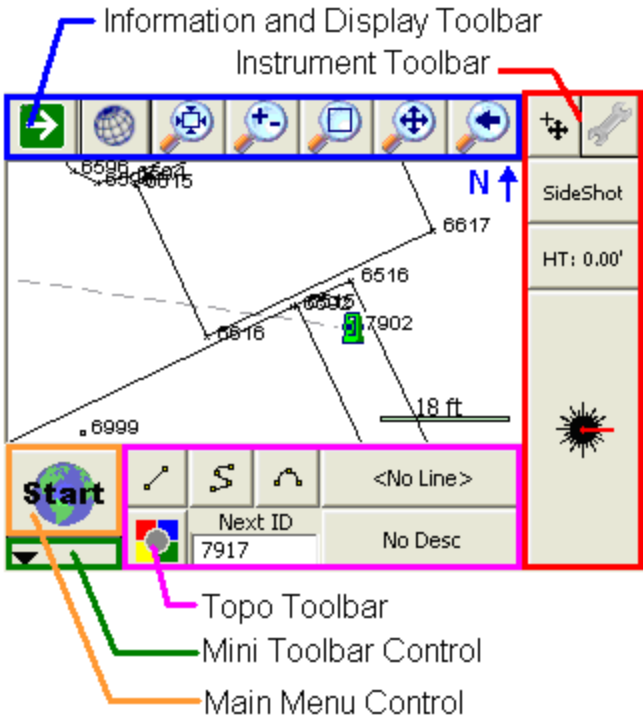

[Display Toolbar](#)

[Instrument Toolbar](#)

[Topo Toolbar](#)

[Mini Toolbar button](#)


[Main Menu button](#)

## Two Versions of the User Interface


There are two versions of the user interface depending on which handheld device you're using. Some devices have a landscape screen orientation, and have the advantage of a physical keyboard. Others

have a portrait screen orientation, and utilize a virtual on-screen keyboard. Note that the function of both versions is essentially the same.

### Portrait Display

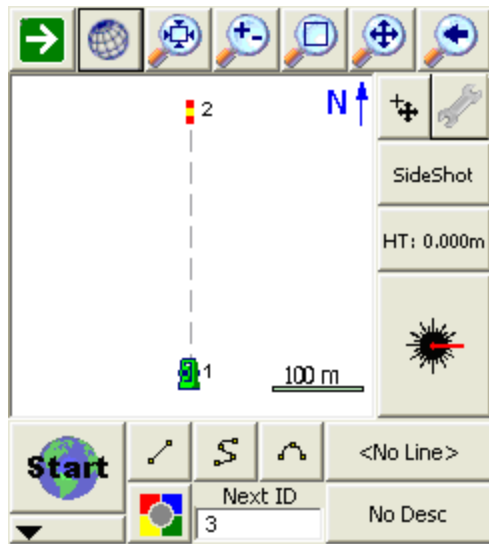

### Landscape Display

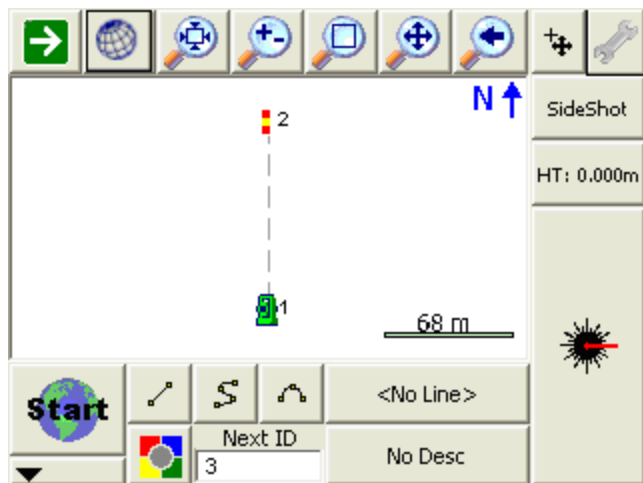

## Display Toolbar



The display toolbar, located at the top of the map screen, is used to zoom, pan, change 3d perspectives, and for displaying information.



### [Next, Previous](#)

These switch to the next or previous set of buttons.



### [Observation](#)

This opens or closes the [Observation Toolbar](#). Many different functions in FieldGenius will display information in this toolbar, such as when you select a point on the screen, the point's coordinates are displayed in this toolbar.



### [Zoom Extents](#)

This is a zoom extents which will zoom to the extents of your project.



### [Dynamic Zoom](#)

This is a dynamic zoom. When enabled, drag from top to bottom of the screen to zoom out, or bottom to top of the screen to zoom in. Or, when enabled, you can also use the arrow keys on your keypad to zoom in and out in the map.



### [Zoom Window](#)

This is a zoom window. When enabled, drag on the map screen to define a zoom window.



### [Dynamic Pan](#)

This is a dynamic pan. When enabled, you can drag across your map screen to pan around your project. Or, when enabled, you can use the toggle or arrow keys on your keypad to pan around.



### [Zoom Previous](#)

You can use this to zoom back up to 10 previous views. This includes zoom and pan changes.





### **World Button**

It is used by the [staking](#) commands to hide unrelated points and lines in your map during stakeout.



### **3D View**

This opens the [3D View Toolbar](#).



### **Layers Manager**

This opens the [Layers Manager](#) for managing visibility of layers in your database, DXF Layers, LandXML elements, and Raster Images.



### **Surface Manager**

This opens the [Surface Manager](#) for importing and displaying DTM surface models (TIN, TGRID, or Contours) and for computing Volume Calculations.



### **Options**

This opens the [Options](#) screen, and will automatically expand the Point Labels section for quickly turning on or off the ID, description, and elevation labels for your points.



### **Help**

This opens the Help topic for the current toolbar(s) visible on your screen. If there are multiple toolbars visible, you are prompted to select the help file based on the position of the toolbar: Top, Side, or Bottom Toolbar. The help file will open up in your default web browser such as Internet Explorer .

## **Observation Toolbar**

### **Display Toolbar | Observation Results button**



You can access the Observation Toolbar by tapping on this icon in the [Display Toolbar](#).

### **Total Station Observations**

Total Station users can toggle through the following information:

- Horizontal Angle (HA), Vertical Angle (ZA), and Slope Distance (SD)
- Horizontal Angle (HA), Horizontal Distance (HD), and Vertical Distance (VD)
- Northing (N), Easting (E), and Elevation (H)

If using a conventional (non-robotic) total station, the observations displayed in the toolbar will be from the last measurement taken with FieldGenius.

If using a robotic total station, the observations displayed in the toolbar will continually update in real time.

**GPS Observations**

GPS users can toggle through the following information:

- Latitude (Lat), Longitude (Lon), and Geodetic Height (h)
- Northing (N), Easting (E), Orthometric Height (H)
- Standard Deviation Horizontal (SD H), Standard Deviation Vertical (SD V), and Dilution of Precision (PDOP).
- Velocity (SOG) and Heading (COG) of the GPS receiver as well as current UTC Time.

If using GPS, the observations displayed in the toolbar will continually update in real time.


**Display Size +/-**

By tapping on the + and - buttons on the screen you can increase or decrease the displayed font size/text for easier viewing.

**Page Toggle**

The **Page** button allows you to swap between pages changing the displayed observation information.

**Topo Toolbar**

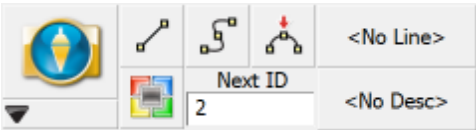


The Topo Toolbar is used to help automate linework as well as show you the description and next point number for your shot. Just like previous versions of FieldGenius you can control your linework by tuning on and off the line, arc and curvy toggles. There is also a user-programmable button that can be customized to start any command.



**Main Menu Button**

 This button takes you into the [Main Menu](#).

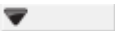

**Mini Toolbar Button**

This button opens the [Mini Toolbar](#).



**Draw Lines Button**

This is used to toggle on and off the draw lines function. When turned on



points will be connected with a line as you measure them.

#### **Draw Curvy Lines Button**

This is used to toggle on and off the draw curvy lines button. This function will draw a best-fit curve through your points as you shoot them.



#### **Draw 3-Point Arc Button**

3-Point arcs can be started using the same method as for a Line or Curvy Line.


However, to switch to 3-Point arc within an ongoing Line, select the **Draw 3-Point Arc** button before shooting the second of the three points that will define the arc (POC: Point on Curve). (Note that this is not the radius point). After measuring to the 2nd point, a dashed line will appear to illustrate that a 3-Point arc is in progress. Shoot the 3rd point and the arc will appear. The current draw option will change from Draw 3-Pt Arc to Draw Line after the third shot and the arc is complete.

Compound 3-point arcs are supported. Simply re-select the **3-Point Arc** button before measuring the next POC.



#### **User Defined Button**

 This button can be customized to start any command. By default it opens the [Coordinate Database](#), but this can be changed in the [Keyboard Shortcuts](#) settings.

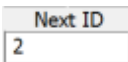

#### **Next ID Field**

This field displays the point number that will be assigned to your next shot. You can change it at any time prior to recording your shot. In a new project this field will always start at 1. If you open an existing project, then we scan the raw file for the last sideshot or store point and if we find one, we'll set the point number accordingly. For example, if the last sideshot in the raw file was to point 58, then the next time the project is setup we will set the next id to 59.



#### **Active Line List Button**

Much like the first line in the project, just select the desired description from the list and select the desired draw option before shooting the first point for the new line. When you press the button a screen will appear listing all your active lines. Selecting one of them and pressing the **OK** button will make it the current line.

The key to note is the display of <Start line> in the Active Lines list. Once the first point for the new line has been measured, the Active Lines list will set and display the new line as current.

To change the current line, simply select the desired line from the Active Lines list and continue taking shots to add to the selected line. All settings are stored for each line so there is no need to re-select the Description or draw option.


<No Desc>

### **Description Selection Button**

Use this button to set the current description that will be used when you shoot your points. When you press the description button you will see a screen listing all the descriptions read in from your [AutoMap Library](#). Select the description you want to use and press the OK button. You can type in the letters of the description which will automatically scroll to the descriptions matching your entry.


## **3D View Toolbar**

The 3D View toolbar is used to help you view your project in a 3D perspective. You can also define a virtual grid that will be displayed in the drawing and can be turned on and off.

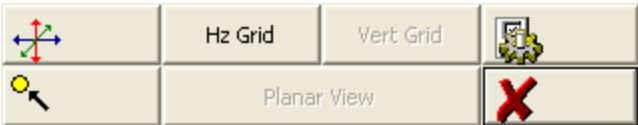

To turn this feature on select the 3D View button on the [Display toolbar](#). When you do this the 3D View Toolbar will appear at the bottom of your screen. The buttons on the toolbar are described below.

### **3D View**

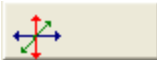 

When this is turned on you will be able to rotate your project in a 3D perspective. This tool is handy when used in conjunction with surfaces, road alignments, or [vertical projections](#). To return to plan view, close the 3D View toolbar and press the Zoom Extents button. It can also help you find points that have incorrect elevations.

### **Center on Point**



Use this to center the view on the selected point. This will not change your current view rotation or zoom depth.

### **Hz Grid**

Use this to turn on a horizontal grid that will be displayed in your drawing. You can set the grid spacing in the settings.

### **Vert Grid**

Use this when using the [Vertical Projection](#) tool to turn on a vertical grid that will be displayed in your drawing. You can set the grid spacing in the settings.

### **Planar View**

Use this when using the [Vertical Projection](#) tool to set the view perpendicular to the vertical plane, so that the wall or other projected plane is displayed face-on in the map view.

### **Grid Settings**



Use this to set parameters that affect the grid spacing and origin. You can select the grid origin using a point chooser and specify lengths for the sides. You can also specify the interval for each axis.

## **Mini Toolbar**



The mini toolbar control is found directly beneath the Main Menu button on the [Topo Toolbar](#). It is used to help you maximize your screen space by allowing you to control which toolbars you need to keep active in the main interface. When you press the mini toolbar control you will see the mini toolbar appear toward the bottom of the main interface.



Use this to display the full [topo toolbar](#).

### **Menu**

Use this to display the [main menu](#).

### **Controls**

Use this show or hide the [display toolbar](#).

### **Instrument**

Use this to show or hide the [instrument toolbar](#).

 
## Instrument Toolbar



When you use FieldGenius in either manual or total station mode, you will see the instrument toolbar beside the map area.



This toolbar allows you to control your [instrument settings](#), [EDM modes](#), [measurement modes](#) and [target heights](#).

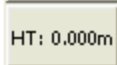


### **Auto-Center**

This toggles the auto-center feature on or off. If turned on, whenever you take a measurement, the map screen will always re-center on the measured point.



### **Instrument Settings**

 This opens the [instrument settings](#) screen where you can control specific settings for your total station such as EDM settings, Tolerance setting and Instrument Connection/Disconnection.

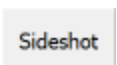


### **Measurement Mode**

This opens the [Measurement Modes](#) screen where you can select what type of measurement you want to take. The current measurement mode is always displayed on this button - for example if you're using the distance offset mode it will display "Dist Off".



### **Target Height**

 This opens the [Target Heights](#) screen where you can change the current target height. The current target height is always displayed on this button.

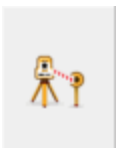


### **Measure Button**

This triggers your total station to take a measurement.

If you are using a robotic total station, please see the [Robotic Instrument Toolbar](#) topic.

If you are using GPS, please see the [GPS Toolbar](#) topic.
 
## Robotic Instrument Toolbar

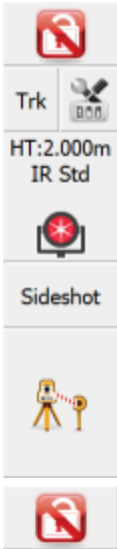

When you use FieldGenius in robotic total station mode, you will see the Robotic Instrument toolbar in the map area. Like the Instrument Toolbar, this toolbar allows you to control your instrument settings, access the [Target Manager](#), change measure modes, and make a measurement. It also lets you search and lock onto the prism.

### Lock Button

FieldGenius uses a button to trigger the instrument to search for the prism and lock onto it. You can also use this button to turn the lock off.

The button when not locked on a prism will display a **No Lock** status with a un locked icon. To search for the prism, simply press the No Lock button.



After you have pressed the No Lock button you will see a **Search** icon on the button while the instrument searches for your prism.

When FieldGenius finds a prism and locks onto it, the button will display a **Lock** icon. To stop the instrument from tracking, you can press the Lock button again to set it to a No Lock status.



If you're using multiple prisms and you want to force FieldGenius to look for another one when you're locked onto a prism, double tapping the Lock button will force it to search for the next available prism.

Also during a search you can cancel the current search by pressing the Stop Search button on the search progress toolbar.

### Cursor Tracking



This turns the cursor tracking feature on or off. If turned on, the current position of the target will be displayed on the screen in real time. You can only use this feature once you have specified

 
an instrument setup using the Setup Occupy Point command.

Note: The cursor tracking position will use a coarse measurement to plot your position. When you are stationary, the cursor is a hollow triangle pointing towards the instrument. When you are moving, the cursor is a solid triangle pointing in the direction of travel.



### **Instrument Settings**

This opens the [Instrument Settings Toolbar](#). On this toolbar you can control specific settings for your total station such as EDM modes.

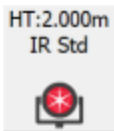


### **Target Manager**

Press this button to access the [Target Manager](#). Here you can create, edit, copy, and delete targets.



### **Measurement Mode**

 This button will open the Select Measurement Mode screen, From here you can select what type of measurement you will be using. When you choose your mode, this button will display the mode you're using. For example, if you're using the Distance Off-set mode, the button will display "Dist Off".

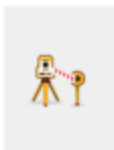

### **Measure Button**

Use this to trigger your total station to take a measurement.

If you are using a conventional non-robotic total station, please see the [Instrument Toolbar](#) topic.

If you are using GPS, please see the [GPS Toolbar](#) topic.



## GPS Toolbar



Once the user has selected a GPS receiver and communication has been established, the GPS toolbar will appear on the [main interface](#).

**NOTE:** You will only see the GPS toolbar if you selected GPS Reference, GPS Rover, or GPS Demo as your instrument type. If you have selected a GPS Profile but are not yet connected to the receiver, most of these buttons will be disabled.



### Auto-Center

Single-tapping this button will re-center the display on the current position of your receiver.

Double-tapping this button will set the system into an auto-pan mode where the display will always be centered on the current position. When active, single-tapping this button once more will disable the auto-pan mode.



### GPS Settings

 
If you press this button while you are connected to a receiver, you will see the [GPS Settings](#) screen. At any time this button can be used to adjust or stop your GPS survey.

If you press this button without being connected to a receiver, you will see the [Instrument Selection](#) screen where you can edit your GPS profiles or connect to your receiver.



### DOP Values

This displays the current DOP (Dilution of Precision) values. Pressing this button will cycle through the PDOP, HDOP and VDOP. The PDOP is the default setting as this is most often used to ascertain the quality of the satellite geometry.

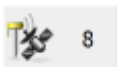


### Satellite Plot/Satellite List

This shows the total number of satellites the receiver is currently using in its solution. Press this to view a [sky plot](#) of the current SVs visible to the rover, or to access the [Satellite List](#).



### GNSS Measurement Modes Menu

 This menu contains all the available measurement modes that can be used with your GNSS receiver. Please review the GNSS Measurement Modes topic for more details.

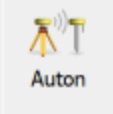

### Measure

This is the measure button.

This button also indicates the current solution type. This tells the user if the solution is Fixed, Float, WAAS, DGPS or Autonomous. This button will also indicate to the user if the corrections from the reference station have been discontinued by denoting "No Link".


Please refer to the [GPS Measurement](#) topic for more information.

If you are using a conventional non-robotic total station, please see the [Instrument Toolbar](#) topic.

If you are using a robotic total station, please see the [Robotic Instrument Toolbar](#) topic.

## Map Select Toolbar

When you tap on an empty spot in the map view, the selected point will be highlighted with a blue dot and the Map Select toolbar will appear along the bottom of the screen, showing the coordinate of the selected point.

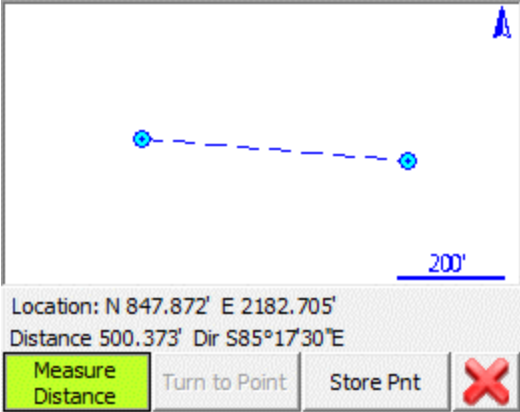

Note, this toolbar functionality can be enabled or disabled via the Map Position Select checkbox in the [Options](#) screen.

### **Measure Distance**

When this is toggled on, subsequent taps will cause the blue dot to move to the new location, a second blue dot will appear at the previous location, and a dashed line will follow the entire path of the selected points. The total distance and the direction of the last segment will be displayed. To reset the measured distance, toggle this mode off then back on again.

### **Turn to Point**

If you are using a motorized total station and have occupied a point in the project, this will cause your instrument to turn to the selected point (as indicated by the blue dot in the map).

### **Store Point**

This will open the [Store Point](#) dialog with the coordinates entered for the selected point, so you can store it into your project database.

# POINTS / LINES / DESCRIPTIONS

## Points

FieldGenius projects typically are comprised of points that have been imported, calculated or measured. These points are always stored in a file made up of the project name and will have an extension of DBF. DBF files can be viewed using a DBF reader or with Microsoft Excel.


### Point Labels

In the drawing area you will always see a node or dot that marks the coordinate location of the point. For each point you can control what is displayed on the screen such as the points number, elevation, description and note. To control the visibility of the labels, use the Options button on the [Display Toolbar](#).



### Point Toolbar

At any time you can tap on an existing point to open the [Point Toolbar](#). This toolbar will contain common functions that are done with points. Please refer to the [point toolbar](#) topic for more information.

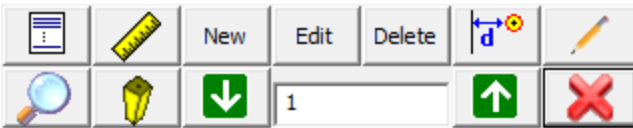


### Editing Single Points

To edit a point you can tap on it which will open the [Point Toolbar](#). Press the Edit button to open the [Review / Edit Points](#) screen.

### Working with Multiple Points

If you need to search, list, rotate, translate, delete, or edit multiple points at the same time you will use the Coordinate Database Editor. Please see the [Coordinate Database](#) topic for more information.

## Point Toolbar

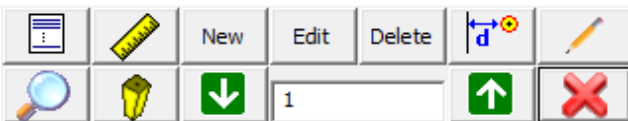

When you tap on an existing point in the drawing you will see the point toolbar appear near the bottom of your screen. The point toolbar contains functions that are frequently used on points in your project. Following is an explanation of what each button will do.



### **Points List**

This will display the list of all points in your current project and you can sort the list by tapping on any of the column headings. When you find the point you want simply tap it and press the ok button.



### **Draw Tool**

Use this to draw lines, points, and connect line work between existing points. This will open the [Draw Tool](#).



### **New Point**

This will open the [store and edit](#) dialog and allow you to enter coordinates for a new point.



### **Edit Point**

Use this to edit the coordinate value for the selected point.



### **Delete Point**

This will delete the selected point from the drawing and database. You will be asked to confirm that you want to delete the point.



### **Offset**

This will open the [Offset Tool](#).



### **Inverse Tool**

Use this to measure the [inverse](#) between points.



### **Zoom to Point**

This button when pressed for the first time will force the point to be centered on the screen. Subsequently, if you keep pressing it, it will continue to zoom in on the point.



### **Stake Point**

Pressing this will help you stake the point that is currently selected and take you to the [Stake Points](#) screen.



### **Select Point**

Use these two buttons to scroll up and down numerically through the points in your database.



### Point ID

This displays the point id of the point you've currently selected.

## Select Point Toolbar

The point chooser is a mechanism that is called by routines requiring a point number entry. You access it by selecting the point chooser icon next to point number fields, or by double-tapping in an extended edit point number field.



When select it you will see the point chooser toolbar open up towards the bottom of your screen.

Point ID	<input type="text" value="145"/>	North: 11448.417'
		East: 4820.126'
<input type="checkbox"/> Quick Select		Elev: 0.000'
		Desc:
Select	List	New
		Cancel

### Point ID

You can either type the Point ID into this field if you know what it is, or when you tap on a point in the map screen its point ID will be displayed here.

### Quick Select

If Quick Select is turned on, then as soon as you tap on a point in the map screen you will be automatically returned to the routine you were selecting the point for. If Quick Select is turned off, then after you tap on a point in the map screen, the coordinate data of that point will be displayed, and you must press the Select button to get back to the previous routine.

### Select

Pressing this will take you and your selected point back to the routine you were selecting the point for.

### List

Use this to open a grid displaying all the points in your project database. From this list you can click on a point and when you press the OK button it will be inserted into the Point ID field.

### New

Use this to open the [Store / Edit Points](#) screen. This will enable you to create a new point.

**Cancel**

Pressing this will take you back to the routine you were selecting the point for, without selecting the selected Point.

## Point Averaging

[Main Menu](#) | [Data Manager](#) | [Point Database](#)



This routine allows you to select a number of points from within the Point Database, and then calculate the average of the coordinate values of the selected points. You can then create and store a new point based on the averaged coordinates.

### Point Database

When you enter the Point Database, tap on the green arrow button in the bottom toolbar until you see the **Average** button displayed. **Note:** The items will loop back around to the first item if you keep pressing the green arrow button.

Select multiple points by tapping on the screen and dragging a box around the items you wish to include in the averaging calculation.

Point ID	Northing	Easting	Elevation	D
1	100.000m	200.000m	10.000m	
2	100.000m	250.000m	15.000m	
3	50.000m	250.000m	7.000m	
4	50.000m	200.000m	7.000m	
6	100.026m	250.026m	15.019m	

Toolbar:  Average 

Use	Name	Description	dDistance	dDirection
<input checked="" type="checkbox"/>	2		37.268m	26°33'54"
<input checked="" type="checkbox"/>	3		23.570m	135°00'00"
<input checked="" type="checkbox"/>	4		37.268m	243°26'06"

**Averaged Point**

Northing: 66.667m  
 Easting: 233.333m  
 Elevation: 9.667m

Press the **Average** button when finished. This takes you to the Point Averaging dialog.


In the Point Averaging dialog, we see the results of the averaging computation. You can uncheck the box in the **Use** column to disable/re-enable a selected point.

The **Store Point** button takes you to the [Store Point](#) dialog.

The **Cancel** button returns you to Point Database dialog.

## AutoMap Library

The AutoMap Library editor allows the user complete control over the visibility of points and lines based on the descriptions used to code the points. It also allows you to set attributes for the descriptions such as point and line colour.

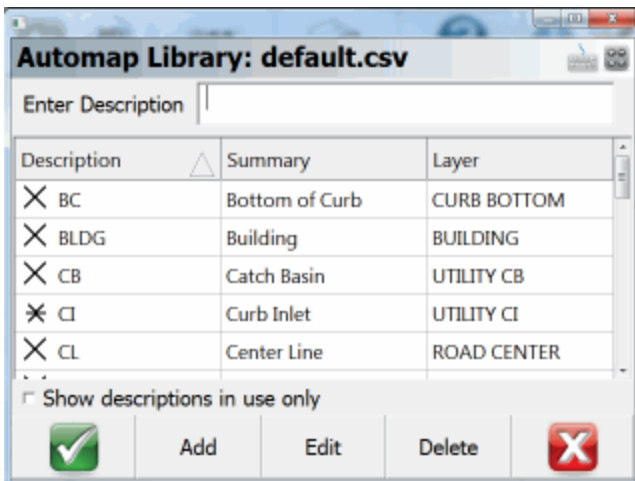

### Enter Description

Use this field to auto scroll to description in your list. For example, typing the letters AS will scroll down to the ASPHCURB description. If you type a unique description and press enter, you will be prompted for whether you want to add it into the AutoMap Library or not.


### Show descriptions in use only

Use this to display only the descriptions found in your AutoMap Library that are used in the current project.


## Adding Descriptions to the Library in FieldGenius

While you're working you can add descriptions to the AutoMap Library on the fly. When you enter a description that isn't in the library you will be prompted with a message asking you if you want to add it to your project's AutoMap Library file.



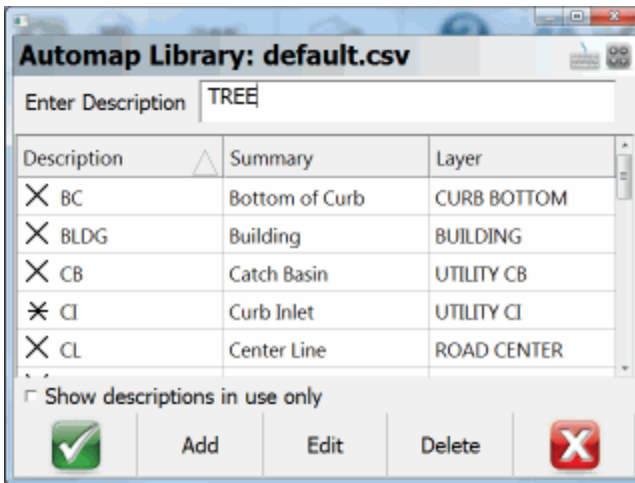

**Note:** This prompt can be turned off so FieldGenius always uses the new descriptions without adding them into the AutoMap Library file. To do this you need to make sure you have the **"Prompt New Descriptions"** toggle turned off in the [Options](#) menu.

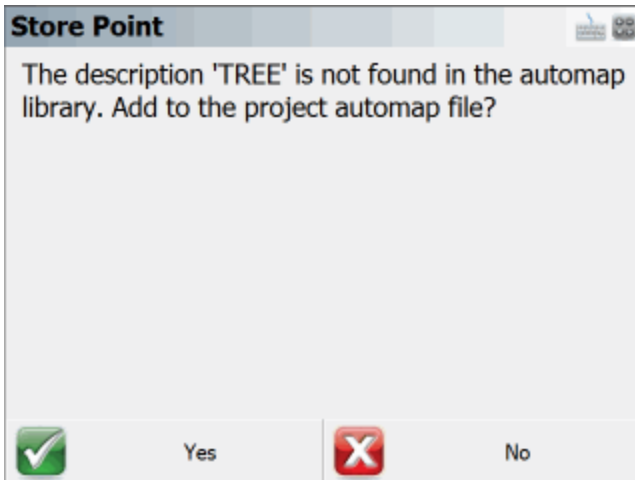

If you answer **Yes**, then the description will be added into the project's AutoMap Library file (not to the AutoMap Template file).

If you answer **No**, then the description will be used without adding it into the AutoMap Library. If you do not add it to the AutoMap Library, then you will not be able to set options such as defining the layer and colour of points and lines with this description.

## Editing Descriptions in the Library in FieldGenius

The AutoMap Library editor allows you to edit properties for each description in the library. Pressing the Edit button will bring up the menu shown below for the selected entry:

These properties are stored in the library in specific columns. Please refer to the topic below about editing the library for more information.

### Summary

You can use this field to summarize your description. For example, a description IP may have a summary Iron Pin.

### Point Symbol

You can define a marker for a point. These markers are not automatically transferred back to the desktop and are not similar to CAD blocks or parts. They are simply point nodes that will be displayed in the map view to help distinguish different points on the screen. There are 27 different marker types. The symbol for each description is also shown on the AutoMap Library screen.

### Point Size

This allows you to change the size of the marker. You will find that using a number of 1 is a good starting point. Adjust from there as needed.

### Point Colour

This allows you to set the colour of the markers. You can choose from a list of 255 colours.

### Line Colour

This allows you to change the colour of lines in your drawing.

### **Layer Name**

This specifies the layer that will be used for lines and points with this description.

### **Connect Points With Line**

If this is checked, when you select the description from the topo toolbar on the main display, the connect lines toggle will be turned on automatically. Use this for descriptions that typically are connected by lines such as an edge of road or ditch center line.

### **Do not assign to DTM**

This is very useful for the creation of real-time surface models. If you toggle this ON, then these points will not be included in any DTM created with FieldGenius. Use this for descriptions that are not at ground level.

---

## **Deleting Descriptions from the Library from FieldGenius**

The AutoMap Editor allows you to delete descriptions from the library. Pressing the Delete button will prompt you to make sure that you want to delete the selected entry. This will delete that entry from the project's AutoMap Library file, it does not affect the AutoMap Template file.

---

## **Editing an Existing Library outside of FieldGenius**

The AutoMap Library is a very powerful feature in FieldGenius. When combined with our desktop products, your downloaded files can literally be imported, layers and symbols placed in seconds. For this topic we will concentrate on helping you work with and edit the AutoMap library using FieldGenius.

The FieldGenius AutoMap library is a comma delimited file that can be edited with MicroSurvey CAD or inCAD, with a text editor like Microsoft Notepad, or with a spreadsheet application like Microsoft Excel. Since not every FieldGenius user owns our desktop software we will discuss editing the file with Excel.

The first row in the file is reserved for the column header. Some of the columns are reserved for our desktop products, but the following columns are used in FieldGenius.

Column A = Description (String value)

Column B = Summary of Description (String value)

Column L = Connect Points with Line (1=Yes, 0=No)

Column M = Layer Name (String value)

Column O = Line Colour (Number 0-255)

Column Q = Line or Spline (0=Line, 1=Spline) \*\*\* This works in conjunction with Column L.

Column U = Marker Type (Number 0-26)

Column V = Marker Size (Number 0-10)

Column W = Marker Colour (Number 0-255)

Column X = Exclude from DTM (1=Yes/Exclude, 0=No/Include)

Column AF = Zone Number (Numeric Value)

## Create New Library outside of FieldGenius

You can easily start a new library from scratch simply by creating a simple text file. In the first row add a header followed by your descriptions and summaries. You have to separate the values with a command and when you're done save the file with an extension of .CSV - an example filename might be CODES.CSV.

```
DESCRIPTION, SUMMARY
PIN, Iron Pin,
EC, Edge of Concrete,
EP, Edge of Pavement,
```

You can then copy the file to your FG Projects directory. When you create a new project or open an existing one, make sure to select it as the AutoMap Template File.

## Point Patterns

[Main Menu](#) | [Survey Tools](#) | [Point Pattern](#)


This routine allows you to create or edit point patterns, and apply them to existing points in your project. This is useful for creating drill holes for bolt patterns, pillar columns, etc.

### Note

The \*.pattern data files are completely interchangeable between both FieldGenius 2012 and MicroSurvey CAD or inCAD, so any patterns created in one program can be edited or used in the other.

## Pattern Toolbar

When you start the Point Pattern command, you will see the Pattern Toolbar along the bottom of your map screen.

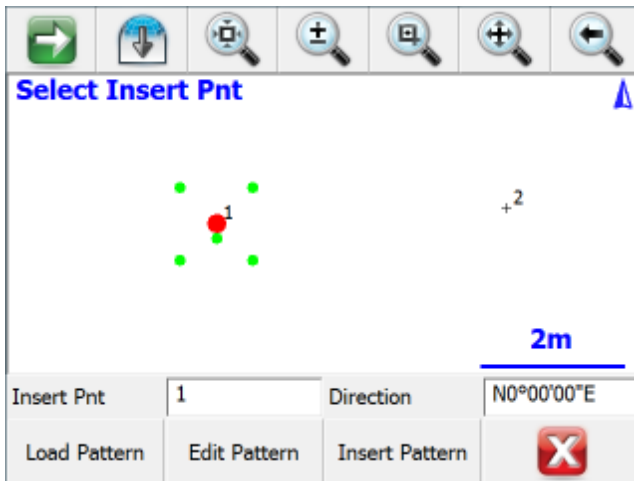

### Insert Pnt

Specify the point ID for an existing point in your project, either by typing in its point ID, or by tapping on a point in the map screen to select it when this field has focus.

The selected point will be highlighted in the map view with a large red point, and the current pattern will be previewed with smaller green points.

### Direction

Use this to specify a direction value for your pattern. The default direction of N0°00'00"E will orient the pattern exactly as it was defined.

To orient your pattern along any arbitrary line between two existing points, enter those two points using the pt#..pt# format like 1..2 and the direction between those two points will be automatically calculated for you. The pattern's X-axis will be applied along this direction.

### Load Pattern

Press this button to load a previously saved \*.pattern file.

### Edit Pattern

Press this button to edit the currently loaded pattern, or to create a new pattern if you have not loaded one. Please see below for more information on the Pattern Editor.


### Insert Pattern

Press this button to apply the currently pattern to the selected insertion point. New points will be stored in your project at the coordinates, as previewed by the green pattern points. All inserted points will be created with the description "Pattern", and with the same elevation as the selected insertion point.

To insert a pattern onto multiple points, simply change the insertion point and insert the pattern onto each point one-at-a-time as desired.

## Pattern Editor

When you press Edit Pattern on the Pattern Toolbar, you will see the Pattern Editor screen.

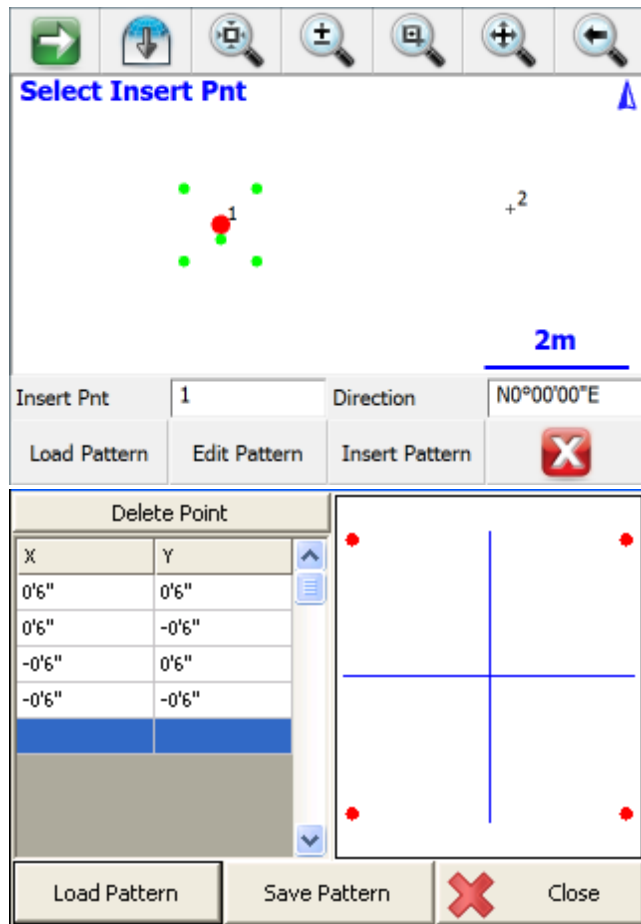

Enter the X and Y offset values for your pattern as desired. As you enter the points, they will be pre-viewed in the grid, which will automatically zoom to the extents of your pattern. Please see the [Distance Entry & Recall](#) topic for options on entering the offset values in various units.

The 0,0 origin will always be located at the selected Insertion Point, so a point should not be included in your pattern at 0,0. You can also rotate the pattern into any orientation on the Pattern Toolbar (see

above), so you do not need to create different variations of the same pattern to insert it in different orientations.

Press the Delete Point button to remove the selected X,Y offset from the pattern.

### **Load Pattern**

Press this button to load a previously saved \*.pattern file.

### **Save Pattern**

Press this button to save the current pattern to disk.

This will always do a "Save As" type save, so you can specify a new filename, or select any existing pattern file to overwrite it with the changes. You will always be prompted for confirmation before overwriting an existing pattern file.

### **New Pattern**

To create a new pattern, simply delete all of the existing points from the current pattern. When you press the Save Pattern button you will always be prompted for a new filename, so you will not lose the previous pattern.

### **Close**

Press this button to close the Pattern Editor and return to the Pattern Toolbar. If you have not saved the current pattern, you will be prompted to confirm this before discarding your changes.


## **Partition Lines/Arcs**

### **Line Toolbar | Partition button**



The Partition command is started by selecting a valid line or arc in the map screen, which will open the [Line Toolbar](#) where you can select the partition button. After you select the partition button you will see the partition toolbar.

The partition line and arc command allows you to compute points along objects in your project. You can partition figures that have line and arc segments that have a radius point defined. 3 point arcs can not be partitioned. Straight lines in DXF files can be partitioned, all other DXF entities are not compatible with the partition command.

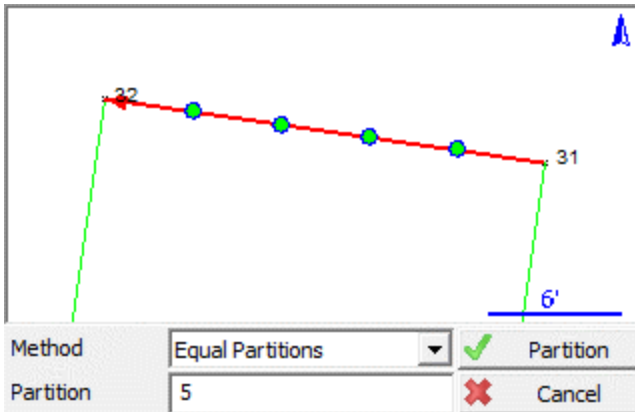

### Equal Partitions


You can partition the segment by equal divisions. Simply select the partition number and press the Partition button. This will compute new points and split the object up into separate segments.

### By Distance

You can partition the segment by specifying a distance between partitions. Simply define the partition distance, then press the Partition button. This will compute new points and split the object up into separate segments.

## Notes

Use this to enter or record audio notes for your points. You can access the notes screen by pressing the **Notes** button on the [Store / Edit Points](#) screen.

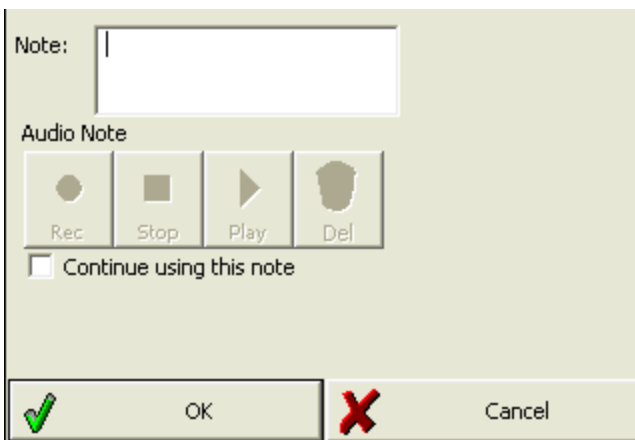



## **Text Notes**

You can type a note up to 32 characters in length and it will be stored in the project's DBF file. You can not enter more than this limit into the Note field.

When the file is imported into MicroSurvey CAD or inCAD, the note will appear in its own field, or can be appended to the point's description field.

**Continue using this note:** Use this if you want to use the note you just entered automatically for future points that are stored.

## **Audio Notes**

Use this function to record and playback audio notes that are related to stored points. These notes will be transferred to MicroSurvey CAD or inCAD desktop software for playback in the office.

The notes will be stored in your project directory and will be automatically named for you. Example, if you recorded a note for point 2, a file would be created pnt2.wav. The file that is created is a standard windows WAV file that can be played by most audio players.

MicroSurvey CAD or inCAD desktop software will automatically link to any audio note you recorded. This allows you to easily see which points have audio notes.

### **Recording and Playback Controls**

**Circle** = record

**Square** = stop

**Triangle** = playback

**Trash** = delete

**Note** that not all handheld devices support audio notes. You must have a record and playback functionality, which for some units requires optional accessories.

### **To Store an Audio Note:**

1. Tap the red circle to activate recording. Speak into your microphone to record the desired information. "This post is bent" etc.
2. Press the square button to stop the recording
3. To confirm your note, press the playback arrow, now green on color displays, and listen to your note

### **To replace an Audio Note with a new note:**

1. Delete the existing audio note. You will be prompted to confirm the deletion.
2. Record a new audio note.

## Photo Notes (Nautiz X7 Only)

Use this function to record photo notes for a point. **This option is only available on the Nautiz X7 data collector.** If you are using a Nautiz X7 data collector you will see two buttons for recording and deleting pictures.

### Camera

The Camera button is used to take a picture. When you press it, it will start the onboard camera software and allow you to snap a picture. The picture will be saved in your current project with the filename **[point number].jpg**. The image quality and settings will be determined by the camera setup for the device. If the Camera button is greyed out, it means that a photo note already exists for this point, and you must delete it first if you would like to replace it. The photos will be automatically imported into your MicroSurvey CAD or inCAD desktop software for viewing in the office.

### Delete Picture


The Delete Picture button will delete the photo stored for the point.

## Feature List


A feature list is a tool built into FieldGenius so you can collect attribute data for your points. Feature files allow you to define what data needs to be collected about a point's attributes. You can define mandatory fields, default values, true/false items and select from list options. First you need to create a feature list file using the Feature List Editor which can be installed from your FieldGenius CD. Please refer to the help menu in the editor for more information on how to create an effective feature file.

Feature files have a **FEA** extension and they should be copied to your FG Projects directory. There is no limitation to the number of feature files that can be stored on your data collector. Once you have created your file and copied it to FG Projects you can open it when you get to the [Review Files Screen](#).

In this example we will open a Feature List File named Sample.FEA.

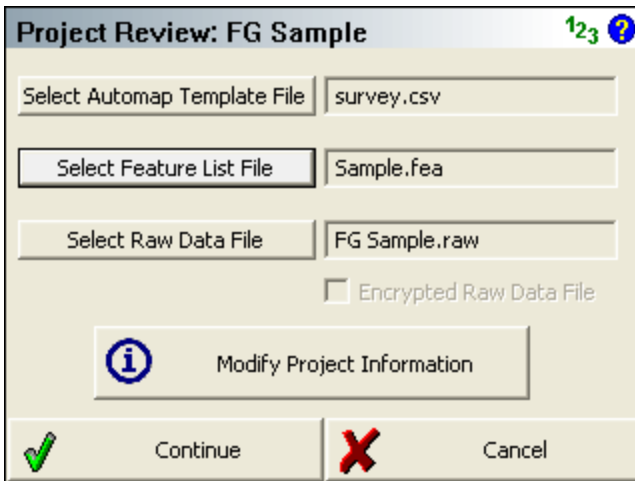

To collect attribute data for a point, you have to press the **GIS Attributes** button on the store and edit dialog.

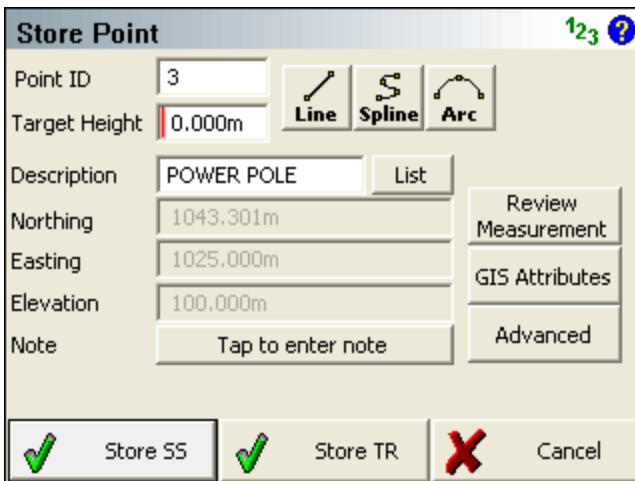

When you store a point during a measurement or edit one afterwards, you will see that you can select the **GIS Attributes** button. When you press this button, it will look at the point's description and check to see if you have a feature defined that matches. If it does, it will open up that feature for you automatically, in our example you will see that the Power Pole feature was opened.

ABC	Serial Number	
	Material	Wood
123	Height (m)	15.0
	Transformers	None
Y/F	Lamp Attached	<input type="checkbox"/>
	Condition	Good

As you can see, feature files help you collect consistent and accurate notes about a point you measured.


When you store the point, a file will be created in the project directory. The file will have the same name as the feature and will have a DBF extension. In our example, the file would be named POWER POLE.DBF. Each point will be appended to the same database file.

The DBF database file can be opened with Microsoft Excel.

## Raw File Comment

### Shortcut Key - X

At any time you can enter a note that will be recorded to the raw file. Simply press the X key on your keyboard device which will open the Enter Comment dialog. Enter a comment that you want appended to the end of your raw file. You are limited to 99 characters.

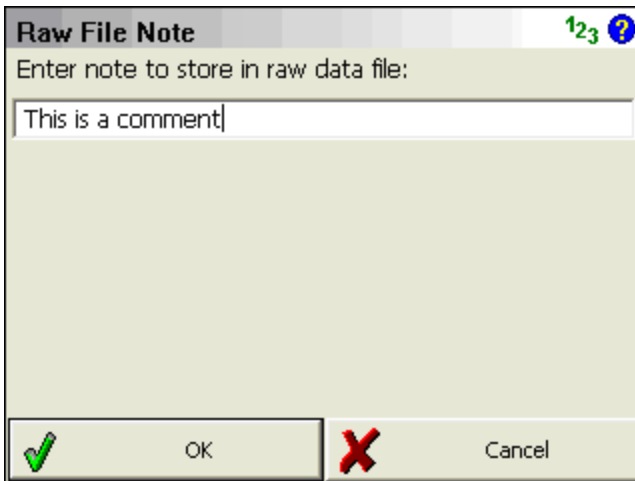

If you view your raw file your comments will appear as shown in the following example.

```
|--This is a comment
```

You can also enter comments into the raw file by using the [Raw File Viewer](#).


## Active Linework

FieldGenius has Code-Free linework control in the field to eliminate the need to remember line codes. To activate linework on the fly while surveying, you simply choose the description you want and start taking shots! For MicroSurvey CAD or inCAD desktop users, line connectivity codes setup in the desktop Automap library will be used by FieldGenius. For more information see the [Draw Option Defaults](#) section.

FieldGenius uses the concept of Figures for handling of linework. Some software packages refer to these as "Chains".

At the bottom of the FieldGenius interface, you will see the Active Lines List button on the second row. When a new project is started, it will display [ **<No Line>** ] as the current, active line.


When a new line figure is about to be started, [ **<Start line>** ] will be displayed on the button. After the first point for a new line has been measured, the active line will be created, made current and displayed.

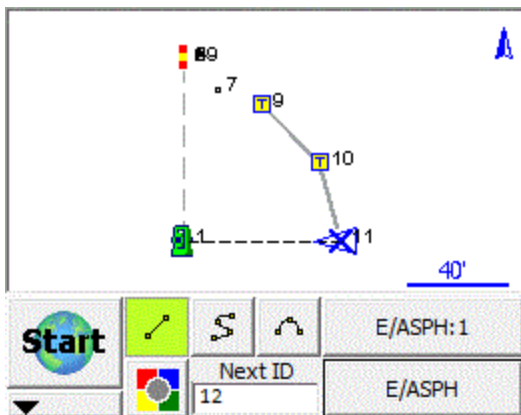


In the example shown, notice E/ASPH:1 on the button. This is the current Active Line. E/ASPH is the point description and 1 is the group number (added automatically). Since this is the first figure in the map, it is assigned group 1.

A Figure is a continuous series of Line, Curve and/or Arc segments. The Figure is identified by Point Description and a group number. Whenever a new line is started, a new Figure is created and added to the Active Lines list with an automatically assigned group number. The group number will increment by one when a previously used point description is used for a subsequent line. (Notice there are two E/ASPH lines in the example)

Furthermore, all linework in FieldGenius is handled in 3D.

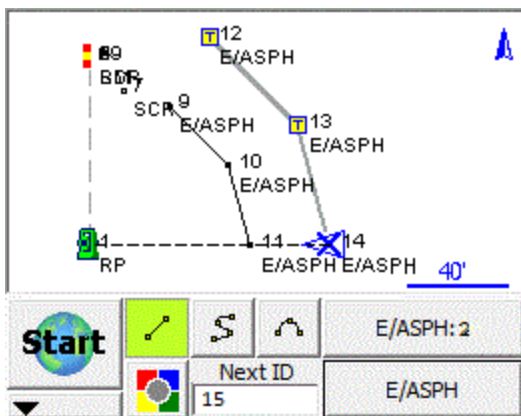

When you press the E/ASPH:2 Active Line button you will see a list of the figures in your project.

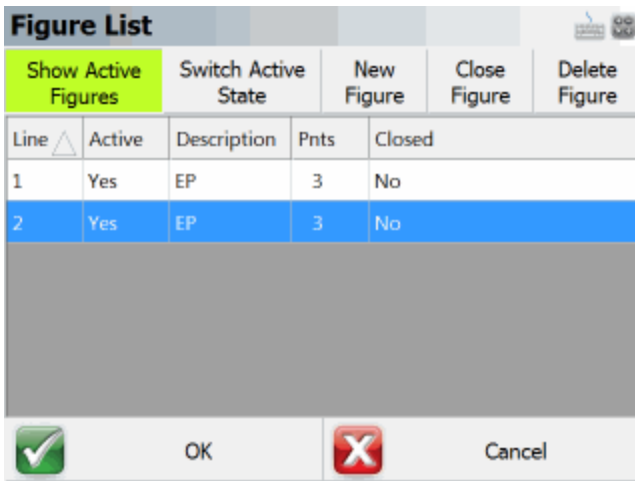

### See Also ...

- [Automap Library](#)

## Figures

Tangents, arcs and curvy lines in FieldGenius are also called figures. Figures are created automatically for you as soon as you connect points in the drawing.

Figures can be created while you survey in realtime using our active linework or you can manually create the figure using the pencil tool.

### FieldGenius Figures


When you click on a figure the [Line Toolbar](#) will appear. You will also see bold text in the drawing area indicating what you selected.

### DXF Linework

When you import a DXF drawing you will see all the linework that exists in the drawing. When you select a DXF line or arc you will see the [Line Toolbar](#) but everything will be greyed out except for the stake and perpendicular distance buttons. If you press the stake button or perpendicular offset to point button, they will open up their respective toolbars.

When you click on a DXF entity you will see bold text in the drawing area indicating that you picked a DXF line or arc, and it will display which layer it is on.

You can control the visibility of DXF layers through the [Layers Manager](#) screen.

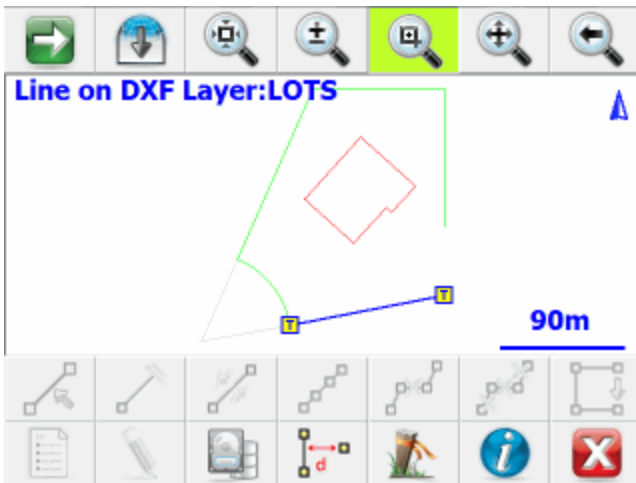

### Coordinate DXF Data

You can add coordinates to the DXF entity by pressing the Coordinate DXF Data button.



### Information

You will see the inverse information based on the DXF entity you picked by pressing the Information button

## Line Toolbar



When you tap on an existing line or arc you will see the line toolbar appear near the bottom of your screen. The line toolbar contains functions that are frequently used on line or arcs in your project. Following is an explanation of what each button will do.



### Set Figure Current

Use this to make the current line or arc current in the Active Line List.



### End Figure

Use this to mark a line as complete or finished.



### Reverse Figure Direction

Use this to switch the direction of a figure so you can append to the oppo-





site end.

### **Partition Line / Arc**

You can [partition \(split\)](#) a figure or DXF line into smaller segments using this command.



 
### **Delete Figure Segment**

Use this to delete a segment from a figure.



### **Delete Entire Figure**

Use the delete an entire figure.

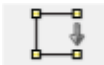

### **Close Figure**

Use this to close a figure so it finishes at the same point it started at.



### **Open Figure List**

Use this to display the Active Line List.



 
### **Draw Tool**

Use this to draw lines, points, and connect line work between existing points. This will open the [Draw Tool](#).



### **Convert Line to Spline**

This will turn an existing figure that is comprised of straight lines into a curvy line, and vice-versa.

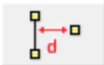

### **Offset Tool**

Use this to open the [offset tool](#).



### **Stake Figure**

Use this to open the stake line command and stake the current line you have selected.



### **Coordinate DXF Data**

You can add coordinates to the DXF entity by pressing the Coordinate DXF Data button.




### **Information**

This will display the inverse information of the segment you have selected, as well as the perimeter and area if it is part of a closed figure.

## **Select Line Toolbar**

Various commands will use this toolbar to help you select a line.

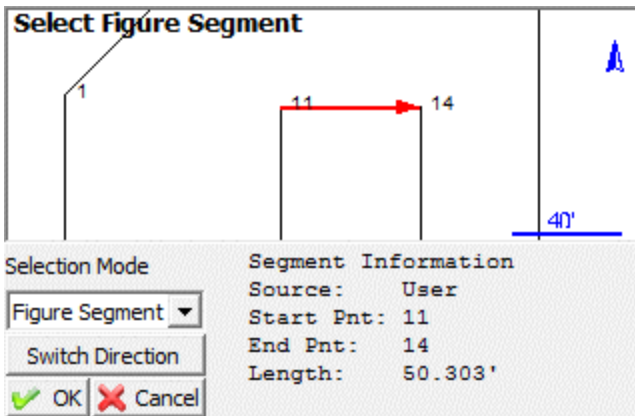

Whichever Selection Mode you use, the selected line will be highlighted in red in the map screen along with a direction indicator. If necessary, you can press the **Switch Direction** button to reverse the start and end of the selected line. Press OK to accept the selected line and proceed to the next step.

### Selection Mode: Figure/DXF

Pick this mode to select an existing figure or DXF entity by selecting the desired figure from the map screen. You can select any of the following:

- Figures containing lines and/or arcs (but not curvey splines)
- DXF lines, arcs, and/or polylines (but not splines, splined polylines, or fitted polylines)

### Selection Mode: Figure Segment

Pick this mode to select an individual line or arc segment from a complex figure, by selecting the desired segment from the map screen. You can select any of the following:

- a line or arc segment from a Figure (but not a curvey segment)
- (line or arc segments from a DXF polyline cannot be selected)

### Selection Mode: Define Points

Pick this mode to select points in your project to define a line or arc. You can define the following line types:

- Straight Line: select a Start Point and End Point
- Arc (CW): select a Start of Curve Point, Radial Point, and End of Curve Point

- Arc (CCW): select a Start of Curve Point, Radial Point, and End of Curve Point
- Arc (3Pnt): select a Start of Curve Point, Point on Curve, and End of Curve Point.

**Switch Direction**

The line direction will reverse, and the arrowhead shown in the map screen will show the current "forward" direction of the line.

**OK**


The highlighted line will be selected, and you will be returned to the appropriate command.



**Cancel**

You will return to the previous screen without selecting anything.

**Figure List**

The figure list contains a listing of all figures in your project.

Figure List					
Show Active Figures		Switch Active State	New Figure	Close Figure	Delete Figure
Line 	Active	Description	Pnts	Closed	
1	Yes	EP	3	No	
2	Yes	EP	3	No	

 OK  Cancel

**Line Column**

This is the group id assigned to the figure. Refer to the [Active Linework](#) topic for more information.

**Active Column**

If the figure is active, you will see the work **YES**. To make a figure not active, press the Switch Active State button.

### **Description Column**

This is the name of your figure which will usually match the description of the first point that the figure is connected to.

### **Points Column**

This is the total number of points that the figure is connected to.

### **Closed Column**

If you [closed the figure](#) you will see the word **Yes**.

### **Show Active Figures**

When this is selected (default setting) all of your active figures will be listed. You can select a figure that you would like to work on simply by selecting it in the list and pressing the OK button. If this is turned off, then all the figures in the project will be displayed.

### **Switch Active State**

Use this to change the status of a figure to "finished". When this is done, it will no longer be displayed in the figure list of the Show Active Figures button is on. Once a figure is switched to a not active state, nothing can be added to it.

Figures that are not active, can be made active again simply by selecting the figure you want to use and pressing the Switch State button.

### **New Figure**

Use this to create a [new figure](#) in the figure list.

### **Close Figure**

Use this to [close a figure](#) so it will close back to the starting point.


### **Delete Figure**



Use this to delete a figure that you have highlighted in the list. You can delete figures that are flagged as active, or not active. Review the [delete figures](#) topic for more info on deleting.

## **Using Active Figures**

### **Active Linework Options**


We have 3 Draw Options for Active Linework, selected from buttons that appear beside the Description and Active Lines drop down lists:

	Draw Lines button = Connect points with straight lines
-------------------------------------------------------------------------------------	--------------------------------------------------------


	Draw Curvy Lines button = Connect Points with a best-fit curvy line.
	Draw 3-Point Arc button = Fit an arc through three measured points

### Start the first Line in a Project


To start the first line in a new project, choose the desired point Description from the Description List and select the desired draw option before you start taking measurements. The Active Lines list will display <Start line> as shown. At this point, the next point measured will be the first point of a new Active Line using the E/ASPH Description. Use the measure button to measure the starting point for the new line.

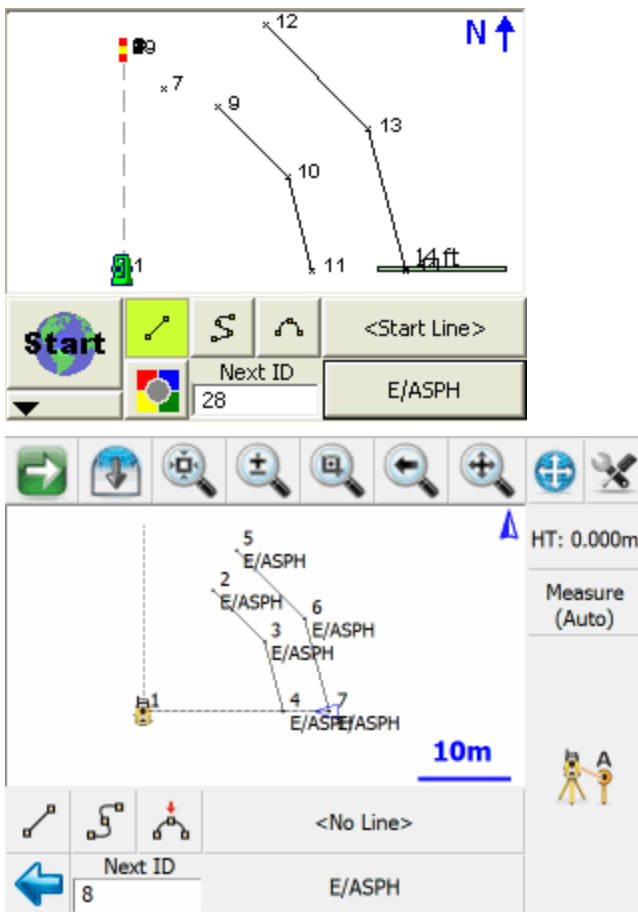

After the shot to the first point for the new line is complete, the line will be added to the Active Lines list, identified by the current point description and an automatically assigned group number:  
E/ASPH:3. The group number is three, because this is the third figure using the description E/ASPH.

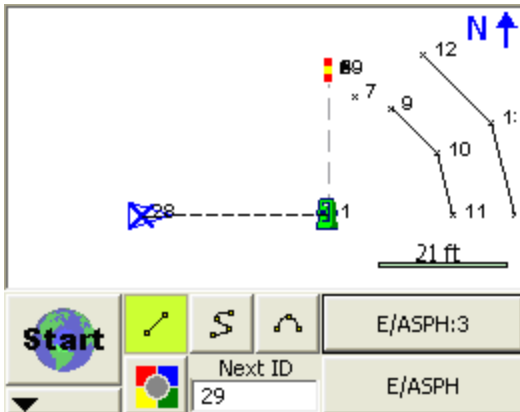

After the second point for this line has been recorded, the first segment will be created. From this point forward, simply continue taking shots to add to the now current Active Line: E/ASPH:3

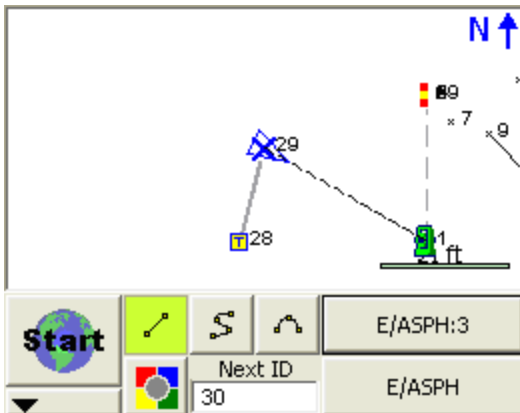

Note the insertion of ":3", this is the group number. Re-use of the Description E/ASPH for a new line series in the current project will automatically increment the group number by one. This allows you track and store multiple active lines of the same description without the need for multiple entries in your AutoMap Library. For example, E/ASPH2, E/ASPH3, E/ASPH4...9 can now be replaced with a single E/ASPH entry.

## Stop adding to a Line

If you wish to stop adding to the current line, simply deselect the current draw option (Line, Curvy line) before taking any more shots. After turning off the draw option, <No line> will display in the Active Lines list button.

## Start a subsequent New Line

Much like the first line in the project, just select the desired description from the list and select the desired draw option before shooting the first point for the new line.

The key to note is the display of <Start line> in the Active Lines list. Once the first point for the new line has been measured, the Active Lines list will set and display the new line as current.

## Change Description within an Active Line

You may change the description within one ongoing line. Simply choose a different description and continue taking shots. The ID of the Active Line will not change.


## Figure Direction Marker

The current line in the map is always defined by a bold outline and a blue X at the end of the line. The blue X indicates the line direction so you know what end of the line the next measurement will be connected to.

You can see that the blue X is on point 29. After you take your next shot, it will be automatically connected to this point.



Once you select the figure, you will see the line toolbar. On this toolbar, select this button to reverse the direction. After you switch the direction, you will see the blue "X" move to the opposite end of the figure.

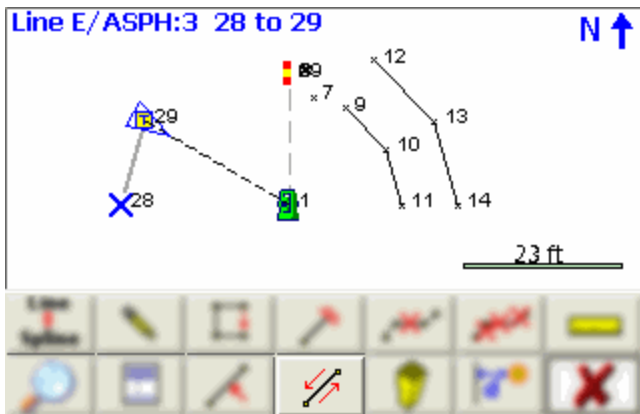

## New Figure

### Pre-selection of Line Descriptions


A list of Active Lines (Figures) may be pre-specified to aid in planning for a complicated project. Use the **New Figure** button on the Active Line List screen to specify a Line Description before taking any shots.

You have the opportunity to use a manually entered comment with this method but the new line will be linked to the selected Line Description. The comment will appear in the Active Lines list to aid correct selection of the line.




## Switching Active Figures

You may work on several figures at once. As described, ongoing figures are listed in the [Figure List](#). You will notice that in this project there are three figures.

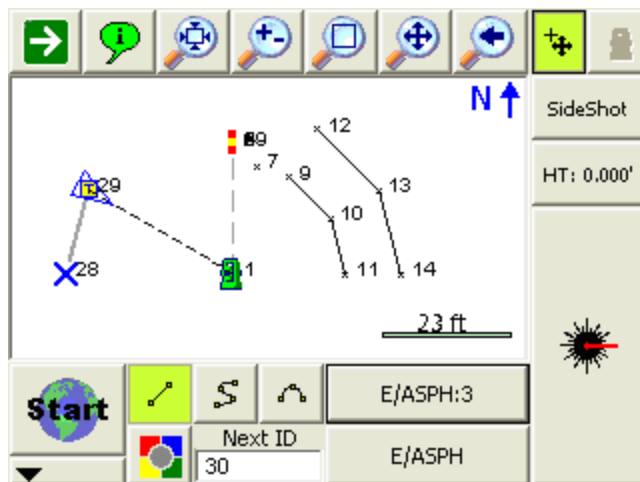

To change the current line, simply select the active line button which will open the Select Figure from List screen. In this example it is the "E/ASP:3" button.

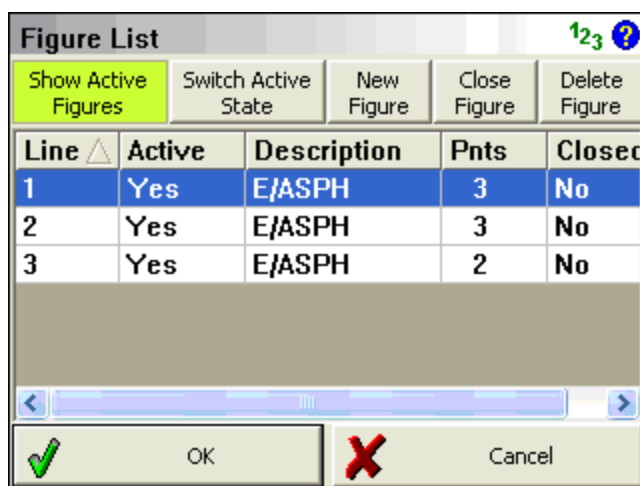


Select the desired figure from the list and continue taking shots to add to the selected line. All settings are stored for each line so there is no need to reselect the Description or draw option.

## 3-Point Arcs

To draw a three point arc on an ongoing Line, select the Draw 3-Point Arc button before shooting the second of the three points that will define the arc (POC). (Note that this is not the radius point). After measuring to the 2nd point, a dashed line will appear to illustrate that a 3-Point arc is in progress. Shoot the 3rd point and the arc will appear. The current draw option will change from Draw 3-Pt Arc to Draw Line after the third shot and the arc is complete.




We are going to connect a three point arc to the E/ASPH:3 figure. Since we are shooting the mid point of the arc, you need to turn on the three point arc toggle.

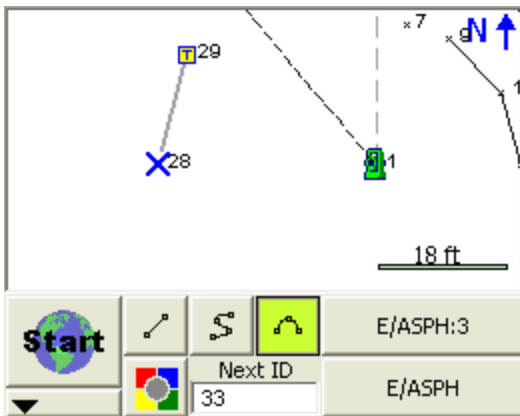


After you take the measurement, you will see the mid point drawn on the screen.

Since compound curves are not allowed, you will see that the three point arc toggle is disabled. Once you take a shot to define the end of the arc, it will become enabled again.

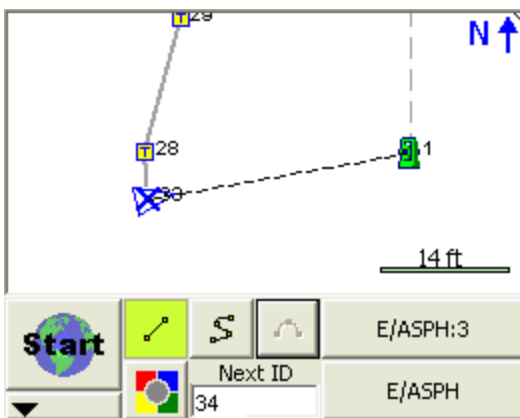

Once you finish measuring the third shot, you will see the arc drawn in the map.

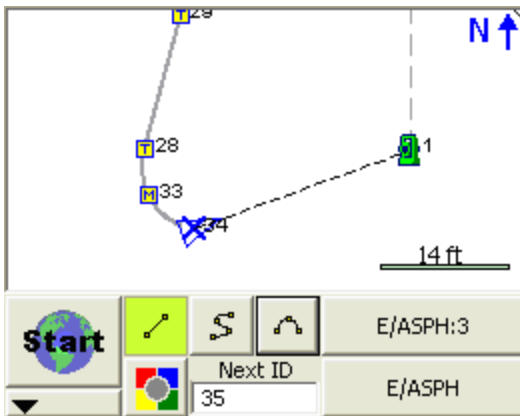

Tip: Multiple three point arcs can be connected in series if needed.


## Splines (Curvy) Figures

Figures can contain splines. Splines are "best fit arcs" that are forced to go through the points that define the figure.

Splines can be attached to straight or three point arc segments.



To draw a spline, simply choose the spline toggle.

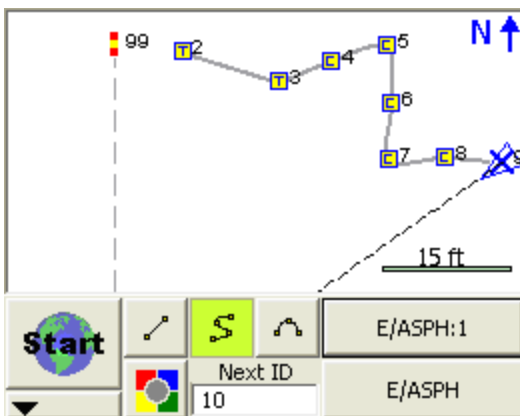

## Changing Active Lines to Curvy Lines



Any Active Line series (figure) can be changed from a series of straight segments to a best-fit curvy line. Select the figure in the drawing to open the [line toolbar](#). On the toolbar press the **Line-Spline** button which will convert the line to a curvy line. If the line is already a curvy line, it will convert it to straight tangents between the points.

Note that any 3 point arcs or straight line segments will be lost when you use this function.


## Complex Figure

Figures that contain straight segments, arcs and spline segments are said to be a complex figure.


## Closing Figures




To make a closed figure with an Active Line, select the **Close Current Line** button on the line toolbar. This will draw a line from the last point to the first point shot in the figure. The Line will be removed from the Active Lines list as it is now considered complete.

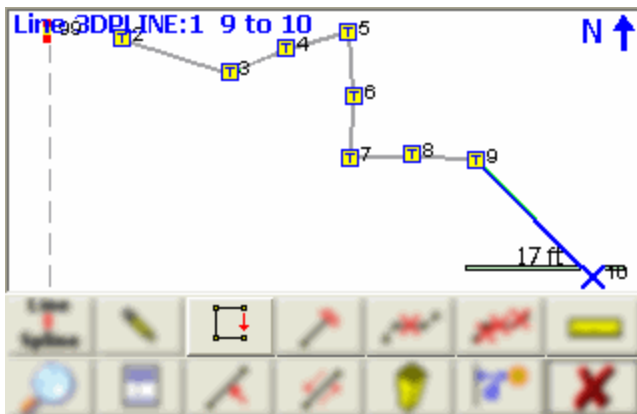

You will see that the figure now is closed back to the original start point.

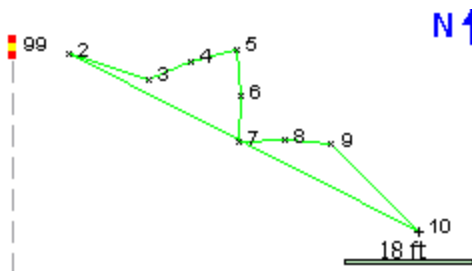

In the active lines list, if you turn off the **Show Active Figures** you will see that the 3DPLINE figure is flagged as Active = NO and Closed = YES.

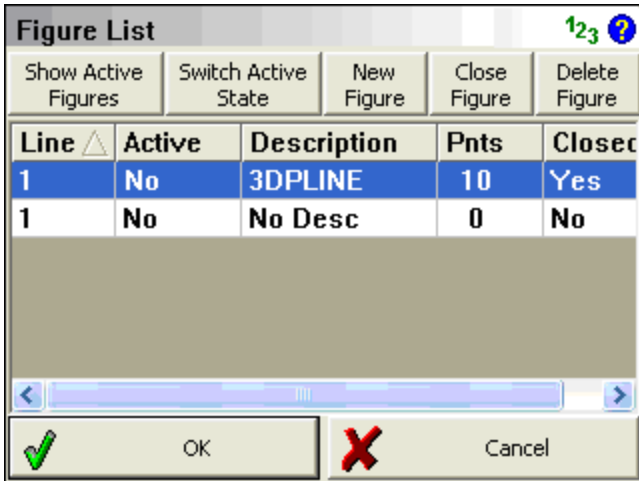

Alternatively, you can also close a figure in the [Figure List](#) screen by using the **Close Figure** button.

## End (complete) a Figure



To mark a line as complete or finished, use the End Current Line button on the line toolbar. This will remove the line from the Active Lines list so that no more segments or arcs can be added.

This works similar to [closing a figure](#), but differs in that the figure will not be forced to close back on to the original start point.


## Re-Activating Figures

When a figure has been marked as complete, you can activate it again as follows:

### From the Line Toolbar



You can visually pick on the map view the figure that you would like to re-activate. On the line toolbar, select the activate button which will make the selected figure active.

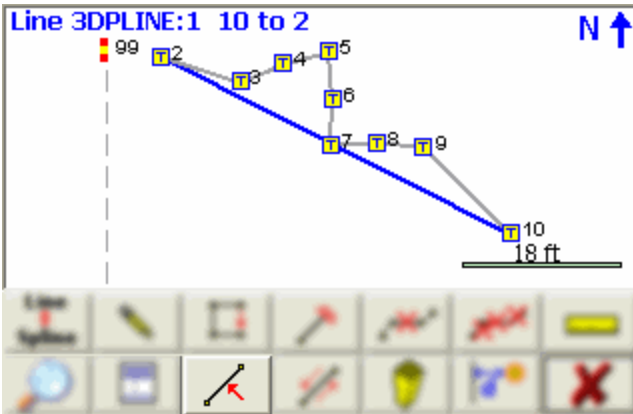

## From the Figure List

You can also open the active lines list and if you turn off the **Show Active Figures** button you will see the figures that are marked as not active. Simply select the figure you want and press the **Switch Active State** button which will set it to active.

Figure List				
Show Active Figures	Switch Active State	New Figure	Close Figure	Delete Figure
Line ^	Active	Description	Pnts	Closed
1	Yes	E/ASPH	3	No
2	Yes	E/ASPH	3	No
3	Yes	E/ASPH	2	No

OK
  Cancel

## Deleting Figures

To delete linework in your project simply select the figure you want to delete. When you select the figure, the [line toolbar](#) will open.



Use this button on the line toolbar to delete an individual segment between two points or a three point arc.



Use this to delete the entire figure that you have selected.

**Notes:**

Splines: Spline sections are considered to be one entity so using the delete entire figure, or delete segment, each will do the same thing. The entire spline will be deleted. If a segment or arc is deleted from the middle of a figure, the figure will be broken into two pieces. Each new figure will be assigned a new group number. Closed or ended figures will be re-activated and added to the Active Lines list.

You can also delete a figure by selecting it in the [active lines list](#), then pressing the Delete Figure button.

Figure List					
Show Active Figures		Switch Active State	New Figure	Close Figure	Delete Figure
Line	Active	Description	Pnts	Closed	
1	Yes	E/ASPH	3	No	
2	Yes	E/ASPH	3	No	
3	Yes	E/ASPH	2	No	

OK
 Cancel


## Draw Option Defaults

To setup draw option defaults you need to own a copy of MicroSurvey CAD or inCAD. From within MicroSurvey CAD or inCAD you can use the Automap editor to set default draw settings for each Description in the MicroSurvey CAD or inCAD AutoMap Library. When this library is copied to your collector, selecting a Description will choose the correct FieldGenius Draw option for Active Linework in FieldGenius.

---

## Lines

Choose the following in your desktop Automap library editor to set the draw default for FieldGenius to Lines.

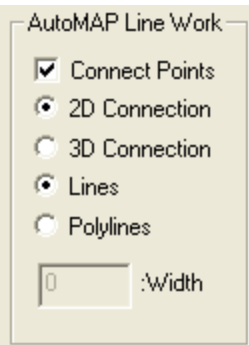

In FieldGenius when the description is selected, the line toggle will be automatically turned on.


As shown below, the line toggle has been automatically turned on when the E/ASPH description was selected from the list.



---

## Curvy Lines

Choose the following to set the draw default for FieldGenius to Curvy Lines

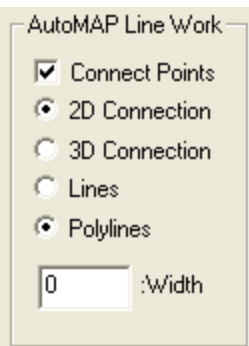

In FieldGenius when the description is selected, the curvey toggle will be automatically turned on.


As shown below, the curvy toggle has been automatically turned on when the E/ASPH description was selected from the list.





## None

Choose the following to set the draw default for FieldGenius to None

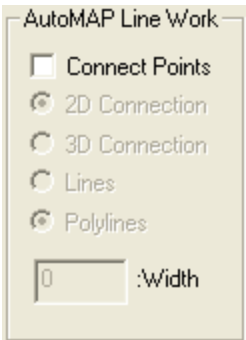

As shown below, when the HUB description was selected, all line connectivity toggles are turned off.



### Notes:

The 2D Connection and 3D Connection settings do not affect FieldGenius, we only make use of these settings as defaults in MicroSurvey CAD or inCAD. All FieldGenius figures are 3D. With FieldGenius data imported to MicroSurvey CAD or inCAD, there is no need to process Automap connections as FieldGenius figures are drawn automatically. For more details on the AutoMap Library, see your MicroSurvey CAD or inCAD Help System.

## Drawing Tool

**Main Menu | Survey Tools | Drawing Tool**

**Line Toolbar | Pencil button**


**Point Toolbar | Pencil button**

This tool allows you to quickly draw a plan such as a pad or a building footprint into your project, and is typically used to recreate plans from a paper hard-copy. You can use this to either calculate new points, or to connect existing points that are already in your project.

You must have at least one point in your project before you can start, to define the starting position for your plan. If a point does not yet exist (for example if this is the first command you run in a new project), you will be prompted to store a new point before you can proceed.

## Line Mode

Use the Line draw mode to add straight line segments to your figure.

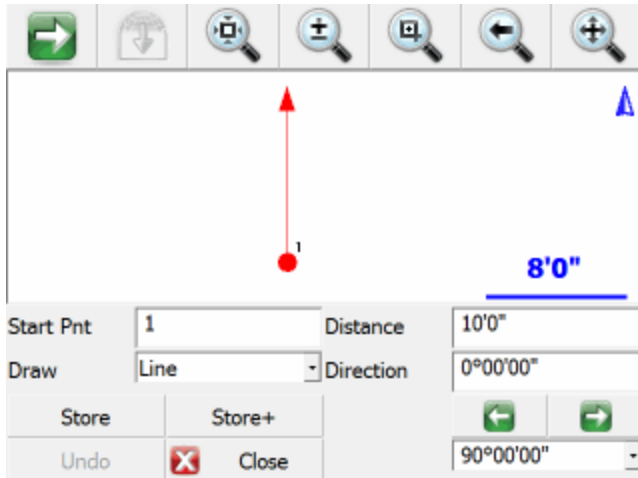

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue adding subsequent points/segments to your plan, you will see the Start Point field automatically advance for you.

### Distance

Specify the length of the line segment you wish to draw.

### Direction

Specify the direction (Azimuth or Bearing) of the line segment you wish to draw. The easiest way to do this is to use the right/left arrow buttons, which will increment/decrement the direction value by the amount shown in the pulldown list below the arrows. You can select a common angle from the choices in the list (90, 45, or 30 degrees), or you can type any value if you need to increment it by some other amount.

### Store

After you have defined the segment to add, press this to store the new point and line segment into your project.

### Store+

This does the same as the Store button, but you will see the [Store/Edit Point](#) screen. Use this to confirm or view the coordinates, or to specify a description.

---


### Point by Line Mode

This is the same as the Line mode, except that when you press Store or Store+ it will only store the point, without drawing the line segment.

---

### Arc Mode

Use the Arc draw mode to add arc segments to your figure.

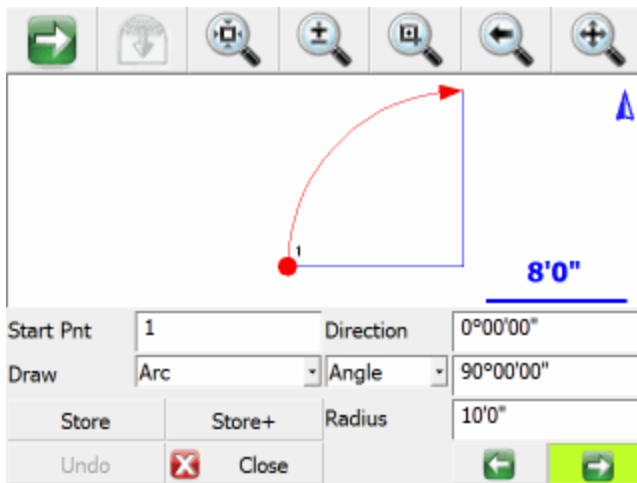

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue adding subsequent points/segments to your plan, you will see the Start Point field automatically advance for you.

### Direction

Specify the direction (Azimuth or Bearing) of the **tangent in** to the arc segment you wish to draw.

This will default to either the direction of the previous line segment or the tangent out of the previous arc segment, so as long as your arc is tangential to the previous segment you will not need to change this value.

### **Angle / Chord Length / Arc Length**

Specify one of the three available methods to define your arc:

- Angle: Enter the interior delta angle of the arc.
- Chord: Enter the chord length of the arc.
- Arc: Enter the arc length of the arc.

### **Radius**

Specify the radius to define your arc.

### **Clockwise / Counter-Clockwise Arrows**

Use the Right/Left arrow buttons to define whether the arc rotates clockwise or counter-clockwise.

### **Store**

After you have defined the segment to add, press this to store the new end and radial points, and draw the arc segment into your project.

### **Store+**

This does the same as the Store button, but you will see the [Store/Edit Point](#) screen. Use this to confirm or view the coordinates, or to specify a description.

---


### **Point by Arc Mode**

This is the same as the Arc mode, except that when you press Store or Store+ it will only store the points, without drawing the arc segment.

---

### **Connect Points Mode**

This mode lets you draw lines/arcs by connecting points that already exist in your project.

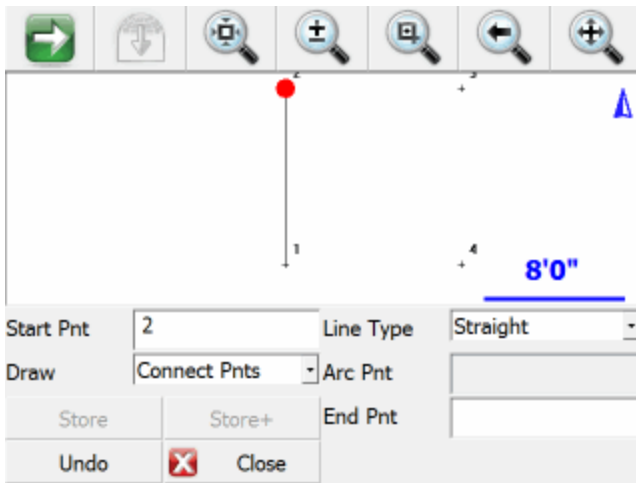

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue connecting subsequent points to your plan, you will see the Start Point field automatically advance for you.

### Line Type

Specify one of the five available methods to define your next figure segment:

- Straight: this will draw a straight line between the specified Start Point and End Point.
- Arc (CW): this will draw a clockwise arc between the specified Start Point and End Point, with the specified Radial Point.
- Arc (CCW): this will draw a counter-clockwise arc between the specified Start Point and End Point, with the specified Radial Point.
- Arc (3Pnt): this will draw an arc (clockwise or counter-clockwise) between the specified Start Point and End Point, going through the specified intermediate Arc Point (any point directly on the arc, does not need to be the midpoint).
- Spline: this will draw a curvey line between the specified Start Point and End Point.

### Store / Store+

The Store and Store+ buttons are disabled for this mode, because new points are not being calculated for your project. The line or arc segment will be automatically drawn into your project after you specify

its parameters.

## Undo

Press the **Undo** button to Undo the last segment you computed, removing both the point and/or the line segment (as appropriate) from your project. You can undo multiple steps.

Note, there is no Redo function.

## Close

Press the **Close** button to exit from the Draw Plan command, and you will be returned to the [map screen](#).

## Smart Tags

When you select an existing or create a figure in your drawing you will see smart tags appear on the points that make up the figure.

### Smart Tag "T"

The T smart tag define points connected to straight line segments.



### Smart Tag "M"

The M smart tag defines the mid point of an arc.



### Smart Tag "C"

The C smart tag define points connected by a curvy line type.




# MAIN MENU

## Main Menu

### Main Menu

On the [main interface](#) of FieldGenius you will see the FieldGenius **Start** icon which will always activate the main menu or display the previously viewed sub-menu. When the button is pressed you will see the main menu screen:

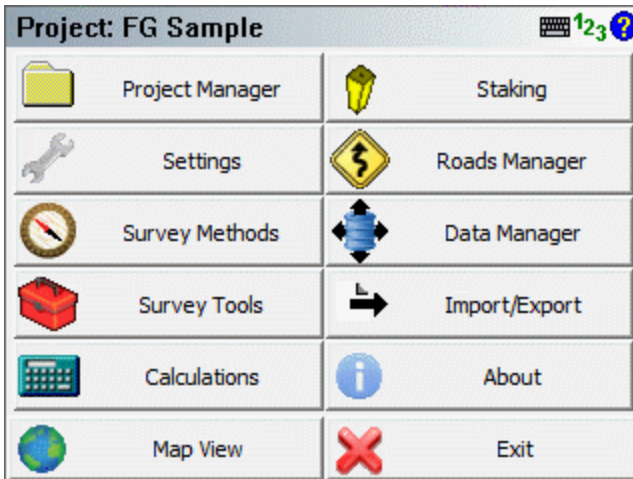

On the main menu, pressing any of the buttons will take you to its sub-menu.

From any sub-menu, pressing the **Menu Home** button will return you to this menu.

The **Map View** button will close the main menu and take you back to the map view.

The **Exit** button will close FieldGenius.

### [Project Manager](#)

Selecting this will allow you to create, open or delete projects. Please see the [Project Manager](#) topic for more information.

### [Settings](#)

Select this to check or change settings for FieldGenius. Please see the [Settings Menu](#) topic for more information.

## **SurveyMethods**

Select this to select measurement modes such as occupying a point, checking a point, or measuring an offset. Please see the [SurveyMethods Menu](#) topic for more information.

## **Survey Tools**

Select this to execute tools such as manually storing new points, deleting/undoing the previously measured point, or viewing the raw file. Please see the [SurveyTools Menu](#) topic for more information.

## **Calculations**

Select this to use our calculating functions such as COGO and inversing. Please see the [Calculations Menu](#) topic for more information.

## **Staking**

Select this to access our staking functions. Please see the [Staking Menu](#) topic for more information.

## **Roads Manager**

Use this to access tools that will help you create or edit alignments, templates, and profiles. Please see the [Roads Manager Menu](#) topic for more information.

## **Data Manager**

Use this to manage your points, DXF files, and surfaces. Please see the [Data Manager Menu](#) topic for more information.

## **Import/Export**

Select this to import or export ASCII files, and to export DXF, XML, and other files. Please see the [Import/Export Menu](#) topic for more information.

Please note, additional file types can be imported from the [Surfaces](#) and the [Map Data Layers](#) commands, both located in the [Data Manager menu](#).

## **About**


Select this to see what build and which modules you have registered for FieldGenius. Please see the [About Menu](#) topic for more information.

# **Project Manager**

## **Main Menu | Project Manager**

The Project Manager is used to create, open, or delete projects currently residing in your data collector. When you start FieldGenius this is always the first screen you will see.



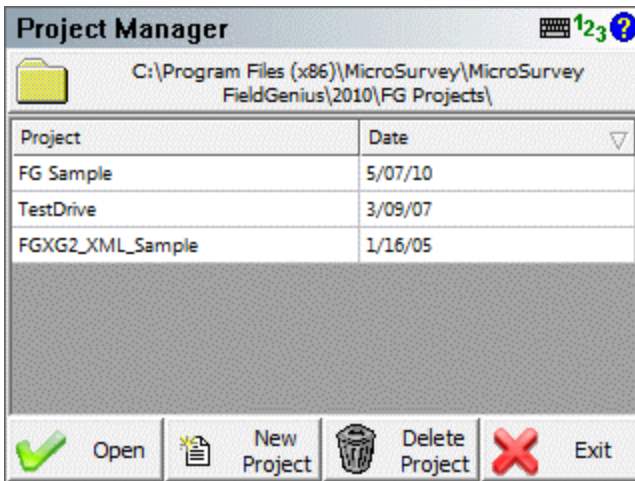

By default the project manager will display the contents of the FG Projects directory, which is the default location for all projects that you create. You can sort the list by project name or date by tapping on the column's header.

### **FG Projects Folder**

Press this button to specify a different project folder than the default. The default is FG Projects. Once you set the directory it is written to the msurvey.ini file so it is used for all subsequent projects.

### **Open Project**

To [open an existing project](#), simply select it in the list and press the **Open** button.

### **New Project**

To [create a new project](#), simply press the **New** button. You will then see the new project screen which will allow you to enter a name, , choose your automap library and set the units for the project.

### **Delete Project**

To delete a project you first need to select it in the list and then press the **Delete** button. You will be asked to confirm that you really want to delete the project.

#### **Notes:**

- You can not delete a project that is currently open.
- Projects that have been deleted can not be restored.

### **Exit**

To exit from the project manager press the **Exit** button.

# ROADS


## Roads Manager

### Main Menu | Roads Manager

To stake an alignment you first need to define the geometry that defines the horizontal and vertical element. You can also define a template that will be used to define cross sections at specific stations along the alignment.

FieldGenius can use the following three methods to define an alignment.

1. Manual Entry – You can manually enter the data to define the alignment.
2. Import XML – You can import a LandXML file that contains your alignment data.

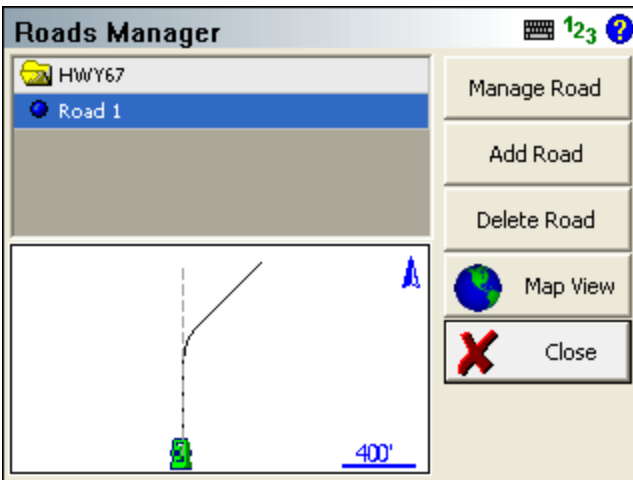

By default you will see an alignment in the list with the current project name. A project can contain multiple roads, and each road can contain the following elements.

- **Horizontal Element:** This can contain straight tangents, curves and spirals.
- **Vertical Element:** This can contain grade breaks, parabolic curves and non-symmetrical curves.
- **Templates:** Template can contain horizontal and vertical offsets, as well as widening and super elevation data.

- **XML Cross Sections:** XML cross sections define specific stations along an alignment. These sections contain horizontal, vertical and template data. XML cross sections are created using desktop software which is then imported into FieldGenius.

### Manage Road

This option is only available once you've created a road using the New Road button or imported an XML file. To input or review alignment data, press the Manage Road button to access the Road Settings screen.

If you imported a LandXML file, or manually inputted a road you can stake it by pressing this button. As a minimum you need to have the following before the stake command will continue.

- XML Cross sections
- Horizontal C/L, Vertical Profile and template.
- Horizontal C/L and DTM Surface

### Add Road

Use this button to create a new road. You can create as many roads as needed and they will be stored in an XML file that will reside in the project directory.

### Delete Road

Use this to delete a road. You first need to highlight the road you want to delete, and then press the button to remove the road from the alignment. This road will be permanently deleted and can not be undone.

### Map View

Use this button to display the map view. From this view you can use the zoom controls to zoom around your drawing so you can find important or relevant data for your alignment such as a POB point. Press the Close View button to return back to the Roads Manager.

[Tell me more about ...](#)  
[Road Settings](#)  
[Manual Entry - Alignment C/L](#)  
[Manual Entry - Vertical Profile](#)  
[Manual Entry - Template](#)  
[LandXML Cross Sections](#)  
[Alignment DTM Surface](#)  
[Alignment Staking - Part 1](#)  
[Alignment Staking - Part 2](#)  
[Alignment Slope Staking](#)




# SETTINGS MENU

## Settings Menu

[Main Menu](#) | **Settings**

The settings menu is used to setup and review settings that have been set for your current project. You can also specify default settings for new projects that are created.

Most of these settings are stored in a file named `msurvey.ini` which can be found in the `...M-microSurvey FieldGenius\Programs\` directory. It is recommended that once you have defined your settings, that you make a backup of this `msurvey.ini` file.

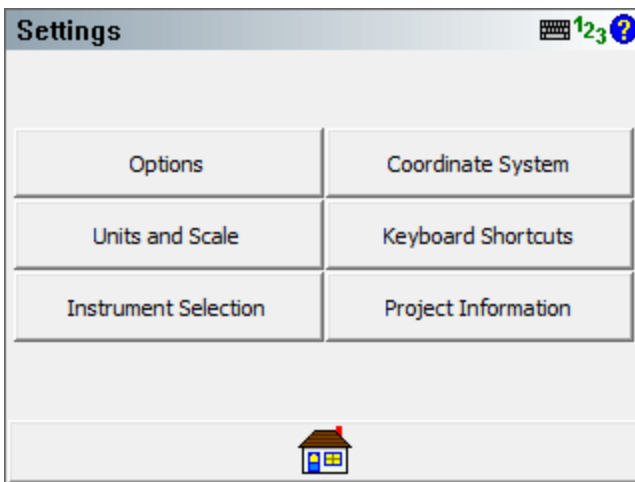

### [Options](#)

Use this to set or change settings that affect FieldGenius's functionality. Please see the [Options](#) topic for more information.

### [Units and Scale](#)

Use this to set or change the units, bearings, distances and scale settings for your project. Please see the [Units and Scale Settings](#) topic for more information.

### [Instrument Selection](#)

Use this to set the type of equipment that will be used with FieldGenius. If you're not connecting to anything, you can specify that you would like to enter your measurements manually. Please see the [Instrument Selection](#) topic for more information. (Note, you will not see this option if FieldGenius is running onboard your instrument.)

## Coordinate System

Use this to define the coordinate system for your project. Please see the [Coordinate System Settings](#) topic for more information.

## Keyboard Shortcuts

Use this to define shortcuts to FieldGenius commands and assign them to your keys. Please see the [Keyboard Shortcuts](#) topic for more information.


## Project Information

Use this to enter and save information about your project. Please see the [Project Information](#) topic for more information.

# Options

[Main Menu](#) | [Settings](#) | [Options](#)

The options screen helps you set settings that affect the look and feel of FieldGenius.

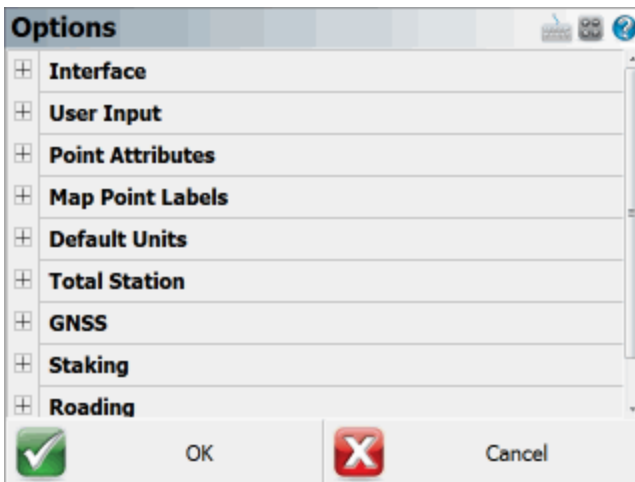

Press the [+] buttons along the left to expand (show) each section, and the [-] buttons to collapse (hide) it.

- [Interface Options](#)
- [User Input Options](#)
- [Point Attributes Options](#)
- [Map Point Labels Options](#)

- [Default Units Options](#)
- [Total Station Options](#)
- [GPS Options](#)
- [Staking Options](#)
- [Roading Options](#)
- [System Options](#)

---

## **Interface Options**

### **Monochrome Optimized**

Use this to specify whether the main interface should display in full color, or in a way more suitable to monochrome screens.

### **Enable Full Screen**

Use this to run FieldGenius in a full-screen mode (PocketPC devices only). This is required for proper operation on devices running the Windows Mobile operating system that have a landscape display.

### **Map Color**

Use this to force the background color for the main drawing area to be white or black

### **Map Orientation**

Using this will force the map screen to be oriented to the north or south. This is needed for coordinate systems that are referenced south, such as in South Africa. This is different from South Azimuth directions, as used in Hawaii.

### **Map Resolution**

This option determines the number of segments that will be displayed in an arc on the screen. Reducing this number increases program speed; increasing this number slows down graphics display, but improves the quality of arcs and curvy lines displayed on the screen.

### **Text Size (Info/Grid)**

Use this to force the text shown in the Information screens (such as the Observation toolbar and the COGO History screen) and grid screens (such as the Project Manager and Angle Offset shots) to use a small or large sized text.

### **Show Scale Bar**

Use this to turn the scale bar shown on the main map screen on or off.

---

## User Input Options

### Extended Edit Boxes

Use this to control how you want to bring up the selected keypad when tapping in an edit box: either with a single tap, a double tap, or off. Users of devices with a keyboard should leave this set to Double Click, and users of devices without a keyboard should set this to Single Click. Setting this to Off disables both the keypad and any other commands that may be started directly from the edit field, such as the Point Chooser or Inverse Tool, so that edit fields can only be used for typing values from your physical keypad.

### Menu Shortcuts

This will enable menu shortcuts so if you have a keyboard device you can press letter and number keys to navigate around the program.

### Instrument Toolbar

You can define if the instrument toolbar is located on either the Right or Left Side of your map screen.

### Map Position Select

If this is turned on, tapping a blank part of the map screen will display the Map Toolbar.

### Map Point Select

If this is turned on, then tapping on a point from the map screen will select it and open the Point Toolbar.

### Map Line Select

If this is turned on, then tapping on a line from the map screen will select it and open the Line Toolbar.

### SIP Type

Use this to specify which SIP keypad type you want to use, such as the full-screen MicroSurvey alphanumeric keypad (all devices), the small PocketPC qwerty keypad (PocketPC and Windows Mobile devices only), or the small MicroSurvey numeric keypad (PocketPC and Windows Mobile devices only).

---

## Point Attributes Options

### Coordinate Order

Use this to control the display of coordinate values in FieldGenius. Options are NEH, ENH, XYZ and will affect any area of the program where coordinates are displayed.

This option also affects whether the [ASCII Import](#) and [ASCII Export](#) commands use a N,E or E,N (X,Y) file format.



\*\*Important note: The imported format only affects display of the coordinates and the ASCII file itself. The internally stored point database, or raw file stored will always be stored as N,E,Z.

### Alpha-Numeric IDs

When this is enabled you will be allowed to enter alpha-numeric point IDs such as 21a, AB3, EV2. If this isn't turned on, then FieldGenius will not accept anything but integer numbers. Alpha numeric input of point IDs can contain up to 31 characters. **Note:** Alpha-Numeric ID's are only supported in the MicroSurvey CAD or inCAD 2008 or newer desktop software. Previous versions of MicroSurvey CAD or inCAD do not support it.

### Point ID Range - Minimum

Use this to force FieldGenius to limit the point numbers that are used to a specific range; here you would specify the minimum range value. If you try to use a point number that is less than this value, you will see a message that will ask you to select a different point number. **Note:** If you have the Alpha-Numeric IDs toggle turned on, then any values specified here are ignored.

### Point ID Range - Maximum

Use this to force FieldGenius to limit the point numbers that are used to a specific range; here you would specify the maximum range value. If you try to use a point number that is greater than this value, you will see a message that will ask you to select a different point number. **Note:** If you have the Alpha-Numeric IDs toggle turned on, then any values specified here are ignored.

Alphanumeric Point ID's can have a maximum length of 31 characters.

### LandXML Export - Prefix IDs

When this is enabled, point numbers will be prefixed with the point's description upon creation of an XML file. For example, if a point has a number of 100 and description of PIN, in the XML file its ID will be PIN100.

### New Description Prompt

This controls how FieldGenius deals with descriptions that don't match anything in your Automap library. If this is on, when you enter a description that isn't in the Automap library you will see a warning message asking you if you want to add it.

If it is off, any description that doesn't have a match in the Automap library will be automatically added to your project's Automap library.

### Time Stamp Saved Points

This tells FieldGenius to write a timestamp into the raw file whenever a point is stored.

---

## Map Point Labels Options

### Show ID

This is used to show or hide the point number labels for your points.

### Show Description

This is used to show or hide the point description labels for your points.


### Show Elevation

This is used to show or hide the point elevation labels for your points.

### Level of Detail

The Level of Detail filter, when turned off, will force FieldGenius to show the point labels all the time, independent of your zoom level. If it is turned on, FieldGenius uses an algorithm to determine if displaying the point labels is necessary.

This is demonstrated in the following two images, the first has LOD turned on and the second has LOD turned off.

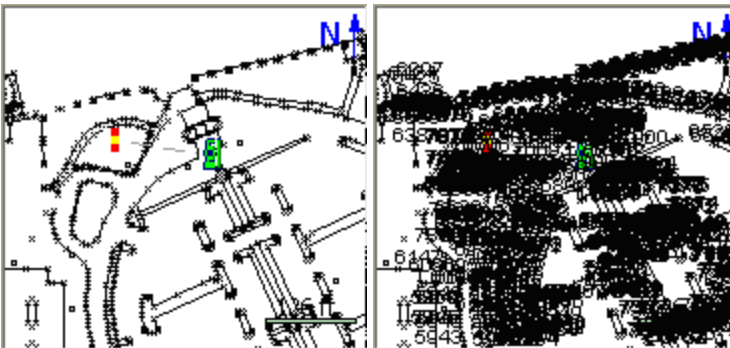

With LOD on, as soon as you zoom in to a reasonable level, the labels will appear automatically. Under normal circumstances you will keep the LOD feature active.

---

## Default Units Options

These options provide the default settings shown in the [Units & Scale](#) screen when creating a new project; they do not necessarily reflect the actual settings for the current project. Please see the [Units & Scale](#) topic for more detailed information on each option.

### Distance Unit, Format, Precision

Specify whether new projects should default to Meters or Feet, in which format, and with how much precision.

### **Angle Unit, Format, Precision**

Specify whether new projects should default to Degrees, Radians, or Gons/Grads, in which format, and with how much precision.

### **Direction Format**

Specify whether to use Bearings or Azimuths by default for new projects.

### **Scale**

Specify the default ground-to-grid scale factor to use for new projects.

### **Corrections**

Specify whether to enable or disable the "Curvature and Refraction Corrections" option by default for new projects.

---

## **Total Station Options**

### **Default Measure Mode**

This specifies which measure mode FieldGenius will default to, either Sideshot or Sideshot (Auto).

### **Quick Measure Modes**

When this is turned on, when you press the Measure button in routines such as the Horizontal Angle Offset or Resections screens, it will force the instrument to take a measurement instantly. If this is turned off, then pressing the Measure button will take you back to the map screen where you have to press the measure button on the instrument toolbar to take a measurement.

If you're using a robotic instrument you will probably want to keep this turned off.

### **Traverse Reciprocate**

When this is turned on, you will be able to use the Reciprocate Traverse option on the Backsight Summary screen, when occupying a traversed point. This recalculates your setup point's position, based on an average of the traverse shot to the point being occupied and the backsight shot from the point being occupied. If this is turned off, then the Reciprocate Traverse option within the Occupy Point routine will be grayed out. For additional details, please refer to the [Backsight Summary](#) topic.

---

## **GPS Options**

### **EP+ Records**

When this is used the standard EP record type specified by the RW5 format will be slightly different. The main difference is that when turned on, the standard deviations for the X, Y, and Z components will be stored. Setting this to on is only required if you want to use FieldGenius with the OmniStar GPS service.

---

### OnPOZ Tagging

Turn this on if you wish to use effigis' OnPOZ GNSS post processing software. If this is enabled then a measurement time start and end tag are written to the raw file. **Note:** An end tag is not written until you press the **Store Pnt** button in the [GNSS measurement](#) dialog. Remember, you must be logging GNSS data for this to work.

If this is turned on, during a measurement if the tolerances are met the store point screen will appear automatically. If this is off, then the user is required to press continue to get to the store point screen.

### Auto Start Store

If this is turned on, the user will not see the store point screen. It is a fast way to store your GPS points and is useful when used in conjunction with the Auto Start Statistics option.

### Correction Timeout

GPS data sent from a reference base had a time stamp of the start of the transmission associated with the positions being broadcast. When the rover processes the data, the time stamp is compared to the current time to ensure that there wasn't a big delay in receiving the position. Large time gaps can deteriorate the position quality at the rover. You can adjust the "time check" comparison value by adjusting the correction timeout value. Sometimes you have to increase this setting if you are far from your reference receiver, or are experiencing transmission interference. You can use any value between 0 and 20 seconds.

---

## Staking Options

*Note: You can also access these options directly from the [staking toolbar](#).*

### Tolerance

This is the error tolerance that the staking command will use. When your staking "[move by](#)" distances are equal to or less than this amount, your direction to a point will be indicated in green text in the Observation Toolbar at the top left hand corner of the screen. Green text will be displayed to notify you that you're meeting your tolerance; if you do not meet the tolerance, the text will switch to red.

### Orientation Reference (Total Station & GNSS)

The user can set an orientation preference for either total station or GNSS layout. Depending on the equipment currently in use, FieldGenius will automatically use the defined orientation.

#### **Orientation Reference = North**

With the North orientation, North is the reference direction. The "move by" distances are standard cardinal directions.

**North:** This is the distance you need to move North.

**South:** This is the distance you need to move South.

**East:** This is the distance you need to move East.

**West:** This is the distance you need to move West.

**Cut:** This is the amount you have to go down from the current rod position to the stake point's elevation.

**Fill:** This is the amount you have to go up from the current rod position to the stake point's elevation.

### **Orientation Reference = Instrument**

With the staking reference set to Instrument the map view will be twisted so the instrument is centered towards the top of your screen. The "move by" distances are with respect to the rod position looking towards the instrument. This view is useful when using a robotic instrument.

**In:** This is the distance you need to move towards the instrument.

**Out:** This is the distance you need to move away from the instrument.

**Right:** Facing the instrument, move right by this amount.

**Left:** Facing the instrument, move left by this amount.

**Cut:** This is the amount you have to go down from the current rod position to the stake point's elevation.

**Fill:** This is the amount you have to go up from the current rod position to the stake point's elevation.

### **Orientation Reference = Prism**

With the staking reference set to Prism the map view will be twisted so the prism is centered towards the top of your screen. The "move by" distances are with respect to the instrument man looking at the prism. This view is handy when using a non-robotic instrument.

**In:** This is the distance you need to move towards the instrument.

**Out:** This is the distance you need to move away from the instrument.

**Right:** Facing the prism, move right by this amount.

**Left:** Facing the prism, move left by this amount.

**Cut:** This is the amount you have to go down from the current rod position to the stake point's elevation.

**Fill:** This is the amount you have to go up from the current rod position to the stake point's elevation.

### **Orientation Reference = User Point**

With the User Point orientation, you can use an existing point in your project as the reference. The view will be twisted so that the selected point is centered towards the top of your screen.

**In:** This is the distance you need to move towards your user reference point.

**Out:** This is the distance you need to move away from your user reference point.

**Right:** Facing your user reference point, move right by this amount.

**Left:** Facing your user reference point, move left by this amount.

**Cut:** This is the amount you have to go down from the current rod position to the stake point's elevation.

**Fill:** This is the amount you have to go up from the current rod position to the stake point's elevation.

### **Orientation Reference = Line**

With the staking reference set to Line the map view will be twisted so the line is drawn vertically with the start of the line at the bottom of the screen and the end of the line at the top of the screen. The "move by" distances are with respect to the line.

**In:** You will not be given an In distance.

**Out:** You will not be given an Out distance.

**Right:** Looking down the line (or parallel to it), move right by this amount perpendicularly towards the line.

**Left:** Looking down the line (or parallel to it), move left by this amount perpendicularly towards the line.

**Cut:** This is the amount you have to go down from the current rod position to the stake line's interpolated elevation.

**Fill:** This is the amount you have to go up from the current rod position to the stake line's interpolated elevation.

### **User Point**

If you are using the "User Point" Orientation Reference (see above) then use this to specify which point ID you want to use for the reference point. If you are not using the "User Point" orientation then this does not have any effect.

### **Attached User ID**

Use this to add a value to the point number you're currently staking. For example if the point your staking is point 8, and this field is set to 1000. In the raw file it will show that you staked point 1008 and will also store the staked position as point 1008 in the project database.

### **Turn Instrument Mode**

If you have a motorized instrument, including robotics, you can control how FieldGenius turns the instrument during stakeouts. If you want FieldGenius to compute the horizontal and vertical angle needed to stake your point, use the **3D (HA + VA)** option. If all you want is the horizontal angle to be turned, and the vertical left alone, select the **2D (HA)** option.

### Line Mode

Use this to control how your navigation distances are computed and displayed when staking a Line.

In Auto mode, FieldGenius will automatically determine if it should display in/out or left/right offsets to the line. Auto mode will display in/out distances if the line of sight intersects the line equal or greater than 45° (In/Out); if it is less than 45° then FieldGenius will display (Left/Right) offsets to the line.

You can force FieldGenius to always display In/Out distances to the line by setting it to In/Out.

Use Left/Right to always see the Left/Right offset to the line.

If you're staking an arc, FieldGenius will always display in/out offsets no matter what line mode setting FieldGenius is set to.

This option has no effect if you have selected the "Line" Orientation Reference option.

### Robotic Staking

If you're using a robotic instrument and this is turned on, if you stake a point FieldGenius will go into a dynamic staking mode. Using this mode will not force the instrument to turn to the stake point. It will go into a tracking mode and will dynamically tell you how far you're away from the stake point.

### Cut and Fill Slopes

Use this to specify your cut and fill slopes when you're slope staking. The fill slope value will be used when the hinge point is higher than the calculated catch point and this will occur in areas that require a fill. The cut slope will be used when the hinge point falls below the calculated catch point. This will occur in areas that require a cut.

A Cut of 2:1 means you would have a cut of 1 unit for every 2 units traveled horizontally.

### DTM Staking Name

Use this to select a surface that will be used to compute a new z value for the design point. When you select a surface you need to have the Stake to DTM toggle checked. **Once this is turned on, the elevation for any point you stake will be computed using this surface. In other words, if you're doing point staking and the point has a design elevation, it will be ignored. The stake point's N & E will be used to intersect a point on the surface and that elevation will be used to stake the point.**

### Fade Staked-Out Points

Place a check mark in this box if you would like to see staked out points displayed differently to non-staked out points. A staked out point will appear as a slightly greyed out inverted triangle. This is for you to make quick assessments of what has been done and what remains to be finished.

### **Display Point Staking Screen**

Place a check mark in this box if you would like to see the Point Staking screen displayed. This screen will always be displayed if there are values in the Design Point Offset fields. This was done to ensure that you never stake a point with a forgotten (and wrong) offset.

### **Display Stake Result Screen**

Place a check mark in this box if you would like to see the Stake Result screen displayed after staking out a point. This screen will always be displayed if the staked out point exceeds the staking tolerances.

### **Store Stake Point**

Place a check mark in this box if you would like the staked out point to be stored along with the raw data. If no check mark is in this box then only the raw data is stored, and the Store Point dialog will not be displayed.

By default this is checked. What will happen is when you store a staked position using the store button on the stake toolbar you will be prompted with a screen allowing you to assign a point number and description to the new point that will be created.

The point description will default to the current description from the Automap Library, as shown on your topo toolbar. If you choose a different description from the library, then it will be retained for all consecutive stakeout points.

Furthermore, when this feature is turned on it will use the value in the Add Id field to determine the point number for the recorded staked position. For example if you staked point 19 and you have an Attached User Id = 1000, then FieldGenius will automatically use 1019 as a point number. This can be changed by the user.

### **Show Staked-Stored Points**

Place a check mark in this box if you would like to see the stakedout point displayed on map. We provide you with the choice so that you can quickly see which points you have already staked out.

### **Use Stake List**

Place a check mark in this box if you would to use the Staking list instead of staking out from the Points database. If you use a staking list, you will never have a measured point presented as a new point to stake out.

### **Find Next Nearest**

Place a check mark in this box if you would like FieldGenius to search in the Points database (i.e. not in the staking list) for the nearest point from the current position, and present it as the next point to be staked out.



## **Roading Options**

### **Stationing Format**

You can specify the format for your stations and specify if the alignment should force all components to be tangential.

<b><u>Value</u></b>	<b><u>Stationing Format</u></b>		
	<b><u>0+000.000</u></b>	<b><u>0+00.00</u></b>	<b><u>0.000</u></b>
<b>10</b>	0+010.000	0+10.00	10.000
<b>100</b>	0+100.000	1+00.00	100.000
<b>1000</b>	1+000.000	10+00.00	1000.000
<b>10000</b>	10+000.000	100+00.00	10000.000

### **Calculate Directions**

The default is to **not** force imported alignment files to be tangential. **You will usually want to keep this turned off.**

## **System Options**

### **Language Resource**

This is used for multi-language support. If you have installed a non-English version of FieldGenius, then set this option to your Language Resource file, for example "ResESM.dll" for Spanish (Mexico).

### **Tip of the Day & Application Tips**

When turned on, a "Tip of the Day" will be displayed when FieldGenius is started, and tooltips will be displayed when you hover over any button.

Turning this off will hide the "Tip of the Day" dialog and will disable tooltips on buttons.

### **Communication Trace File**

When turned on it will create a test file displaying information about the shot data going back and forth from FieldGenius and your instrument. It can be used to diagnose communication problems and should only be used in this situation. The text file will be named **tracets.txt** or **tracegps.txt** and will be located in your ...\\MicroSurvey FieldGenius\\Programs\\ directory on your device.

### **Bluetooth Persist On**

By default FieldGenius always disconnects existing Bluetooth connections and also turns the power off for the Bluetooth radio in your data collector when you exit the program. The main reason we do this is to conserve battery power.

Some users prefer that power to the Bluetooth radio remains on no matter what. In this case, disable this feature. The default is OFF.


## Unit Settings

[Main Menu](#) | [Settings](#) | [Units and Scale](#)

The units and scale menu allows you to specify settings for your project. Some of these settings are recorded in the raw file and the project's ini file, as well as recorded in the msurvey.ini file.

### Notes:

- The Distance Unit (Meters or Feet) and Angle Unit (Degrees, Radians, or Gons) can only be set when creating a new project. After a project has been created, these will remain greyed-out and cannot be changed.

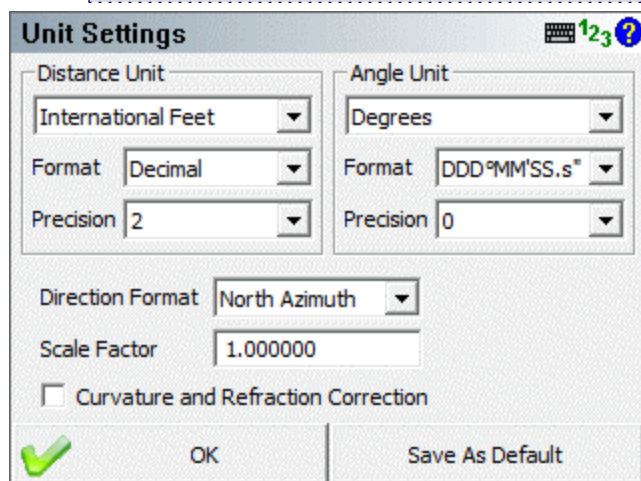

You can set these settings as defaults for new projects by pressing the **Save as Default Settings** button. The default settings can also be set in the [Options](#) screen.

*Note: the actual precision on distances and angles returned from your instrument may be limited to less than the precision you select here. Selecting a higher precision here will not increase the precision of values queried from your instrument.*

## Distance Unit

Choose the distance unit that you will be using: Meters, International Feet, or US Survey Feet. All distances will be displayed in the selected format. All distances will be recorded to the raw file in decimal format. Database coordinates are always stored with 6 decimal places, and rounded to the desired precision for display.

### **Meters**

If you choose Meters as your distance unit, you can also specify the number of decimal places to display within FieldGenius, from 0 to 6.

### **International Feet / US Survey Feet**

If you choose International Feet or US Survey Feet, then you can specify to use either a decimal format with a precision from 0 to 6, or a Fractional format with feet and inches.

If you use the **decimal** format, distances will be displayed in decimal feet, such as 10.5' to indicate 10.5 feet or 10feet-6inches.

If you use the **fractional** format, distances will be displayed in feet and fractional inches, such as 10'6 1/2" to indicate 10feet-6.5inches or 10.54166667 feet.

---

### **Angle Unit**

Choose the angular unit that you will be using: Degrees, Gons/Gradients, or Radians. All angular values written into the raw file will be recorded in the selected format.

#### **Degrees**

If you select Degrees, then you can also select which format to use, either DDD°MM'SS.s" for degrees-minutes-decimal seconds, DDD°MM.m' for degrees-decimal minutes, or DDD.d° for decimal degrees. You can also specify the number of decimal places to use, from 0 to 8.

#### **Gons (Gradients)**

If you select Gons (Gradients) then you can also specify the number of decimal places to use, from 0 to 8.

#### **Radians**

If you select Radians then you can also specify the number of decimal places to use, from 0 to 8.

---

### **Direction Format**

Choose the direction format that you will be using: North Azimuth, South Azimuth, or Bearings. When entering a direction, you can always override this setting by entering the angle with the cardinal quadrant indicated before or after the angle. If there is no quadrant specified, then the input angle will be interpreted as an Azimuth.

---

### **Scale Factor**

You can use a scale factor to adjust ground distances to grid distances.

Distances measured with a total station will be recorded in the raw file with the unscaled, true measured slope distance. This scale factor is applied to the computation of coordinates only.

Distances entered using the Traverse/Intersect tool (COGO) will be scaled by the scale factor.

Distances calculated using the Inverse tool, or recalled using the pt..pt format will be scaled by the inverse of this scale factor. The result will be the inversed grid distance times the inverse of the scale factor, so that the ground distance is returned.

This Scale Factor does not affect any GPS measurements. Please see the [GPS Local Transformation](#) topic for information on using a GPS Scale Factor.

---

## Curvature and Refraction Correction

When selected, the correction is applied to the computation of drawing coordinates only. Raw data will not be altered in any way. When available from your instrument, we recommend the use of that option and leave this setting toggled OFF in FieldGenius. Note: Be careful to not have this setting toggled ON in both your instrument AND FieldGenius.

---

## Save As Default

Use this to permanently write the current settings to the msurvey.ini file. When you create a new project, it will use these settings. The default settings can also be set in the [Options](#) screen.


---

# Instrument Selection

[Main Menu](#) | [Settings](#) | [Instrument Selection](#)

The Instrument Selection screen allows you to choose the type of equipment you will be connecting to FieldGenius. An Instrument Profile can be created for each different instrument you will be working with, to make changing between different hardware a breeze. Once you have setup a profile for each different instrument you will be using, switching between them is a simple matter of selecting the appropriate profile and pressing **Connect**.

Note, this screen is not available if FieldGenius is running onboard your instrument.

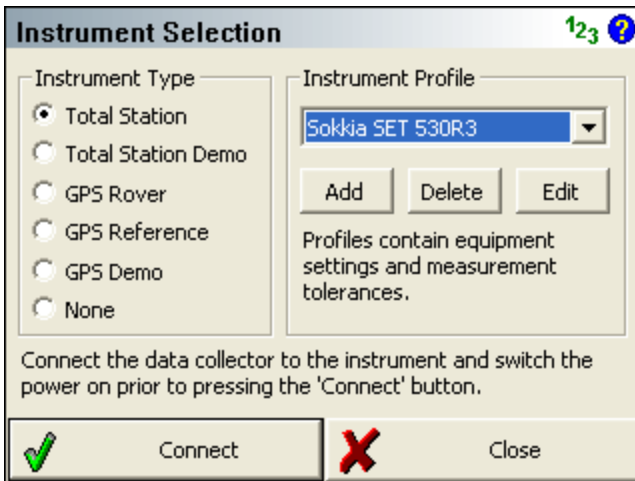

For all future projects you create with FieldGenius, when you create a new or open an existing project you will see the Instrument Selection screen with the profiles you have already created. It will default to the last Profile you used, so if you are using the same instrument just press Connect. If you are using different equipment, just select the appropriate Instrument Type and Profile (or add a new profile if one does not yet exist for it), then press **Connect**.

Your profiles are stored in the file ...\\MicroSurvey FieldGenius\\Programs\\MSURVEY.INI so once you have configured one data collector, you can simply copy this file onto your other data collectors to make the profiles available on them. This file should also be backed up for easy recovery.

---

## Total Station

When you select Total Station mode, you will be able to Add, Delete, or Edit a profile to setup parameters for connecting to your conventional and robotic total stations, as well as laser devices. See the [Total Station Configuration](#) topic for more details about configuration for your total station.

For more information on connecting to your instrument please refer to the [Conventional Total Station](#) and [Robotic Total Station](#) topics.

---

## Total Station Demo

If you choose this you will have to manually enter your shots. Manually entered shots are recorded in the raw file and points are computed based on the values you enter. A profile is not needed for this mode, just press Connect to begin using the Total Station Demo mode.

---

## GPS Rover / GPS Reference

When you set it to GPS Rover or GPS Reference you will be able to Add, Delete, or Edit a profile for your rover or reference receiver. When you edit a GPS Rover or GPS Reference profile, you will see

---

the [Configure Rover](#) or [Configure Reference](#) screens. For more information about using FieldGenius for GPS surveying, you should review the [Starting GPS](#) topic.

If you have not purchased the GPS module for FieldGenius, then you will not have access to the GPS commands and you will see a "Requires GPS module license" message.

---

## GPS Demo

When you set it to GPS Demo you will be able to Edit and Connect to a profile for a simulated rover receiver. When you edit the RTK Demo profile, you will see the [Configure Rover](#) screen. Feel free to play with the Tolerance Mode settings, but please do not change the Model and Communications settings. For more information about using FieldGenius for GPS surveying, you should review the [Starting GPS](#) topic.

The GPS Demo will simulate connecting FieldGenius to a GPS Rover receiver. The coordinates in the GPS Demo are located outside our office in Westbank, British Columbia, Canada, so to use the GPS Demo mode you need to set your Coordinate System Settings to UTM Zones, NAD83, UTM83-11, Ellipsoidal.

---

## None


Use this option if you're not connecting anything to FieldGenius and also don't need to manually enter any shot information. With this mode, the instrument toolbar will not be displayed in the map screen.

---

# Coordinate System Settings

[Main Menu](#) | [Settings](#) | [Coordinate System](#)

The datum settings are used to transform GPS derived curvilinear coordinates (latitude, longitude and ellipsoidal height) into Cartesian coordinates (northing/y, easting/x, and ellipsoid or orthometric height) for presentation on the drawing window and data storage.

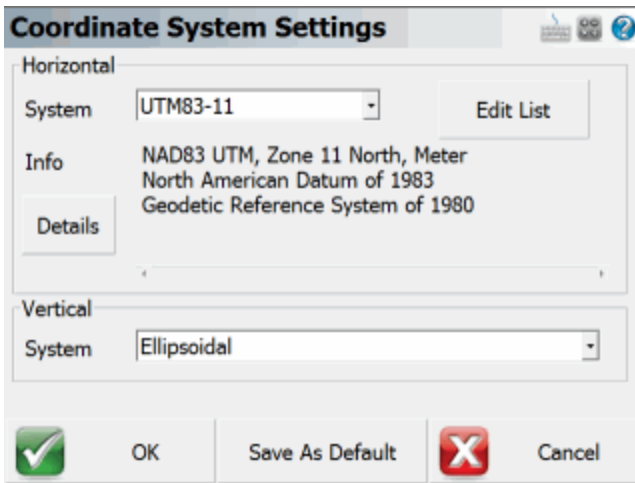

### Horizontal Group

This is where you define the coordinate system for your project.

#### Edit List

The **Edit List** button is used to create predefined or user-defined coordinate systems, create new coordinate systems, copy predefined systems, and edit or delete existing systems. When pressed, the Coordinate System List dialog will appear.

A **predefined coordinate system** is one that already exists and comes installed in FieldGenius by default, a **user-defined system** is one that you have created.

#### Details

This accesses a summary of all the parameters being used by the selected coordinate system. The following information is displayed:

1. What projection and parameters are being used?
2. What datum transformation method and parameters are being used?
3. What ellipsoid and parameters are being used? See section 4 for more details.

### Vertical Group

This is where you define the vertical system also known as a geoid model for your project.

The default is ellipsoidal. If needed you can copy geoid separation files (a.k.a a geoid model) into the FieldGenius mapping directory. Any new files you copy to the mapping directory can be selected here. Please review the [Geoid Model](#) topic for more details.

### Save As Defaults


Saves the Horizontal and Vertical systems to the msurvey.ini file as defaults to be used for all new projects.

## Select Horizontal Coordinate System

FieldGenius ships with a default coordinate system definition of UTM NAD83 zone 11. You can change this at any time.

The Coordinate System List dialog is where you can select an existing coordinate system or create a new user-defined coordinate system and add them to a "favourites" list.

This list allows you to define the coordinate systems you use most often for easy access from the Coordinate System Settings screen.

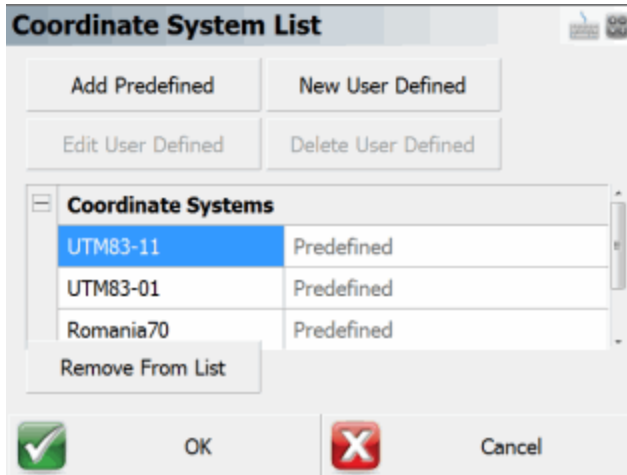

### Add Predefined

Press this button to access a list of existing coordinate system. See the Add Predefined System section below for more details.

### New User-Defined

This allows you to add a user-defined coordinate system to the coordinate system list. See the Add user-defined System section below for more details.

### Edit User-Defined

This allows you to review and edit a user-defined coordinate system. Select a user-defined coordinate system from the list, and press the **Edit User-Defined** button. Doing so will display the Edit User-



Defined System dialog.

Some predefined coordinate systems are read only and can't be edited. You will see a warning message when attempting to copy or edit system that can not be edited.

### **Delete User Defined**

Pressing the button will delete the selected user-defined coordinate system. You will need to confirm that you want to delete it from the database. Since there is no und, you may want to use the [User Coordinate System Export](#) routine to save a backup copy of your coordinate system before deleting anything.

Some predefined coordinate systems are read only and can't be deleted. They can however be removed from the favourites list by using the **Remove From List** button.

### **Remove From List**

If you select either a user-defined or predefined coordinate system and press this button, the selected coordinate system will be removed from the coordinate system list. It isn't deleted or removed from the mapping database.

### **OK Button**

This will save the coordinate system favourites list to the msurvey.ini file.


### **Cancel Button**

This will exit the dialog and will save nothing. You will be automatically returned to the Coordinate System Settings dialog.

---

## **Add Predefined System**

When the **Add Predefined** button is selected you will be able to select an existing coordinate system from the mapping database.

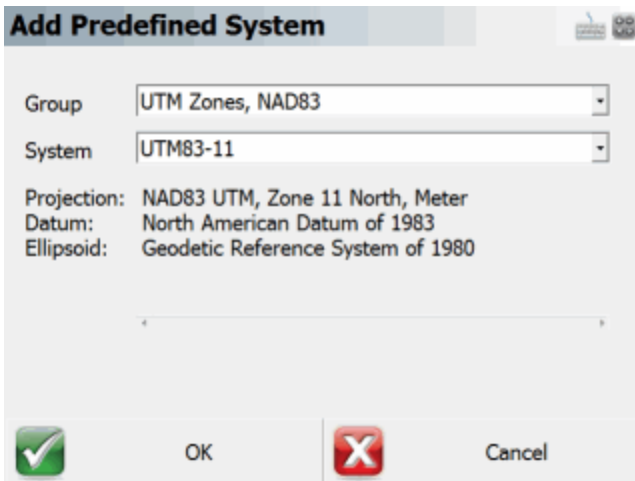

**Add Predefined System**

Group: UTM Zones, NAD83

System: UTM83-11

Projection: NAD83 UTM, Zone 11 North, Meter  
Datum: North American Datum of 1983  
Ellipsoid: Geodetic Reference System of 1980

OK Cancel

### Group and System Options

Coordinate systems are grouped into countries or mapping systems. Select the country or system that you are surveying in and then choose the coordinate system in the System drop down list.

### Information Section

This section (below the System field) displays the projection, datum, and ellipsoid information related to this coordinate system.

### Ok Button

This will add the selected coordinate system to the favourites list.

### Cancel Button

This will cancel without saving. User returned back to the Select Coordinate System dialog.

## New/ Edit user-defined System

From this dialog you will either create a brand new coordinate system or edit an existing one you previously saved.

### System Name and Description

Enter a name for your coordinate system and optionally enter a meaningful name that helps describe it. The system name must have colon in the name.

### Ellipsoid Parameters

To define the ellipsoid for the coordinate system you must enter the known equatorial and polar radiuses for the ellipsoid. The Inverse Flattening is not editable and will be computed automatically and can be used a check.

- Equatorial Radius (a)
- Polar Radius (b)
- Inverse Flattening (1/f) - Always a read only value, automatically computed from the two ellipsoid radiuses.

### Datum Parameters

There are 7 datum types to select from:

- Three Parameter
- Four Parameter
- Six Parameter
- Seven Parameter
- Bursa / Wolf

- DMA Molodensky
- None

If none is selected then no transformation parameters will be applied to the coordinate system transformation.

If a datum other than none is selected then the user will be able to enter the following parameters:

- Delta X (m)
- Delta Y (m)
- Delta Z (m)
- X Rotation (“)
- Y Rotation (“)
- Z Rotation (“)
- Scale (PPM)

### **Projection Parameters**

The user can select one of nineteen projections.

- Lambert Conformal Conic (One Standard Parallels)
- Lambert Conformal Conic (Two Standard Parallels)
- Transverse Mercator or Gauss Kruger
- Universal Transverse Mercator
- Albers Equal Area Conic
- Rectified Skew Orthomorphic, Azimuth at Projection Center
- Mercator Cylindrical Projection with Standard Parallel
- Mercator Cylindrical Projection with Scale Reduction
- Lambert Azimuthal Equal Area
- Lambert Azimuthal Equidistant
- Miller Cylindrical
- Oblique Sterographic
- Polar Sterographic
- Sinusoidal Projection, Optionally Interrupted
- Equidistant Cylindrical

- Cassini
- Robinson Cylindrical
- Bonne Pseudoconical
- Krovac Oblique Conformal Conic, Czechoslovakia

Typical projection parameters for most cases are:

- Scale Factor
- Central Meridian
- Origin Latitude
- Origin Longitude
- False Northing
- False Easting

### **Ok Button**

This will save the user-defined parameters to the CS-MAP coordinate system database files (coord-sys, datum and ellipsoid)

### **Cancel Button**

This will cancel the current operation and nothing will be saved.

---

## **Automatic Backup**

Whenever you add or edit a user-defined coordinate system, FieldGenius will automatically create and save your parameters to a file named **user-coordsys-backup.csmmap** to the mapping directory.

This backup file stores your user-defined coordinate systems. If you accidentally remove or overwrite your user-defined coordinate systems, you can re-import them from this backup file using the [Import user-defined Coordinate System](#) command.

---

## **Localization (Site Calibration)**

Further coordinate transformations can be accomplished with the use of the Local Transformation function of FieldGenius. For localizing on a user-defined coordinate system, see the [GPS Site Calibration](#) section below.

These settings are stored in your project's .ini file, allowing you to easily use different coordinate systems for different projects.

---

## **Additional Grid Shift Files and Geoids**

Additional grid shift files or geoids can be downloaded from the MicroSurvey helpdesk.

World Geoid models we support can be found [here](#).

World grid shift files we support can be found [here](#).

## Older FieldGenius Mapping Files

Many of the horizontal datums and vertical geoid models require the use of "grid" files for coordinate computations. A desktop application has been provided with FieldGenius to extract user-defined areas from the original files to create smaller more manageable files for the data collector.


See the topic on [Datum Grid Editor](#) for more information.

## Keyboard Shortcuts

### Main Menu | Settings | Keyboard Shortcuts

You can now assign command shortcuts to keys on your data collector. This has been added to support our new keyboard layout on the newer Trackers but it also works with any device that has a keyboard.

The defaults for the shortcut keys are based on the MicroSurvey Tracker custom keyboard layout, but you can assign any key you want to the list of available commands. The shortcut definitions are stored in the msurvey.ini file so they're portable to your other data collectors if you've defined a custom layout.

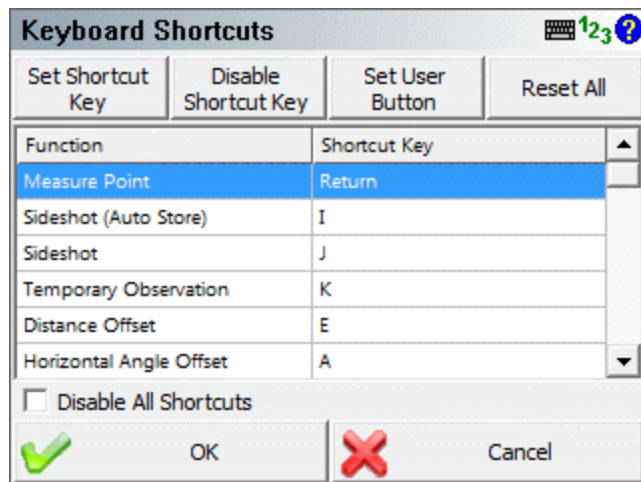

Another great feature is that the EDM mode for the current instrument you have selected can have shortcut keys assigned to them. For example if you refer to the list above, you would press the 1 key to set your EDM mode on the instrument to IR Standard.

The shortcut keys will only function from the [map screen](#).

### **Set Shortcut Key**

Use this to assign a command to a key on your keyboard. Highlight the command you want to modify, press the **Set Shortcut Key** button, then press the button on your keyboard to map the command to it. Your new key map will automatically be saved to the msurvey.ini file.

### **Disable Shortcut Key**

Use this to disable individual shortcuts.

### **Set User Button**



Use this to set the currently selected command to the User Button found on the main interface. The command currently set with the user button is indicated in the Function list with the same icon.


### **Reset All**

This resets all the shortcuts to the factory defaults and all customized settings will be lost.

### **Disable All Shortcuts**

This is a toggle that controls if the shortcut keys are disabled or enabled.

## Default Shortcut Keys



Function	Shortcut Key
Measure Point	Enter
Sideshot (Auto Store)	I
Sideshot	J
Temporary Observation	K
Distance offset	E
Horizontal Angle Offset	A
Multi-Set	M
Resection	R
Set Target Heights	T
Occupy Point	O
Check Backsight	N
Check Point	Q
Stake Points	S
Staking List	Z
Inverse	B
Traverse / Intersect	C
Station / Offset	Y
Calculator	F
Automap Library	D
Figure List	L
Toggle GPS Coordinates	G
Store Points	W
Delete Last Saved Point	Disabled
 Point Database	P
Add Comment	X
Raw File Viewer	U
COGO History	V
Menu Home	H
Map Data Layers	Backspace
SIP Enable/Disable	Disabled
EDM Mode 1	1
EDM Mode 2	2



EDM Mode 3	Disabled
EDM Mode 4	Disabled
EDM Mode 5	Disabled
EDM Mode 6	Disabled
EDM Mode 7	Disabled
EDM Mode 8	Disabled
Prism Search	Disabled
Prism Track	Disabled
Prism ATR	Disabled
Laser Pointer	Disabled
Guide Lights	Disabled
Robot Joystick	Disabled

## Project Information

[Main Menu](#) | [Settings](#) | [Project Information](#)

Crew Members	<input style="width: 80%;" type="text"/>
Instrument	<input style="width: 80%;" type="text"/>
Serial Number	<input style="width: 80%;" type="text"/>
Temperature	<input style="width: 80%;" type="text"/>
Pressure	<input style="width: 80%;" type="text"/>
PPM	<input style="width: 80%;" type="text"/>
Note 1	<input style="width: 80%;" type="text"/>
Note 2	<input style="width: 80%;" type="text"/>
 <input type="button" value="OK"/>  <input type="button" value="Cancel"/>	

Use this option to record job information about your project.

Tap **OK** to save your information to the raw file, or **Cancel** to exit without saving your changes. Each entry field can accept up to 64 characters.

This screen can also be accessed by pressing the "Modify Project Information" button located on the [Project Review](#) screen.


# SURVEY METHODS MENU

## Survey Methods Menu

### Main Menu | Survey Methods

These are commands built into FieldGenius that will help you measure and map your points. The desired method must be selected before you begin a measurement.

For a faster way to get to this screen, you can also press the measure mode button which is located on the [instrument toolbar](#).

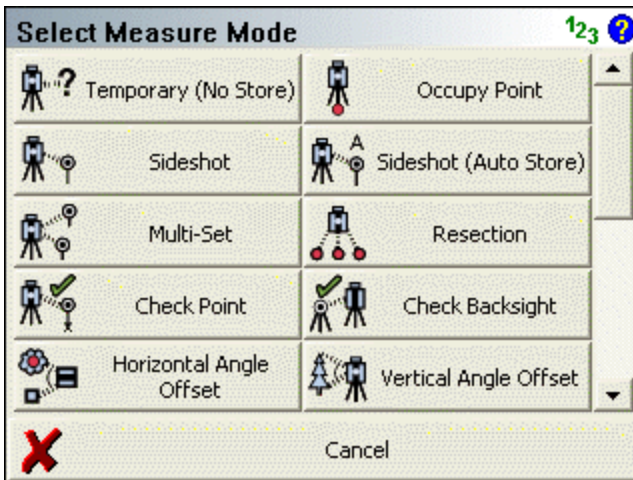

Use the vertical scroll bar along the side to access additional measurement modes if they cannot all fit on screen at the same time.

**Note:** Several of these modes will not be available until you have setup an occupy point and measured a backsight via the Occupy Point, Multi-Set, or Resection commands. Most of these modes will also not be available if you are using GPS.

### **Temporary (No Store)**

This will allow you to take a measurement without storing it. Please see the [Temporary \(No Store\)](#) topic for more information.

### **Occupy Point**

Use this to define an instrument setup. Please see the [Occupy Point](#) topic for more information.

### **Sideshot**

This mode allows you to measure a point. After the measurement, it will allow you to review your measurement data and allow you to make changes to the point id and description before it is stored. Please see the [Sideshot](#) topic for more information.

### **Sideshot (Auto Store)**

This mode allows you to measure a point using the next available point id, and the description and line toggles specified on the main map screen. Using this is a very fast method for recording your measurements. Please see the [Sideshot \(Auto Store\) following](#) topic for more information.

### **Multi-Set**

This will start the multi-set routine that will help you collect repeat observations to your backsight and a new foresight point. Please see the [Multi-Set](#) topic for more information.

### **Resection**

This will start the multiple point resection routine to allow you to determine your current instrument position by measuring to known points. Please see the [Resection](#) topic for more information.

### **Check Point**

Use this to display a check measurement to an existing point in your project. Please see the [Check Shot](#) topic for more information.

### **Check Backsight**

Use this to compare your backsight to your previously measured values. Please see the [Check Backsight](#) topic for more information.

### **Horizontal Angle Offset**

This will start the angle offset routine. Please see the [Horizontal Angle Offset](#) topic for more information.

### **Vertical Angle Offset**

This will allow you to compute the height of an object. Please see the [Vertical Angle Offset](#) topic for more information.

**[Distance Offset](#)**

This will start the distance offset routine. Please see the [Distance Offset](#) topic for more information.

**[Manual Distance](#)**

This will record a HA and VA for a shot, but the user can manually enter the distance. Please see the [Manual Distance](#) topic for more information.

**[Manual Entry](#)**

This will allow you to manually enter in a shot including HA, VA and SD. Please see the [Manual Entry](#) topic for more information

**[Two Line Intersection](#)**

This allows you to measure two baselines and FieldGenius will compute the intersection point. Please see the [Two Line Intersection](#) topic for more information.

**[Line - Angle Offset](#)**

This allows you to measure two points to define a baseline, measure an angle, and FieldGenius will compute the intersection point. Please see the [Line - Angle Offset](#) topic for more information.

**[Line - Distance Offset](#)**

This allows you to measure two points to define a baseline, then manually enter measured distances. These distances will be used to compute a new point based on the baseline. Please see the [Line - Distance Offset](#) topic for more information.

**[Line - Perpendicular Point](#)**

This allows you to measure two points to define a baseline, then you can select an existing point which will be used to compute a perpendicular intersection. Please see the [Line - Perpendicular Point](#) topic for more information.

**[Trilateration](#)**

This will allow you to compute new points by observing their distances from two known existing points. Please see the [Trilateration](#) topic for more information.

**[Observe Benchmark](#)**

Use this to check your current setup elevation, or compute a new one based on a known elevation. Please see the [Measure Benchmark](#) topic for more information.

**[Add Invert](#)**

Use this to open the invert toolbar. You will then be able to record invert measurements. Please see the [Add Invert](#) topic for more information.

### **Vertical Plane Projection**

This will allow you to compute points on a user defined vertical plane. Please see the [Vertical Plane Projection](#) topic for more information.

### **Point Scanning**

Use this to activate Point Scanning with your motorized reflectorless instrument. Please see the [Point Scanning](#) topic for more information.

## **Temporary (No Store)**

[Main Menu](#) | [Survey Methods](#) | [Temporary \(No Store\)](#)

The temporary mode will allow you to take a measurement with your instrument without storing a point or recording anything to the raw file. It also doesn't require you to have established a setup. It is the same as pressing the measure button on the instrument where all it does is report back to you the HA, ZA, SD, HD and VD.

When in this mode you will see the word **Temp** on the measure mode button.

### **No Setup Established**

If you haven't established a setup and you use the temp mode, when you press the measure button you will see the results of your measurement.

### **Setup Established**

If you have an instrument setup established when you use the temp mode and press the measure button you will see the measurement information as well as calculated coordinates in the observation toolbar. The coordinates will be based on the current setup and the reading from the temporary shot.

#### **Note:**

When measuring in temp mode, nothing will be recorded in the RAW file.

## **Occupy Point**

[Main Menu](#) | [Survey Methods](#) | [Occupy Point](#)

Use this command to specify the instrument location and orientation. You will be asked to specify the point your instrument is occupying, an instrument height and if you will be assuming a backsight direction or sighting an exiting point. After you have established your setup and backsight, FieldGenius will graphically show you your setup points.



Occupied Point Location



Backsight Point Location

## **Backsight Method: Direction**

With the backsight method set to Direction you will be able to specify the point you want to setup on and specify a backsight direction.

When you go to measure you have the option of recording an angle and distance to the backsight, or the option of just recording an angle. If a distance is measured to the backsight you will have the option of storing a point for the backsight after you press the measure button.

### **Occupy Point**

Type in an existing point number, or double tap in this field to open the keypad or to select a point from the map. You will be able to create a new point, pick one from a list, or pick one from your drawing.

### **Instrument Height**

Use this to enter your current instrument height.

### **Backsight Direction**

Use this to specify the direction that will be used by FieldGenius. You can enter an azimuth or a quadrant bearing.

### **Target Height**

Use this to enter your current [target height](#).

## **Backsight Method: Point**

Use this method to specify the points that will be used for the current instrument location and backsight.

**Orientation Setup**

Instrument

Occupy Point: 1

Instrument Height: 0.00'

Backsight

Backsight Point: 2

Backsight Direction: 0°00'00.0"

Backsight Distance: 50.00'

Target Height: 0.00'

Observe Backsight Cancel

### **Occupy Point**

Type in an existing point number, or double tap in this field to open the keypad or to select a point from the map. You will be able to create a new point, pick one from a list, or pick one from your drawing.

### **Instrument Height**

Use this to enter your current instrument height.

### **Backsight Point**

Type in an existing point number, or double tap in this field to open the keypad or to select a point from the map. You will be able to create a new point, pick one from a list, or pick one from your drawing.

### **Backsight Direction & Distance**

When you enter in your points FieldGenius will display the inversed horizontal distance and direction between the points you entered.

### **Target Height**

Use this to enter your current [target height](#).

---

## **Measuring to the Backsight**

Once you've established the backsight method, entered your points and instrument height you can move on to the next step by pressing the **Observe Backsight** button. You will be taken back to the

map view where you will see the graphical position of your setup and backsight points. There are a few things you should take note of:

1. You can always tell what mode you're in by the "mode" text that appears near the top of your drawing. Since you're using the occupy point command you will see "Observe Backsight" near the top of the map area.
2. You have two measure modes available to you on the instrument toolbar. You can measure an angle and distance to the backsight, or measure only your current plate reading without measuring a distance. The two options are described in more detail in the [Backsight Measure Mode](#) topic.
3. You can cancel the setup by pressing the measure mode button and choosing "Cancel Backsight"
4. While in the backsight mode, you can use any of the controls from the information and display toolbar.
5. You can set the height of target by using the HT button on the instrument toolbar.
6. When you're ready to measure to the backsight, press the Measure button on the instrument toolbar.

---


## Backsight Summary

After you have taken your measurement you will see a summary of your shot. From this screen you can choose to accept the shot or re-shoot it. You can also specify if you want the plate reading set to zero or a specific azimuth (if this is supported on your instrument). For more information see the [Backsight Summary](#) topic.

## Backsight Measure Modes

**Instrument Toolbar | Measurement Modes Button**



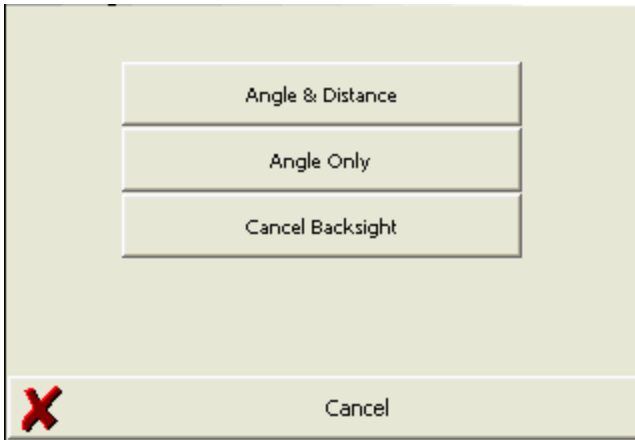

When shooting to your backsight you have two options available and they can be accessed from the [instrument toolbar](#) using the measure mode button. The measure modes available are described as follows:

### **Angle & Distance**

Specifying this will require you to measure a distance to the backsight either to a prism or reflectorlessly. It will also record the current plate reading on the instrument. Both the measure distance and plate reading will be used as the backsight reading in the raw file.

### **Angle Only**



Specifying this will not require you to measure a distance to the backsight. All that will be recorded is the current plate reading on the instrument and this reading will be used as the backsight reading in the raw file.

### **Cancel Backsight**

Use this to cancel your current backsight and occupy point command.

## **Backsight Summary**

After you have taken your measurement you will see a summary of your shot. From this screen you can choose to accept the shot or re-shoot it. You can also specify if you want the plate reading set to zero or a specific azimuth.

<b>Backsight Observations</b>			
HA	0°00'05"	VA	89°59'40"
SD	100.05'	HD	100.05'
HI	0.00'	HT	0.00'
<b>Backsight Errors</b>			
Calc Horz Dist	100.00'	Error	<b>0.05'</b>
Calc Elev	0.01'	Error	0.01'
<b>Plate Setting</b>			
Do Not Modify		0°00'05"	
	Accept	Observe Again	 Cancel

## Backsight Observations and Errors

If you specified the point backsight method you will see a comparison between what you measured and the theoretical inverse. If you used the measure angle only mode, or defined a backsight direction you will not see a comparison as there isn't enough information available to compute the inverse.

### Reciprocate Traverse

This option will only be available if the "Traverse Reciprocate" option in [Options](#) is turned on. By default, it is turned off.

This option can only be used if the point being occupied was previously measured and stored as a TR shot. If it was stored as a SS shot then this will be grayed out.

If this option is turned on then when you measure the backsight, FieldGenius will compute a new elevation for the point being occupied, based on:

1. The measured elevation of the occupy point, based on its previously recorded TR traverse measurement.
2. The computed elevation of the occupy point, based on the backsight observation and the elevation of the backsight point.

These two elevations for the occupy point are averaged together, and a new traverse observation is computed for the occupy point, which will result in the occupy point having this new averaged elevation. This computed observation is written to the raw file as a new TR record, overriding the previous TR record to the occupy point.

## **Plate Setting**

If your instrument supports uploading of angles, the Set To Direction and Set To Zero options will be available to you. If it doesn't support this then these options will be grayed out. These functions can be used to help you set your backsight plate angles on your instrument.

### **Do Not Modify**

With this option selected, the plate reading on the instrument will not be modified by FieldGenius. You will see the current plate reading displayed beside the pull-down list.

### **Set To Direction**

If your instrument supports uploading of angles, the Set To Direction option will be available to you. If it doesn't support this it will be grayed out. Beside the pull-down list you will see the direction field which will contain a value based on two factors:

1. If you specified a points for the occupy and backsight points, you will see the computed (inversed) direction.
2. If you specified a setup point and a direction to the backsight, you will see the direction that you previously entered.

When you press the **Accept** button, FieldGenius will upload the angle to your instrument and set it as the current plate reading. When you Accept the setup, this value will be used as the backsight plate reading in the raw file.

### **Set To Zero**

If your instrument supports uploading of angles, the Set To Zero option will be available to you. If it doesn't support this it will be grayed out. You will see a direction value of zero displayed beside the pull-down list.

When you press the **Accept** button, FieldGenius will upload and set your circle plate reading to zero. When you Accept the setup, this value will be used as the backsight plate reading in the raw file.

---

## **Finishing the Setup Routine**

### **Accept**

Once you've reviewed your backsight information you can complete it by pressing the **Accept** button. This will write a record to the raw file and exit the setup routine.

If you specified the direction backsight method you will be prompted to "Store the point observed at the backsight?" Press **Yes** to store a point for the backsight, or **No** to complete the setup without creating a new point at the backsight.

## Observe Again

If you're not satisfied with the results or made a mistake you can re-shoot the backsight by using this button. Doing so will take you back to the main display where you can take another shot on the backsight.

## Occupy Point Raw Records

When you accept your occupy point, points will be stored in the database for the setup and backsight if applicable. Also, the following records will be written to the raw file:

```
SP,PN2,N 918.0848,E 1057.3576,EL0.0000,--
--Orientation
LS,HI5.000,HR5.000
OC,OP1,N 1000.0000,E 1000.0000,EL0.0000,--
BK,OP1,BP2,BS145.00000,BC0.00000
BR,OP1,BP2,AR145.00000,ZE90.00000,SD100.00000
-- Orientation Notes (several comment lines)
```

If the "Reciprocate Traverse" option was used, then the following records will be written to the raw file:

```
TR,OP1,FP3,AR45.00000,ZE90.00000,SD100.00000,-- (Note: this is the pre-
viously measured record, not part of the occupy routine)
--Reciprocate Traverse
LS,HI5.000,HR5.000
BK,OP1,BP2,BS0.00000,BC0.00000
TR,OP1,FP3,AR45.00000,ZE90.00150,SD100.0000,--
--Orientation
LS,HI5.000,HR5.000
OC,OP3,N 1070.7107,E 1070.7107,EL99.992,--
BK,OP3,BP1,BS225.00000,BC0.00000
BR,OP3,BP1,AR0.00000,ZE89.59300,SD100.01000
-- Orientation Notes (several comment lines)
```

## Sideshot


[Main Menu](#) | [Survey Methods](#) | [Sideshot](#)

If you like reviewing your shots prior to being stored in the database and raw file, then this is the mode you should use. When you press the measure button on the instrument toolbar, after the shot is measured you will see the store point screen prior to storing the point.

When you set this mode you will see the word **Sideshot** on the measurement mode button.

When you take a shot using the measure button you will see the [Store/Edit Point](#) screen.

You can also confirm or change the Target Height used for this shot.

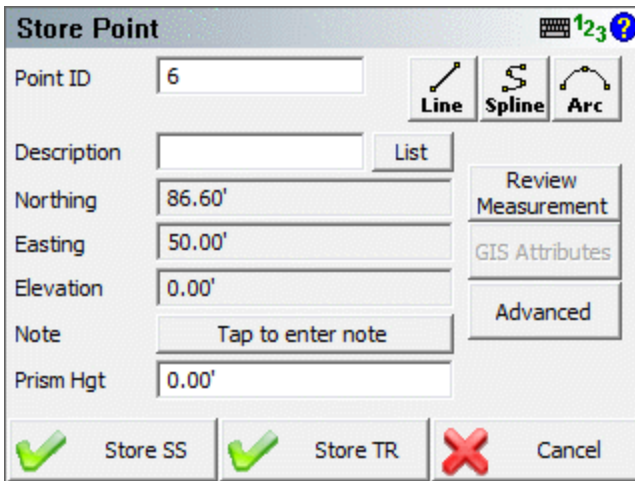

After reviewing the information you have three choices to make.

### Store SS

Press this to store the coordinate in the database and create a sideshot record (SS) in the raw file.

```
|SS,OP350,FP3,AR0.00000,ZE94.50090,SD13.2700,--<No Desc>|
```

### Store TR

Press this to store the coordinate in the database and create a traverse record (TR) in the raw file.

```
|TR,OP350,FP4,AR0.00000,ZE94.50080,SD13.2700,--<No Desc>|
```

Traverse records are needed if you want to compute a traverse closure. If your last shot from a setup is recorded as a traverse record, when you use the [occupy point](#) routine it will automatically advance you. This is commonly referred to as "leap frogging" your traverse.

### Cancel

Press this to cancel the shot and not store anything.

**Note:** For more information on the other buttons found on this screen please read the [Store / Edit Points](#) topic.

## Sideshot (Auto Store)

### Main Menu | Survey Methods | Sideshot (Auto Store)

Use this when you have production in mind and you don't need to review your shots before they're recorded in the database and raw file. The measure mode allows you to press the measure button and

it will store the point in the database and plot it in the drawing without asking you for any further information.

When in this mode you will see the words **Sideshot (Auto)** on the measure mode button.

It will use the following settings from the main interface when storing the point:

#### **Next Point Number ID**

The current point ID on the topo toolbar will be assigned to the point.

#### **Description**

The current description on the topo toolbar will be assigned to the point.

#### **Height of Target**

The current HT on the instrument toolbar will be used to compute the elevation of the point.

#### **Note:**

When measuring in the Auto Store mode, a SS record will be recorded in the raw file.


## **MultiSet**

### **Main Menu | Survey Methods | MultiSet**

The Multiset routine in FieldGenius allows you to record angular sets in any order you want. You can also review your measurement's computed average and standard deviation.

### **Starting the MultiSet Routine**

If you've previously measured to your backsight and are confident that it hasn't changed very much you can save some time by using the "**Apply the current orientation observation to the Multi-Set data set?**" option. If you select Yes, it will take the last backsight measurement you made and use it for the multiset session.

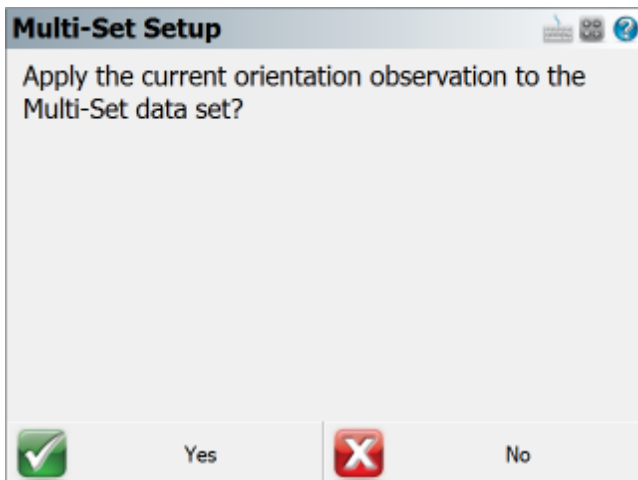


You will then see the [Setup Occupy Point](#) screen. If you've already established a setup, it will display the same information that you previously entered.

Press the **Continue Multi-Set** button to proceed to the Multi-Set Point List screen

**Note:**  
 Unlike the regular setup routine, you will not be required to immediately shoot your backsight.

## Multi-Set Point List

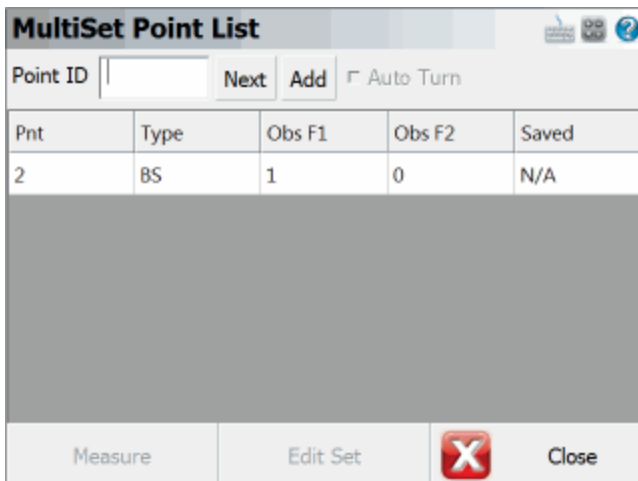

This is the control center for recording your sets. It will begin with a record for your backsight and your foresight measurements will be listed after it, in order that they are measured.

**Pnt:** This is the point number of the point you've measured for your backsight and foresight points. If you see the word "Bearing" this indicates that you assumed a backsight direction.

**Type:** This is the type of measurement that was measured. It will be either a BS (backsight) or FS (foresight) measurement.

**Obs F1:** This will list the total Face 1 (Direct) observations that were recorded for the point.

**Obs F2:** This will list the total Face 2 (Reverse) observations that were recorded for the point.

**Saved:** If the foresight measurement hasn't been saved you will see a red "X". measurements that have been saved will have a green "checkmark". Since your backsight readings are always to a known point or an assumed direction you will see N/A as there is nothing to save.

---

## Measuring the Backsight

If you want to shoot your backsight, then do the following.

1. Select the first row which is the backsight record by tapping on it.
2. Press the **Measure** button to start the measurement process.
3. On the map screen confirm that you have selected the correct target height.
4. When you're ready to record the measurement press the **Measure** button on the instrument toolbar.
5. You will automatically see the multiset point list where you will see your measurement which will be indicated in the F1 or F2 field.

---

## Reviewing the Backsight measurements

If you press the **Edit Set** button you will see a summary of the two measurements.



MultiSet Observations				
BS Point: 2 F1-1 F2-1				
Std Dev: HA 0°00'05.0" VA 0°00'02.5" SD 0.002m				
Average: HA 345°00'05" VA 89°59'58" SD 19.985m				
Use	Face	dHA	dVA	dSD
<input checked="" type="checkbox"/>	1	-0°00'05"	0°00'02"	-0.002m
<input checked="" type="checkbox"/>	2	0°00'05"	-0°00'02"	0.002m
<input checked="" type="checkbox"/> Reciprocate		<input type="checkbox"/> Close		

The summary will display the standard deviations for the averaged measurements as well as the computed average measurement. In the list you will see the delta difference between the measured measurement and the average. In our example the HA and VA on the face 1 measurement was larger than the average direction by 11 seconds.

By default all measurements will be used to compute the averaged position. However, you can decide what measurements you want to use to compute the averaged position by pressing the green checkmark icon. Doing so will switch it to a red "X" which will remove it from the computation.

### Notes about measuring the Backsight:

When you first begin the multi-set routine, you are not required to shoot the backsight prior to measuring a foresight.

You are not required to have both a Face 1 and Face 2 reading recorded for the backsight. A measurement on either face will work, but it is common practice to record both.

### measuring a Foresight

To record a foresight measurement you first have to define a point number in the **Point ID** field towards the top of the multi-set point list. Press the **Next** button to display the next available point ID, or type in the Point ID you want to use. Then press the **Add** button to add the new Point ID into the Multi-Set Point List. After you add the new point number follow these steps to record the measurement.

1. Press the **Measure** button to start the measurement process.
2. On the map screen confirm that you have selected the correct target height.

- When you're ready to record the measurement press the **Measure** button on the instrument toolbar.
- You will automatically see the multiset point list where you will see your measurement to your foresight points. They will have the FS tag in the Type column.

## Reviewing Foresight measurements

To review you foresight measurement for any point, simply highlight it in the list and press the **Edit Set** button.

**MultiSet Observations**

FS Point: 6 F1-1 F2-1  
 Std Dev: HA 0°00'00.0" VA 0°00'03.5" SD 0.000m  
 Average: HA 45°00'02" VA 89°59'59" SD 19.987m  
 BS-FS Angle: 60°00'02"

Use	Face	dHA	dVA	dSD
✓	1	-0°00'00"	-0°00'03"	0.000m
✓	2	0°00'00"	0°00'03"	0.000m

Store Pnt


Close

Towards the top you will see the foresight point you measurement to and a summary of the total face 1 and face 2 measurements recorded.

Next you will see the standard deviation that is computed using all the directions that have a green check mark.

Next is the averaged direction (plate reading) to the foresight point.

Finally, you will see the computed clockwise angle between the average backsight and foresight direction.

By default all measurements will be used to compute the averaged position. However, you can decide what measurements you want to use to compute the averaged position by pressing the green checkmark icon. Doing so will switch it to a red "X" which will remove it from the computation.

Once you're satisfied with your observations you can press the **Store Pnt** button which will take you to the Store and Edit screen. From here you can review the description and store it as either a SS or TR measurement.

**Note:** After you store your point, you will not be able to add anymore observations.

## Auto Turn Sets

If you have a motorized instrument you will be able to have FieldGenius plunge your scope and turn back to the foresight or backsight for you.

Simply highlight the measurement you want to record an observation for, and select the **Auto Turn option** so the checkbox is checked.

Now when you press the **Measure** button the instrument will automatically plunge and turn back to your foresight point for you. You can then press the measure button on the instrument toolbar to record the measurement.

When you're using the Auto Turn option FieldGenius will first check to see how many Face 1 and Face 2 observations you have. It will automatically keep these numbers equal to one another. For example if you have 1 Face1 measurement, and 2 Face2 measurements, FieldGenius will automatically sight the foresight using Face 1.

Furthermore, if you're instrument is equipped with auto target recognition, you can use this feature in combination with the auto turn for greater productivity.

---

## Multiset Measure Modes

At any time during the collection of your observations you can choose to shoot an angle & distance or angles only measurement. You can control this by pressing the measurement mode button on the instrument toolbar.

If you're measuring to a foresight you need a minimum of 1 distance before you will be allowed to store it.

---

## Raw File Record

When you store your multi-set points a point is created in the database as well as some records in the raw file.

```
--MultiSet (StdDev HA:0°00'03" VA:0°00'04" SD:0.005m)
OC,OP1,N 1000.0000,E 1000.0000,EL100.0000,--
SP,PN5,N 1015.5153,E 1000.0000,EL99.1936,--BS
BK,OP1,BP5,BS0.00000,BC359.59495
RB,OP1,BP5,AR0.00000,ZE93.42400,SD15.5479,HR5.000,--BS
RB,OP1,BP5,AR179.59390,ZE266.17420,SD15.5512,HR5.000,--BS
RF,OP1,FP8,AR45.52150,ZE92.03370,SD22.3917,HR5.000,--FS
RF,OP1,FP8,AR225.52100,ZE267.56580,SD22.4311,HR5.000,--FS
RF,OP1,FP8,AR225.52100,ZE267.57000,SD22.4311,HR5.000,--FS
RF,OP1,FP8,AR45.52180,ZE92.03350,SD22.3917,HR5.000,--FS
SS,OP1,FP8,AR45.52132,ZE92.03185,SD22.4114,--FS
```

For each foresight point you store a OC record is created to indicate what point you setup on. Also a BK record will be written to record which point you specified for the backsight. An important thing to

note here is that the BC value will be equal to the average backsight direction (plate reading) recorded for the backsight.

The Standard Deviations are written into the first comment record, and it will also display "Tolerance Exceeded" if applicable.

RB records are your accepted measurements to the backsight.

RF records are your accepted measurements to the foresight.

The last item will always be a SS or TR record. This is the averaged direction (plate reading) to the foresight point.

## Resection

[Main Menu](#) | [Survey Methods](#) | [Resection](#)

FieldGenius has a multi-point resection routine that can be used to compute a point for a setup. It will use a least squares solution to determine the coordinates from the measurements you make to your points. The goal at the end of a resection is to compute the unknown coordinates of the instrument's current location based on measurements made to other known points in the project.


- As a minimum you need to have two points to resect to.
- You can shoot the resection point in the direct or reverse face.
- You can take multiple shots to the same resection point.
- There is no limit to the amount of points you can resect to.
- When you store your resection point, an occupy record will be created for you automatically.

---

### Specify the Resection Reference Points

#### First Shot


When you start the command you will see the reference point toolbar. Specify your instrument height and select a reference point to measure. After you select a point, you can press the **Measure** button to record a shot.

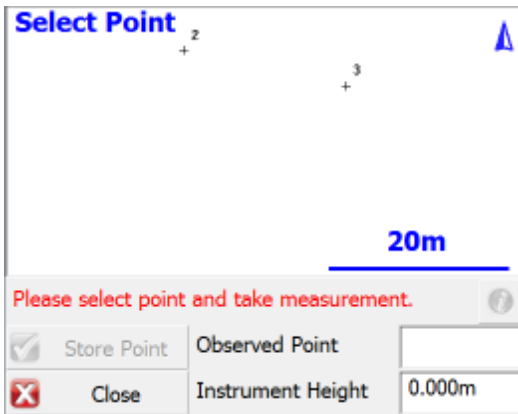

### Second Shot

To record the second shot, simply select it from the map screen, then press the **Measure** button. A minimum of two points are needed to compute a position for the instrument, but you can shoot more points if needed to increase the accuracy of the instrument position. The estimated accuracy of the instrument location will be displayed for you on the toolbar. If the estimated error is within your own tolerances, then you can go ahead and store the point by pressing the **Store Point** button. All successful solutions will be displayed with green text starting with the characters **StdDev**:

Press the **Close** button to cancel out of the routine. You may need to do this if the solution does not converge, and you need to restart the routine.

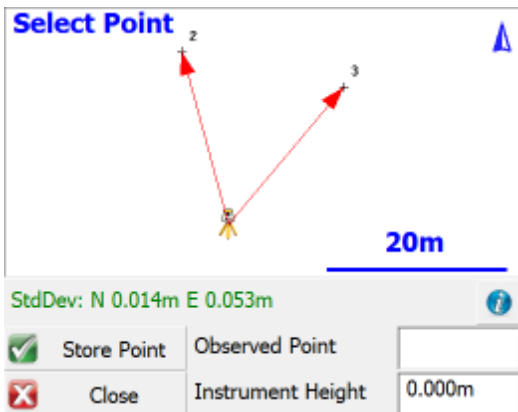

### Three or More Shots

If you have more points to reference to you can continue measuring them using the same process as you did when you shot the second point. As you record more points you should notice that the standard deviations for the northing and easting will begin to get smaller.


### Standard Deviation

This is the computed precision for the overall geometry of the resection. Small errors indicate that the measured data "fits" very well with the geometry defined by the known points.

Large errors can indicate that bad measurements were recorded, either due to careless measurement practices such as not holding the prism pole straight or not carefully sighting the prism. Large errors can also happen if the geometry defined by the known points, is not "in the same place" as it was when the points were previously measured.


Please note that while the Standard Deviation relates to the quality of your resection, it is possible to have a low StdDev yet still have a high positional error. As such, it is important that you also look at the angle and distance errors shown in the Information screen when considering the overall accuracy of your resection.

### Information (Horizontal and Vertical Filters)

You can enter this screen by pressing the **Information** button  on the top right corner of the reference point toolbar. When you do, you will see a detailed summary of the measurements.

Point	Backsight	Use H	Use V	HA Error	HD Error	VD Error
2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		0.010m	0.000m
3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-0°00'07"	0.010m	0.000m

Valid Solution:  
StdDev: N 0.014m E 0.053m

 Close

You can determine how each shot to the reference points should be used to compute the resection point. By default each observation you make will be used to compute both the horizontal and vertical

position of the resection solution, but you can override this by setting the **Use H** and **Use V** options for each measurement.

Use H	Use V	Result
✓	✓	This shot will be used to compute both the horizontal and vertical position.
✓	✗	This shot will be used to compute only the horizontal position.
✗	✓	This shot will be used to compute only the vertical position.
✗	✗	The shot will be ignored in the computation.

You can also select which observation is to be your backsight point.

### **HA Error**

The horizontal angle error is computed as follows. Using the computed resection point and the measured horizontal angle, a theoretical direction is computed to the reference point. This direction is then compared to the direction measured (plate reading) and the difference is noted in the HA Err column.

### **HD Error**

The horizontal distance error is computed as follows. An inverse is made between the resection point and the reference point. This inversed distance is then compared to the measured distance and the difference is noted in the HD Err column.

### **VD Error**

The vertical distance error is computed as follows. Using the resection elevation, and the observation to the reference point, a new elevation is computed for the reference point. This computed elevation is then compared to the reference point's original elevation and the difference is noted in the VD column.

---

## **Resection Modes**


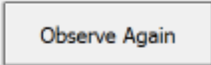 

At any time during the collection of your observations you can choose to shoot an **Angle & Distance** or **Angles Only** measurement. You can control this by pressing the measurement mode button on the [instrument toolbar](#) after you have started your resection.

---

## **Store the Resection Point**

When you're satisfied with the resection point you can store its new position by pressing the **Store Pnt** button. This will then display the store / edit screen.

Finally you will see the [backsight results](#) screen.

Backsight Observations	
HA 345°00'00" VA 90°00'00"	
SD 19.969m HD 19.969m	
HI 0.000m HT 0.000m	
Backsight Errors	
Calc Horz Dist	19.979m Error -0.010m
Calc Elev	100.000m Error 0.000m
<input type="checkbox"/> Reciprocate Traverse	
Plate Setting	
Do Not Modify	345°00'00"
	Accept
	Observe Again
	Cancel

The backsight point that will be stored will be based on which point you selected in the Information screen shown above, which by default is the first reference point you observed. You do not need to take another measurement to the backsight as it has the original measurement you made. At this point you can do the following:

- Confirm the instrument and target heights.
- Decide if you want to set the plate reading on the instrument to zero or an azimuth.
- Decide if you would like to sight it again and take another measurement.

If you're satisfied with the backsight, you can store it by pressing the **Accept** button. If you're setting a plate reading on the instrument, you need to make sure it is pointing at the backsight point prior to pressing the Accept button. For example, if you want to set zero on the backsight point, you need to make sure that the instrument is pointing at the backsight point.

## Raw File Record

After your store you point, several records will be written to the raw file.

```

--Resection
SP,PN5000,N 1009.1534,E 1000.0000,EL100.3244,--
SP,PN6034,N 1006.1995,E 1002.8319,EL99.7321,--FS
SP,PN6035,N 1001.4706,E 1004.8775,EL99.7361,--FS
RS,PN5000,CR359.59590,ZE87.49010,SD9.1600
RS,PN6034,CR24.33000,ZE92.03450,SD6.8280
RS,PN6035,CR73.13080,ZE92.43050,SD5.1010
SP,PN6036,N 999.9998,E 999.9998,EL100.0011,--
OC,OP6036,N 999.9998,E 999.9998,EL100.0011,--
SP,PN5000,N 1009.1534,E 1000.0000,EL100.3244,--
BK,OP6036,BP5000,BS0.00039,BC0.00000
--Occupy Check

```



```

|-- Observed Values: HA 0°00'00.0" VA 87°49'22.0" SD 9.160m HD 9.153m
|-- Distance Calculated: 9.154m
|-- Distance Error: -0.000m
|-- BS Elevation: 100.324m
|-- BS Elevation Error: 0.001m
    
```



## Check Point

[Main Menu](#) | [Survey Methods](#) | [Check Point](#)

Use this to measure a check shot to an existing point. When you start the command you will see the point chooser appear where you can create a new point or pick an existing one from a list or from the screen. After you choose your point you will be ready to measure. You will note the measure mode will be set to **Check Pnt** and if you need to cancel the operation you can do it by pressing the measure mode button and choose to cancel it.

### Check Point Summary

When you're ready to record the shot press the **Measure** button on the instrument toolbar. You will be presented with a screen that compares your measured values to the ones that were computed for the check shot point.

Check Point	
Identifier:	5
Description:	
Delta Northing:	-0.01'
Delta Easting:	-0.01'
Delta Elevation:	4.92'
Delta Horizontal:	0.02'
Observed Point	
Northing:	1044.05'
Easting:	952.20'
Elevation:	100.00'
 Store Point	 Close

The deltas that are displayed are computed by subtracting the shot coordinates from the known coordinates. In other words if you add the deltas to the shot point coordinates you will end up at the known point.

### Store Point

Pressing this will exit the function and write several notes to the raw file summarizing your check shot, and allow you to store the shot using the [Store/Edit Point](#) screen.

```

|--Check Point
|-- Check Point ID: 110
|-- Check Point dNorthing: -4.59'
|-- Check Point dEasting: -1.82'
|-- Check Point dElevation: -4.96'
|-- Check Point dHorizontal: 4.94'
|-- Observed Values: HA 45°00'00.0" VA 90°00'00.0" SD 23.00' HR 5.00'
|-- Observed Point Northing: 5016.26'
|-- Observed Point Easting: 5016.26'
|-- Observed Point Elevation: 95.00'

```

**Close**

This will exit the check shot function and not write anything to the raw file or storing a new point.

## Check Backsight

[Main Menu](#) | [Survey Methods](#) | [Check Backsight](#)

Use this to check your backsight. FieldGenius will compare your newly measured value to the one that was stored for your current setup. You will be able to review difference and optionally update your current setup with the new shot to the backsight.

When you start the command you will be taken back to the map screen and the measure mode will be set to **Check BS**. You have two measure modes available when taking a check shot to your backsight. Please see the [Backsight Measure Mode](#) topic for more information.

### Check Backsight Summary

When you're ready to record the shot press the **Measure** button on the instrument toolbar. You will be presented with a screen that compares your measured values to the ones that were stored for the current backsight.

Backsight Setup:	0°00'00"
Backsight Measured:	359°58'24"
Backsight Error:	-0°01'36"
Distance Calculated:	100.00'
Distance Measured:	99.87'
Distance Error:	0.13'

## Update Backsight

Pressing this will create a record in the raw file updating your setup and backsight record with the shot information from your check shot. Several notes will also be written to the raw file summarizing your shot. When you choose to update the backsight, a new OC and BK record is saved as well as the shot information. You will also see the word (Updated) which indicates that the user selected the Update button.

```
OC,OP5,N 763.8748,E 1000.0000,EL0.0000,--
SP,PN1,N 1000.0000,E 1000.0000,EL100.0000,--start
BK,OP5,BP1,BS0.00000,BC0.00000
LS,HI0.000,HR5.000
--Backsight Check (Updated)
-- Observed Values: HA 0°00'00.0" VA 90°00'00.0" SD 163.12'
-- Backsight Setup: 0°00'00"
-- Backsight Measured: 0°00'00"
-- Backsight Error: 0°00'00"
-- Distance Calculated: 236.13'
-- Distance Measured: 163.12'
-- Distance Error: 73.01'
```

## Close

Pressing this will exit the function and write several notes to the raw file summarizing your check shot.

```
--Backsight Check (Not Updated)
-- Observed Values: HA 0°00'00.0" VA 90°00'00.0" SD 236.10'
-- Backsight Setup: 0°00'00"
-- Backsight Measured: 0°00'00"
-- Backsight Error: 0°00'00"
-- Distance Calculated: 236.13'
-- Distance Measured: 236.10'
-- Distance Error: 0.03'
```

# Horizontal Angle Offset


[Main Menu](#) | [Survey Methods](#) | [Horizontal Angle Offset](#)

FieldGenius includes a flexible angle offset routine. It allows you to shoot the angle and distance to a point that can not be occupied by the rod. An example of where you would use this is if you wanted to record the center of a large object, such as a tree.

When you choose the Horizontal Angle Offset measurement mode you will see the following screen.

Horizontal Angle Offset		
	Angle (Center)	Distance
HA		
VA		
SD		
HR		
HI		


No Solution


Observe Angle    Observe Distance    Store Point     Cancel

Two observations are required: one to record the angle to the center of the object, and a second to measure a distance perpendicular to the object's center.

On this screen you determine what order you will make these two measurements. All you need to do is press either the **Observe Angle** or **Observe Distance** button.

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

**Note:** The Quick Measure Modes option in the [Options screen](#) will affect what happens when you press the Observe buttons when you are using the offset routines. If Quick Measure Modes is on, a measurement will automatically be taken. If it is off, the Observe button doesn't actually trigger your total station to take a measurement; it simply takes you to the map screen where you can press the  measure button once you are ready to take the measurement.

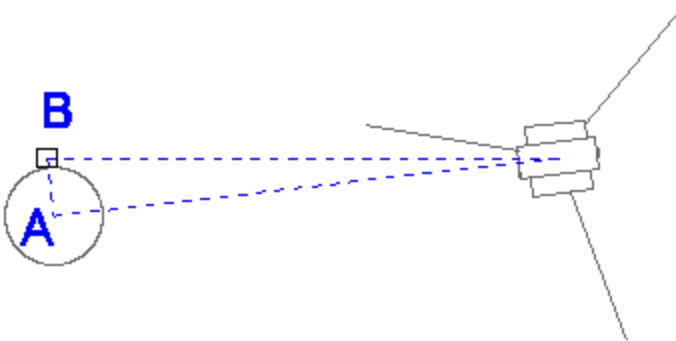

### Angle (Center)

This will record the total station's horizontal angle. When measuring the angle, you should point the total station towards the center of the new point that will be created. This would be measurement "A" in the diagram shown above.

**Note:** You do not need to sight a prism to record the angle, simply sight the new point and press the **Observe Angle** button.




### Distance

This will record a distance, measured to a prism which is located at the side of the object. You should try to locate the prism so that it is perpendicular to the center of the object and the line-of-sight from the total station. This is measurement "B" in the diagram shown above.

**Note:** The target height is important on this shot, because the new point will have the same elevation.

### Storing the Shot

After you record your measurements you can store the new point by pressing the **Store Point** button.

Horizontal Angle Offset  123 		
	Angle (Center)	Distance
HA	93°25'45.0"	94°49'38.0"
VA	88°49'53.0"	88°41'34.0"
SD	--	27.308m
HR	--	0.000m
HI	1.035m	1.035m
Horizontal Distance: 0.666m		
Observe Angle	Observe Distance	Store Point  Cancel

After you store the point, you can continue using the offset command to record additional points, or exit it by pressing the **Cancel** button.

### Raw File Record

In the raw file the OF records represent the measurements that were made and the SS record is derived using the two OF records

```


OF,AR94.49380,ZE88.41340,SD27.3163
OF,OL93.25450,--Right Angle Offset
SS,OP1,FP23,AR93.25450,ZE88.41340,SD27.3081,--ROAD
    
```

## Vertical Angle Offset

[Main Menu](#) | [Survey Methods](#) | [Vertical Angle Offset](#)


When you begin the vertical angle offset routine, you will see the following screen.


Two observations are required, one to record the top or bottom of the object, and a second to measure a distance that is directly underneath or above the new point.

Vertical Angle Offset		123 ?
	Angle (Height)	Distance
HA		
VA		
SD		
HR		
HI		
No Solution		
Observe Angle	Observe Distance	Store Point  Cancel

On this screen you determine what order you will make these two measurements. All you need to do is press either the **Observe Angle** or **Observe Distance** button.

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

**Note:** The Quick Measure Modes option in the [Options screen](#) will affect what happens when you press the Measure button when you are using the offset routines. If Quick Measure Modes is on, a measurement will automatically be taken. If it is off, the measure button doesn't actually trigger your total station to take a measurement; it simply takes you to the map screen where you can press the  measure button once you are ready to take the measurement.

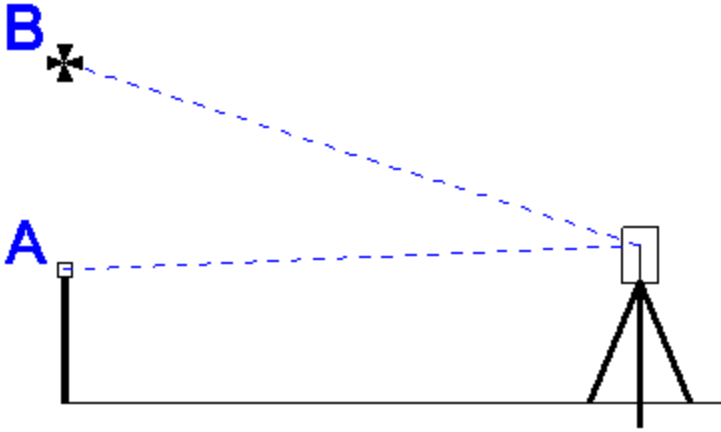

For example if point "B" was the bottom of an underpass, you could measure it's height. Usually it is easier if you position the prism so it is directly beneath the point you want to shoot. You would then record a distance observation to this location which will also be the horizontal position for the new point. Then without turning your instrument, you could rotate the scope vertically so it is sighted on the bottom of the overpass. You could then record this observation which will be used to compute the elevation for the new point.

Once you've recorded these two measurements, you will be able to store the new position.

### Storing the Shot

After you make your measurements, you will be able to store the new point. Press the **Store Point** button to store the point.

### Raw File Record

In the raw file the OF records represent the measurements that were made. The SS record is the record that was used to compute the coordinate point for the angle offset and will be a compilation of your two shots.

```
|OF,AR52.53170,ZE91.12240,SD9.5616      |
|OF,ZE91.12240,--Vert Angle Offset      |
|SS,OP1,FP2,AR52.53170,ZE91.12240,SD9.5616,--<No Desc>|
```

## Distance Offset

[Main Menu](#) | [Survey Methods](#) | [Distance Offset](#)

FieldGenius allows you to do a distance offset to specify an offset forward or backward along the line of sight, left or right, and vertically up or down.

When you choose distance offset command and take a measurement, you will see the following screen:

**Distance Offsets** 123 ?

Offsets viewed from the instrument  
 Offsets viewed from the prism

Forward Offset

Right Offset

Up Offset

All distances are with respect to the horizontal plane.

Store Point  Cancel



From this screen you can specify if the offsets are with respect to the instrument or prism.

- Offset buttons act as toggles, which allow you to easily define the direction the offset should be applied.
- A negative offset will automatically be converted to a positive value.
- The elevation of the point will be computed from your shot. This elevation will remain unchanged unless you specify a vertical offset.
- The distance is assumed to be horizontal.

### Forward / Back Offset

Enter the offset distance from the shot position to the new position.

### Right / Left Offset

Enter the perpendicular offset distance from the shot position to the new position.



### Up / Down Offset

Enter the vertical offset distance from the shot position to the new position.

### Store Point

After you have entered your offsets you can press the **Store Point** button to save the point

### Raw Record

A sideshot (SS) record will be computed to represent the shot. The new SS record will use the original observation plus any offsets defined in the distance offset screen.

```
|OF,AR55.00000,ZE90.00000,SD12.0000      |
|OF,HD1.5000,--Horizontal Distance Offset|
|OF,LR1.0000,--Left / Right Offset      |
|OF,VD0.0000,--Elevation Offset         |
|SS,OP1,FP6028,AR59.14110,ZE90.00000,SD13.5370,--|
```

**Note:** Offsets that are to the left, back or down will be stored in the raw file with a negative value.


## Manual Distance

[Main Menu](#) | [Survey Methods](#) | [Manual Distance](#)

Use this mode to shoot an observation where only the horizontal and zenith angles will be measured with the instrument. You will be then prompted to enter the distance.

When you set the measurement mode to manual distance and press the measure button the horizontal and vertical angles will be read from your total station. Since this is only measuring angles, you do not need to have a prism to shoot to.

Following this you will see a screen allowing you to enter a horizontal distance.

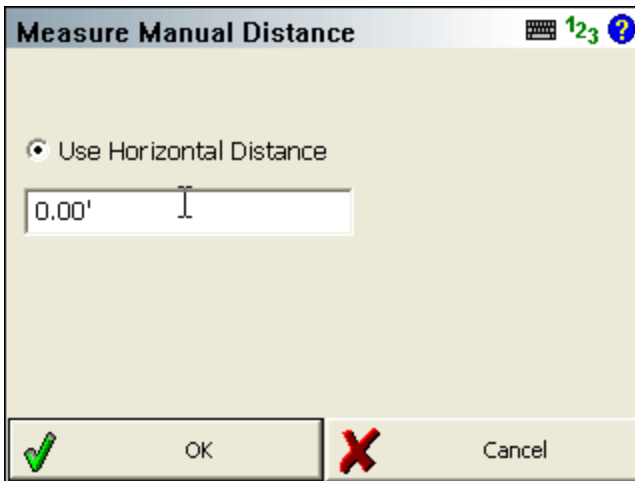

**Measure Manual Distance** 123 ?

Use Horizontal Distance

0.00'


OK Cancel

Press **OK** to save the point. You will now see the measurement info screen.  
A regular sideshot or traverse record will be created in the raw file.

## Manual Entry

[Main Menu](#) | [Survey Methods](#) | [Manual Entry](#)

When you set the measurement mode to manual entry on the instrument toolbar you will be required to manually input your measurements. When you press the measure button you will see the following screen:

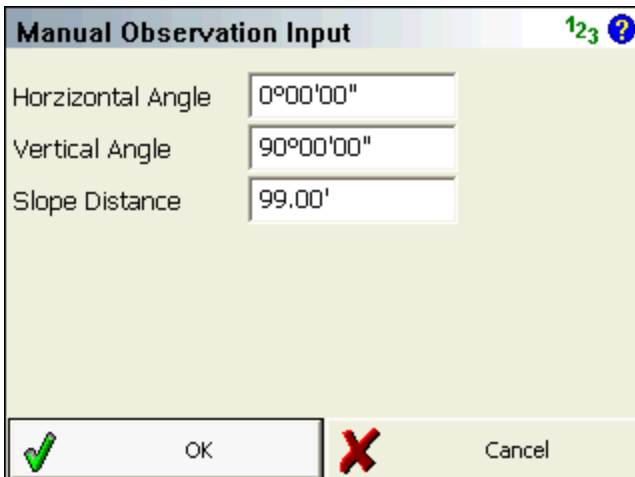

**Manual Observation Input** 123 ?

Horizontal Angle 0°00'00"

Vertical Angle 90°00'00"

Slope Distance 99.00'

OK Cancel

Press **OK** to Store the point.

A normal sideshot or traverse record will be written to the raw file just as if you shot it with a total station.


**Tip:**

You can also use the Manual Entry mode for repeating your last shot. If you have previously taken a measurement, then the angle and distance values on this screen will default to those of your previous shot.

## Two Line Intersection

Main Menu | Survey Methods | Two Line Intersection

The two line intersection command is used to locate the corner of an object, whose corner can not be directly measured. Two intersecting lines will be defined by four measurements, two shots on each line. The intersection of these two lines will define the corner of the object. This routine is intended to be used with a reflectorless total station.

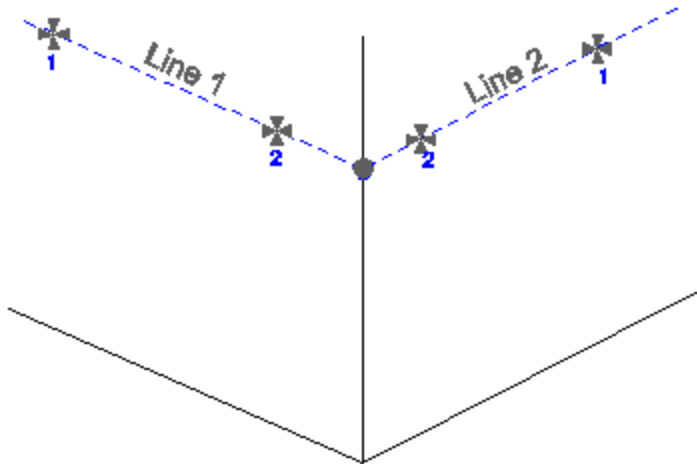

### Measure Points

When you start the two line intersection command, you will see an empty list. Each row represents a measurement to a point on one of the two lines needed to compute the intersection.

Highlight the row that you would like to make a measurement for and simply press the **Measure** button to begin the measuring process.

If you need to redo a measurement, simply highlight it in the list and press the measure button.

### Notes:

1. You can shoot the points in any order you like, FieldGenius will determine what direction to go in to compute an intersection
2. The northing and easting values for the new point will be computed using the intersection of the two lines.
3. The two lines you define will rarely intersect at exactly the same point. The elevation of where the lines intersect will be averaged, and used as the z value for the new point.

**Two Line Intersection** 123 ?

Highlight a point and press the measure button to record an observation.

Point	Horizontal Angle	Vertical Angle
Line 1 - Pnt 1	272°27'03.0"	49°24'56.0"
Line 1 - Pnt 2	339°07'04.0"	63°38'59.0"
Line 2 - Pnt 1	47°03'37.0"	75°26'09.0"
Line 2 - Pnt 2	24°16'52.0"	72°56'40.0"

← [ ] →

Measure
Store Pnt
X
Close

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

## Store the Point

Once you've made measurements to the four points that will define the two intersection lines, you can press the Store Point button. This will store a point in the map screen, store a point in the database as well as record information to the raw file.

## Raw File

Everything about the intersection is stored in the raw file.


```

--Two Line Intersection
--HI1.340,HR0.000,AR280.55220,ZE81.15170,SD6.8350,--Pnt 1 of Line 1
--HI1.340,HR0.000,AR276.59380,ZE81.05590,SD6.4400,--Pnt 2 of Line 1
--HI1.340,HR0.000,AR287.18580,ZE81.13350,SD6.7960,--Pnt 1 of Line 2
--HI1.340,HR0.000,AR296.06280,ZE80.14520,SD6.0940,--Pnt 2 of Line 2
|SP,PN3,N -0.0039,E -0.0060,EL0.5325,--
  
```

## Line - Angle Offset

[Main Menu](#) | [Survey Methods](#) | [Line - Angle Offset](#)

The line-angle offset command is used to define two points that will be used to establish a reference line then measure an angle that intersects this reference line, and FieldGenius will automatically compute the coordinate at the intersecting point.

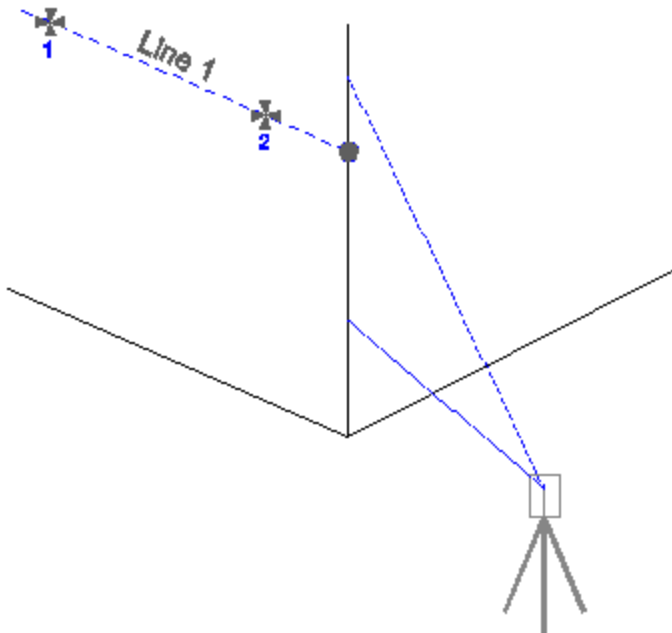

An example of where you might use this is to locate the corner wall of a building. Simply shoot two points on one of the walls, then turn the instrument so it is pointing anywhere along the corner of the building. This command is intended to be used with reflectorless total stations.

### Measure Points

When you start line angle offset command, you will see an empty list.

Highlight the row that you would like to make a measurement for and simply press the **Measure** button to begin the measuring process.

If you need to redo a measurement, simply highlight it in the list and press the measure button.

**Notes:**

1. You can shoot the points in any order you like, FieldGenius will determine what direction to go in to compute an intersection
2. The northing and easting values for the new point will be computed using the intersection of the line and the angle that was read.
3. The z value for the new point will be computed using the projected elevation along the reference line to the point where an intersection is computed.

**Line - Angle Offset** 123 ?

Highlight a point and press the measure button to record an observation.

Point	Horizontal Angle	Vertical Angle
Line - Pnt 1	358°32'26.0"	75°51'37.0"
Line - Pnt 2	19°40'52.0"	75°26'50.0"
Angle Offset	24°22'49.0"	75°26'52.0"

<

>

Measure
Store Pnt
X
Close

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

## Store the Point

Once you've made your measurements that will be used to compute the intersection, you can press the **Store Point** button. This will store a point in the map screen, store a point in the database as well as record information to the raw file.

## Raw File

Everything about the intersection is stored in the raw file.

```

--Line - Angle Offset
--HI1.340,HR0.000,AR280.55530,ZE81.12550,SD6.8330,--Pnt 1 of Line
--HI1.340,HR0.000,AR277.37420,ZE80.47010,SD6.5020,--Pnt 2 of Line
--HI1.340,HR0.000,AR283.46460,ZE86.15500,--Angle Offset
SP,PN4,N -0.0050,E 0.0051,EL0.5761,--


```

## Line - Distance Offset

Main Menu | Survey Methods | Line - Distance Offset

The line distance offset command is used to define two points that will be used to establish a reference line. Once the reference line is established you can then specify offsets along the reference line to the new point.

This is a very powerful offsetting tool that can be used in a lot of different situations.

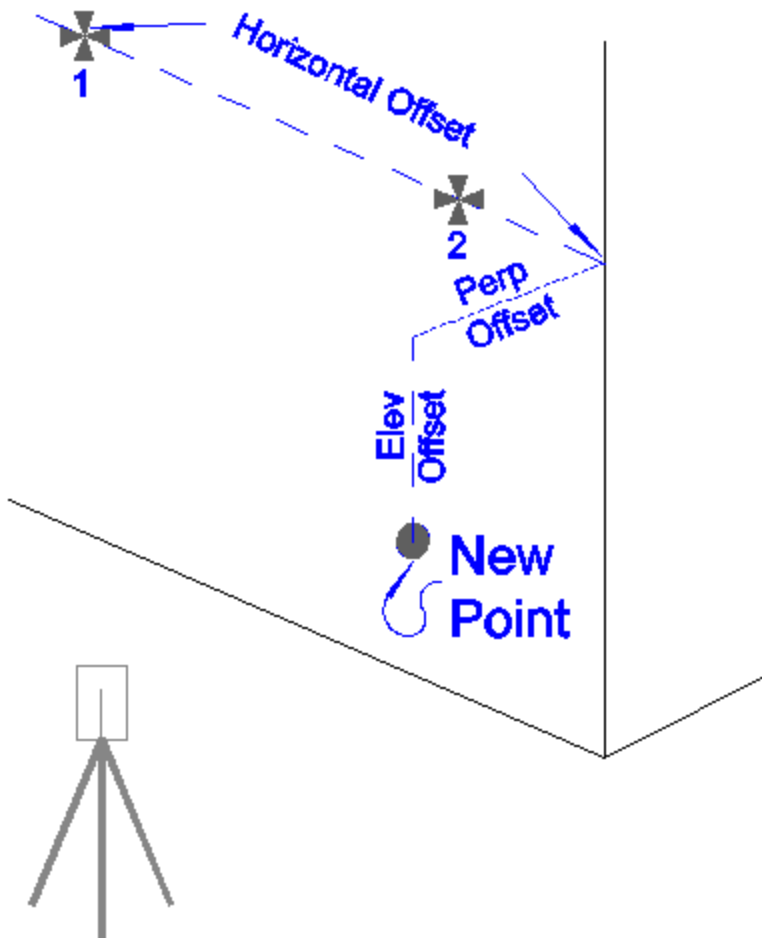

When you define your reference line, there are three types of offset that can be applied.

You can define a horizontal offset, a perpendicular offset and a vertical (elevation) offset. Each offset button is a toggle that allows you to toggle how the offset is to be applied in relation to the reference line.

When you define the offset direction, you can then enter in the value that you want to offset by.

If the horizontal offset remains set to zero, perpendicular or elevation offset will be applied in relation to point one on the reference line.

---

## Offsets

### Horizontal Offset

The horizontal offset can either be left or right of the first point on the reference line. From the total station's perspective, if the new point is to the right of point 1, then you would use the Horz Offset Right of Pnt 1. If it is to the left, then logically, it would be a left offset so you would use the Horz Offset Left of Pnt 1 setting.

### Perpendicular Offset

The perpendicular offset is a horizontal distance applied perpendicular to the reference line. From the total station's perspective, when moving perpendicular from the reference line, if the new point ends up being closer to the total station, then you would set the perpendicular offset to Perp Offset Towards Inst. Alternatively, if the new point ends up being farther from the total station, then you would use the Perp Offset Away From Inst.

### Elevation Offset

This is the vertical offset from the reference line to the new point. If the new point is above the reference line, then you would set this to Elev Offset Up. If the new point is below the reference line you would set it to Elev Offset Down.

---

## Measure Points

When you start line angle offset command, you will see an empty list.

Highlight the row that you would like to make a measurement for and simply press the **Measure** button to begin the measuring process.

If you need to redo a measurement, simply highlight it in the list and press the measure button.

### **Notes:**

1. The northing and easting values for the new point will be computed using the horizontal and perpendicular offsets defined by the user. These horizontal offset is referenced to point 1 on the reference line. The perpendicular offset is a perpendicular offset from the reference line.
2. The z value for the new point will be computed using the projected elevation along the reference line, plus or minus any elevation offsets defined by the user.




Point	Horizontal Angle	Vertical Angle	Σ
Line - Pnt 1	357°09'12.0"	81°12'25.0"	2
Line - Pnt 2	353°50'43.0"	80°46'59.0"	2

Horz Offset Right of Pnt 1	2.00'
Perp Offset Away From Inst	0.00'
Elev Offset Up	0.00'

Measure	Store Pnt		Close
---------	-----------	-----------------------------------------------------------------------------------	-------

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

## Store the Point

Once you've made your measurements that will be used to compute the intersection, you can press the **Store Point** button. This will store a point in the map screen, store a point in the database as well as record information to the raw file.

## Raw File

Everything about the intersection is stored in the raw file.

```

--Line - Distance Offset
--HI0.000,HR0.000,AR357.09120,ZE81.12250,SD22.4114,--Pnt 1 of Line
--HI0.000,HR0.000,AR353.50430,ZE80.46590,SD21.3255,--Pnt 2 of Line
--Horizontal Offset: 2.000
--Perpendicular Offset: 0.000
--Elevation Offset: 0.000
SP,PN1018,N 123.5558,E 100.2931,EL103.4035,--EV2


```

## Example




The top corner in a closet needs to be located, but it isn't visible from the total station.

So the user lays a hand tape on the floor, with the start of the tape located at the bottom corner of the closet, directly below the point that needs to be recorded. The direction of the tape is then laid out such that two measurements can be made on the tape.

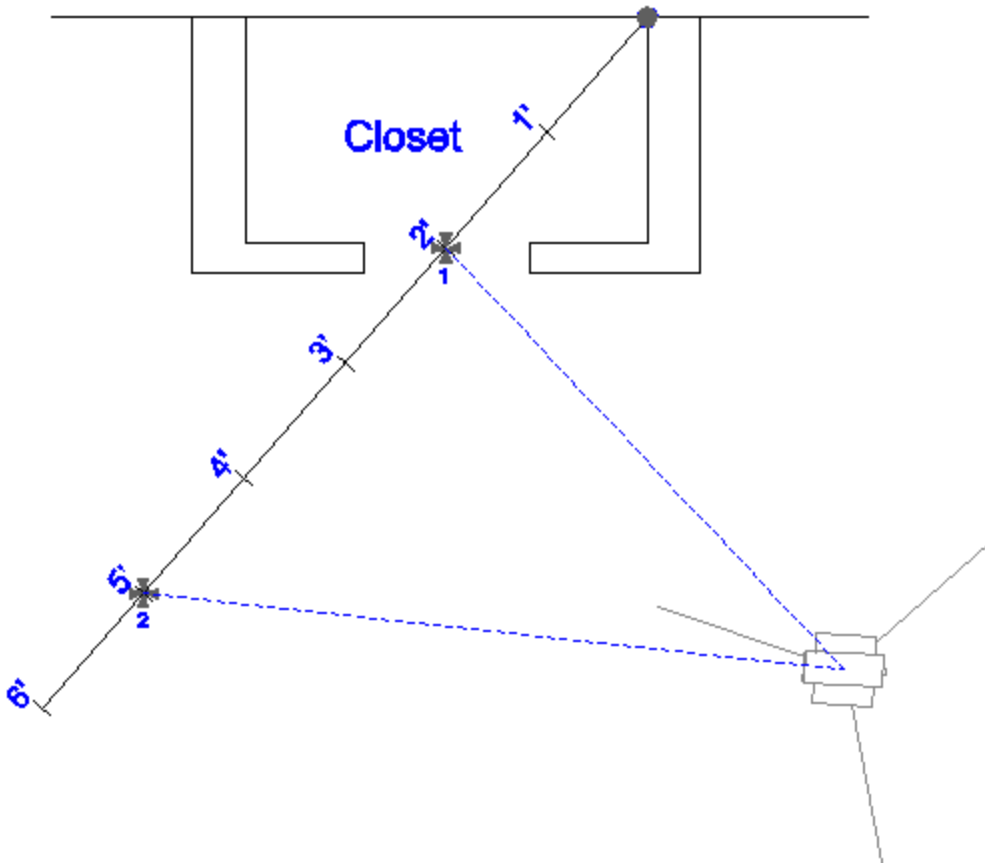Essentially, the tape now becomes the reference line. Two shots are taken, one at the 2 foot mark, and the other at the 5 foot mark.



After you take your two measurements, all you need to define is the offset distances. In this example, the corner is two feet to the right of the first measurement (point 1), and 8' up from the floor. After you define the offset directions and offset amounts, you can press the **Store Pnt** button to store the new point.

**Line - Distance Offset**   

Highlight a point on the line and press the measure button to record an observation. All offsets are respect to Point 1.


Point	Horizontal Angle	Vertical Angle	Σ
Line - Pnt 1	356°23'58.0"	85°54'35.0"	2
Line - Pnt 2	350°02'09.0"	85°33'33.0"	2

Horz Offset Right of Pnt 1   
 Perp Offset Away From Inst   
 Elev Offset Up

## Line - Perpendicular Point

[Main Menu](#) | [Survey Methods](#) | [Line - Perpendicular Point](#)

This offset command is used to define two points that will be used to establish a reference line. Once the reference line is established, you can specify a point that will be used to compute a perpendicular intersection from the point to the reference line. The point can either be shot or you can select an existing point from your scene database or map.

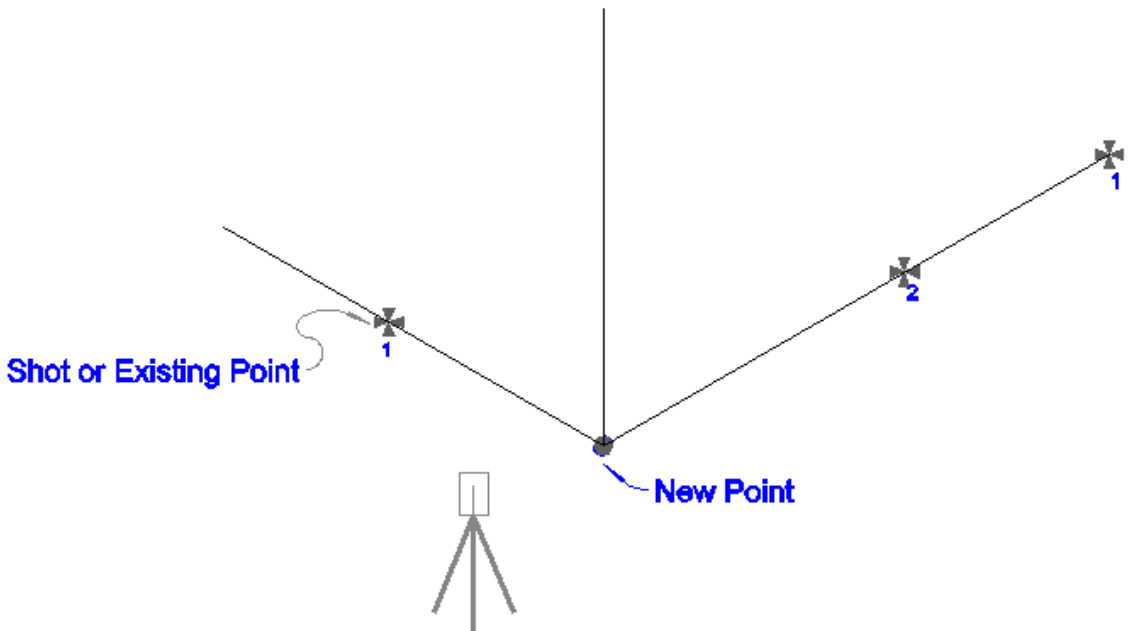

An example of where you could use this is to pick up the corner of a building, whose corner can not be scene from the total station. You could take two shots on one wall to define the reference line, and then take another shot on the intersecting wall. A perpendicular intersection will be computed, which in this case would be the corner of the building.

## Measure Points


When you start the command, you will see an empty list.

Highlight the row that you would like to make a measurement for and simply press the **Measure** button to begin the measuring process.

If you need to redo a measurement, simply highlight it in the list and press the measure button.

### Notes:

1. The northing and easting values for the new point will be computed by computing a perpendicular intersection between the reference line and a point defined by the user.
2. The z value for the new point will be computed using the projected elevation along the reference line to the point where a perpendicular intersection occurs.

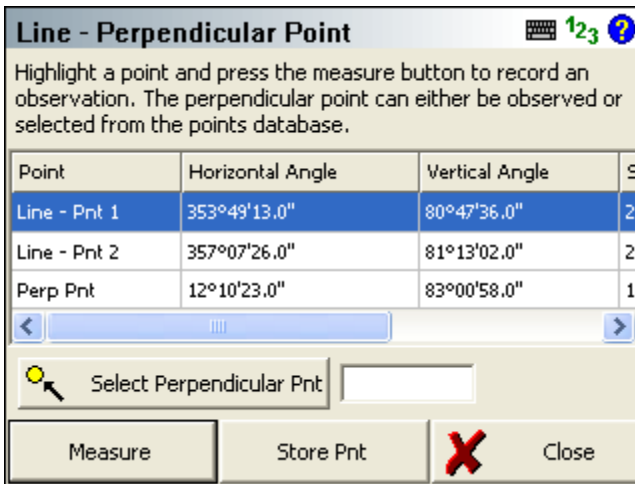

**Note:** You can increase the size of the text shown in the grid by setting the Text Size option in the [Options screen](#).

## Select Perpendicular Point

You can define the perpendicular point one of two ways. The first is to simply take a measurement that will define the perpendicular point. The shot is only used to make an intersection, a point isn't stored at the measurement location.

The other method is to choose an existing point that exists in your scene. Press the Select Perpendicular Pnt button to select a point.

## Store the Point

Once you've made your measurements and defined a perpendicular point that will be used to compute the intersection, you can press the Store Point button. This will store a point in the map screen, store a point in the database as well as record information to the raw file.

## Raw File

Everything about the intersection is stored in the raw file. In the following example, if you shot the perpendicular point you will see a third shot that records the measurement.

```

|--Line - Perpendicular Point
|--HI1.340,HR0.000,AR353.49130,ZE80.47360,SD21.3386,--Pnt 1 of Line
|--HI1.340,HR0.000,AR357.07260,ZE81.13020,SD22.4245,--Pnt 2 of Line
|--HI1.340,HR0.000,AR12.10230,ZE83.00580,SD19.8819,--Perpendicular Pnt
|SP,PN6,N 123.3028,E 100.0209,EL104.7737,--RM
    
```

If the perpendicular point exists in your scene and you selected it using the point chooser, then you will see a store point recorded as a note. The last store point is the new point that was computed.

```
--Line - Perpendicular Point
--HI1.340,HR0.000,AR353.49520,ZE80.46560,SD21.3419,--Pnt 1 of Line
--HI1.340,HR0.000,AR357.07330,ZE81.12210,SD22.4147,--Pnt 2 of Line
--SP,PN7,N 119.2906,E 104.1611,EL103.7580,--Perpendicular Pnt
SP,PN8,N 123.3107,E 100.0504,EL104.7751,--SCR
```

## Trilateration

[Main Menu](#) | [Survey Methods](#) | [Trilateration](#)

This routine allows you to trilaterate the position of new points by observing their distances from two known positions. The two known points will make up a baseline, from which a distance-distance intersection will be calculated to determine the position of each new point.

The primary use of this routine is for GPS users so they can locate inaccessible points. They can locate two points with GPS, and then use the Trilateration routine to locate the inaccessible points.

This routine can accept distances measured with the Leica Disto.


New Pnt	Pnt 1 Dist	Pnt 2 Dist	Side	Saved

### Static Points (Baseline)

Select your two baseline points, from which you will be observing the distances to the new points.

### Add Point

Use this to add a new unknown point to solve for. When you press this, you will be prompted for the new point number and description, and whether it is on the left or right side of the baseline.

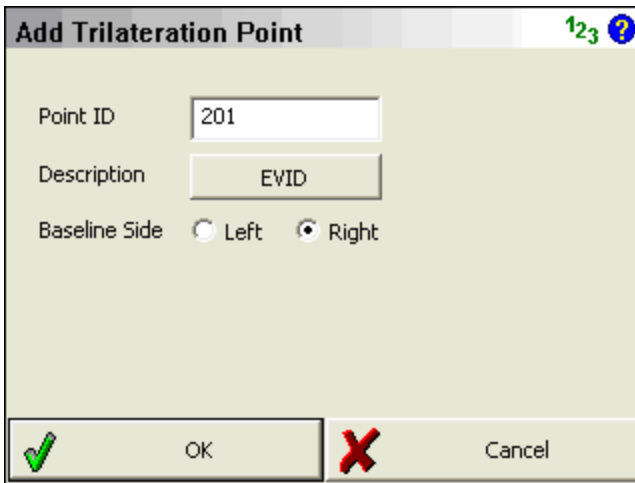

The dialog box is titled "Add Trilateration Point" and has a status bar in the top right corner showing "123" and a question mark icon. It contains three input fields: "Point ID" with the value "201", "Description" with the value "EVID", and "Baseline Side" with radio buttons for "Left" and "Right", where "Right" is selected. At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

### Save Point


This saves the selected New Point into your project.

### Switch Side

This toggles the selected New Point to the Left or Right side of the baseline.

### Map View

This takes you to a map view showing your baseline, the distance measured from each point, and the calculated position of the new point.

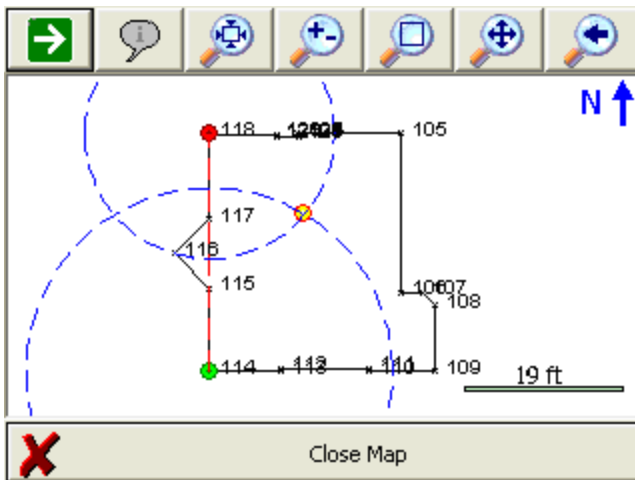

If desired, you can press the World View button on the [Display toolbar](#) to hide unnecessary data.

### Measure from Point 1

Press this to record the distance from Point 1 of your baseline to the selected New Point.

### Measure from Point 2

Press this to record the distance from Point 2 of your baseline to the selected New Point.

## Observe Benchmark

[Main Menu](#) | [Survey Methods](#) | [Observe Benchmark](#)

Use this to check your current setup elevation or use it to establish an elevation for your setup. When you start the command you will be taken to the main interface and you will note that the measure mode will be set to **Benchmark**. If you need to cancel the operation you can do it by pressing the measure mode button and choose the **Cancel Benchmark** button.

When you're ready to record the shot press the **Measure** button on the instrument toolbar. You will then see the benchmark shot screen.

Benchmark Method

Elevation  Point

BM Elevation 100.000m

BM Point

HI 1.523m HT 1.500m

New Occupy Elevation: 99.977m

Old Occupy Elevation: 100.000m

Elevation Difference: -0.023m

Set Elevation Cancel

## Calculating an Elevation

### Benchmark Method: Elevation

Use this option if you want to manually enter the know elevation for the point you're basing your shot on. The elevation you enter will be used to calculate the elevation of the current setup. The difference in the current and calculated elevations will be displayed towards the bottom of the screen. You can enter in your know elevation in the **BM Elevation** field.



### **Benchmark Method: Point**

Use this option if you want to base the calculated elevation on an existing point in your project. The elevation of the point you choose will be used to calculate the elevation of the current setup. The difference in the current and calculated elevations will be displayed towards the bottom of the screen. You can choose your point by using the point chooser button.

### **HI**

This is where you would enter your height of instrument. Note this value will be used to compute the new instrument elevation.

### **HT**

This is where you would enter your height of target. Note this value will be used to compute the new instrument elevation.

### **Set Elevation**

Pressing this button will update your current setup elevation with the one calculated by the Benchmark Shot routine. You will be asked to confirm that you want to update the elevation. Two records will be written to the raw file, a remote elevation (RE) and a store point (SP) record.

```
|RE,OP1,FE0.000,ZE90.00000,SD10.0000,--Remote elev      |  
|SP,PN1,N 5001.0000,E 4978.0000,ELO.0240,--           |
```

### **Cancel**

 
This will exit the routine and not save any changes.

## **Add Invert**

### **Main Menu | Survey Methods | Add Invert**

If you've manually measured a distance to an invert, you can have FieldGenius compute a point with a computed invert elevation.

When you start the command you will see the Invert Toolbar appear towards the bottom of your main screen.

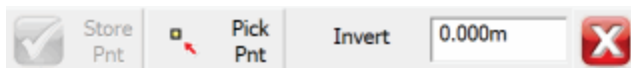

First you need to specify the point that will be referenced to compute the invert elevation. You can do this by using the point chooser button.

Now enter the measured distance to the inverse. For example if your measurement was 5.5', FieldGenius will subtract this from the reference point's elevation. Entering a negative value will cause it to be added.

Press **Store Point** to create and save a point with the calculated invert distance. This point will have the same northing and easting value as the reference point.

**Note:**

While the invert toolbar is open, you can continue entering invert measurements or choose different reference points.

## Raw File

When you save the point, an offset and store point record will be created.

```
--OS,OP7,FP8,ND0.000,ED0.000,LD5.000
SP,PN8,N 935.976,E 1232.356,EL5.000,--<No Desc>
```

## Vertical Plane Projection


[Main Menu](#) | [Survey Methods](#) | [Vertical Plane Projection](#)

This function is for locating multiple points on a vertical plane defined by two previously measured points. The program will calculate the distance for each shot taken to an un-measurable position so that coordinates can be generated for the shot.

An example of how you could use this would be to shoot two corners of a wall to define a vertical plane. Then you could sight four corners for window on the second floor and FieldGenius will use the HA and VA values and compute the intersection with the vertical plane. Once the intersection is computed, the point will be stored.

## Function

When the command is started you will see a screen that will allow you to specify the points that will form the baseline for the vertical plane.

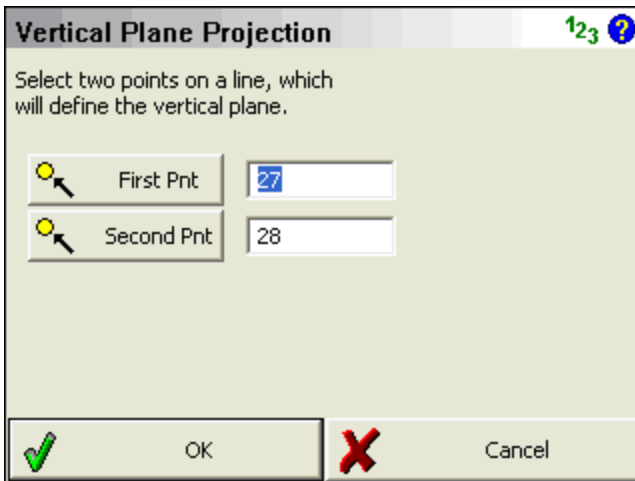

**Note:** You need to measure and store the points that will be used to define the vertical mapping plane, prior to starting the Vertical Projection command.


When ready to continue, press the **OK** button.

You will now be in the Vertical projection mode which will be indicated by the measurement mode button on the instrument toolbar. To begin calculating points on the vertical plane, you need to point the total station at the new point you want to create. To complete the shot, press the measure button, and then store the point.


**Note:** You do not need to use a prism when measuring points on the vertical plane. Simply point the instrument at the point you want to create.

Since vertical planes represent 3D data, it is sometimes necessary to rotate your perspective of the project to help you see the point you're computing on the vertical plane.

Press the 3D View button on the [display toolbar](#) which will open the 3D toolbar. If you press the Planar View button, your scene will be rotated so it matches your perspective. For example, a vertical plane was defined by points 27 and 28. When the planar view option is used, you can see your work in a 3D perspective. You can now see the 4 measurements (points 500 – 503) that were made to record the position of a window on the vertical plane.

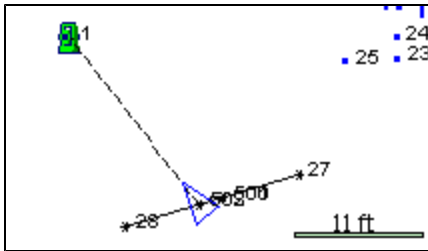


Plan View

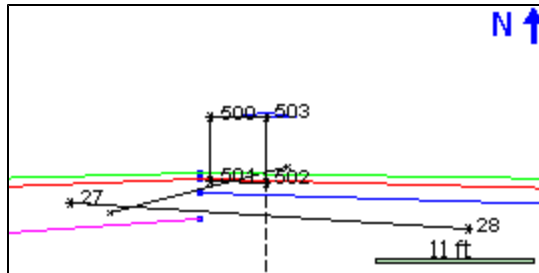

3D Perspective

You can also hide objects that are behind the vertical plane from viewing by pressing the **Vert Grid** button. In the example below, you will see that after this is turned on, some of the line work is hidden from view.

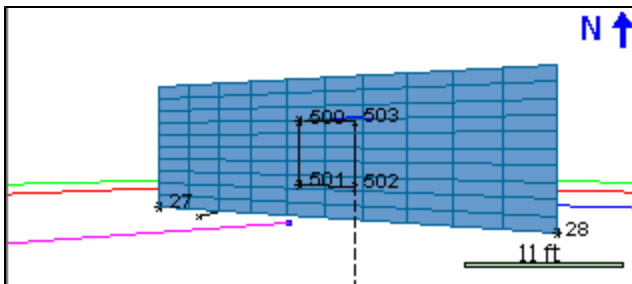

To exit this routine, simply switch to a different measurement mode.

## Raw File

Each point that is computed on the vertical plane will also have a computed sideshot stored in the raw file.

```
--VS, PA27, PB28
|SS, OP1, FP503, AR142.24510, ZE78.37170, SD17.8888, --VERTICAL
```

For each shot you record you will see a note before the shot in the raw file indicating which points were used to define the vertical plane.

## Special Notes

Vertical projection measurements will automatically be recognized by your MicroSurvey CAD or inCAD desktop software. Please refer to the MicroSurvey CAD or inCAD help file for more information regarding importing vertical projections.

## Point Scanning

[Main Menu](#) | [Survey Methods](#) | [Point Scanning](#)

FieldGenius supports point scanning which allows you to create a point cloud of data. To use this routine you need a reflectorless instrument that has servo motors.

**Point Scan** 123 ?

Horizontal Range	Vertical Range
Left Boundary 0°00'00"	Top Boundary 60°00'00"
Right Boundary 30°00'00"	Bottom Boundary 120°00'00"

Resolution: 1°00'00"

Approximately 1891 points to scan.

Ignore all scanning errors.

Start Scan    Measure Range    Close

To start, you will be asked to define a scan area by pressing the Measure Range button and pointing the instrument at the Bottom-Left and Top-Right corners of the area you want to confine the scanning to.

Once the scan area is defined, you can define the scan resolution by using an angular value. For example if you set it to 0°30'00", FieldGenius will create a pattern confined to the limits you defined, and scan at 30 minute intervals both horizontally and vertically. Once you've defined the scan area and resolution, FieldGenius will display an estimate of how many points will be stored.

You also can control how FieldGenius deals with measurement errors while scanning. If you turn on "**Ignore all scanning errors**", FieldGenius will ignore measurement errors and continue without interruption. If you don't turn this on, FieldGenius will stop and display a message allowing you to stop the scanning process, or continue on with the next measurement.

Press the **Start Scan** button to select the desired reflectorless EDM Mode and initiate scanning. FieldGenius will display an estimate of the time remaining for the scan to complete.

Points will be stored using the description defined in the map screen. The point number of the first point will be set to the "next available" id and will increment sequentially. The shots are stored in the raw file as sideshots so you have a record of the observations.

Upon completion, you will receive a summary showing the total number of successful measurements and errors received.




# SURVEY TOOLS MENU

## Survey Tools Menu

[Main Menu](#) | [Survey Tools](#)

This menu contains functions pertaining to the data in your project.

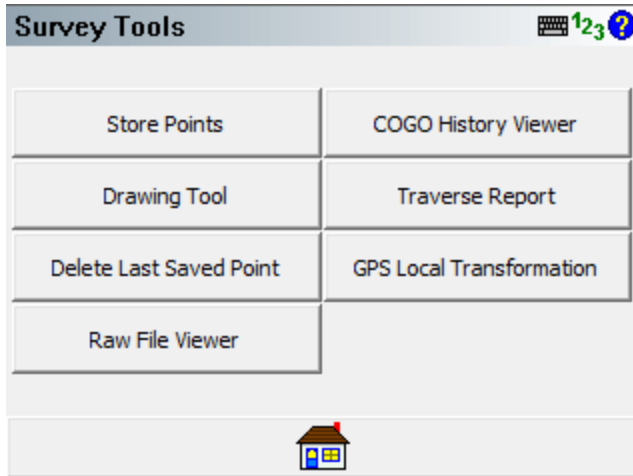

### [Store Points](#)

Use this to enter new coordinates into your scene's database. Please see the [Store Points](#) topic for more information.

### [Drawing Tool](#)

This starts up the [draw plan](#) tool.

### [Delete Last Saved Point](#)

Use this to "delete" up to ten of the last points that were saved. Please see the [DeleteLast Saved Point](#) topic for more information.

### [Raw File Viewer](#)

Use this to open a viewer that will display your current raw file. Please see the [Raw File Viewer](#) topic for more information.

### [COGO History Viewer](#)

Use this to display the results that were computed using the COGO commands. Please see the [COGO History Viewer](#) topic for more information.

### [Traverse Report](#)

Use this to generate a traverse closure report based on your traverse setups. Please see the [Traverse Report](#) topic for more information.

### [GPS Local Transformation](#)

Use this to specify transformation parameters that can be used to localize GPS data or to perform a transformation on your points collected with conventional survey methods. Please see the [Transformation Setup](#) topic for more information.

### [Point Pattern](#)

Use this to create and apply point patterns for example for bolt plates or pillars.

## **Store / Edit Points**

[Main Menu](#) | [Survey Tools](#) | [Store Points](#)

This is a multi use function that is used by many parts of the program. Essentially any time a point needs to be stored or edited, it will done via the store point screen. Depending on what it is you're doing, certain parts of the dialog will be disabled or not editable. Following is an explanation of what you should expect.

### [Measured or Calculated Points](#)







Points that were measured or computed via any of our commands will automatically have their Survey Role set to **measured**. When these types of points are edited, only the description can be changed; the point id and coordinate values will be non editable. The reason we do this is so the coordinates don't accidentally get altered. You can check a point's survey role by pressing the Advanced button. You can override this by changing the survey role type to "null".

Certain commands in FieldGenius are allowed to ignore the measured survey role, such as the Rotate/Translate/Scale command or the overwrite option that is triggered when you try to store a point using a point id that already exists in the project.

### [Manually Entered or Imported Points](#)

Point that have been manually entered or imported from an ASCII file for example, will have their Survey Role set to **null**. Points that have a Survey Role set to null can be edited except for the point id.



Store Point		  	
Point ID	<input type="text" value="14"/>	  	
Description	<input type="text"/>	List	<input type="button" value="Review Measurement"/>
Northing	<input type="text" value="5523882.638m"/>	<input type="button" value="GIS Attributes"/>	
Easting	<input type="text" value="312304.181m"/>	<input type="button" value="Advanced"/>	
Elevation	<input type="text" value="393.678m"/>		
Note	<input type="text" value="Tap to enter note"/>		
Prism Hgt	<input type="text" value="0.000m"/>		
<input checked="" type="checkbox"/> Store SS		<input checked="" type="checkbox"/> Store TR	
		<input checked="" type="checkbox"/> Cancel	

### Point ID

Enter in the point number you would like to assign to the point. Note that by default it will display the next available point number. If you're editing an existing point, this field will not be editable.

### Line/Spline/Arc Buttons



This is used to toggle on and off the draw lines function. When turned on as you shoot your points in the drawing they will be connected with a line. This button can only be used if you're storing a point after a measurement.



This is used to toggle on and off the draw curvy lines button. This function will draw a best-fit curve through your points as you shoot them. This button can only be used if you're storing a point after a measurement.



3-Point arcs can be started using the same method as for a Line or Curvy Line. This button can only be used if you're storing a point after a measurement.

### Description

This is where you can enter a description for your point. This field is associated with your Automap library so as soon as you start typing in descriptions, a list appears displaying descriptions that match what you've entered. Simply press your **Enter** Key to accept your entry. You can also have Field-Genius notify you when the description you've entered isn't in your Automap library. To do this you need to make sure you have the "**New Description Prompt**" toggle turned on in the [Options](#) menu.

### List Button

Press this to open the AutoMap Library screen. You will be able to choose the description that will be assigned to the point.

**Northing, Easting, Elevation**

Input your coordinate values in these fields when manually creating a new point using the add point function. If measuring a point, you can not manually enter or edit coordinates.

**Note Button**

Press this to enter a note or record an audio note for the point. See the [Notes](#) topic for more information.

**Prism Hgt (Height) / GPS Hgt (Height)**

When storing a point measured by a total station, you can set the Prism Height. When storing a point measured by a GPS receiver, you can set the true or measured Antenna Height.

**Review Measurement Button**

This button is available when you have taken a measurement, and can be used to review the distance and angles measured.

**GIS Attributes Button**

If you loaded a feature list, then this button will be enabled. It allows you to access the your [feature list](#) so you can edit feature attributes.

**Store Pnt (point) Button**

Press this to store the measured point.

**Store SS (side shot) Button**

Press this to store the point as a side shot. You would typically use this when not measuring traverse points. You will not see this button when measuring with GPS.

**Store TR (traverse) Button**

Press this to store the point as a traverse point. You would typically use this when the measured point belongs to a traverse. You will not see this button when measuring with GPS.

**Cancel Button**

Press this to cancel the measurement.

**Advanced Button**

Use this button to add or edit advanced tags to your point. You will mainly use this to help you distinguish points that are exported when you use the XML export.

**DTM Attribute:** Use this to choose the DTM attribute that will be written to the database file. Ground is the default value, if you don't want the point used in FieldGenius's modeling commands, you can set the DTM value to Do not Include. If you export an XML file, this information will be exported.

**Survey Role:** Use this to edit the survey role for the point. By default points that are measured will have a role of Measured. Points with a Measured role type are read only when they're viewed with the store and edit screen. If you export an XML file, this information will be exported.

**Point Type:** Use this to enter a point type that will be written to the database file. If you export an XML file, this information will be exported.

**Geometry:** Use this to enter a geometry type that will be written to the database file. If you export an XML file, this information will be exported.

**Zone:** Use this to enter a zone number that will be written to the database file. If you export an XML file, this information will be exported.

## Drawing Tool

[Main Menu](#) | [Survey Tools](#) | [Drawing Tool](#)

[Line Toolbar](#) | [Pencil button](#)


[Point Toolbar](#) | [Pencil button](#)

This tool allows you to quickly draw a plan such as a pad or a building footprint into your project, and is typically used to recreate plans from a paper hard-copy. You can use this to either calculate new points, or to connect existing points that are already in your project.

You must have at least one point in your project before you can start, to define the starting position for your plan. If a point does not yet exist (for example if this is the first command you run in a new project), you will be prompted to store a new point before you can proceed.

## Line Mode

Use the Line draw mode to add straight line segments to your figure.

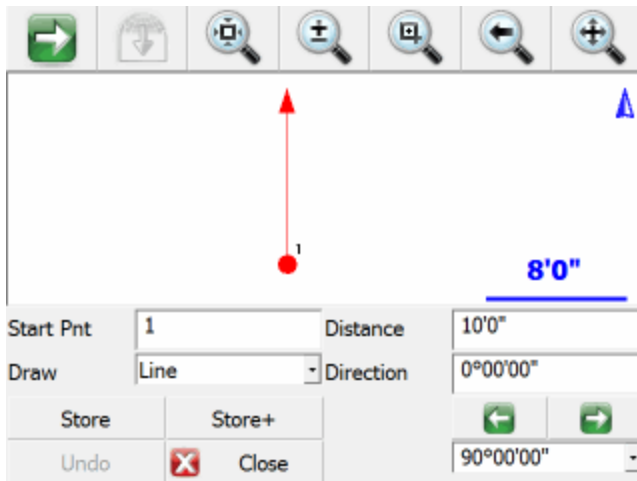

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue adding subsequent points/segments to your plan, you will see the Start Point field automatically advance for you.

### Distance

Specify the length of the line segment you wish to draw.

### Direction

Specify the direction (Azimuth or Bearing) of the line segment you wish to draw. The easiest way to do this is to use the right/left arrow buttons, which will increment/decrement the direction value by the amount shown in the pulldown list below the arrows. You can select a common angle from the choices in the list (90, 45, or 30 degrees), or you can type any value if you need to increment it by some other amount.

### Store

After you have defined the segment to add, press this to store the new point and line segment into your project.

### Store+

This does the same as the Store button, but you will see the [Store/Edit Point](#) screen. Use this to confirm or view the coordinates, or to specify a description.

---


## Point by Line Mode

This is the same as the Line mode, except that when you press Store or Store+ it will only store the point, without drawing the line segment.

---

## Arc Mode

Use the Arc draw mode to add arc segments to your figure.

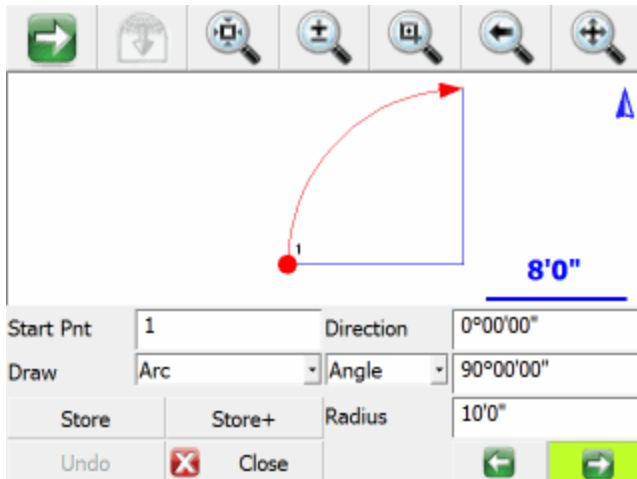

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue adding subsequent points/segments to your plan, you will see the Start Point field automatically advance for you.

### **Direction**

Specify the direction (Azimuth or Bearing) of the **tangent in** to the arc segment you wish to draw. This will default to either the direction of the previous line segment or the tangent out of the previous arc segment, so as long as your arc is tangential to the previous segment you will not need to change this value.

### **Angle / Chord Length / Arc Length**

Specify one of the three available methods to define your arc:

- Angle: Enter the interior delta angle of the arc.
- Chord: Enter the chord length of the arc.
- Arc: Enter the arc length of the arc.

### **Radius**

Specify the radius to define your arc.

### **Clockwise / Counter-Clockwise Arrows**

Use the Right/Left arrow buttons to define whether the arc rotates clockwise or counter-clockwise.

### **Store**

After you have defined the segment to add, press this to store the new end and radial points, and draw the arc segment into your project.

### **Store+**

This does the same as the Store button, but you will see the [Store/Edit Point](#) screen. Use this to confirm or view the coordinates, or to specify a description.

---


### **Point by Arc Mode**

This is the same as the Arc mode, except that when you press Store or Store+ it will only store the points, without drawing the arc segment.

---

### **Connect Points Mode**

This mode lets you draw lines/arcs by connecting points that already exist in your project.

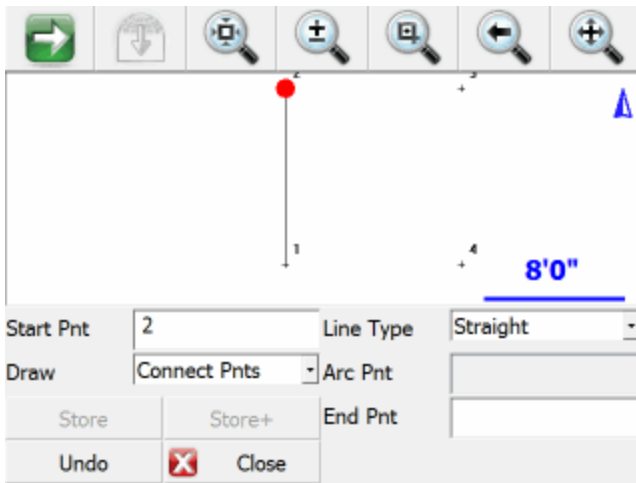

### Start Point

Specify the start point for the new segment.

For starting a new plan, this should be set to an existing point in your project, typically a corner that you will begin drawing the plan from.

As you continue connecting subsequent points to your plan, you will see the Start Point field automatically advance for you.

### Line Type

Specify one of the five available methods to define your next figure segment:

- Straight: this will draw a straight line between the specified Start Point and End Point.
- Arc (CW): this will draw a clockwise arc between the specified Start Point and End Point, with the specified Radial Point.
- Arc (CCW): this will draw a counter-clockwise arc between the specified Start Point and End Point, with the specified Radial Point.
- Arc (3Pnt): this will draw an arc (clockwise or counter-clockwise) between the specified Start Point and End Point, going through the specified intermediate Arc Point (any point directly on the arc, does not need to be the midpoint).
- Spline: this will draw a curvey line between the specified Start Point and End Point.

### Store / Store+

The Store and Store+ buttons are disabled for this mode, because new points are not being calculated for your project. The line or arc segment will be automatically drawn into your project after you specify

its parameters.

## Undo

Press the **Undo** button to Undo the last segment you computed, removing both the point and/or the line segment (as appropriate) from your project. You can undo multiple steps.

Note, there is no Redo function.

## Close

Press the **Close** button to exit from the Draw Plan command, and you will be returned to the [map screen](#).

## Delete Last Saved Point

[Main Menu](#) | [Survey Tools](#) | [Delete Last Saved Point](#)

Use this to delete the last point that was saved. When you delete a point, a record is written the raw file indicating which point was deleted. You can only delete up to the last ten points that have been stored.

When you select the undo command, you will be asked to confirm that you would like to delete the last saved point.

Press **Yes** to undo.

Press **No** to cancel.

The point is now removed from the project's map and database, but the original measurement data remains in the raw file.

## Raw File

Using the example from above, this is what you will see in the raw file.

```
|SS, OP34, FP36, AR270.00000, ZE121.16010, SD2.5060, --TABLE  
|DP, PN36
```


The first line is the shot to point 36. The last line is a delete point record which is used to remove the point from the database.

## Raw File Viewer

[Main Menu](#) | [Survey Tools](#) | [Raw File Viewer](#)




Use this button to open the raw file viewer. The raw file editor displays your scene's raw file and allows you to review it in an easy to read grid. For reference on the different raw file record types that FieldGenius uses you can refer to the [Raw File Record Types](#) topic for more information.

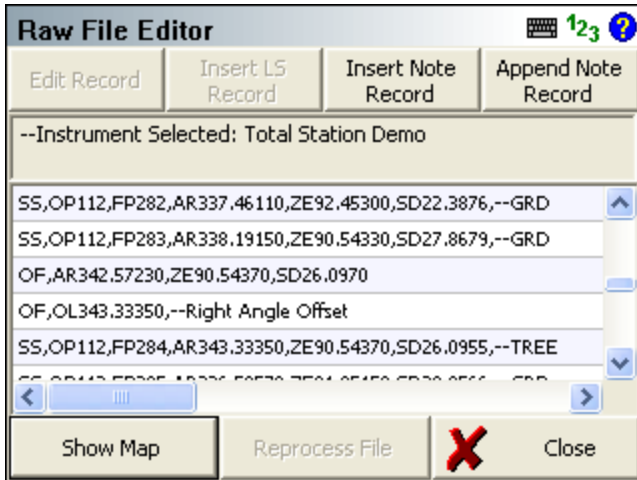

## Edit Record

To edit a record simply tap the line in the raw file that has the record you want to edit. Then tap on the edit button to start editing the record.

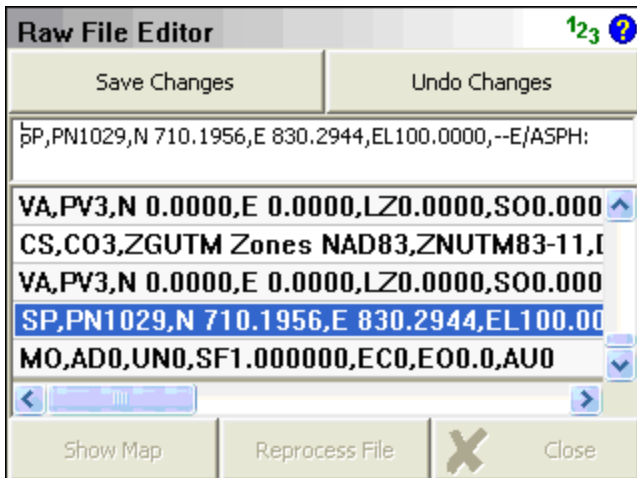

**Save Changes:** When you press the Save Changes button you will see the Raw File Edit screen which shows you the changes that will be made when you press the Yes button. Press No to cancel.

After you press yes, the record will be changed and we will also write the original one to the raw file as a comment and it will be prefixed with the word "Edited".

**Undo Changes:** Undo will ignore your changes and return them to the original values.

---

## Insert LS Record

The most common modification to the raw file is to insert a LS record. The LS record will be inserted above the highlighted row and a comment will be written as well to indicate that it was inserted.

---

## Insert Note Record

This will allow you to enter a [comment](#). The comment will be inserted above the current line you have highlighted in the grid.

---

## Append Note Record

This will allow you to enter a [comment](#). The comment will be appended to the end of the raw file.

---

## Reprocess File

After you have made your changes you can re-coordinate the raw file so the changes are displayed on the screen and saved in the project database.


**Note:**

When you re-coordinate the raw file it will process the whole file from beginning to end. This means if you have changed the coordinate information for a point there is a chance that it will be changed back to its original value if it was measured and recorded in the raw file.

---

## Show Map

This will change the raw file viewer to a split-screen display with a map view of your scene on half of the screen. When certain raw file records are selected, you will be shown the reference and backsight points, and the selected measurement record will be highlighted on the map.

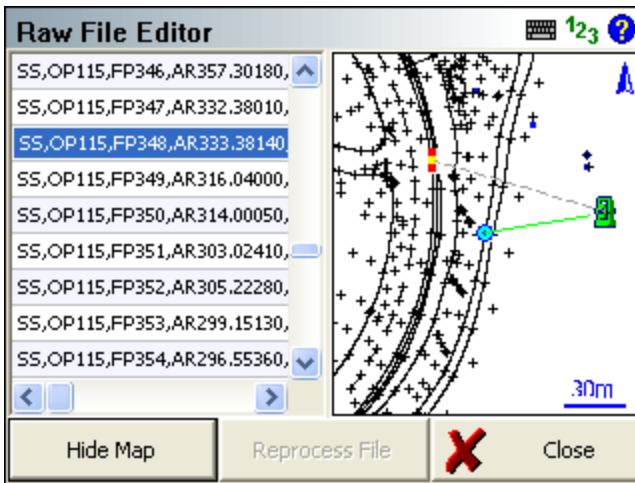

## Raw File Backup


When you open the Raw File Editor a copy of the original raw file will automatically be made and saved in your project directory. The file will be named rawfile\_bak#.raw, where the backup number increments with every backup file that is made. If you need to undo the changes you can close your project, re-open it and when the [Review Project Files](#) screen appears, use the raw file button to choose the backup file to load.

You can also exit FieldGenius and use a text editor to manually edit the names of the files.

## COGO History Viewer

[Main Menu](#) | [Survey Tools](#) | [COGO History Viewer](#)

When you use the COGO history command a viewer will open displaying the results of your COGO calculations. This is a read only file and no changes can be made to it. The file is saved in your project directory and is saved as CogoCalcs.txt

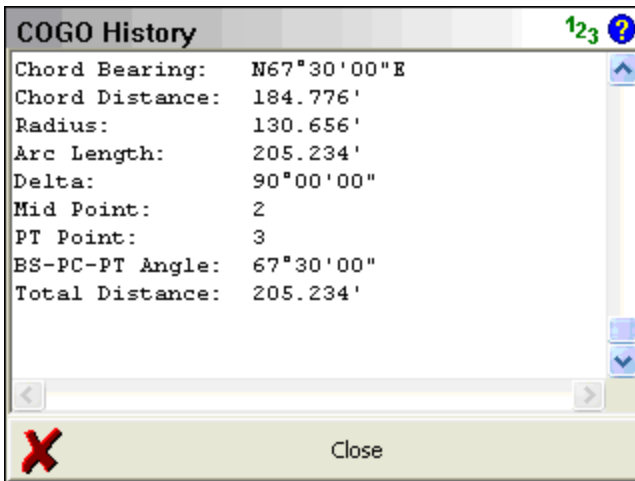

Both the [Traverse / Intersect](#) and [Inverse](#) commands will save information to this file, as well as [Areas](#), [Volumes](#), and various other calculations.

The size of the text can be set to normal or large using the "Use large info text" option in the [program settings](#).


## Traverse Report

### Main Menu | Survey Tools | Traverse Report

Use this to compute a traverse closure based on traverse points you've measured and recorded. The traverse report scans your raw file for traverse records, which appear with a TR record type. You can save your shot as a TR record by choosing the TR button when the Measurement Info screen appears. TR records are also useful when you use the [Setup Occupy Point](#) function because your last TR shot will now become the current setup point and the BS point will be set to the last setup point for you automatically.

You can also balance your traverse using an angle, compass and vertical balance routine. See the [Traverse Adjustment](#) topic for more information.

The following examples will show you the traverse scenarios that FieldGenius supports. The open triangles depict known or computed points. TR records indicate all the foresight shots that were measured and recorded, and the OC record indicate the points that were occupied. Finally, the BK record indicates the point that was used for the initial backsight.

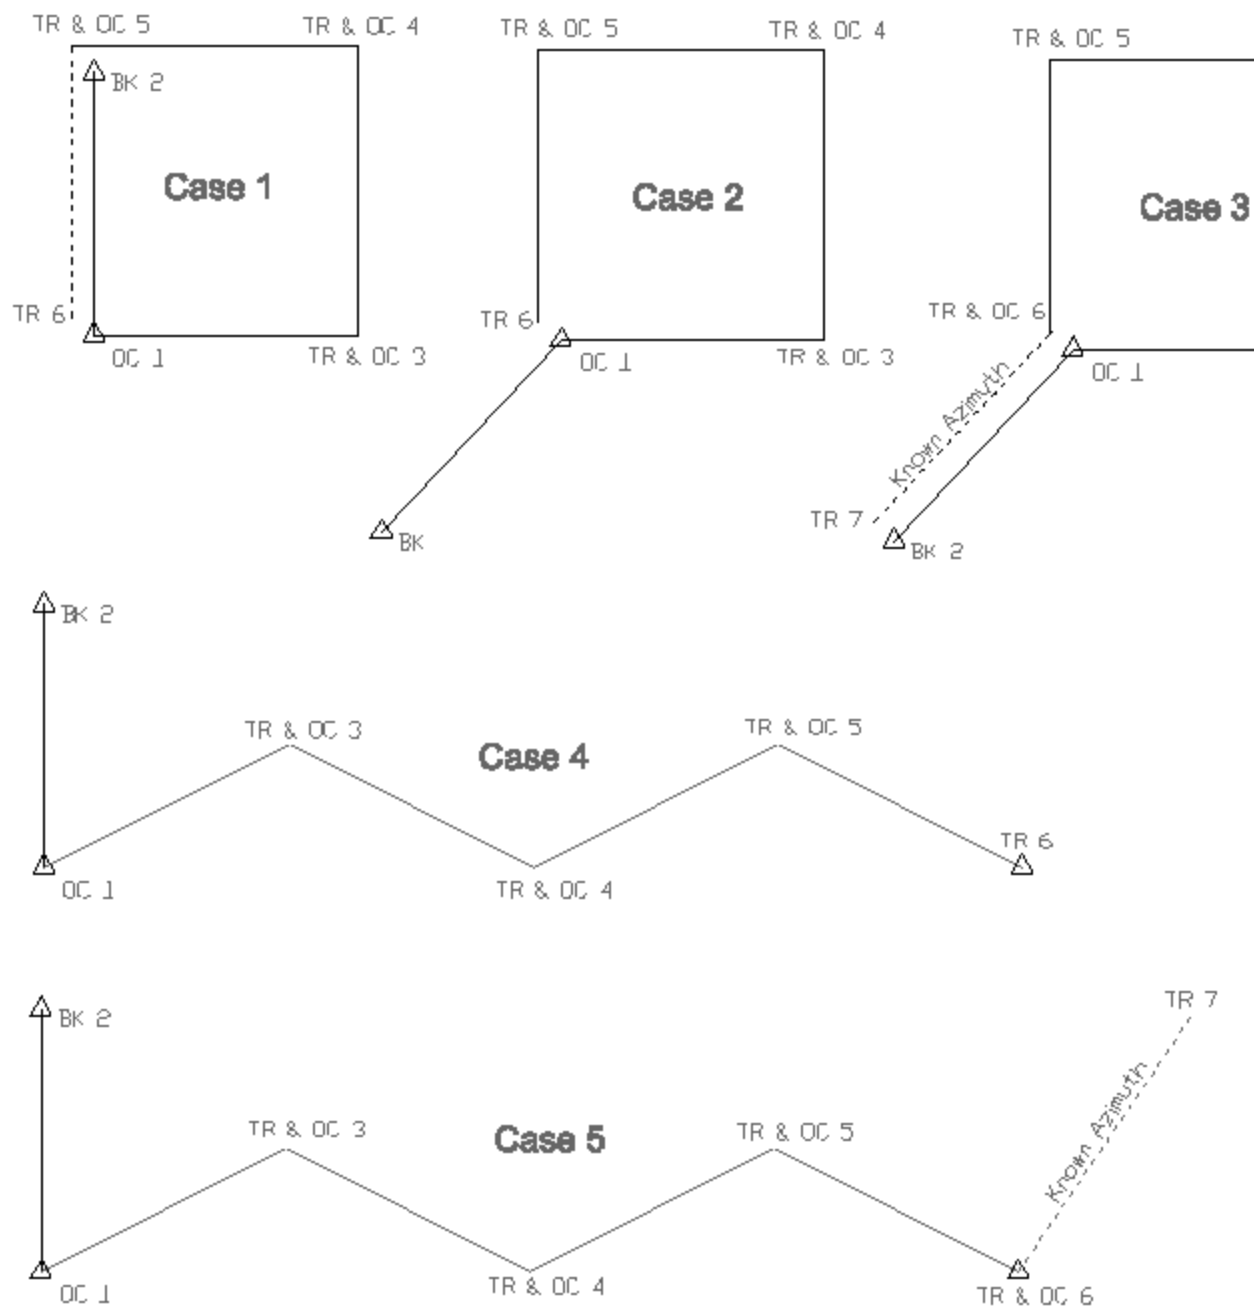

## Traverse Definition (Foresight Method)


If we use CASE 1 as an example the user first setup on point 1 and backsighted point 2. He then foresighted and setup on points 3 to 5 and closed the traverse by recording one more TR record to point 6. To compute the traverse report you go to the Main Menu / Survey and choose the **Traverse Report** button. When selected, you will see the following screen.

FieldGenius will automatically scan the raw file looking for the last TR foresight and the OC record that was used to measure the last foresight. It will then search for any point within a 3 meter radius and use it as the match or point that defines the original coordinates.

If more than one point is found in the 3 meter radius, it will use the one that is closest.

FieldGenius supports two closed traverse methods. Choose **Foresight Point Closes Traverse** if you want to do a "Text Book" traverse closure. If you choose the **Occupy Point Closes Traverse** method, FieldGenius will not use your last foresight observation and assumes that the original back-sight and occupy points are fixed. Choosing this method will close the traverse on the original back-sight point, not the original setup point.

When you press the **View Report** button you will see the traverse closure results.

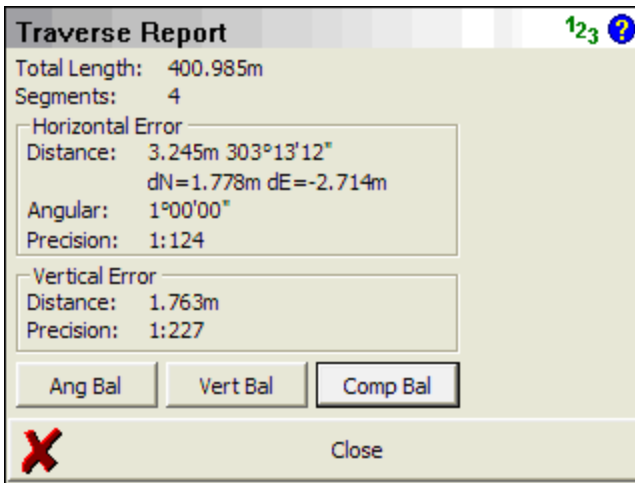

### Total length

This is the total unknown legs that were measured in the field.

### Segments

This is the total length traversed. Only unknown traverse legs will be added.

### Horizontal Error

This is the horizontal closure and precision for your traverse. The closure direction is calculated from the known point to your measured point. If there isn't enough data to compute the angular error you will see the word "No Comparison" It also displays the delta northing and easting differences.

### Vertical Error

This is the vertical error that is computed by comparing the elevations of the known point and measured closing point.

---

## **Traverse Definition (Foresight Method Bearing)**

If we use CASE 3 as an example the user first setup on point 1 and backsighted point 2. He then foresighted and setup on points 3 to 6 and closed the traverse by recording one more TR record to point 7. To compute the traverse report you go to the Main Menu / Survey and choose the **Traverse Report** button. When selected, you will see the following screen.

FieldGenius will automatically scan the raw file looking for the last TR foresight and the OC record that was used to measure the last foresight. It will then search for any point within a 3 meter radius and use it as the match or point that defines the original coordinates. If more than one point is found in the 3 meter radius, it will use the one that is closest. In the **Foresight Bearing** field, enter in a known Bearing. When you press the **View Report** button you will see the traverse closure results.

## Raw File

Several comments will be written to the raw file with the traverse report results for both Traverse Definition types.

```

|--Traverse Report
|-- Total Length: 600.10'
|-- Segments: 3
|-- Foresight control point: 1
|-- Occupy control point: 2
|-- Horizontal Distance Error: 0.10' 286°13'38"
|-- Horizontal Angular Error: 0°00'30"
|-- Horizontal Precision: 1:5762
|-- Vertical Distance Error: 0.00'
|-- Vertical Precision: No Error

```

## Closing the Traverse (No Backsight Prism)

For closing the traverse, sometimes you may want to measure a closing angle and compare it to your previous backsight point or to a user entered bearing. For the traverse closure we need to store a TR record in the raw file and because of this a point needs to be computed. If you can't measure a distance to a prism you can use the [Manual Distance](#) measure mode which will record the plate reading



from your instrument and prompt you to manually enter in a distance. Type in an arbitrary distance and a closing TR record will be computed.

---

## Traverse Rules

- All [measurement modes](#) on the [instrument toolbar](#), except for Sideshot (Auto Store), can be used to create TR records.
- The occupy point routine will be updated so the current setup is equal to your last TR shot, and backsight is equal to your last setup. You also need to do a setup directly after you shoot your TR record if you want to do "leap frog" traversing.
- You can have multiple traverses in the same raw file. To start a new traverse, you need to make sure the first setup point for the traverse isn't referenced in the raw file with a TR record. The most current traverse that you're working on will be used in the traverse computations.
- Only one TR record is allowed per setup.
- If you're importing your project into MicroSurvey CAD or inCAD we will automatically recognize your traverse points and create Station "traverse" setup for you in the MicroSurvey CAD or inCAD traverse file.

---

## Traverse Adjustment

[Main Menu](#) | [Survey Tools](#) | [Traverse Report](#)

FieldGenius is capable of performing a traverse balance. You can adjust the traverse using a vertical, angle or compass balance. You can select any one of the three adjustment types or apply all three of them to the traverse.

The traverse routine uses traverse TR records in the raw file to define the traverse points that will be used for the adjustment. Please refer to the [Traverse Report](#) topic for more information on creating a traverse loop with FieldGenius.

When FieldGenius computes an adjustment it will write to the RAW file AP records with the new calculated coordinates for the traverse points.

FieldGenius will adjust the sideshots after you perform an adjustment. FieldGenius will scan the raw file from the beginning and re-process all setups (OC records) and sideshots (SS records).

Once you have completed your traverse and you would like to adjust it you need to do the following.

1. Define the closing points using the [Traverse Report](#) screen.
2. Compute the closure by pressing the **View Report** button.

3. Review the closure report confirming its validity.
4. Apply an adjustment using the **Ang Bal**, **Vert Bal**, or **Comp Bal** adjustment buttons at the bottom of the traverse report screen.
5. When you choose one of the adjustment types, you will be asked to confirm that you want to go ahead with the adjustment.
6. If you press Yes in the step 5, FieldGenius will adjust the traverse points and create AP records in the raw file. It will then re-process the raw file to re-compute the sideshots.

## Point Patterns

[Main Menu](#) | [Survey Tools](#) | [Point Pattern](#)


This routine allows you to create or edit point patterns, and apply them to existing points in your project. This is useful for creating drill holes for bolt patterns, pillar columns, etc.

### Note

The \*.pattern data files are completely interchangeable between both FieldGenius 2012 and MicroSurvey CAD or inCAD, so any patterns created in one program can be edited or used in the other.

## Pattern Toolbar

When you start the Point Pattern command, you will see the Pattern Toolbar along the bottom of your map screen.

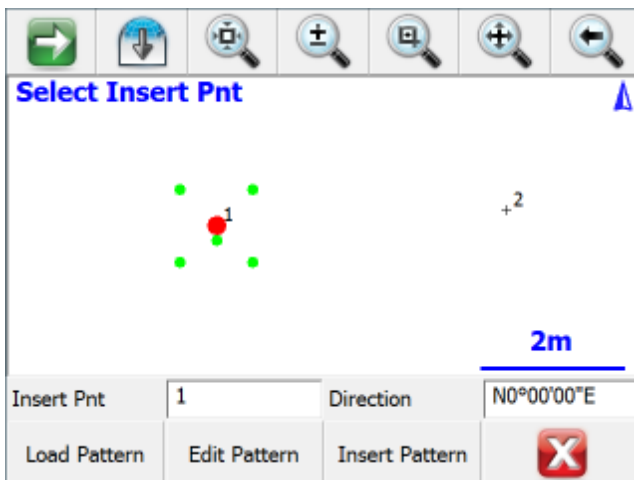

### **Insert Pnt**

Specify the point ID for an existing point in your project, either by typing in its point ID, or by tapping on a point in the map screen to select it when this field has focus.

The selected point will be highlighted in the map view with a large red point, and the current pattern will be previewed with smaller green points.

### **Direction**

Use this to specify a direction value for your pattern. The default direction of N0°00'00"E will orient the pattern exactly as it was defined.

To orient your pattern along any arbitrary line between two existing points, enter those two points using the pt#.pt# format like 1..2 and the direction between those two points will be automatically calculated for you. The pattern's X-axis will be applied along this direction.

### **Load Pattern**

Press this button to load a previously saved \*.pattern file.

### **Edit Pattern**

Press this button to edit the currently loaded pattern, or to create a new pattern if you have not loaded one. Please see below for more information on the Pattern Editor.

### **Insert Pattern**


Press this button to apply the currently pattern to the selected insertion point. New points will be stored in your project at the coordinates, as previewed by the green pattern points. All inserted points will be created with the description "Pattern", and with the same elevation as the selected insertion point.

To insert a pattern onto multiple points, simply change the insertion point and insert the pattern onto each point one-at-a-time as desired.

---

## **Pattern Editor**

When you press Edit Pattern on the Pattern Toolbar, you will see the Pattern Editor screen.

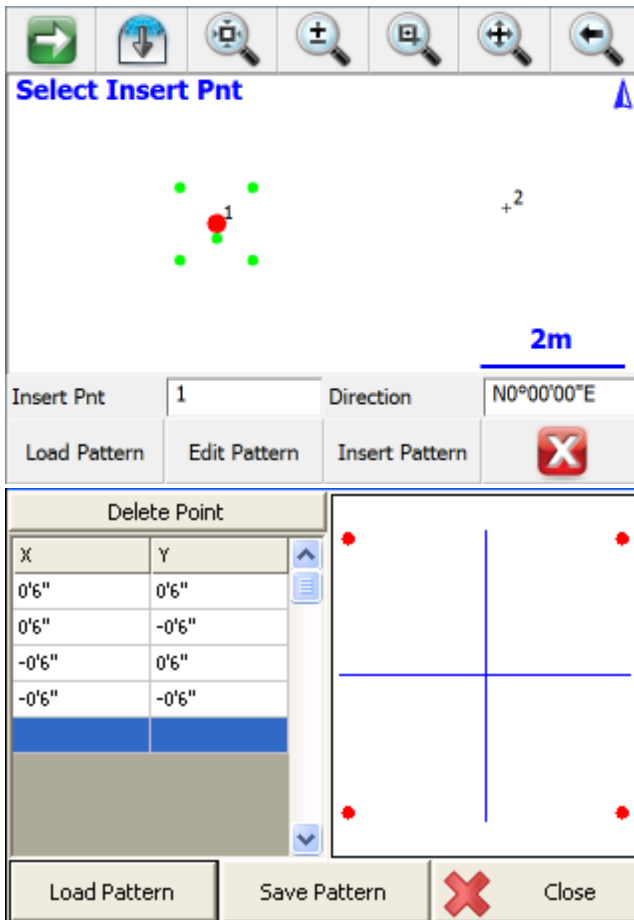

Enter the X and Y offset values for your pattern as desired. As you enter the points, they will be previewed in the grid, which will automatically zoom to the extents of your pattern. Please see the [Distance Entry & Recall](#) topic for options on entering the offset values in various units.

The 0,0 origin will always be located at the selected Insertion Point, so a point should not be included in your pattern at 0,0. You can also rotate the pattern into any orientation on the Pattern Toolbar (see above), so you do not need to create different variations of the same pattern to insert it in different orientations.

Press the Delete Point button to remove the selected X,Y offset from the pattern.

### **Load Pattern**

Press this button to load a previously saved \*.pattern file.

### Save Pattern

Press this button to save the current pattern to disk.

This will always do a "Save As" type save, so you can specify a new filename, or select any existing pattern file to overwrite it with the changes. You will always be prompted for confirmation before overwriting an existing pattern file.

### New Pattern

To create a new pattern, simply delete all of the existing points from the current pattern. When you press the Save Pattern button you will always be prompted for a new filename, so you will not lose the previous pattern.

### Close

Press this button to close the Pattern Editor and return to the Pattern Toolbar. If you have not saved the current pattern, you will be prompted to confirm this before discarding your changes.

## GPS Local Transformation

### Main Menu | Survey Tools | GPS Local Transformation

FieldGenius includes a flexible localization utility. The first thing you need to do is specify the points that will be constrained. You can do this by using the **Edit Control** button. Once you've specified your constrain points, you can press the Calculate Parameters button to compute transformation parameters. The parameters will then be saved to the raw file when the OK button is pressed.

GPS Local Transformation	
Edit Control	Calculate Scale (GPS)    Adjust Points
Origin North	0.00'
Origin East	0.00'
Trans North	0.00'
Trans East	0.00'
Rotation	0°00'00"
Scale	1.0000000000
Trans Height	0.00'

X
Close

## Control Points

You can think of the control points as a "fixed" coordinate system that you are wanting to transform your measurement to. For example if you are using a GPS receiver and you want to localize to a local system, your local points would be considered control points for the constraining. The points you derive with GPS need to be transformed, so these are the measured points.

All you need to do is press the **Edit Control** button to display the constrain point screen. Using the Add and Edit Control buttons you can define what points you want to use for control. You can then specify what point you want to constrain the control to, and you can also select what component of the measured point to use, either it's horizontal position, vertical position or both. An "X" indicates that the particular component should not be used in the transformation calculation.

Delta values are shown to help you determine how well your points match up with one another. Once you specify your constrain points, you can press the Calculate Parameters button which will compute the transformation parameters. The deltas shown are the differences between the control points and the measured points if the transformation parameters were applied.

When you're satisfied with the transformation parameters, the control point pairs and transformation parameters will be saved to the raw file upon exit.

---

## Transformation Settings

### Calculate Parameters

Use this to compute the transformation parameters. You have to have constrain point pairs defined before you will see anything calculated.

### Calculate Scale (GPS)

When this is used it will compute the combined scale factor at your current position. This can be used while you're connected to either a base or rover receiver. The combined scale factor is computed by multiplying the map scale by the ellipsoid scale factor. The combined factor can then be applied to grid distances to get ground distances.

While programming the base, if you use the one point localization option to help you localize into a user defined local system, FieldGenius will automatically compute a combined scale factor and a translation. For the most part, the scale factor will not change very much over the workable range of your RTK system. But if you want to update the combined scale factor you can.

### Adjust Points

Use this to compute new coordinates for your GPS derived points. Each GPS observation you store is saved in the raw file as an EP record, which is essentially a WGS84 position. If you want FieldGenius to compute new Cartesian or local coordinates for the GPS observations, you can. Simply

press the Calculate Params button and FieldGenius will scan your raw file and will recompute new coordinates using the EP records, and will apply your transformation parameters to the coordinates.

An example where this could be used is after you've measured some constrain points to help you localize to a user (local) coordinate system. After you compute your transformation parameters you will still have two coordinate systems, one with the local coordinates and one with the GPS (UTM or SPCS) coordinates. It is usually beneficial to transform the GPS derived constrain points so they are now in the local system.

### **Do Not Calculate Scale (Checkbox)**

If this is checked, FieldGenius will not compute a scale factor and will force it to a value of 1.0.

### **Do Not Calculate Vertical Slopes (Checkbox)**

If this is checked then FieldGenius will not compute any slope values.

---

## **Parameters**

### **Origin North and East**

This is the centroid of the measured coordinates, or simply the average northing and easting of your measured constrain points.

### **Trans North and East**

If you move the measured points, so that the centroid of your measured points is equal with the origin of the local system. The translation north and east is the shift amount that needs to be applied to your measured points to move them into the local system.

### **Rotation**

This is the rotation amount between your measured and local systems.

### **Scale**

This is the scale difference between your measured and local systems.

If you turn on "Do not calculate scale" these values will be equal to 1.0.

### **Trans Height**

This is the vertical shift that will be applied to the transformation. It is computed by averaging the elevation differences between your point pairs. Positive translation heights will be added while negative heights will be subtracted.

### **Slope North & Slope East**

This is an indication of or much your measured system is inclined in the north and east directions. The value that is displayed is the slope of each direction. For example if the difference in elevation along the north axis of your measured system is 3 meters, and the length of it is 19 meters, the slope of the

axis will be (rise over run) or 0.15789. Negative slopes indicate that it is inclined downward from the origin, and positive slopes are inclined upwards.

You should only use vertical slopes if you do not have a geoid model to use for your point's elevations. Use this feature with care as it can cause distortions in your elevations if it is used incorrectly.

You can force FieldGenius to not compute these values by turning on the "Do no calculate vertical slopes" toggle.

## Impact on new measurements

Once the transformation parameters have been adequately determined, all future GPS measured coordinates will automatically be transformed. All constrained point pairs will be saved along with the transformation parameters for the current project upon exiting the utility and will be saved to the raw file.

### Notes:

- Only use a local transformation if necessary.
- GPS heights should be applied with a suitable geoid model. If possible only use vertical bias (Trans Height) because solving for slope North and slope East with inadequate control can severely distort the parameters.
- Use redundancy for confirming parameters.

## Raw File Information

Whenever you compute transformation parameters, they're automatically written to the raw file when you exit the command.

Once the parameters are saved, they will automatically be read in again if you use the Transformation Command. FieldGenius will always start at the top of your raw file and will process the calibration records as they're found.

The control points you define are saved as a CT record and will always have an associated RP record. RP records store the measured coordinate that you defined for the control point.

Following the calibration points are a HA and VA records which store the transformation parameters that were computed. Following is an example of what you might see in your raw file.

```
--Calibration Points
CT, PN15, DM4, RH6.708, RV0.000
RP, PN15, N 11.0000, E 30.0000, EL0.0000, --
CT, PN16, DM4, RH5.243, RV0.000
RP, PN16, N 30.0000, E 30.0000, EL0.0000, --
CT, PN17, DM4, RH6.708, RV0.000
RP, PN17, N 30.0000, E 11.0000, EL0.0000, --
HA, N 23.6667, E 23.6667, TH6.6667, TE6.6667, RT0.00000000, SC1.000000000
VA, PV3, N 23.6667, E 23.6667, LZ0.0000, SO0.00000, SA0.00000, GN
```



An important thing to remember is that if any of the original measured points you used in the calibration change, you need to go back into the transformation command and edit the corresponding control point. You need to re-define the measured coordinates for the control point, then press the **Calc Parameters** button to update the transformation parameters.

## Transform Points - Helmerts Transformation

[Main Menu](#) | [Settings](#) | [GPS Local Transformation](#)

The Transform Points command provides a "many point" Helmerts Transformation that can be used for many different purposes. We use this for the GPS localization, but you can also use it to rotate and translate measured points to fit known coordinates. Before using the Transform command, you need to setup the [Transformation Settings](#).

The 3D Transformation included in FieldGenius is a powerful tool that can be used for a variety of coordinate transformations. With the Transformation, you are able to rotate, shift and scale unlimited points. The best way to describe this command for basic fitting of coordinate pairs is to give an example.

---

### Procedure


The program assumes the following:

1. The coordinates of the "control" system are considered fixed and error free.
2. Equal weighting is applied to all "measured" coordinates used to calculate the solution

A minimum of two points common in both the Plan and Local systems are needed to be able to solve the four unknown transformation parameters. This gives what is known as a unique solution (only one possible set of transformation parameters can be solved for). When more than two points are common in each system, redundancy exists and a Least Squares method is used to determine the optimum (best-fit) transformation parameters.

We'll work through an example as we explain the function of the Helmerts Transformation routine.

In the example below, you'll see a plan of 2 simple lots with lot corner point numbers 1 through 6. These will be our **Control** (fixed) points. You will also see our **Measured** ties (Local points) for all six corners and 4 points on a simple building. Points 101 and 105 are traverse points, points 102-104 and 106-108 are corner ties and 109-112 represent ties to the building.

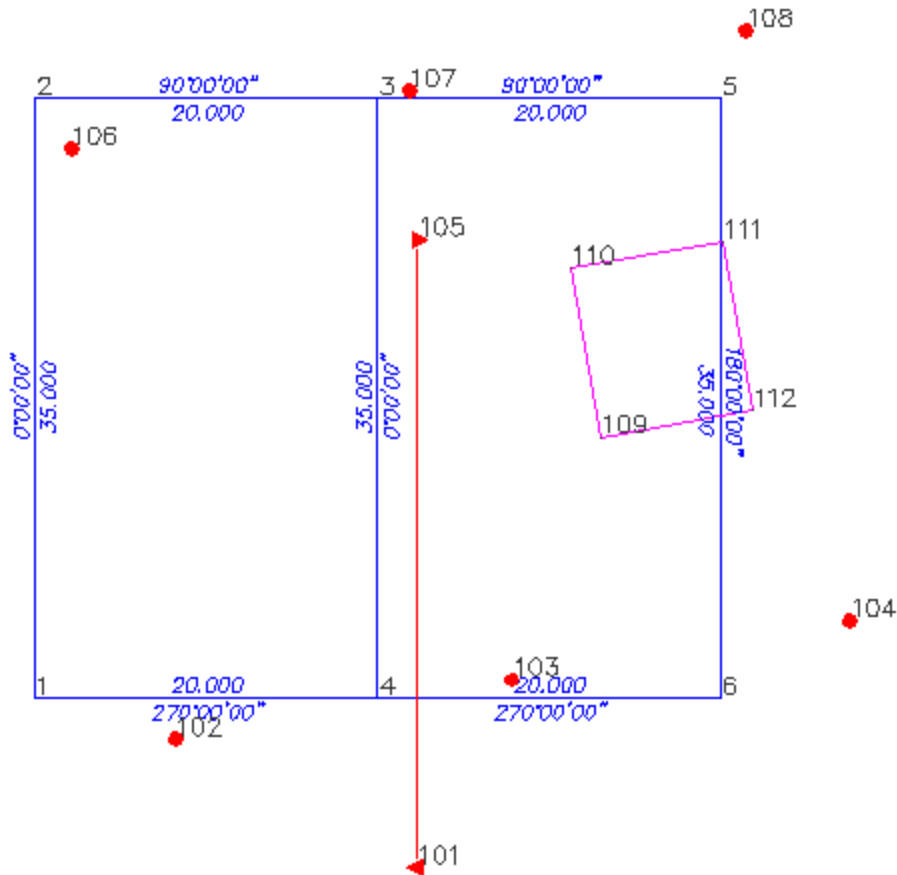


The objective here is to transform our local field survey into the plan system and, at the same time, check to see if the corner posts tied are located where the previous surveyors plan says they are!

### Program Function

The first dialog box you will see when you run the program is the input listing dialog. When you first run the program in a specific job, it will display showing no entries.

**GPS Local Transformation** 123 ?

<b>Origin North</b>	0.000m
<b>Origin East</b>	0.000m
<b>Trans North</b>	0.000m
<b>Trans East</b>	0.000m
<b>Rotation</b>	0°00'00"
<b>Scale</b>	1.0000000000
<b>Trans Height</b>	0.000m
<b>Slope North</b>	0.00000


 Close

You now have to define the coordinate pairs to use in the solution. Press the **Edit Control** button to enter all of the common point sets that you have in your data but be careful to not confuse control points with measured points. Remember that the control points are considered fixed and the measured points are going to be rotated, shifted and possibly scaled.

**GPS Local Transformation** 123 ?

Do not calculate scale  
 Do not calculate vertical slopes

Ctrl Pnt	Horz	Vert	dN	dE	dH
2	✓	✗	0.022	0.004	106.1
3	✓	✗	-0.061	0.007	107.1
5	✓	✗	-0.001	-0.027	108.1
6	✓	✗	0.008	-0.005	104.1

 Close

When you finish entering all of your point pairs, it will display the delta differences between the coordinate pairs you defined. We're not concerned about the 3D position of the points, so we will turn these off. You now have to go and calculate the solution so press **OK** so you're taken back to the Local Transformation page.

Press the **Calculate Parameters** button to compute the transformation solution. For our example we want the measured point to retain their geometry so we will turn on the "do not calculate scale" option. This will set the scale value = 1.0. Furthermore, since we're not doing a localization for GPS derived coordinates, turn on "Do not calculate vertical slopes."

GPS Local Transformation		123 ?
Edit Control	Calculate Scale (GPS)	Adjust Points
Origin North	38.3049m	
Origin East	34.8522m	
Trans North	37.5000m	
Trans East	30.0000m	
Rotation	9°56'45"	
Scale	1.0000000000	
Trans Height	0.0000m	
Slope North	0.00000	
		Close

## Residuals

If you edit the control again you can take a look at the pair residuals to make sure they meet your tolerances.

In our example you will see a large delta in the northing at point pair 3:107. Let's remove this point by pressing the green checkmark. You have to go back and compute the solution again and then you will see the residuals are now more acceptable.

The summary of residuals illustrates the displacement between the plan coordinates and the proposed, transformed coordinates of the corresponding local point. This is presented as northing displacement, easting displacement and total distance displacement and direction. The units listed represent actual drawing units used in the drawing. The example shown is in meters.

Review the residuals carefully. Be sure that all of the pairs used in calculating the solution have residuals within your expected limits. If any one pair has residual values significantly larger than the rest, click on Cancel. This will return you to the Input dialog where you will be able to delete the erroneous pair and re-compute the solution.

You can now close the transformation setup screen and move on to the next step.

**GPS Local Transformation** 123 ?

Calculate Parameters    Edit Control    Add Control

Do not calculate scale  
 Do not calculate vertical slopes

Ctrl Pnt	Horz	Vert	dN	dE	dH
2	✓	✗	0.011	0.007	106.1
3	✗	✗	-0.074	0.010	107.1
5	✓	✗	-0.014	-0.025	108.1
6	✓	✗	-0.005	-0.004	104.1

Close

## Transform Points

Once you are happy with the results of the computation, you can consider transformation of the Local points into the Plan system.

To apply the transformation parameters that you calculated to points in your project you need to press the [Main Menu](#) button, then Data Manager and finally press Point Database button. This will open the [Coordinate Database](#) screen where you can select the points that you want the transformation applied to. In the example we will use the Find command to select a range of 101-115. Now if you scroll through the list you should see that these points are highlighted in blue.


**Coordinate Database** 123 ?

Point ID	Northing	Easting	Elevation
1	20.000m	10.000m	0.000m
2	55.000m	10.000m	0.000m
3	55.000m	30.000m	0.000m
4	20.000m	30.000m	0.000m
5	55.000m	50.000m	0.000m
6	20.000m	50.000m	0.000m
101	10.176m	22.619m	101.000m
102	20.001m	10.016m	102.000m

←    →   
 ←   
 RTS   
 Local Transform   
 Statistics   
 Map View   
 ✗

To complete the transformation, press the **Local Transformation** button and then you will see a screen asking you to confirm that you want to apply the transformation, press **Yes** to apply. You will then see the local transformation screen just so you can confirm that the correct values were used.

When you return to the map screen, you will see that the points were transformed successfully.

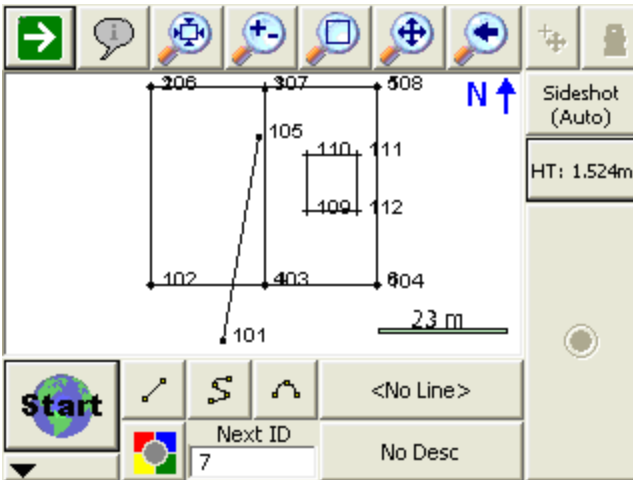


# CALCULATIONS MENU

## Calculations Menu

[Main Menu](#) | [Calculations](#)

The calculation menu contains calculation based functions that can be used to compute points, lines and other data.

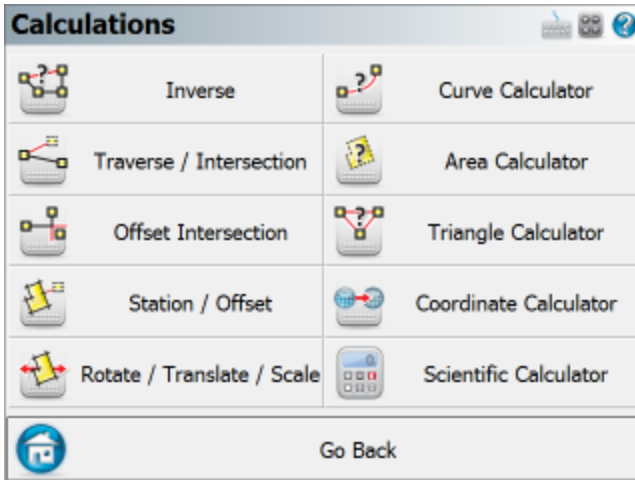

### [Inverse](#)

Use this to inverse between points. Please see the [Inverse](#) topic for more information.

### [Traverse / Intersection](#)

This will open the Traverse / Intersect toolbar. You can enter in directions and distances and perform common intersections such as bearing / bearing, distance/distance and many more. Please see the [Traverse / Intersection](#) topic for more information.

### [Offset Intersection](#)

Use this to compute points that are located at computed intersections and offsets. This is essentially a bearing-bearing intersection, but you can specify offsets. Please see the [Offset Intersection](#) topic for more information.

### [Station / Offset](#)

Use this to compute points at pre-defined stations and offsets. You can also use this to display the station and offset of existing points. Please see the [Station / Offset](#) topic for more information.

### **Rotate / Translate / Scale**

Use this to compute coordinate shifts based on rotation, translation and scale parameters. Please see the [RTS](#) topic for more information.

### **Curve Calculator**

Use this to open a curve calculator. You define the values that you know, enter them, and then the remaining unknowns will be computed. Once you compute these values you have the option of storing the PT and Center points. Please see the [Curve Calculator](#) topic for more information.

### **Area Calculator**

Use this to compute areas using points or lines in your project. You can also use this to compute predetermined areas. Please see the [Area Calculator](#) topic for more information.

### **Triangle Calculator**

Use this to compute a triangle solution using known angles or distances. Please refer to the [Triangle Calculator](#) topic for more information.

### **Scientific Calculator**

Use this to display the RPN calculator. Please see the [Calculator](#) topic for more information.

## **Traverse / Intersection**

### **Main Menu | Calculations | Traverse / Intersection**

FieldGenius includes a powerful COGO function that allows you to compute new points. The toolbar allows you to specify the solution type, point numbers, directions and distances. When you enter enough information to compute a solution it will be draw visually on the screen. Pressing the Store Pnt button will store the point that you just solved.

### **Input**

You can type in the point ID, or select a point by tapping on the map screen.

The direction and distance fields support the [direction](#) and [distance](#) recall feature. To learn more about this, refer to these topics in the Calculating With FieldGenius section.

If you are measuring distances with a Leica Disto, just double tap in the distance field and choose the "Disto Observation" option.

### **Disto Distances**

If you have a Leica Disto, you can send distances back to the distance edit fields. Simply double tap the distance field and select "Disto Observation" which will then set FieldGenius in a "waiting" mode.



Take the measurement with the Disto, press the Bluetooth icon on the Disto, and the measured distance will be accepted by FieldGenius.

### Calculator

You can open our calculator by double-tapping the Direction or Distance fields then pressing Calculator on the Keypad screen.

### Information


You can review the results of your calculation by pressing the "i" information button. For intersections with multiple solutions, the results of both solutions will be displayed.

---

## Solution Methods

### Method: Traverse

The traverse method allows you to define a direction and distance that you want to traverse. After you solve your point and store it, it will become the new start point.

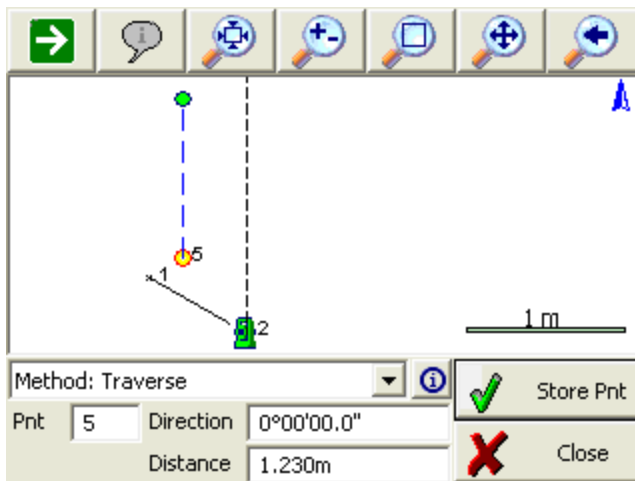

### Method: Direction - Distance

This will compute two solutions based on the values you input. To store the solution, simply press the **Store Pnt** button which will ask you what solution to use, in this case either **A** or **B**.

Method: Direction - Distance

Pnt 1	1	Direction	90°00'00.0"	<input checked="" type="checkbox"/> Store Pnt
Pnt 2	2	Distance	2.000m	<input type="checkbox"/> Close

**Method: Direction - Direction**


Use this to compute a new point by computing an intersection using directions. After you enter your known values a solution will be displayed on the screen. To store the solution, simply press the **Store Pnt** button.

Method: Direction - Direction

Pnt 1	6	Direction	135°00'00.0"	<input checked="" type="checkbox"/> Store Pnt
Pnt 2	5	Direction	45°00'00.0"	<input type="checkbox"/> Close


**Method: Distance - Distance**

Use this to compute a new point by computing an intersection using distances. This will compute two solutions based on the values you input. To store the solution, simply press the **Store Pnt** button which will ask you what solution to use, in this case either A or B.

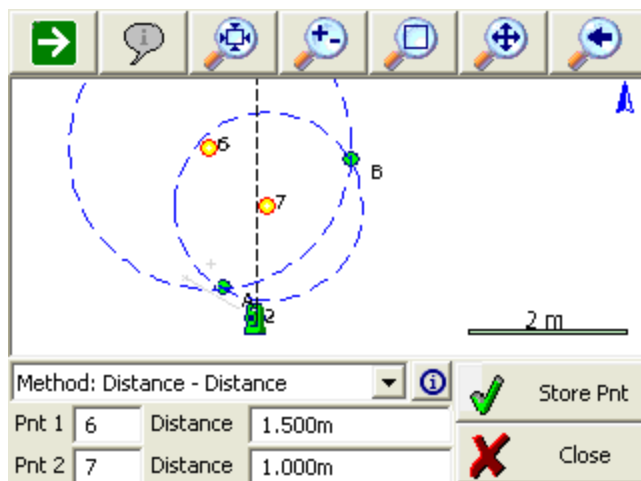

### Method: Interior Angle Traverse

Use this to compute a new point by turning an angle from another point. Enter the current (setup) and previous (backsight) points, then the interior angle and the distance. Positive angles will be interpreted as angle right; if you want to turn an angle left, enter the angle as negative. To store the solution, simply press the **Store Pnt** button. After the point is stored, the points will automatically leapfrog so you can continue traversing by just entering the next interior angle and distance.

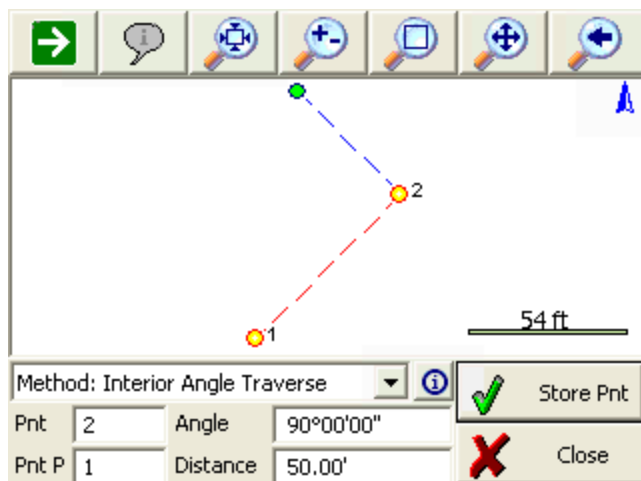

### COGO Results

Every calculation you make is written to the file called CogoCalcs.txt located in your project folder. Please see the [COGO History Viewer](#) topic for more information.

## Inverse

[Main Menu](#) | [Calculations](#) | [Inverse](#)

This command will calculate for you the inverse between two points. It will display the horizontal / slope distance, direction, vertical distance and slope between the two points. You do not need to have a line drawn between the points to use the inverse command.



A large font can be set for the results toolbar and COGO results. Please refer to the [Options](#) topic for more information.

All inverse information is saved in the COGO History file called CogoCalcs.txt located in your project folder. Please refer to the [COGO History Viewer](#) topic for more information.

## Traverse Inverse

### Function

1. Start the inverse command and make sure the **Traverse Inverse** and **Line** options are selected.
2. Enter or choose the first point to calculate from, and press your enter key to continue on to the next point.
3. Now you can choose or enter the second point and press your Enter button to compute an answer.
4. The inverse information will be displayed in the results toolbar.
5. In the COGO history you will see the following information for the two points:

```

-----
| INVERSE
|-----
| PNT 44 to 8 (HD 1352.84' @ NA 323°48'03.1")SD 1353.39' GR -2.85' VD -
| 38.51'AR 323°48'03.1"
|-----
    
```

Your first inverse will calculate a right angle from north to the direction you inverted.

### Multiple Lines

After you have specified two points, you can continue inverting from point to point. You should notice that the point id previously in the 2nd point field will move to the 1st point field, and the cursor will

remain in the 2nd point field allowing you to quickly enter in your next point.

If you continue inverting from point to point, the angle right will not be referenced to north, but the last leg you inverted. Essentially this is computing a clockwise angle between the current and last legs you inverse.

### **Perimeter Distance and Area**

If you close back to the first point, a perimeter distance and enclosed area will also be computed.

---

### **Radial Inverse**

You can compute radial inverses from a point.

#### **Function**

1. Start the inverse command and make sure the **Radial Inverse** and **Line** options are selected.
2. Enter or choose the 1st point to calculate from, and press your enter key to continue on to the next point.
3. Now you can choose or enter the 2nd point and press your Enter button to compute an answer.
4. The inverse information will be displayed in the results toolbar.
5. You can now continue computing radial inverses. The 2nd point field will remain activated allowing you to continue entering point numbers.

---

### **Radial Arc**

You can compute the curve information for an arc defined by three points, PC (start), Radius Point, and PT (End)

#### **Function**

1. Start the inverse command and make sure the **Rad Arc** button is turned on.
2. Enter or choose the starting point for the arc in the Start field, and press your enter key to continue on to the next point.
3. Enter or choose the radius point in the Arc field, and press your enter key to continue on to the next point.
4. Enter or choose the end point for the arc in the End field, and press your enter key to compute an answer.
5. The inverse information will be displayed in the results toolbar.

---

### **Three Point Arc**

You can compute the curve information for an arc defined by three points along the arc.


## Function

1. Start the inverse command and make sure the **3 Pt Arc** button is turned on.
2. Enter or choose the starting point for the arc in the Start field, and press your enter key to continue on to the next point.
3. Enter or choose the point that falls on the arc in the Arc field, and press your enter key to continue on to the next point.
4. Enter or choose the end point for the arc in the End field, and press your enter key to compute an answer.
5. The inverse information will be displayed in the results toolbar.

## Offset Intersection

### Main Menu | Calculations | Offset Intersection

Use this function to compute a point at specified offsets from an implied bearing-bearing intersection calculated from two existing points as shown.

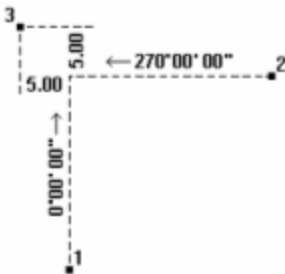

	Pnt	Angle/Dir	Offset	
	1	0°00'00"	-5.000m	
	2	270°00'00"	5.000m	

When you start the command you will see the offset intersection toolbar appear towards the bottom of the main interface. Use the point chooser to select the points that you want to use to define your directions. Offsets are computed positive to the right and negative to the left looking in the direction of the bearing you entered. You can use [angle](#) and [distance](#) recall features to help you compute your answer.

## Function

1. Use the point chooser to select a point or manually type one in that defines the beginning of the bearing.
2. Enter a direction in the Angle/Dir field.
3. Enter an offset if needed. You are not required to enter an offset so the field can be left blank.
4. Repeat for the second point the first three steps.
5. Press the green checkmark to save your point. It will save the point using the [Store / Edit Points](#) function.


## Offset Tool

[Main Menu](#) | [Calculations](#) | [Station/Offset](#)

This routine allows you to calculate and draw points and/or figures, offset from other existing points, figures, or DXF entities in your project. You can calculate points on a line or down and out from a line, or offset complete figures.

## Selection Mode

Press the "Select Line" button to go into [Selection Mode](#). You will also automatically go into Selection Mode if a line is not yet selected when you start this command.

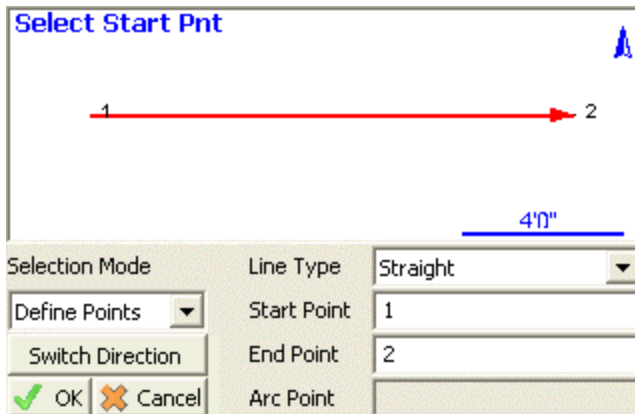

Whichever Selection Mode you use, the selected line will be highlighted in red in the map screen along with a direction indicator. If necessary, you can press the **Switch Direction** button to reverse the start and end of the selected line. Press OK to accept the selected line and proceed to the next step.

### **Selection Mode: Figure/DXF**

Pick this mode to select an existing figure or DXF entity by selecting the desired figure from the map screen. You can select any of the following:

- Figures containing lines and/or arcs (but not curvey splines)
- DXF lines, arcs, and/or polylines (but not splines, splined polylines, or fitted polylines)

### **Selection Mode: Figure Segment**

Pick this mode to select an individual line or arc segment from a complex figure, by selecting the desired segment from the map screen. You can select any of the following:

- a line or arc segment from a Figure (but not a curvey segment)
- (line or arc segments from a DXF polyline cannot be selected)

### **Selection Mode: Define Points**

Pick this mode to select points in your project to define a line or arc. You can define the following line types:

- Straight Line: select a Start Point and End Point
- Arc (CW): select a Start of Curve Point, Radial Point, and End of Curve Point
- Arc (CCW): select a Start of Curve Point, Radial Point, and End of Curve Point
- Arc (3Pnt): select a Start of Curve Point, Point on Curve, and End of Curve Point.

## **Offset Point Mode**

Use this mode to calculate a point measured Down and Out from the selected line.

Mode	Offset Pnt	Start Stn	0+00.00
Select Line		Station	0+75.00
Switch Direction		Offset	10.00'
<input checked="" type="checkbox"/> Save	<input checked="" type="checkbox"/> Close	<input type="radio"/> Left	<input checked="" type="radio"/> Right



After selecting a line using any of the above Selection Modes, pick this mode and enter the Station/Offset distances and the offset direction (left or right, looking down the line).

The calculated point will be previewed in green in the map screen. Press the **Save** button to store this point.

### Station Point Mode

Use this mode to calculate the Down and Out distances to a selected point, and to calculate a perpendicular intersection point On the selected line.

Mode	Station Pnt	Offset Pnt	31
Select Line		Start Stn	0+00.00
Switch Direction		Station	0+89.21
Save	Close	Offset	-17.82'


After selecting a line using any of the above Selection Modes, pick this mode and select the Offset Point by either typing in its Point ID or by selecting it from the map screen when the Offset Pnt field has focus.

The selected point will be highlighted in red in the map screen, and its Station/Offset distances from the selected line will be displayed.

A perpendicular intersection point On the line will be calculated and previewed in green in the map screen. Press the **Save** button to store this point.

### Line Mode

Use this mode to draw a new line or figure, offset from the selected line.

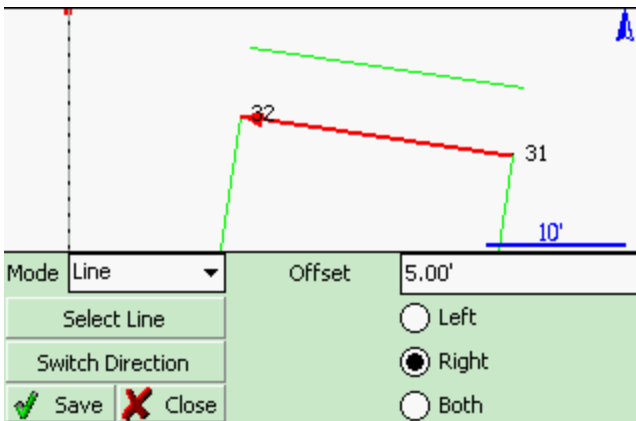

After selecting a line using any of the above Selection Modes, pick this mode and enter the distance and direction (left or right looking down the line, or both sides).

The offset line will be calculated and previewed in green in the map screen. Press the **Save** button to store this line. When a line is saved, points will be automatically stored at the start and end points, arc radial points if applicable, and polyline vertex points if applicable.

## Rotate/Translate/Scale Points

### Main Menu | Calculations | Rotate/Translate/Scale

Use this to rotate, translate and scale a point or group of points. When this command is used notes will automatically be written to the raw file indicating what parameters were entered by the user. Coordinates that are updated with the RTS command will be recorded in the raw file with AP (Adjusted Points) records.

The RTS command has the three options located on separate screens. The user can specify more than one option at the same time, for example you could rotate a group of points by 45° CW, then translate them 25' east. This can be done in one operation, instead of two separate ones.

All of the fields have [extended edit](#) functionality. On the direction or distance fields, if you double tap them you will see a popup menu. From there you can start the calculator or use the inverse command.

When using the inverse option, simply type the two numbers for the inverse, then press the ESC key to automatically copy the value that was computed during the inverse.

The RTS function can also be accessed from the [coordinate database](#). Accessing it from there allows you to select your points from the list which in some cases might be easier than entering a point range.

## Rotate: Simple Angle

This is the simplest form of rotating your points. Specify the base point for the rotation, and a rotation angle.

The screenshot shows a dialog box titled "Rotate/Translate/Scale Points" with a "123 ?" icon in the top right. It has three tabs: "Rotate" (highlighted in green), "Translate", and "Scale". Under the "Rotate" tab, there is a section titled "Rotate Parameters" containing:

- A "Rotation Base Point" text input field.
- Two radio buttons: "Simple Angle" (which is selected) and "Direction Difference".
- A "Rotation Angle" text input field containing the value "0°00'00\"".

At the bottom of the dialog, there are three buttons: "Adjust Points" with a green checkmark icon, "Restore Points", and "Close" with a red X icon.

### Rotation Base Point


Use this to specify the pivot point for the rotation. You can select the point by double tapping in the edit field. Use the point chooser to select the point from the map, or simply enter the point number.

### Rotation Angle

Specify the desired rotation in degrees, minutes seconds (or whatever your project units are set to). You can also use the direction recall feature and enter #..# to inverse between two point numbers.

## Rotate: Azimuth Difference

This allows you to define two azimuths, usually used to compute the angle needed to rotate a group of points to match a field azimuth to one from a plan.

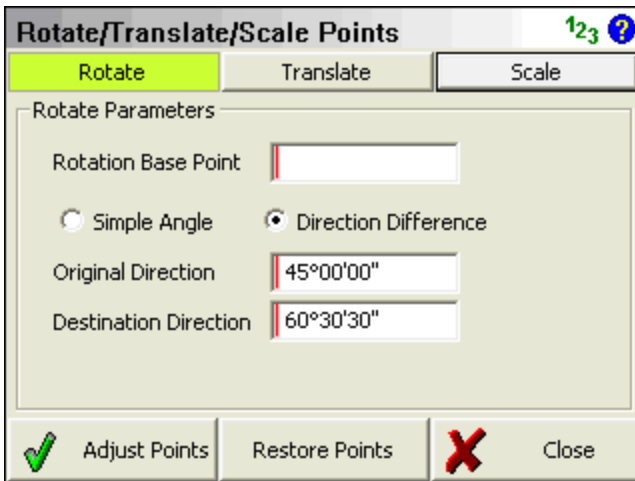

**Rotate/Translate/Scale Points** 123 ?

Rotate Translate Scale

Rotate Parameters

Rotation Base Point

Simple Angle  Direction Difference

Original Direction

Destination Direction

Adjust Points Restore Points  Close

### Rotation Base Point

Use this to specify the pivot point for the rotation. You can select the point by double tapping in the edit field. Use the point chooser to select the point from the map, or simply enter the point number.

### Original & Destination Direction

Specify the desired rotation in degrees, minutes seconds. Depending on your project units, you will be entering either a bearing or an azimuth. You can not use the direction recall feature such as #..#. Instead use the inverse command that appears when you double tap the field.

### Translate

Use this option to specify a shift to a point or group of points. The translation is separated into three groups, shift from point to point, shift by coordinate change and shift by direction and distance. In most circumstances you will only need to use one of the three types, but you can use them in conjunction with on another if you need to.

For example, you could specify that the points are to be shifted by coordinate difference between points 10 and 20, then shifted again to the east by 50 feet.

**Rotate/Translate/Scale Points** 123 ?

Rotate Translate Scale

Translate Parameters

Original Point  Destination Point

Add Northing

Add Easting

Add Elevation

Add Direction  Distance

Adjust Points Close

### Original & Destination Points

These work in conjunction with one another. The difference in coordinates to get from one point to the other is calculated and added to all points. You can use the point chooser to select your points or simply type the points in the fields. The horizontal differences in the northing and easting is computed and applied to the points being transformed. The elevation of the points will remain unchanged.

### Add Northing, Easting, Elevation


Any one or combination of these shifts can be applied. Simply input the value for each shift in the appropriate fields. Both negative and positive values are valid.

### Add Direction and Distance

Define the shift by direction and distance. The coordinate shift in Northing and Easting will be calculated using the direction and distance you enter in the fields. If desired you may apply two shift components at the same time. For example, shift your selection of points by Direction and Distance, but also add 100.00 to the elevation. You can use [angle](#) and [distance](#) recall features to help you compute your answer.

### Scale

You can scale a group of points using the scale option.

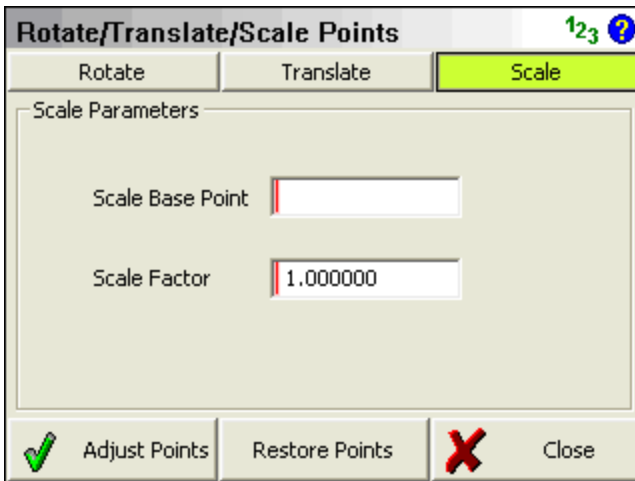

### **Scale Base Point**

This will be the base point for the scaling and all points selected will be scaled from this point. You can enter the point number in the field or use the point chooser to select the scale point.

### **Scale Factor**

Use this to specify the scale to apply to your selection.

### **Adjust Points**

Once you've specified your options and parameters, press the Adjust Points button to apply to your coordinates. Once you press it, you will see a screen that will allow you to specify which points you want to apply the calculation to.

### **Restore Points**

After you adjust a group of points with the RTS command, you have the option of undoing your changes and restore the points back to their previous coordinate values. You can only undo the last operation that was done. Also if you close FieldGenius, the restore coordinate values are not saved.

### **Reset All Parameters**

After the RTS command is used, if you start the command you will see a message "Reset All Parameters?" If you choose yes, then FieldGenius will restore all the RTS fields back to their default settings. If you choose no, then your previously inputted data is retained.

## Curve Calculator

[Main Menu](#) | [Calculations](#) | [Curve Calculator](#)

FieldGenius includes a curve calculator that can be used to check curve data and also compute and curve points.

Curve Calculator		123 ?
Radius - Arc Length		▼
Arc Direction	Right	▲
Arc Length	0.000m	
Arc Radius	0.000m	
Arc Chord Length		
Arc Chord Bear		
Arc Delta Angle		
Deg of Curve [arc]		
Deg of Curve [chord]		
Tangent Length		▼
Store PT Pnt	Store Center Pnt	Close

### Define Known Data

You first have to define what known information you want to use to compute the curve. If you click on the drop down list you will see a list of all the options that can be used to compute the unknown values.

### Enter the Known Data

Once you define the known data format, you will see grayed out fields which indicate they can't be edited. White areas indicate fields that can be edited, and these fields will match what you defined in the first step.

1. You always have to define the direction for the curve, either right or left.
2. Enter your know values.
3. If you want to store points, you need to define the PC point. You can enter the point id or use the point chooser.
4. You also need to define the PC Tangent direction, so FieldGenius knows the orientation of the curve.

---

## Store Points

Once you have computed your curve data, you have the option of storing the PT and Center points. When you press either button you will see the store and edit screen.

## Area Calculator

[Main Menu](#) | [Calculations](#) | [Area Calculator](#)

 
The area calculator is used to compute areas as well as predetermined areas.

When defining the boundary area, you can select points, lines and arcs from the map, or type the point numbers in manually. Lines and points from DXF files are also valid and can be selected using the Define Area toolbar.

---

## Defining an Area

### Define Area Toolbar (Points)

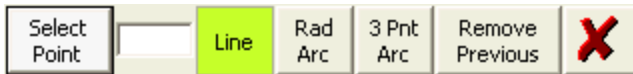

#### Select Point

The define area toolbar is used to help you define an area. If the first button is set to **Select Point**, the toolbar is in "point selection" mode and will only accept points picked from the map or point numbers that are typed in. This button acts as a toggle and will toggle between Select Point and Select Line.

#### Line

If you are defining a straight segment, then you should leave the **Line** button turned on. Simply select two points from the map, or enter the point numbers manually.

#### Rad Arc

Use this to define a curved segment where you know the start, radius, and end points. You need to first pick the start of the arc, then press the **Rad Arc** button to define the radius point. After doing so, the program will automatically switch back to the Line segment type which at that time you should select the end of the arc.

#### 3 Pnt Arc

Use this to define a curved segment where you know three points on the arc. You need to first pick the start of the arc, then press the **3 Pnt Arc** button which will allow you to define two more points on the arc for a total of three points. The program will automatically switch back to the Line segment type after the third point is selected.



### Remove Previous

Use this to remove segments that were defined for the area boundary. This will remove the segments one at a time starting with the last segment that was defined.

### Define Area Toolbar (Line)



### Select Line

The define area toolbar is used to help you define an area. If the first button is set to **Select Line**, the toolbar is in "line selection" mode and will only accept lines picked from the map. This button acts as a toggle and will toggle between Select Point and Select Line.

### Switch Direction


Since this routine accepts FieldGenius figures as well as DXF entities, at times you need to switch the direction of a DXF line so that it matches the direction that you are traversing around to define the area boundary. As you select lines from the map you will see a red marker appear at the end of the line.

### Remove Previous


Use this to remove segments that were defined for the area boundary. This will remove the segments one at a time starting with the last segment that was defined.

### Enclosed Area Calculation

To compute an area you need to make sure you have the **Calculate Area** tab selected. You can then press the **Define Area** button to define the boundary that will outline the area perimeter. It is important to note that you are not required to "close" the area by selecting the original starting point.

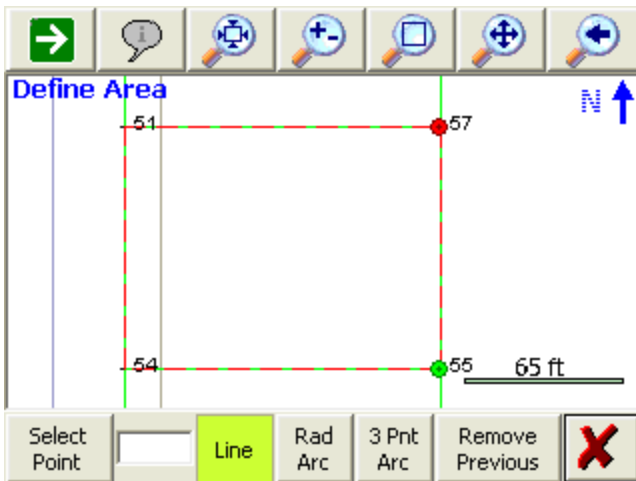

The green marker indicates the start of the area perimeter, where as the red marker indicates the last point on the perimeter. When ready to compute the area, simply press the exit button (red X) on the Define Area toolbar.

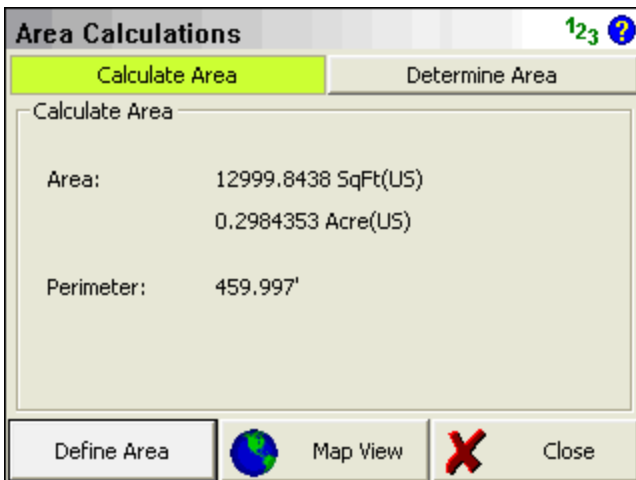

## Determine Area (Predetermined)

FieldGenius can compute predetermined areas using the **Hinge** or **Parallel** Methods.

The Hinge Method allows you to specify a fixed point that the new boundary should hinge from.

The Parallel Method helps you compute the location of a new boundary using a user entered direction, usually parallel to one of the fixed sides.


## Hinge Method

The first thing you need to do when using the hinge method is define the fixed sides of your boundary. Once you do this, on the determine area screen you can enter the predetermined area amount you want to compute a solution for, plus define what point is fixed and is to be used as the hinge point.

The start and finish points (markers) are represented using a green and red circle marker. You can always press world button on the [Display toolbar](#) which will place text labels next to the start and finish points.


The screenshot displays the 'Define Area' screen at the top, which shows a map with a green boundary line and a red hinge point. The map includes several data points and labels: a green point at (108, 8), a red point at (46, 1007), and other points like (109, 9), (62, 14), (100, 10), and (100, 33). A scale bar indicates 78 ft. Below the map is a toolbar with buttons for 'Select Point', 'Line', 'Rad Arc', '3 Pnt Arc', 'Remove Previous', and a red 'X' button.

The bottom portion of the screenshot shows the 'Area Calculations' dialog box. It has two tabs: 'Calculate Area' and 'Determine Area'. The 'Determine Area' tab is active, showing the 'Hinge Method' selected. The 'Area' field is set to 10000.000000, and the unit is 'Sq Feet(US)'. The 'Hinge Point' is set to '46 (End)'. There are 'Calculate' and 'Save Point' buttons. At the bottom of the dialog, there are buttons for 'Define Area', 'Map View', a red 'X' button, and 'Close'.

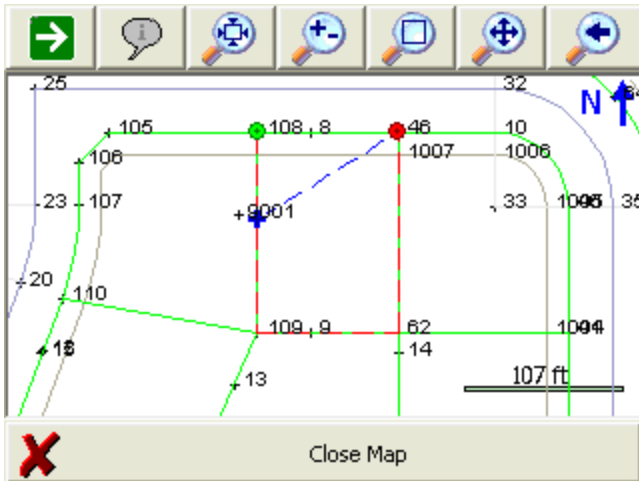


**FieldGenius will compute the new boundary so that it intersects the boundary segments connected to the start and finish points that were defined.**

In the example below, the original left side of the lot now has two segments that define it. In this example, the solution would have to intersect the boundary segments from (108 - 9001). If we use the same predetermined area parameters as above, FieldGenius will not be able to compute a solution because the solution does not intersect the segment between (108 - 9001). It actually would intersect the line from (9001 - 109).

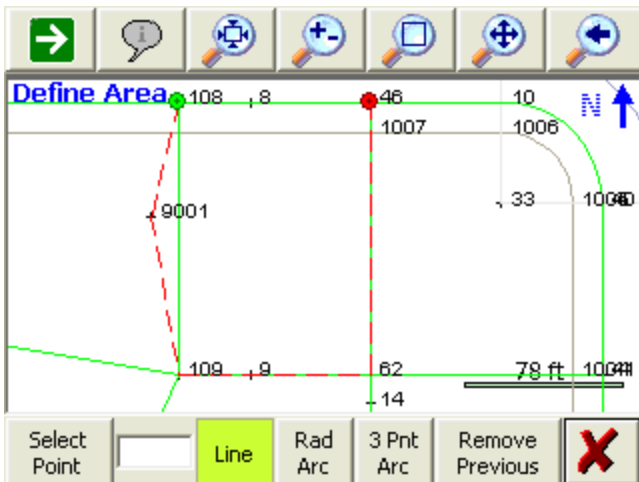

However if we increase the predetermined area amount from 10000 to 12000, a solution can be computed because the solution can now intersect the segment between point 108 and 9001. If you did want to use an amount of 10000, all you would need to do is change the start point from 108 to 9001.

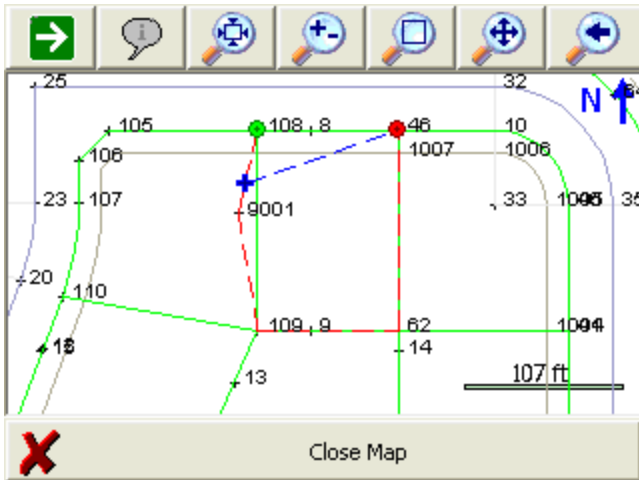

## Parallel Method

The first thing you need to do is define the fixed sides for your area. It is important to note that Field-Genius will try to compute the new boundary so that it intersects the segments connected to the start and finish points that you define.


The start and finish points (markers) are represented using a green and red circle marker. You can always press world button on the [Display toolbar](#) which will place text labels next to the start and finish points.

The image shows a software interface for area calculations. At the top, there is a toolbar with navigation icons (back, forward, home, zoom in, zoom out, pan, and a red X). Below the toolbar is a map area titled "Define Area" showing a green polygon with several vertices. The vertices are labeled with coordinates: (108, 8), (46, 10), (1007, 1006), (1006, 33), (1004, 1004), (62, 78 ft), (109, 9), and (14, 14). A north arrow is visible in the top right of the map area.

Below the map is a toolbar with buttons: "Select Point", "Line" (highlighted in yellow), "Rad Arc", "3 Pnt Arc", "Remove Previous", and a red X.


Below the toolbar is a dialog box titled "Area Calculations" with a help icon (123 ?). The dialog has two tabs: "Calculate Area" and "Determine Area" (highlighted in yellow). Under the "Determine Area" tab, there are two radio buttons: "Hinge Method" and "Parallel Method" (selected). Below these are input fields for "Area" (3000.000000) and "Direction" (90°00'19.0"). A "Calculate" button is below the input fields. At the bottom of the dialog are "Save Point A" and "Save Point B" buttons. At the very bottom of the dialog are "Define Area", "Map View" (with a globe icon), a red X, and "Close" buttons.

Once a solution has been found you can always preview it by pressing the **Map View** button.

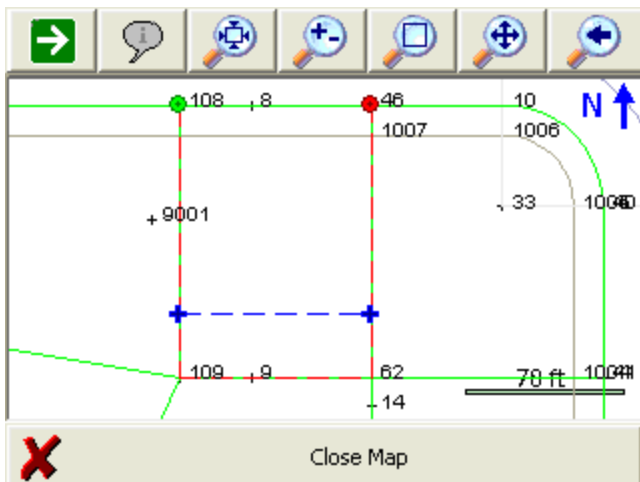


As mentioned above, **FieldGenius will compute the new boundary so that it intersects the boundary lines connected to the start and finish points that were defined.**


In the example below, the original left side of the lot now has two segments that define it. In this example, the solution would have to intersect the boundary segments from (108 - 9001) and from (46 - 62). If we use the same predetermine area parameters as above, FieldGenius will not be able to compute a solution because the solution does not intersect the two segments.

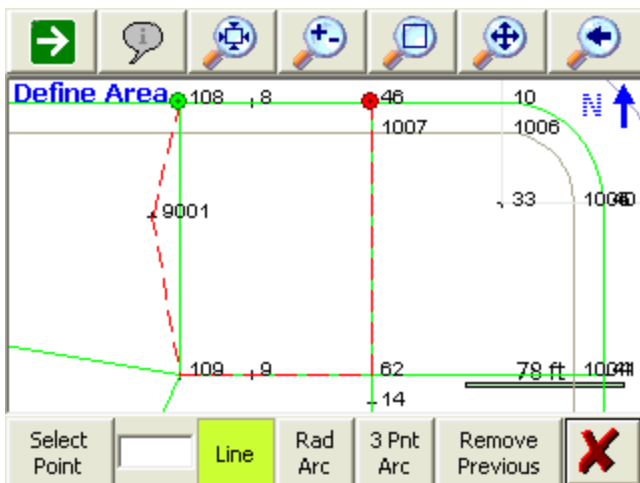

However if the direction for the boundary is changed to 130°, and the area amount changed to 7000, a solution can be computed because the solution intersects the two segments connected to the start and finish points.

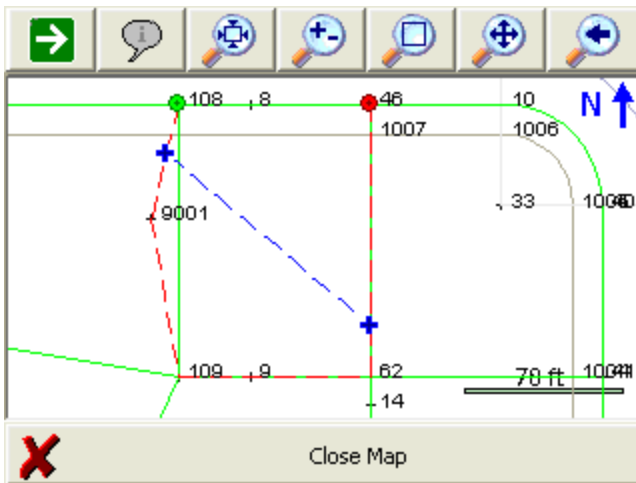


If you did want to keep the same area amount and direction, all you would need to do is change the starting point.

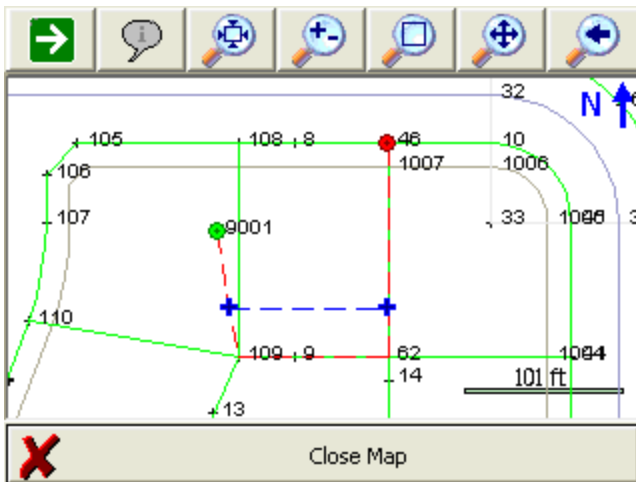

## Storing a Solution

When you have a solution that you want to store simply press the **Save Point** button or buttons depending on the solution method you used. If you used the parallel method you will have two solutions to choose from. You can switch to the **Map** view and turn the **World** button off if you want to see some temporary text labels next to the computed solution points.




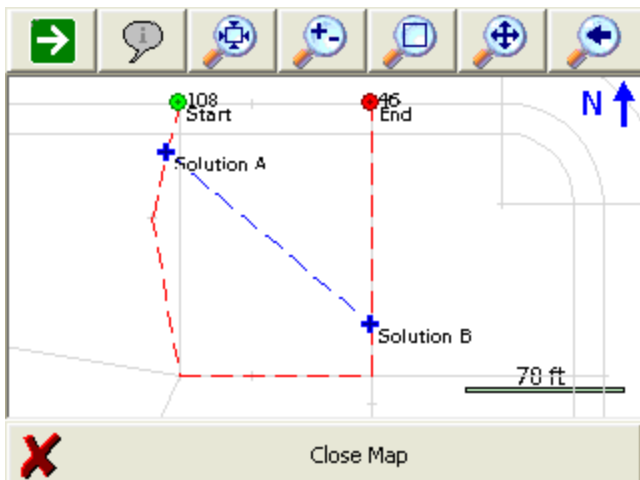

## Triangle Calculator

[Main Menu](#) | [Calculations](#) | [Triangle Calculator](#)


The triangle calculator can be used to solve unknown sides or angle of a triangle given three known components.

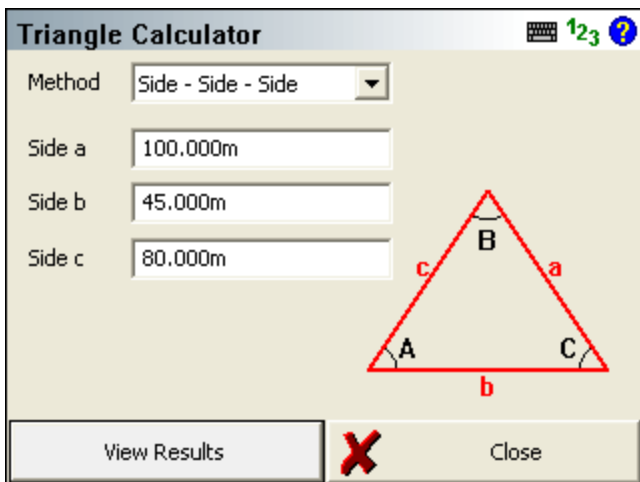

You first need to select a Method for the triangle calculation. There are 5 methods available to choose from and you can decide what method to use based on your known triangle components.

- **Side-Side-Side:** Use this when you know the length of the three sides of a triangle.
- **Angle-Side-Angle:** Use this when you know two angles and the distance between them.
- **Side-Angle-Angle:** Use this when you know two angles and one side. The know side must not lie in between the two known angles.
- **Side-Angle-Side:** Use this when two sides and the angle between them are known.
- **Side-Side-Angle:** Use this when two sides and one angle that is not between the known sides are known. This method will produce two solutions.

After you choose the solution method and enter the known components of the triangle, press the **View Results** button to complete the calculation.

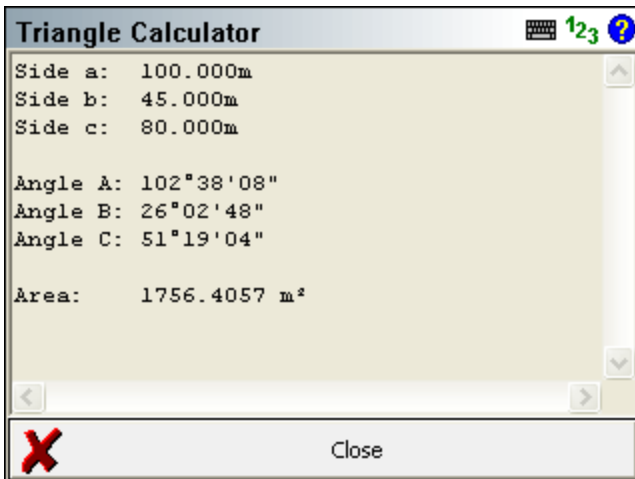

## Coordinate (Geodetic) Calculator


[Main Menu](#) | [Calculations](#) | [Coordinate Calculator](#)

The coordinate calculator is used to convert Geodetic coordinates to Cartesian coordinates and vice versa. You can also use it to convert ellipsoid heights to orthometric heights if you have defined a geoid.

### Define Coordinate Systems

Press the Select Coordinate Systems button to select the coordinate system and geoid you want to use.


In the following example the user chose to convert between UTM Nad 83 Zone 11 to Lat and Long WGS 84. Also as the same time the elevation is being converted from an ellipsoid height to a orthometric height using the Canadian HT2.0 geoid.

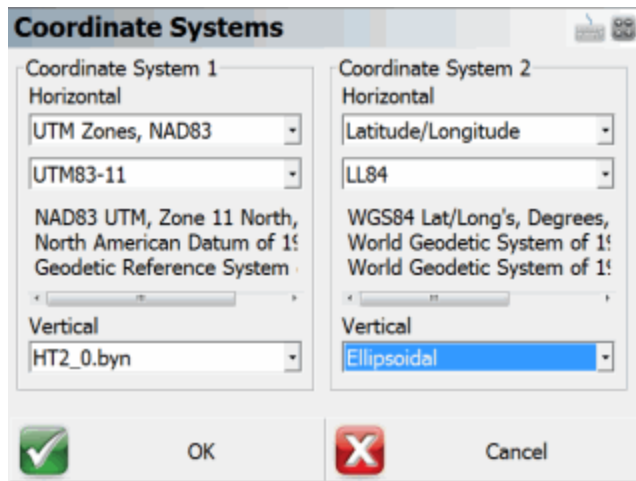

### Convert Coordinate

Once you've defined the coordinate systems you want to convert between you can then enter some numbers.

Press the Convert button to make the computation.

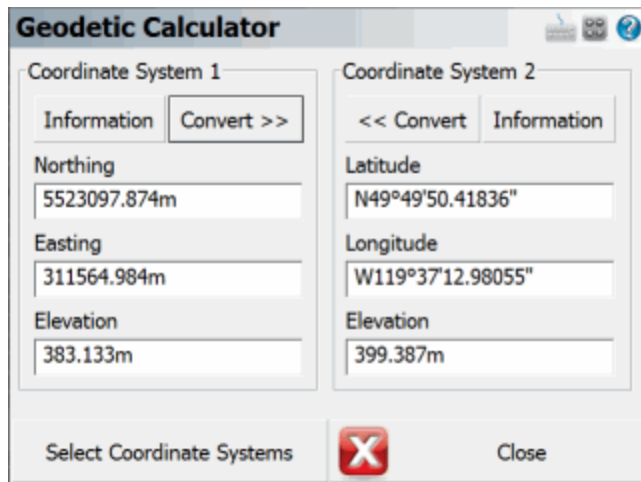

## Information

Press the information button to see details about the coordinate system such as grid scale, and convergence angle.


# Calculator

## Main Menu | Calculations | Scientific Calculator

FieldGenius includes an RPN (Reverse Polish Notation) Calculator. RPN Calculators (such as the HP48) are stack based, where values are popped from a stack, and the results of the calculation are pushed back onto the stack. This type of calculator may seem foreign at first, so several examples of its use are included below.

The calculator can be launched several ways:

1. By tapping inside certain numeric entry fields to directly open the Calculator. This will copy whatever value is currently in that entry field into the calculator's command line, and the calculated value can then be automatically copied back into the field which the calculator was launched from.
2. By tapping inside most text and numeric entry fields to open the keypad, and then tapping the "Calculator" button on the keypad. This will copy whatever value was currently in that entry field first into the keypad and then into the calculator's command line. The calculated value can then be automatically copied back into the keypad and then to the field which the calculator was launched from.
3. It can be launched from the map screen using its Keyboard Shortcut (default is the F key).
4. Or it can be launched through the menu system.

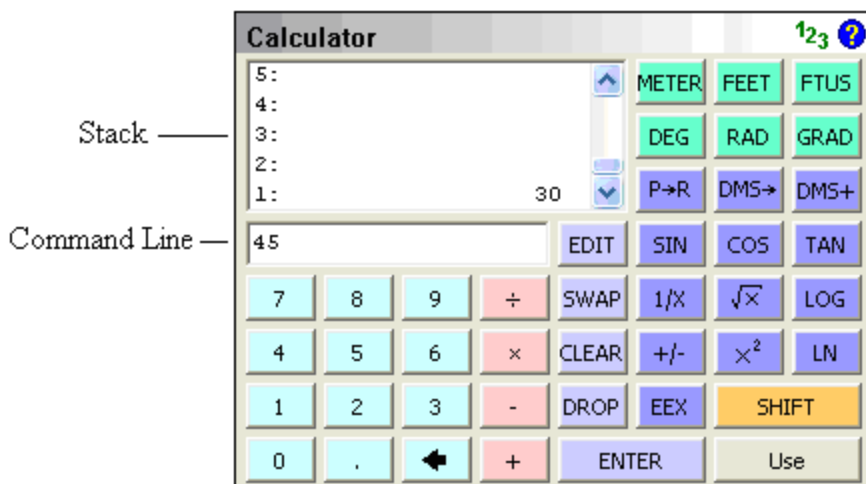

## The Stack

The stack is a series of memory storage locations for numeric data. Each location in the stack is called a Level. There are a maximum of 20 Levels available in the Stack.

As you push new values on the stack, the stack grows to accommodate them: the new data moves into level 1, and older data is pushed to a higher level. Data in level 1 will move to level 2, data in level 2 to level 3, and so on. Any data in level 20 will be bumped off the stack if new data is added, and is unrecoverable. As you pop data off of the stack, the number of levels decrease as data is automatically bumped down to lower levels.

The stack display always shows levels 1 to 5, and you can use the scroll bar to view the other levels up to level 20.

## The Command Line

The command line is where you enter or edit data. You can enter up to 20 characters in the command line.

The command line is closely tied to the stack. You use it to enter or edit data and then process it, and the results are pushed onto level 1 of the stack.

## Function

### Numeric Entry

You can enter values using the keys provided on the calculator or use the numeric keys on your keyboard.

**[ 0 ] - [ 9 ]** - Types numeric data into the command line

**[ <-- ]** - Types a backspace into the command line. You can also use the Backspace key on your keyboard.

### Stack Operations

Functions are available to help you manipulate data that is currently stored in the stack.

**[ EDIT ]** - Pops data from level 1 of the stack into the command line, bumping all other data down one level.

**[ SWAP ]** - Switches positions of the data in levels 1 and 2 of the stack. Or you can highlight a level on the stack and pressing the Swap button will move the value to level 1.


**[ CLEAR ]** - Deletes all data from the stack.

**[ DROP ]** - Deletes the data in level 1 of the stack, bumping all other data down one level.

[ **ENTER** ] - Pushes data from the command line into level 1 of the stack, bumping all other data up one level. You can also use your keyboard's Enter key.

## The Shift Button

[ **SHIFT** ] - This is used to show the reverse functions of each operation.

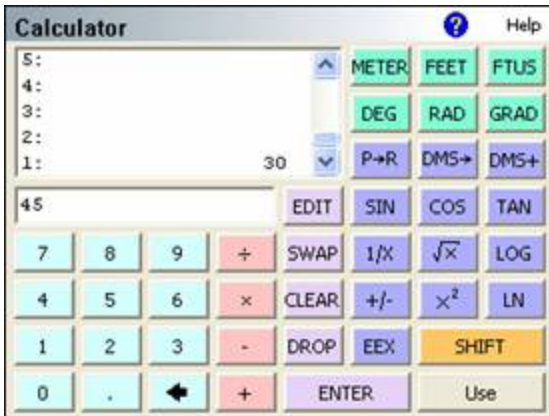

When the shift key highlighted in yellow, it indicates that the shift key is currently depressed, press it again to un-shift



## The OK/Cancel button

[ **OK** ] copies the value in level 1 of the stack back into the either the keypad or the numeric entry field which was double-tapped to launch the calculator, and closes the calculator.

[ **Cancel** ] closes the calculator, without copying the data anywhere

Note:

All data will remain on the Stack, and will be available the next time the calculator is re-started. On Exiting from FieldGenius, all data on the stack is written out to a file called CalcStack.bin and will be automatically re-loaded when FieldGenius is re-started.

---

## Converting Units

### [ METER ], [ FEET ], [ FTUS ]

Assigns a linear unit to the data in the Command Line, and places it on the Stack. If the Command Line is empty, then the unit is applied to the data currently in Level 1 of the Stack.

### [ DEG ], [ RAD ], [ GRAD ]

Assigns an angular unit to the data in the Command Line, and places it on the Stack. If the Command Line is empty, then the unit is applied to the data currently in Level 1 of the Stack.

**Note:**

You do not need to press enter before pressing a unit button, it will automatically move whatever data is in the Command Line into Level 1 of the Stack.

Example: determine the metric equivalent of 15 feet:

```
[1][5] [FEET] [METER]
```

```
1:      4.572_m
```

Example: determine the gradient equivalent of 45 degrees:

```
[4][5] [DEG] [GRAD]
```

```
1:      50_grad
```

---

## Basic Mathematical Operations

### [ + ], [ - ], [ × ], [ / ]

Performs a mathematical operation on the data in Level 1 and Level 2 of the Stack, or on Level 1 and the Command Line.

**Note:**

You do not need to press [ENTER] before pressing a math button, it will automatically move whatever data is in the Command Line into Level 1 of the Stack.

Example: determine the sum of 2 + 3

```
[2] [ENTER] [3] [+]
1:      5
```


## Advanced Mathematical Operations

### Note:

You do not need to press [ENTER] before pressing a math button, it will automatically move whatever data is in the Command Line into Level 1 of the Stack.

### [ P>R ] , [ R>P ]

Convert data between Polar and Rectangular notation

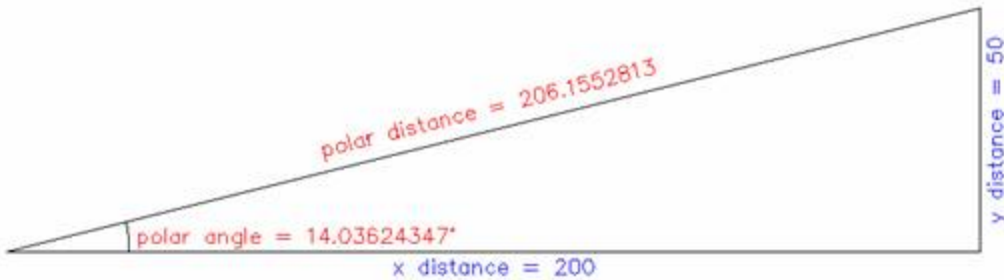

Example: Convert 206 feet at 14° to Rectangular components.

```
[2][0][6][ENTER][1][4][P->R]
2: 199.8809196
1: 49.83591049
```

Example: Convert x=200, y=50 to Polar components.

```
[2][0][0][ENTER][5][0][SHIFT][R->P]
2: 206.1552813
1: 14.03624347_°
```

### [ DMS> ] , [ >DMS ]

Converts data between Degrees/Minutes/Seconds and Decimal Degrees

Example: Convert from 12° 34' 56" to decimal degrees

```
[1][2][.][3][4][5][6][DMS->]
1: 12.58222222_°
```

Example: Convert from 12.3456° to degrees, minutes, seconds

```
[1][2][.][3][4][5][6][SHIFT][->DMS]
1: 12.204416
```

### [ DMS+ ] , [ DMS- ]



Add or subtract DMS angles

Example: 12° 34' 56" + 1° 2' 3"

```
[1][2][.][3][4][5][6] [ENTER] [1][.][0][2][0][3] [DMS+]
1:      13.3659
```

**[ SIN ], [ COS ], [ TAN ], [ ASIN ], [ ACOS ], [ ATAN ]**

Trigonometric calculations

Example: Cosine of 12.3456°

```
[1][2][.][3][4][5][6] [COS]
1:      0.9768757205
```

Example: Cosine of 12° 34' 56"

```
[1][2][.][3][4][5][6] [DMS->] [COS]
1: 0.9759844006
```

Example: Arc Cosine of 0.3456°

```
[0][.][3][4][5][6] [SHIFT] [ACOS]
1:      69.78157371
```


- [ 1/X ]** Inverse of X. Example: 1/4 = [4] [1/X] = 0.25
- [ √x ]** Square Root of X. Example: ROOT(9) = [9] [√x] = 3
- [ LOG ]** Logarithm (Base 10). Example: LOG(1000) = [1][0][0][0] [LOG] = 4
- [ +/- ]** Change Sign. Example: [3] [ENTER] [+/-] = -3
- [ x<sup>2</sup> ]** X Squared. Example: 3<sup>2</sup> = [3] [x<sup>2</sup>] = 9
- [ LN ]** Natural Logarithm. Example: LN(148) = [1][4][8] [LN] = 4.997212274
- [ EEX ]** Scientific Notation. Example: 3x10<sup>4</sup> = [3] [EEX] [4] = 30,000
- [ pi ]** Pushes pi onto the stack. Example: [SHIFT] [pi] = 3.141592654
- [ x√y ]** X'th root of Y. Example: 3ROOT(8) = [8] [ENTER] [3] [SHIFT] [x√y] = 2
- [ 10<sup>X</sup> ]** 10 to the X. Example: 10<sup>3</sup> = [3] [SHIFT] [10<sup>X</sup>] = 1000
- [ y<sup>X</sup> ]** Y to the X. Example: 2<sup>3</sup> = [2] [ENTER] [3] [SHIFT] [y<sup>X</sup>] = 8
- [ e<sup>X</sup> ]** Exponent of X. Example: e<sup>1</sup> = [1] [ENTER] [SHIFT] [e<sup>X</sup>] = 2.718281828

# STAKING MENU

## Staking Menu

Main Menu | **Staking Menu**

This menu contains staking related functions.

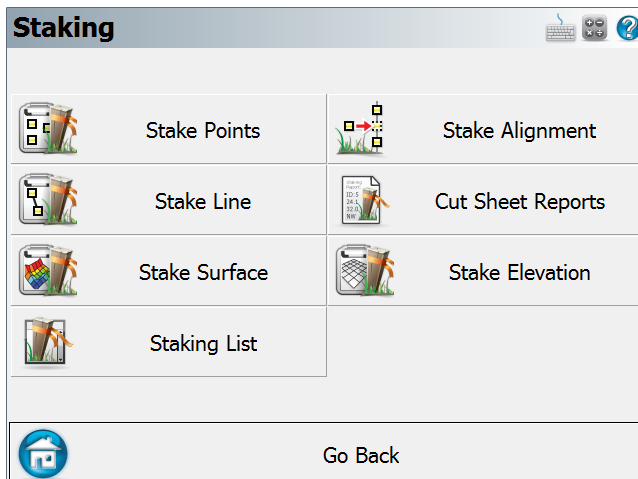

On the staking menu, pressing any of the buttons will take you to its sub-menu.

### Stake Points

Use this to stake points from a list or from a screen selection. Please see the [Stake Points](#) topic for more information.

### Stake Line

Use this to stake lines and arcs. Please see the [Stake Line](#) topic for more information.

### Stake Surface

Use this to stake to a DTM (Digital Terrain Model) surface. Please see the [Stake Surface](#) topic for more information.

### Staking List

Use this to define a staking list that can be used for staking. Please see the [Staking List](#) topic for more information.

## **Stake Alignment**

Use this to open the alignment tools screen. Please see the [Stake Alignment](#) topic for more information.

## **Cut Sheet Reports**

Use this to open the Cut Sheet Reports screen. Please see the [Cut Sheet Reports](#) topic for more information.

# **Stake Points**

[Main Menu](#) | [Staking](#) | [Stake Point](#)

[Point Toolbar](#) | [Stake](#)

## **Step 1: Select Design Point**

When you start the stake points command you will be able to pick a point from the map, or enter a point id in the point id field, or use a point list by turning on the "Use List" toggle.

**Stake Points** 123 ?

Point ID: 4    Prev    Next    Select Design Point

Point Desc: IP

Use Staking List    Edit Staking List

Design Point Offset

Direction	0°00'00"	Northing:	118.134m
Distance		Easting:	88.649m
	0.000m	Elevation:	100.000m

✓ Stake Point    ✗ Close

## **Point ID**

This allows you to manually enter in the point you would like to stake.

## **Point Desc**

This shows the description of the current design point.

### **Previous & Next**

Use this to automatically advance to the next or previous point in your database. Note that you need to have a value entered in the point number field.

If you have a staking list defined, using these buttons will advance to the next or previous point sequence in the staking list.

### **Select Design Point**

This will open the [point chooser](#) toolbar and allow you to select a point to stake from the map.

### **Use List**

Use this to force the staking routine to use the staking list you created. If you haven't created a the staking list yet, you can press the Edit List button which will take you to the staking list editor.

### **Edit Staking List**

Use this to open the staking list editor. Please see the [Staking List](#) topic for more information.

### **Offset Direction & Distance**

Use this to compute an offset from your design point. If you leave the distance field set to zero, an offset will not be computed. You can use [angle](#) and [distance](#) recall features to help you compute your values.

### **Northing, Easting, & Elevation**


This will display the design coordinates for the point listed in the point number field. If you specify an offset, then the northing and easting will be recalculated based on the offset you entered. The elevation is of the point listed in the point id field, and is not affected by an offset.

### **Stake Point button:**

If you're using a non robotic instrument, you will see the "turn to" screen displaying the angle and distance you need to measure to stake the point. Please see section Step 2a below.

If you're using a robotic instrument or GPS, you will see the map screen and the [point staking toolbar](#). Please see section Step 2b or 2c below.

## Step 2a: Non Robotic Total Station Layout

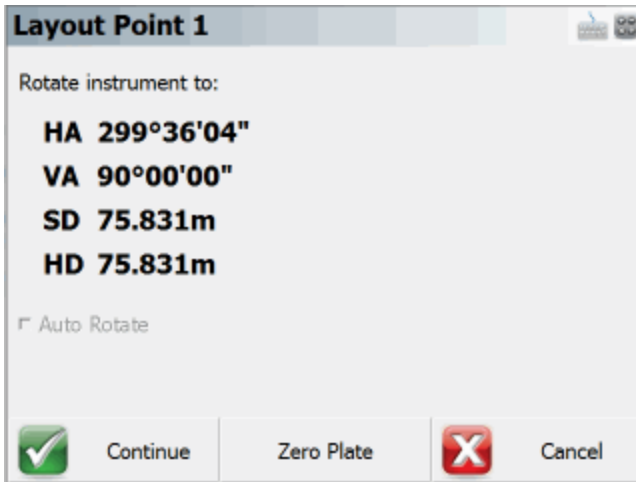

**Layout Point 1**

Rotate instrument to:

**HA 299°36'04"**

**VA 90°00'00"**

**SD 75.831m**

**HD 75.831m**

Auto Rotate

Continue    Zero Plate     Cancel

### Rotate instrument to:

From this screen you will see what angle and distance you need to turn to on your instrument to stake your point.

At this point you can turn your instrument to match the angles and when ready to start, press the Continue button. The Turn To information is also available on the next screen in case you need to see it again.

**Note:** Your target height is used to determine the vertical angle for the stake point.

### Auto Rotate

If your instrument has servo motors and FieldGenius supports your instrument, this option will be available. It will be on by default and will automatically turn to match both the horizontal and vertical angles needed to stake the point. The instrument will begin to turn when you press the Continue button.

### Zero Plate

This is used to modify plate reading on your instrument in such a way that if you manually turn to zero you will be facing towards the point you want to stake.

When you do so, you will see a message "Zero the plate circle to the design point and update the backsight setup?" Press Yes to continue, or No to Cancel. After you press Yes, a new backsight reading is set on the instrument and a BK record is written to the raw file.

You will also note that the turn to angle will now display zero, which is the angle you now need to turn to on the instrument.

You can continue using this for any other points you want to stake. Since the plate reading is changing a lot, you will want to check the backsight frequently to make certain any error meets your tolerances.

### Continue

Press this button to continue. You will now see the map screen and the [point staking toolbar](#).

## Step 2b: Robotic Total Station Layout

If you're using a robotic instrument and have the [Robotic Staking option](#) enabled, the layout routine will bypass the screen and steps explained in the Step 2a section. Instead, FieldGenius will take you directly to the map screen where you will see our [point staking toolbar](#).


By default, FieldGenius will have the robotic staking option enabled for all robotic total stations.

Some users may need their robotic instrument to automatically turn to the layout point instead. If this is desired, just disable robotic staking.

## Step 2c: GNSS Rover Layout

When connected to a GNSS rover, the layout routine will bypass the screen and steps explained in Step 2a. Instead, FieldGenius will take you directly to the map screen where you will see our [point staking toolbar](#).

## Staking Toolbar

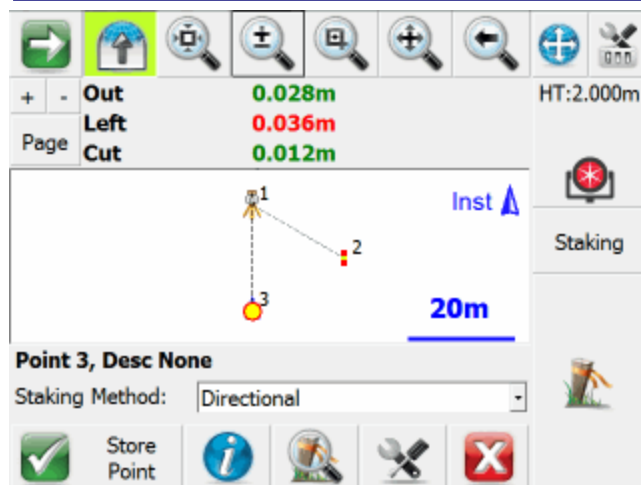

The staking toolbar is used in conjunction with the [Observation Toolbar](#) to help you navigate to your stake point. If you're using a robotic or conventional instrument the staking process will be similar.

The staking toolbar can be accessed by pressing the Stake Point button on the screen. It will also be accessed from many other commands that require a point to be staked.

When you first see the staking toolbar you may see the words "Waiting for data" in the Observation Toolbar which means you need to take a measurement first so it can calculate the current position of the rod. Press the measure button if you're using a conventional instrument, or turn on the cursor tracking button if you're using a robot or GPS.

You should define a map orientation in the [staking settings](#). Setting this will twist your map view to help you with your stakeout and change the way the "move by" distance are reported. Press the Settings button to adjust your Orientation Reference setting. For best results, set the Orientation Reference to Prism for a conventional total station, Instrument for a robotic total station, North for GPS staking.

## **StakingMethod**

For each of the following methods, if you are within the Tolerance setting defined in the [Staking Settings](#), then the direction/distance text will be green; if you are outside the tolerance then the text will be red. You can also switch pages within the [Observation Toolbar](#) at any time to see other measurement information, for example if you want to see the rod elevation instead of a Cut/Fill.

### **Turn An Angle**

This method will display both the required and measured horizontal angles in the [Observation Toolbar](#) near the top of the screen. This method is useful while staking with a conventional total station, to quickly get online with the design point.

### **Directional**

 
This method will display the In/Out and Left/Right (or N/S/E/W), and Cut/Fill distances from the current rod position to the design point in the [Observation Toolbar](#) near the top of the screen. This method is useful while staking with a conventional or robotic total station, but be sure to set the "Orientation Reference" option to Prism for a conventional total station, Instrument for a robotic total station, or North for GPS staking.

### **Radial**

This method will display the Direction (Bearing or Azimuth) and Distance from the current rod position to the design point in the [Observation Toolbar](#) near the top of the screen. This method is useful while staking with a robotic total station or GPS.

---

## Other Buttons

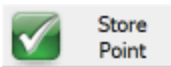

### Store Point

When this is pressed the [Store / Edit Points](#) screen will appear so you can store the position of the rod. The default is to store a point in the project database as well as write raw records to the raw file. You might not want to store a point for the staked position but want to have a record of it in the raw file. This can be done by turning off "Store Staked Point" in Stake Settings. (This button not available for GPS staking, use the Measure button to record the point.)



### Information

This displays information about the point you are staking. It will list the coordinates of the point plus other information that will help you during your stakeout.



### Zoom

This will automatically zoom to the extents of your current target position and the point you're staking.



### Settings

This will open the [Staking Settings](#) screen which allows you to setup parameters that will be used during the stakeout such as your Tolerance, Orientation Reference, and more.



### Close

This will close the Staking Toolbar, and return you to the previous screen.

---

## Conventional Total Station Tips

If you're using a conventional total station you need to press the measure button on the instrument toolbar before the navigate distances are displayed.

To help with navigating, set your map orientation to Prism in the staking settings screen. This will force the map to orientate itself so the prism is at the top and the instrument is at the bottom.

You can use the Turn An Angle method to quickly get online with your point, then switch to the Directional method to navigate accurately to the point.

---

## Robotic Total Station Tips

If you're using a robotic instrument you need to turn on the cursor tracking button on the instrument toolbar before the navigate distances are displayed. Note that with a robotic instrument, there is no need to press the measure button as the cursor tracking provides real-time positions to the Observation Toolbar.



To help with navigating, set your map orientation to Instrument in the Settings screen. This will force the map to orientate itself so the instrument is at the top and the prism is at the bottom.

You can set the EDM mode on the instrument toolbar to use a fine measurement setting that can be used to record the position of the point. When cursor tracking is on it uses a coarse mode which might not be suitable for the storing the point, but suitable enough to for navigation. For precise stakeout you can use the following procedure:

1. Use cursor tracking to navigate to your point.
2. When you attain the position to be staked you can do one of two things:
  - a. If tracking mode is precise enough for your needs you can turn off cursor tracking, then press the Lock button to stop the instrument from tracking the prism. It is useful to do this as the instrument will still be pointed at the stake location and prevents the instrument from following the prism if you have to lay it down.
  - b. If you need to take a more accurate position before marking the point or pounding in your stake: You can turn off cursor tracking, then press the measure button to help you locate the stake point. By doing this it will use the EDM mode set in the instrument toolbar (make certain it is set to a fine mode) instead of using the coarse (tracking) mode. Once the point is located, make sure to press the Lock button to stop the instrument from tracking the prism. It is useful to do this as the instrument will still be pointed at the stake location and prevents the instrument from following the prism if you have to lay it down.
3. Mark your point or pound in your stake.
4. Set the prism on the point you just marked and press the No Lock button which will initiate a search. Since you stopped the instrument from tracking in the previous step the instrument should lock onto the prism very quickly.
5. Press the Measure button to record one final position for the stake point.
6. Press the Store Point button on the staking toolbar to store the final location of the point you just staked.

---

## GPS Tips

To help with navigating, set your map orientation to North in the settings screen. This will force the map to orient itself so that North remains up on the screen.

Use cursor tracking to navigate to your point (this provides real-time positions to the Observation Toolbar) then when you attain the final position to be staked press the Measure button. The usual GPS Measurement procedure will apply, and your current tolerance mode and masks will be in effect for the measurement.

---

## Raw File

When you store your point several records are written to the raw file. Following is an example of a point that was staked out:

```
|SP,PN1400,N 715346.319,E 2381454.812,EL1.009,--  
|CF,EL1.0087,GD1.0000  
|DE,PN342,N 715346.319,E 2381454.770,EL1.000,--  
|SD,ND-0.000,ED-0.042,LD-0.009  
|SK,OP251,FP1400,AR180.00000,ZE89.05000,SD63.0500,--Design Point: 342
```

The SP record is the point that was recorded when you pressed the Store Point button.

The CF record displays the measured elevation versus design.

The DE record displays the design coordinates for the point to be staked.

The SD record displays the delta values of the staked point. This is the DE record - SP record.

The SK record is the recorded raw observation used to compute the store point (SP) record.

**Note:** If you turned off "Store Staked Point" in the staking settings, then no SP or CF record will be stored in the raw file.

---

## Stake Line/Arc

[Main Menu](#) | [Staking](#) | [Stake Line](#)


[Line Toolbar](#) | [Stake](#)

---


### Stake Line

You can stake a line by selecting points in the drawing, or by selecting an existing figure or a DXF line.

When you start the command from the Staking Menu you will see the [Select Line Toolbar](#) that will allow you to select the object you want to stake.

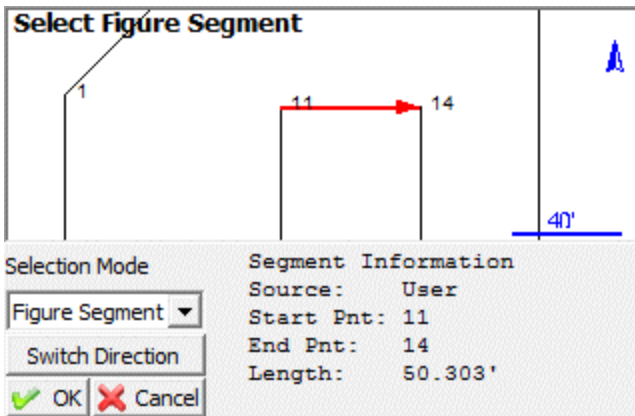


Press OK to continue on to the Station/Offset screen.

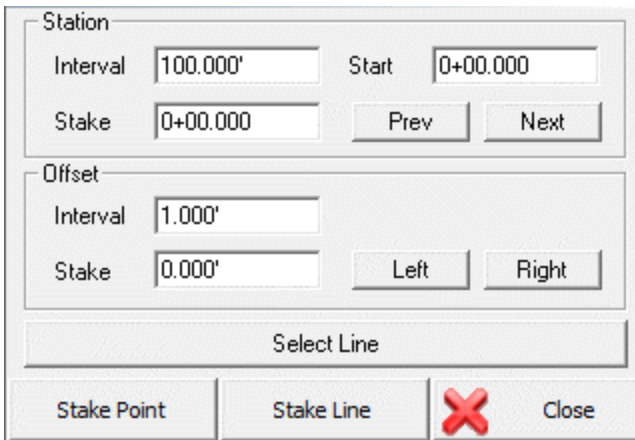

If you want to stake the line, just press the **Stake Line** button which will display the stake line toolbar.

If you want to stake a specific point along the line, specify the station/offset distances then press the **Stake Point** button which will display the [stake point toolbar](#) for the specified design point.

When the stake line toolbar opens you have to take a shot before any information will appear on the toolbar.

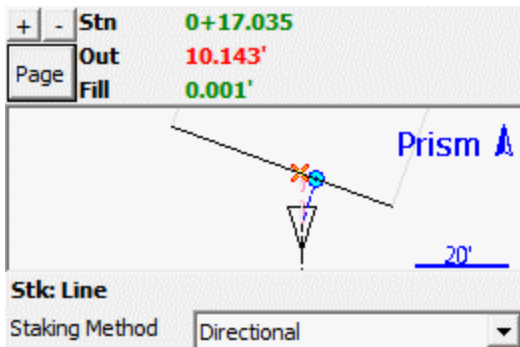

## StakingMethods

For each of the following methods, if you are within the Tolerance setting defined in the [Staking Settings](#), then the direction/distance text will be green; if you are outside the tolerance then the text will be red. You can also switch pages within the [Observation Toolbar](#) at any time to see other measurement information, for example if you want to see the rod elevation instead of a Cut/Fill.

### Directional

This method will display the current Station (perpendicular from the rod, as marked by a blue circle on the line), the In/Out, Left/Right, or N/S/E/W distance to the line (from the rod to the red x on the line, keeping the same horizontal angle), and the Cut/Fill distance (from the rod to the interpolated elevation of the station point marked by the blue circle, where a cut represents that the rod is higher than the interpolated station elevation, and a fill represent that the rod is lower than the interpolated station elevation) in the [Observation Toolbar](#) near the top of the screen.

When using this method, be sure to set the "Orientation Reference" option to Prism for a conventional total station, Instrument for a robotic total station, North for GPS staking, or use one of the other reference options if preferred.

You can force FieldGenius to display either In/Out or Left/Right distances by changing the Line Mode option in the [Staking Settings](#).

### Stationing - Absolute

This method will display the current Station, Offset, and Cut/Fill distances relative to the line in the [Observation Toolbar](#) near the top of the screen. The station point is marked by a blue circle on the line, the Offset is the Left/Right distance from the blue station point to the current rod position, and the Cut/Fill is the elevation difference from the current rod position to the interpolated elevation of the station point where a cut represents that the rod is higher than the interpolated station elevation, and a fill represent that the rod is lower than the interpolated station elevation.

## Stationing - Relative

This method will display the current Station, Offset, and Cut/Fill distances relative to the line in the [Observation Toolbar](#) near the top of the screen. The station point is marked by a blue circle on the line, the Offset is the Left/Right distance from the blue station point to the current rod position, and the Cut/Fill is the elevation difference from the current rod position to the interpolated elevation of the station point where a cut represents that the rod is higher than the interpolated station elevation, and a fill represent that the rod is lower than the interpolated station elevation.

**Note:**

Please refer to the [Point Staking Toolbar](#) topic for additional information and tips.

## Stake Arc

The process is identical whether staking a line or an arc - the only difference is you begin by selecting or defining an arc instead of a line

**Select Figure Segment**

Segment Information

Source:	User
Start Pnt:	4
End Pnt:	5
Length:	185.211'

Selection Mode: Figure Segment

Switch Direction

OK Cancel

---

Stk: Line

Staking Method: Directional

Stn: 0+22.777

Out: 40.320'

Fill: 6.000'


## Stake Surface

**Main Menu | Staking | Stake Surface**

The Stake Surface command allows you to take a shot anywhere on a surface and a cut or fill value will be computed. The current northing and easting position of the rod is based on the measurement, but the Z value is computed by intersecting the surface at the rod location.

You will first be prompted to select a surface to stake. If you have already imported and turned on the TIN or Contours for any surfaces, they will be displayed in the list for you to choose from. If the list is empty, you need to use the Surface Manager to import or enable one. Please refer to the [Surface Manager](#) topic for more information on how to load a surface.

When you first see the staking toolbar you may see the words "Waiting for data" in the Observation Toolbar which means you need to take a measurement first so it can calculate the current position of the rod. Press the measure button if you're using a conventional instrument, or turn on the cursor tracking button if you're using a robot or GPS.

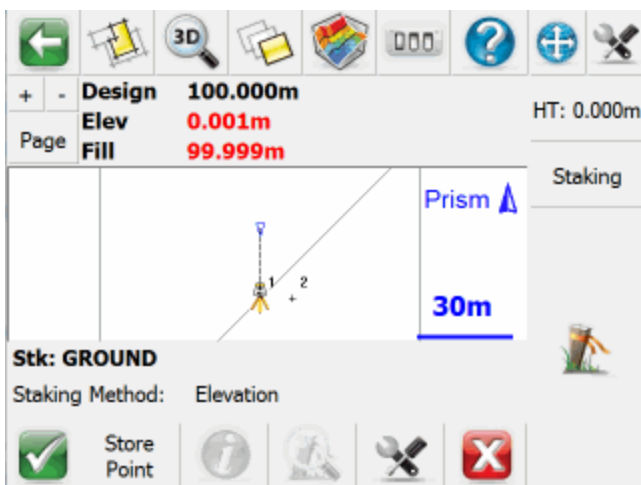

Once you take a shot you will see the following information in the [Observation Toolbar](#) near the top of the screen: the Design elevation based on the surface model's elevation at your rod's horizontal position, the actual Height or elevation of the rod, and the Cut or Fill between the two. To help you visualize where your shot is in relation to the surface you can always use our [3D view](#) capabilities.

### Staking Method

Unlike Point or Line/Arc staking, there is only one available staking method: Height.

### **Store Point**

When this is pressed the [Store / Edit Points](#) screen will appear so you can store the position that was staked. Also a raw record will be written to the raw file.

### **Information**

This isn't applicable when staking to a surface and will be grayed out.

### **Zoom**

This isn't applicable when staking to a surface and will be grayed out.

### **Settings**

This will open the [Staking Settings](#) screen which allows you to setup parameters that will be used during the staking process.

**Note:**

Please refer to the [Point Staking Toolbar](#) topic for additional information and tips.

## **Staking List**








[Main Menu](#) | [Staking](#) | [Staking List](#)

Use a staking list to stake points from a predetermined list of points.

### **Why Use a Staking List?**

The staking list is separate from the Points database. We have added intelligence to the staking list specifically for staking out. After importing points and assigning the "To Stake Out" survey role to them, you will never have a measured point appear as a point to be staked out. Moreover, the staking list will always search for and present the next nearest point (shortest path) from the current position as the next point to stake out. This functionality was added to help you stake out more points in a day.

When you start the staking list command you will see the staking list screen and it will be empty, if you haven't previously added any points to it. The image below is of a staking list that contains points.

Staking List				
Point ID	Description	Staked Status		
1	Nail			
2	Nail			
3	Nail			
4	Nail			
5	Nail			
Sort By Point ID		Sort By Shortest Path		
Find Points	Remove Points	Move Up		Stake Pnt
Select Point	Remove All Points	Move Down		Close

### Sort By Point ID

Use this to sort the staking list by Point ID.

### Sort By Shortest Path

Select the first point you want to stake, then use this to sort the staking list by shortest path distance from the selected point.

### Find Points

Use this to find points that will be added to the list. You can find points based on the Point ID, Coordinate, or Description. The system will look in the Points database for points to add to the staking list.

### Select Point

Use this to pick a point from the map. Points will be added to the list in the order they're selected.

### Remove Points

Use this to delete a single row or multiple rows. This will only remove the points from the list and will not delete any points from the Points database.

### Remove All Points

Use this to clear the current list. This will only remove the points from the list and will not delete any points from the Points database.

### Move Up

This will move the currently highlighted point up one row.

### Move Down button:

This will move the currently highlighted point down one row.





## Stake Pnt

This will take you to the staking toolbar to stake out the point that is currently highlighted in the list.

## Staking Status

If a point in your staking list has not been staked yet, it will have a stake icon displayed in the Staked Status column. You will see a green checkmark icon if the point has already been staked.

Point ID	Description	Staked Status
1	Nail	
2	Nail	

As you can see in the image above, point 1 has been staked, and point 2 has not.

## Adding Points to the Staking List

There are two ways to add points to a staking list. You can add points that already exist in the Points database via the staking list screen by pressing the **Find Points** button. The alternative (and possibly the easiest) way is to assign the survey role of **To Stake Out** to points being imported via the **ASCII Coordinate File Import** button in the [Import/Export Menu](#). When points are imported using the **ASCII Coordinate File Import** button and are assigned the survey role of **To Stake Out**, these points will automatically be added to the staking list.



## Working From the List

To work from the list simply highlight the point you wish to stake and press the **Stake Pnt** button which will begin the process. Please see the [Point Staking Toolbar](#) topic for more information. Since you started from the staking list, it will automatically turn on the **"Use Staking List"** checkbox in the [Stake Points](#) screen.

When you store your stake point, the stake point command will automatically go to the next point in the list.

## Survey Role Setting

The status of a point is controlled by the Survey Role type in the project database. You can view the role by using the [Coordinate Database](#) viewer. If the point is pending, it will have a survey role type of "to stake out" (point 2 in the image below). If it has been staked, it will have a survey role of staked out (point 1 in the image below).

1		5523958.627m	312330.376m	393.413m
2		5523853.287m	312321.092m	392.877m

## Stake Alignment

**Main Menu | Staking | Stake Alignment**

When this is selected, the [Alignment Staking](#) screen will be displayed. Note you first need to define an alignment in the [Road Manager](#) screen. Use this to quickly continue staking your alignment.

Please see the Road Reference section for more detailed information about creating and defining alignments.

[Tell me more about ...](#)

[Road Settings](#)

[Manua Entry - Alignment C/L](#)

[Manual Entry - Vertical Profile](#)

[Manual Entry - Template](#)

[LandXML Cross Sections](#)

[Alignment DTM Surface](#)

[Alignment Staking - Part 1](#)


[Alignment Staking - Part 2](#)

[Alignment Slope Staking](#)

## Cut Sheet Reports

**Main Menu | Staking | Cut Sheet Reports**

FieldGenius includes a cut sheet generator. When you stake points or alignments, cut sheet records are recorded in the raw file.

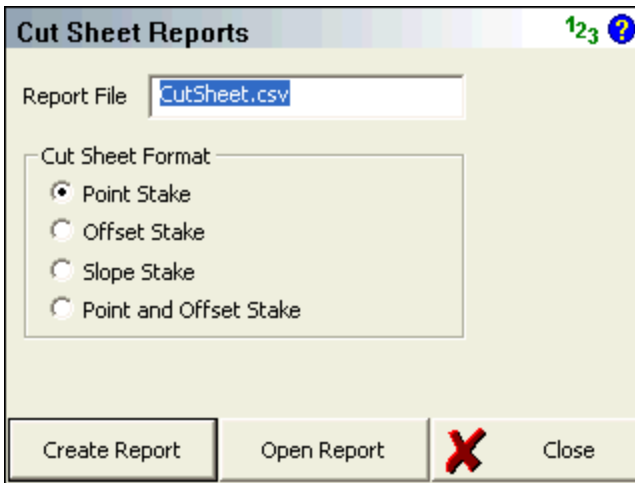

The different cut sheet formats will be described below. To create a cut sheet, select the desired cut sheet format, then press the **Create Report** button, then choose the folder and filename for it. You can give it any extension (one will not be automatically added) but we recommend using either .CSV or .TXT. The extension you provide will not affect the contents of the file in any way.

If you've already created a cut sheet and want to open it to review it, press the **Open Report** button.

FieldGenius automatically creates a (.CSV) comma separated value file for each cut sheet format you create. This file can be read into Excel, which will allow you to format it and print it. The records stored during staking follow the RW5 format so cut sheet records can be created using software packages that support this format.

## Point Stake Format

If you've staked points using the [Stake Point](#) command you will be able to create a stake point cut sheet report.

Design Pt	As Built Pt	Cut(-)/Fill(+)	Design N	Design E	Design EI	Delta N	Delta E	Design Desc	As Built Desc
17	5005	0	5007.202	5003.499	100.202	0	0	GRD	Design Pnt 17
19	5006	0	5006.076	5001.161	100.119	-0.007	0	GRD	Design Pnt 19
20	5007	0	5008.335	4998.831	100.061	-0.007	0	GRD	Design Pnt 20
51	5009	-0.001	5006.573	4992.566	99.815	-0.001	-0.001	GRD	Design Pnt 51
51	5010	-0.001	5006.573	4992.566	99.815	-0.001	-0.001	GRD	Design Pnt 51
30	5011	-0.425	4997.663	4996.693	99.815	-6.249	14.371	E/ASPH	Design Pnt 30
31	5012	-0.739	4996.107	4991.625	99.502	-7.805	9.302	E/ASPH	Design Pnt 31

**LM80 Format:** This option will format the cut sheet in the LM 80 format.

## Offset Stakes Format

If you've staked points using the [stake alignment](#) command, you can create a cut sheet report for your station and offset stakes.

Station	Offset	Offset Length	Cut(-)/Fill(+)	Elevation	Grade	Description
1	Left	1.002	0	100.1662	100.1665	0+01.00 L 1.000
2	Left	0.984	0	100.0624	100.0619	0+02.00 L 1.000
2	Center	0.001	-0.001	100.0629	100.0619	0+02.00 C 0.000
2	Right	1.005	0	100.0622	100.0619	0+02.00 R 1.000
3	Left	1.001	-0.007	99.9643	99.9574	0+03.00 L 1.000
3	Right	0.006	-0.014	99.9715	99.9574	0+03.00 C 0.000
3	Right	1.002	-0.005	99.9619	99.9574	0+03.00 R 1.000

## Slope Stake Format

If you've staked points using the [slope stake alignment](#) command, you can create a cut sheet report for your slope stakes.

Station	Offset Direction	Cut/Fill	Design Slope	Offset Length	Pt Name	Actual EI	Design EI	Ahead On Station	HD to Hinge Pt	VD to Hinge Pt	HD to Center Line	VD to Center Line	Observed Slope	Description
12	Left	Cut	1.00:1	N/A	81	99.984	100.24	-0.032	1.011	0.968	2.011	0.968	1.04:1	CP 0+012.00 L 1.000
6	Left	Cut	1.00:1	N/A	5000	100.15	100.15	-0.013	0.507	0.501	1.507	0.501	1.01:1	CP 0+06.00 L 1.000
6	Left	Cut	1.00:1	N/A	5001	100.15	100.15	-0.002	0.498	0.501	1.498	0.501	0.99:1	CP 0+06.00 L 1.000
6	Left	Cut	1.00:1	N/A	5002	100.14	100.18	0.017	0.521	0.501	1.52	0.501	1.04:1	CP 0+06.00 L 1.000
6	Left	Cut	1.00:1	1	5003	101.53	100.14	0.017	1.513	0.501	2.513	0.501	1.04:1	REF CP 0+06.00 L 2.000
6	Left	Cut	1.00:1	N/A	5004	100.14	100.14	-0.002	0.498	0.501	1.498	0.501	0.99:1	CP 0+06.00 L 1.000
6	Left	Cut	1.00:1	1	82	102.28	100.14	-0.002	1.39	0.501	2.387	0.501	0.99:1	REF CP 0+06.00 L 2.000

## Point and Offset Stake Format

This type of report will display the same records as the Point Stake and Offset Stake reports, but combine them into a single report.

Station	Offset	Offset Length	Design Pt	As Built Pt	Design N	Design E	Design EI	As Built EI	Cut(-)/Fill(+)	Delta N	Delta E	Design Desc	As Built Desc
			17	5005	5007.202	5003.499	100.202	100.2018	0	0	0	GRD	Design Pnt 17
			19	5006	5006.076	5001.161	100.119	100.1191	0	-0.007	0	GRD	Design Pnt 19
			20	5007	5008.335	4998.831	100.061	100.0615	0	-0.007	0	GRD	Design Pnt 20
1	Left	1.002		5008	5011.787	5004.505	100.166	100.1662	0	0.001	-0.001		0+01.00 L 1.000
			51	5009	5006.573	4992.566	99.815	99.8163	-0.001	-0.001	-0.001	GRD	Design Pnt 51
			51	5010	5006.573	4992.566	99.815	99.8163	-0.001	-0.001	-0.001	GRD	Design Pnt 51
			30	5011	4997.663	4996.693	99.815	100.2405	-0.425	-6.249	14.371	E/ASPH	Design Pnt 30
			31	5012	4996.107	4991.625	99.502	100.2405	-0.739	-7.805	9.302	E/ASPH	Design Pnt 31
2	Left	0.984		5014	5011.047	5003.832	100.062	100.0624	0	-0.018	0.005		0+02.00 L 1.000
2	Center	0.001		5015	5011.719	5003.092	100.062	100.0629	-0.001	-0.001	0		0+02.00 C 0.000
2	Right	1.005		5016	5012.391	5002.352	100.062	100.0622	0	-0.006	0.001		0+02.00 R 1.000
3	Left	1.001		5017	5010.306	5003.16	99.957	99.9643	-0.007	0	-0.001		0+03.00 L 1.000
3	Right	0.006		5018	5010.978	5002.42	99.957	99.9715	-0.014	-0.007	0.002		0+03.00 C 0.000
3	Right	1.002		5019	5011.651	5001.68	99.957	99.9619	-0.005	-0.004	-0.001		0+03.00 R 1.000


## Stake Elevation

### Main Menu | Staking | Stake Elevation

This routine allows you to stake to a specific elevation (called the **Design** elevation). The routine will report the cut and fill values from the selected (Design) elevation to your current rod elevation. The horizontal position is not the focus of this routine.

Why would I want to use this? Maybe you may want to use this function if you have to stake a building pad before concrete is poured and you know what the height of the pad should be. You enter this value in the **Elevation** field and walk around your pad. This routine will inform you of how far your rod is above or below the design elevation.

The first step is to define your constant elevation. You can either type in a design elevation manually into the **Elevation** field, or you can use the **Get elevation from point...** button to select a point from your points database, and use its elevation.

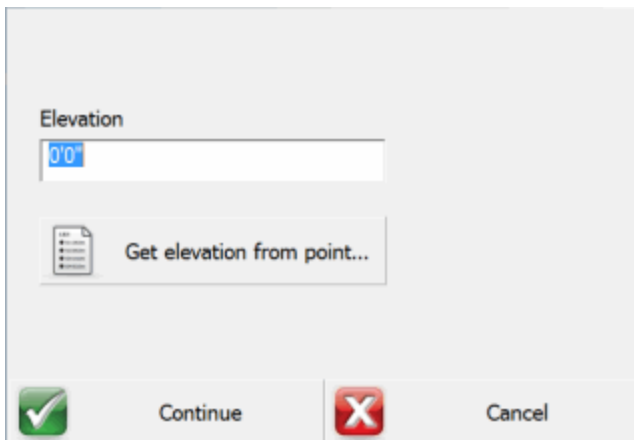

### Continue

Press this button to continue to the Map view. You will now see the map screen displaying the [Staking](#) toolbar. The [Display](#) toolbar displays the design elevation (the intended or desired elevation), the actual measured elevation (displayed in the Elev field), and the cut/fill amount required to get to the design elevation from the measured elevation.

Design = Elev + Fill amount or

Design = Elev - Cut amount

### Get elevation from point...

Press this button to acquire an elevation from a selected point's elevation. The point database dialog will open and you can select a point to use its elevation.

The **Elev** and **Cut/Fill** text fields will display values that are within your staking tolerance in the colour green. Measurements made outside of your staking tolerance are displayed in the colour red.

<b>Design</b>	<b>383.304m</b>	<b>Design</b>	<b>383.304m</b>
<b>Elev</b>	<b>383.285m</b>	<b>Elev</b>	<b>383.476m</b>
<b>Fill</b>	<b>0.019m</b>	<b>Cut</b>	<b>0.172m</b>

Please refer to the [Options](#) Staking topic for more information on staking tolerances,

### Staking Tool Bar




Please refer to the point [staking](#) toolbar topic for more information on how to use the staking toolbar.

# DATA MANAGER MENU

## Data Manager Menu

[Main Menu](#) | **Data Manager**

This menu allows you to organize, manipulate and view the different data types that may be associated with your FieldGenius projects.

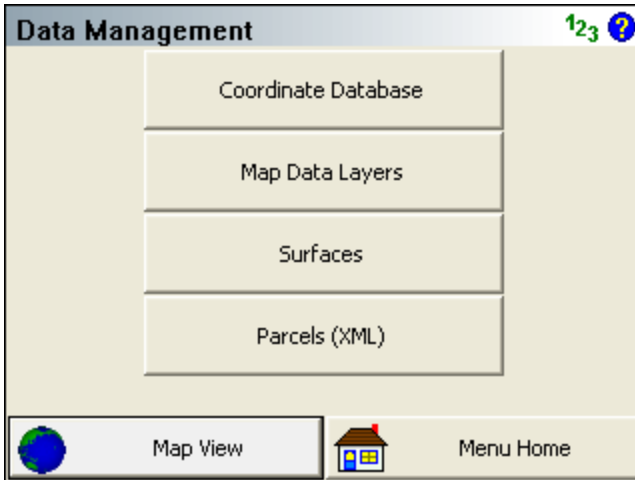

### [Coordinate Database](#)

Use this to open the points database. From here you will find numerous tools that can be used to edit your points. Please see the [Coordinate Database](#) topic for more information.

### [Map Data Layers](#)

Use this to import DXF, LandXML, and georeferenced raster image files into your project, and to control the visibility of database layers and any files that you may have associated with your project. Please see the [Map Data Layers](#) topic for more information.

### [Surfaces](#)

Use this to import DTM surface files into your project, view and edit your DTM surfaces, and perform volume calculations. Please see the [Surfaces](#) topic for more information.

### [Parcels \(XML\)](#)



 
 

Use this to edit and view your XML parcels that are associated with your project. Please see the [Parcels \(XML\)](#) topic for more information.

## Point Database

### Main Menu | Data Manager | Point Database

The point database dialog is used to review, edit, and manipulate your point data in your project database. The list will display all points currently stored in the database, and the data can be sorted by pressing the column headers.

Point Database			
Point ID	Northing	Easting	Elevation
1	5523958.627m	312330.376m	393.413m
2	5523853.287m	312321.092m	392.877m
3	5523853.567m	312320.797m	392.747m
4	5523947.627m	312330.376m	391.413m
5	5523882.649m	312304.231m	394.168m
6	5523851.309m	312319.695m	393.413m
7	5523869.731m	312330.376m	393.678m


 Edit
 
 Delete
 
 Add
 
 Find
 



### Point ID (Survey Role) Icons



The instrument icon indicates your current occupied point.



The target icon indicates your current backsight point.



The stake icon indicates points that are to be staked out.



The checked stake icon indicates points that have been staked out.



The hub icon indicates control points, they can not be edited under any circumstances.



The user icon indicates user entered points, the coordinate can be edited.



The ruler icon indicates measured points, the coordinate can not be edited.



The 123 icon indicates calculated points, the coordinate can not be edited.



The stake and square icon indicates a Staked and Stored point. The Staked and Stored survey role is unique and not associated with LandXML schema.

#### **Note:**

To edit the coordinate of a measured or calculated point, you must first change its survey role to **user entered**.

### Next/Previous

Use the green arrow button to display the next button sets for more options.

### Edit

Use this to edit the coordinates of a point that is highlighted in the list using the [Store/Edit Points](#) tool. Remember you must change the Survey Role to **User Entered**.

### Delete

Use this to delete the current point or selection in the list. Note: There is no undelete point option in FieldGenius. If you delete points from the coordinate database they can not be restored without editing and reprocessing your raw file.

**Add**

Use this to open the [Store Point](#) screen to manually enter a new point.

**Find**

Use this to select multiple points, based on a single point ID, a point ID range, a point coordinate range, or point descriptions.

**RTS (Rotate/Translate/Scale)**

Use this to rotate or translate your points that are currently selected in the coordinate list. When you press the button you will see the Rotate / Translate / Scale Points screen. Please refer to the [Rotate / Translate / Scale](#) topic for more information.

**Local Transform**

Use this to apply a coordinate transformation to a point or selection in the coordinate list. You need to have calculated the transformation parameters prior to pressing this button. See the

**Statistics**

Use this to display statistics of the coordinate database, including the total number of points, bounding minimum and maximum coordinate values, and point ID's in use, and point ID's not in use.

**Map View**

Use this to display the currently highlighted points on the screen.

**Average**

Press this button to enter the [Point Averaging](#) routine.

## **Map Data Layers Manager**

**[Main Menu](#) | [Data Manager](#) | [Map Data Layers](#)**

Use this to load, unload, and control the visibility of DXF files, LandXML files, and JPG or TIFF raster image files that are associated with your project, and to control the visibility of your database layers.


The screenshot displays the MicroSurvey FieldGenius 2012 software interface. At the top left is the **Layer Manager** window, which contains a tree view of project layers. The layers are: **User Data** (expanded), **Database** (checked), **DXF Files** (expanded), **Westbank.DXF** (checked), **LXML Files** (expanded), and **Image Files** (expanded). Under **Image Files**, two files are listed: **82e-082-029.jpg** and **82e-082-039.jpg**, both with checked boxes. Below the layer list are four buttons: **Add File**, **Remove File**, **File Settings**, and **Close**. To the right of the Layer Manager is a status indicator showing '123' and a help icon.

Below the Layer Manager is a navigation toolbar with icons for: **Home** (green arrow), **Help** (green speech bubble), **Zoom In** (magnifying glass with plus), **Zoom Out** (magnifying glass with minus), **Zoom Reset** (magnifying glass with square), **Zoom Full** (magnifying glass with plus and square), **Zoom Previous** (magnifying glass with left arrow), and **RTK Fixed** (text label).


The main map area shows a satellite-style aerial view of a residential or commercial area. A blue arrow points to a specific location on the map. A scale bar at the bottom right of the map indicates a distance of **94 m**. A north arrow is also present, labeled with a blue 'N'.

On the right side of the map, there is a vertical toolbar with several controls: a **RTK Fixed** label, a **5/10** scale indicator, a **P 3.5** label, a globe icon with a plus sign, and a sun icon.

At the bottom of the interface is a control bar. From left to right, it includes: a **Start** button with a globe icon, a **Next ID** field containing the number **2**, a **<No Line>** button, and a **<No Desc>** button.

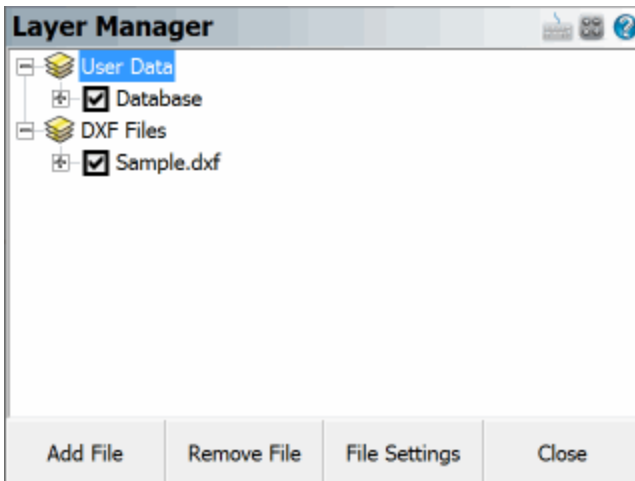

## User Data

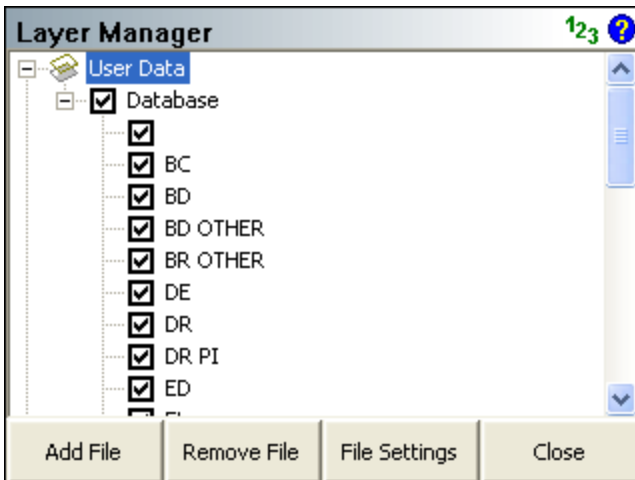


FieldGenius uses the layer names specified in the Automap library to control the visibility of points and figures by their description.

You can control the visibility of the entire database (both points and figures) by checking or unchecking the Database option under the User Data section of the tree. If the box is checked, then the database is turned on and all of its layers will be visible; if unchecked, then the file and all of its layers is turned off and it will not be visible. If the box has another smaller square inside it, this means that some of its layers are turned on and other layers are turned off.

You can control the visibility of individual layers by expanding Database option under the User Data section of the tree, and checking or unchecking the box beside the name of the layer. If the box is checked, then the layer is turned on and entities on that layer will be visible; if unchecked, then the layer is turned off and entities on it will not be visible.

When you close the project, the layer status will be saved so that the next time the project is opened, the layer visibility will automatically be set the same as you had left it, so layers that were turned off will remain turned off the next time the project is opened up.

## DXF Files

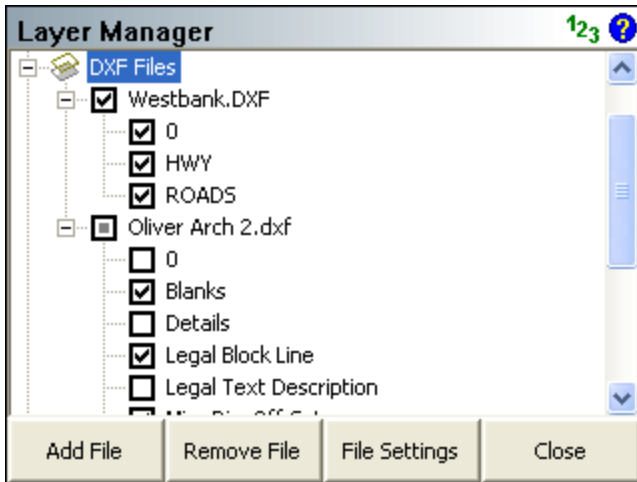

You can load multiple DXF files into your FieldGenius project, and control the visibility of each of their layers independently from the others.

You can control the visibility of the entire DXF file by checking or unchecking the box beside the name of the DXF file, under the DXF Files section of the tree. If the box is checked, then the file is turned on and all of its layers will be visible; if unchecked, then the file and all of its layers is turned off and it will not be visible. If the box has another smaller square inside it, this means that some of its layers are turned on and other layers are turned off.

You can control the visibility of individual layers by expanding the name of the DXF file under the DXF Files section of the tree, and checking or unchecking the box beside the name of the layer. If the box is checked, then the layer is turned on and entities on that layer will be visible; if unchecked, then the layer is turned off and entities on it will not be visible.

When you close the project, the layer status will be saved so that the next time the project is opened, the layer visibility will automatically be set the same as you had left it, so files that were turned off will remain turned off the next time the project is opened up.

### **Add File**


Press the Add File button to select a DXF file that you want to load into your project. You will be able to browse to and select any DXF file. Please see the [Import DXF File](#) topic for more information.

### **Remove File**


Highlight the DXF file that you want to remove from your project, then press the Remove File button. If a file is not highlighted, you will be reminded that a file must first be selected from the tree. This will turn off all layers from the selected file in your FieldGenius project and disassociate the DXF file. It does not delete the DXF file.

### **File Settings**

Highlight the DXF file that you wish to change the settings for, then press the File Settings button. You can enable or disable the display of text in the selected file. If your DXF file contains text, turning this off will improve performance of FieldGenius. Pressing the OK or Cancel buttons will return you to the Layer Manager screen.

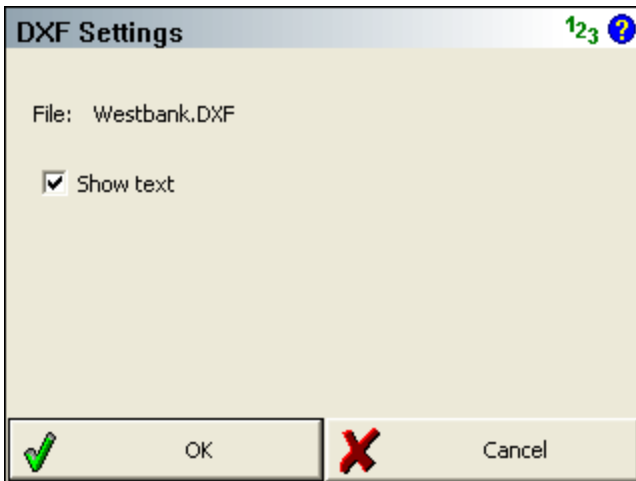

## LandXML Files

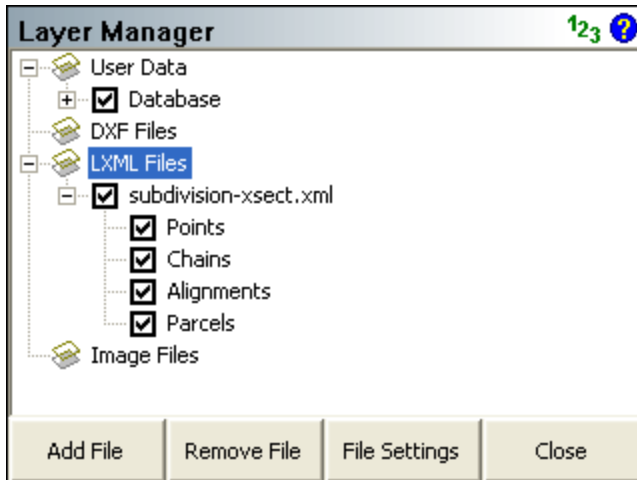

You can load one LandXML file into your FieldGenius project at a time, and control the visibility of its layers (points, chains, alignments, and parcels).

You can control the visibility of the entire XML file by checking or unchecking the name of the XML file, under the LXML Files section of the tree. If the box is checked, then the file is turned on and all of its contents will be visible; if unchecked, then the file and all of its layers is turned off and it will not be visible. If the box has another smaller square inside it, this means that some of its layers are turned on and other layers are turned off.

You can control the visibility of individual layers by expanding the name of the XML file under the LXML Files section of the tree, and checking or unchecking the box beside the name of the layer. If the box is checked, then the layer is turned on and entities on that layer will be visible; if unchecked, then the layer is turned off and entities on it will not be visible.

When you close the project, the layer status will be saved so that the next time the project is opened, the layer visibility will automatically be set the same as you had left it, so layers that were turned off will remain turned off the next time the project is opened up.

### Add File

Press the Add File button to select a LandXML file that you want to load into your project. You will be able to browse to and select any XML file. Please see the [Import LandXML File](#) topic for more information. Note, you must first unload the currently loaded XML file before loading a different one.


## Remove File

Highlight the XML file that you want to remove from your project, then press the Remove File button. If a file is not highlighted, you will be reminded that a file must first be selected from the tree. This will turn off all components of the selected file in your FieldGenius project and disassociate the XML file. It does not delete the XML file.

## File Settings

The File Settings button does not apply to LandXML files.

## Image Files

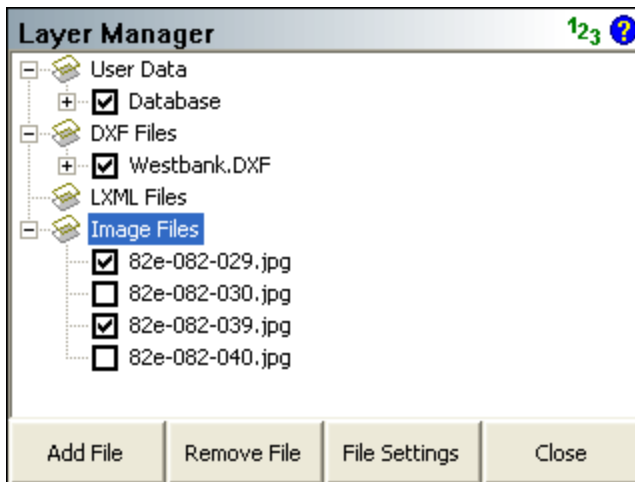

You can load multiple georeferenced JPG or TIFF images into your FieldGenius project, and control the visibility of each of them independently from the others.

You can control the visibility of your images by checking or unchecking the box beside the name of the image file, under the Image Files section of the tree. If the box is checked, then the image is turned on and it will be visible; if unchecked, then the image is turned off and it will not be visible.

When you close the project, the visibility and opacity status of each image file will be saved so that the next time the project is opened, the image visibility will automatically be set the same as you had left it.

## Add File

Press the Add File button to select an image (or DXF) file to load into your project. You will be able to browse to and select any JPG or TIF file. JPG files must have a corresponding JGW world file, and TIF files must have a corresponding TFW world file; these world files contain the georeferenced posi-




tioning information. The world file must have the same file name as the image file (just with the appropriate extension), and it will be automatically used to position the image.

### **Remove File**

Highlight the image (or DXF) file you want to remove from your project, then press the Remove File button. If a file is not highlighted, you will be reminded that a file must first be selected from the tree. This will turn off the selected image in your FieldGenius project and disassociate the image file.

### **File Settings**


Highlight the image file you want to view or change the display settings for, then press the File Settings button. You will see the file's name, size, and position information. You can also adjust the opacity of the image. The default value of 100 will cause the image to be displayed normally, and reducing this value will make it appear fainter on the screen. This is useful if the image file being displayed makes your other FieldGenius data too hard to see over top of the image. Pressing the Close button will return you to the Layer Manager screen.

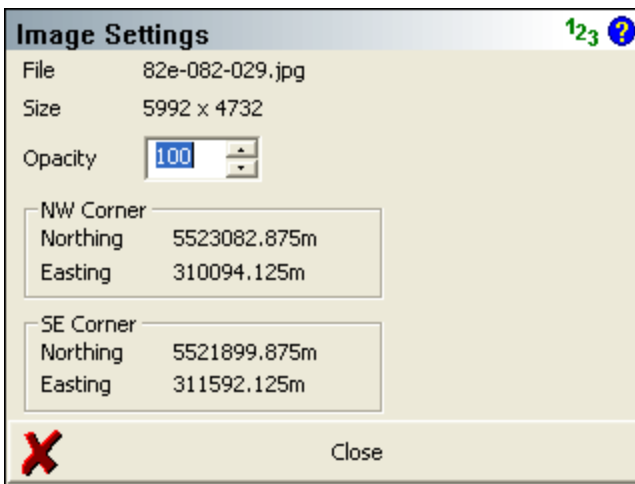

## **Surfaces**

**Main Menu | Data Manager | Surfaces**

FieldGenius allows you to display a 3D surface representation of the points and lines in your project. This is done by turning on the Point Database surface.

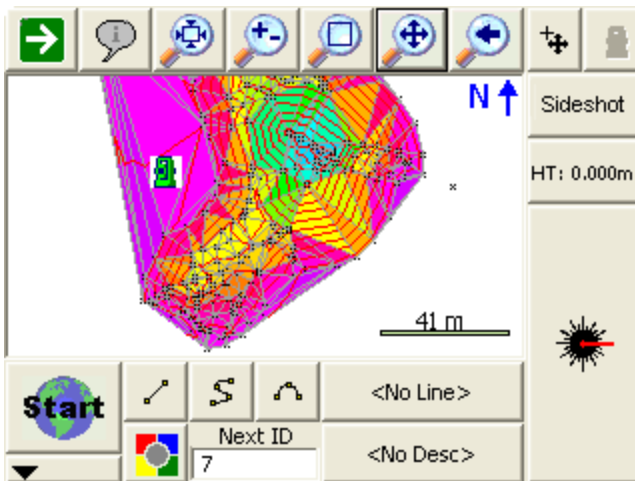

## Supported DTM Files

You can import surface information into FieldGenius. Currently you can import a surface from an XML or QSB file.

### LandXML Surface

FieldGenius can import surface definitions from XML data sets. These surfaces can be used to display a TIN, shaded surface or contours on the screen. The surface can also be used to perform real-time DTM staking.

To import a LandXML file, go to Map Data Layers and use the **Add File** command. Please see the [LandXML Import](#) topic for more information.

### QSB Surface


Surfaces created and saved in MicroSurvey CAD or inCAD desktop products will have a QSB extension. These QSB files can be imported into FieldGenius and used to display a TIN, shaded surface or contours on the screen. The surface can also be used to perform real-time DTM staking.

To import a QSB file, use the Load button at the bottom of the Surface Manager screen. Please see the [DTM Surface File Import \(QSB\)](#) topic for more information.

## DTM Surface Manager

The surface called Point Database represents the Realtime DTM Surface made up from points and lines that are in your project. If you have imported any other surfaces from a QSB or LandXML file they will also appear in this list.

To use a surface you first need to load it into memory by checking inside the box before the name of the surface in the list. A surface is loaded if there is a checkmark shown before it. If you expand the surface you can control whether it is drawn as Contour Lines, a wireframe TIN, a solid TIN, or any combination of these.

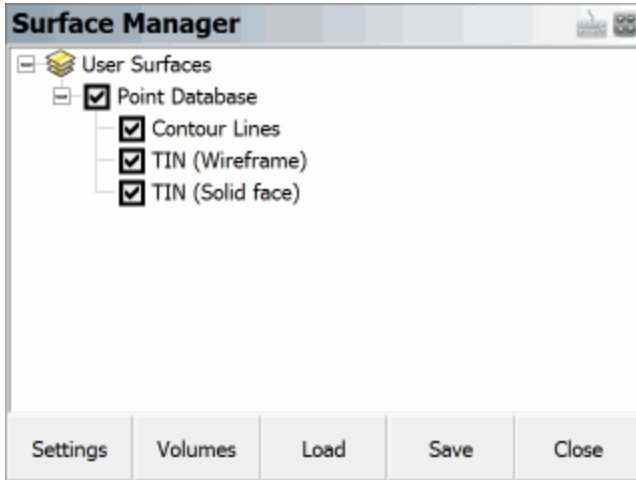

### **Settings**

Surface settings allow you to specify settings that affect the surfaces or contours that are drawn. Please see the [Surface Settings](#) topic for more information.

### **Volumes**

Use this button to calculate a volume. Please see the [Volume Calculation](#) topic for more information.

### **Load**

Use this button to load a .QSB surface file into your project. Please see the [Import DTM Surface File](#) topic for more information.

### **Save**


Use this button to save the selected surface as a .QSB file which can be imported into your MicroSurvey CAD or inCAD desktop software or into another FieldGenius project.

### **Close**

If you close the surfaces screen and return back to the map screen you will see the loaded surface drawn as a wireframe, solid, and/or with contours depending on what is set in the Settings screen.

## Surface Information

You can see additional statistics about the surface by double clicking on its name in the list. This will show the minimum and maximum bounding coordinates, the number of points, breaklines, and triangles in the surface, the minimum and maximum slopes in the surface, the plan and surface area, the positive and negative volumes calculated from a datum elevation of 0, and the amount of memory that the surface is using.

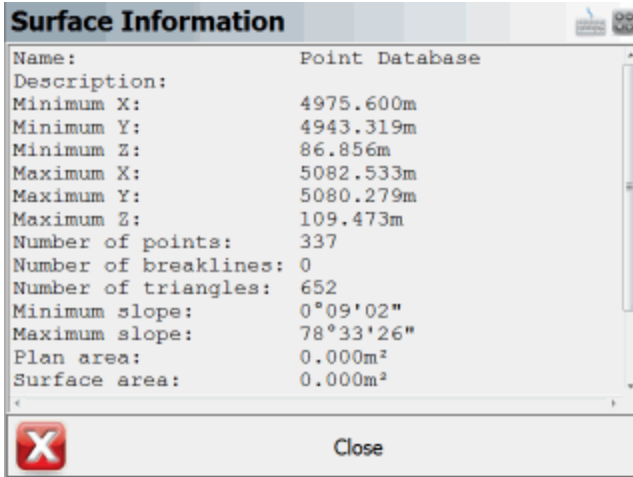

## Point Database Surface


This can be used at any time and doesn't require a surface to be imported. When this is turned on, all the points and lines in your project will be used to create a real-time DTM surface. This can be used while you're taking shots.

Please refer the [Realtime DTM Surface](#) topic for more information on FieldGenius DTM surfaces.

## Surface Settings

[Main Menu](#) | [Data Manager](#) | [Surfaces](#) | [Settings](#)

Use the surface settings screen to define settings that affect TIN (Triangular Irregular Network), TGRID and Contours.

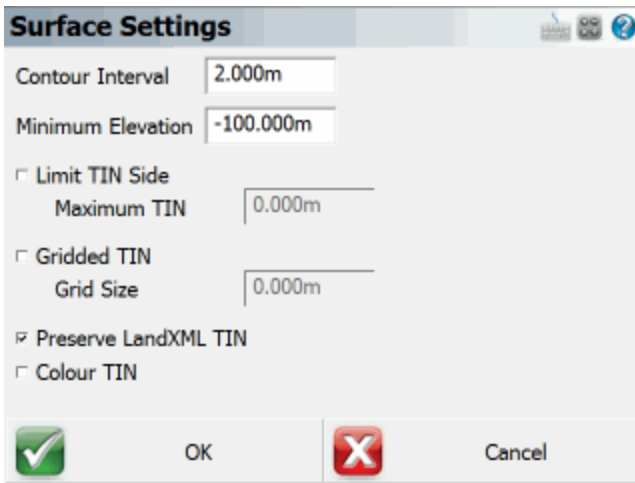

---

## Contour Interval

This will force the contours to be drawn at an interval equal to the value set here. The interval is equal to the drawing units.

---

## Minimum Elevation

This controls the minimum elevation. This is useful if you have some data that is displayed at a zero elevation (example: alignment point data that is horizontal) and you want to exclude these points from the surface.

---

## Limit TIN Side

This will determine the max length that will be allowed for a TIN triangle.

---

## Gridded TIN

If this is on, when you draw the surface it will be represented using a TGRID model instead of a TIN model. TGRID surfaces will apply smoothing in areas that have no breaklines. This may create better quality contours. The Grid Size is a ground unit value that will determine the spacing of the grid lines. If the Grid Size is 0 then a grid size will be automatically calculated.

---

## Preserve LandXML TIN

This will force the surface to be loaded using information stored in the LandXML file. A LandXML surface will be defined in such a way that each triangle corner is defined by a point id. These points are stored in the file as CgPoints, so FieldGenius will honor these faces and not re-compute a new surface.

## Color TIN

When this is turned on then the surface color will be determined by the triangles' elevation. When turned off the surface will be displayed using a gray color. If the TIN's wireframe and solid faces are both being displayed, then the faces will be colored but the wireframe will be gray for better visibility.

## Volume Calculation

[Main Menu](#) | [Data Manager](#) | [Surfaces](#) | [Volumes](#)

FieldGenius allows you to calculate the volume between a surface and either another surface or a datum elevation. The volume can be computed for the entire surface, or it can be bound by a closed figure.

### Calculated Surface


Choose the surface that you want to calculate the volumes for. If you have imported any surfaces from a QSB or LandXML file they will be available to choose from, or you can choose the realtime Point Database surface.

### Reference Surface

You can choose have the volume calculated between your selected surface and either a datum elevation (which defaults at 0 meters/feet), or if you have imported any surfaces from a QSB or LandXML file they will be available to choose as a reference surface.


### **Constrain volume calculation within area**

If this is unchecked, a surface volume calculation will be computed for the entire surface. If this is checked, an area volume calculation will be computed for a portion of the surface bounded by an area you define. You can press the **Define Area** button to select a closed figure to assign as a boundary for the volume calculation. After you have selected the figure, press Close to return to the Volumes Calculation screen.

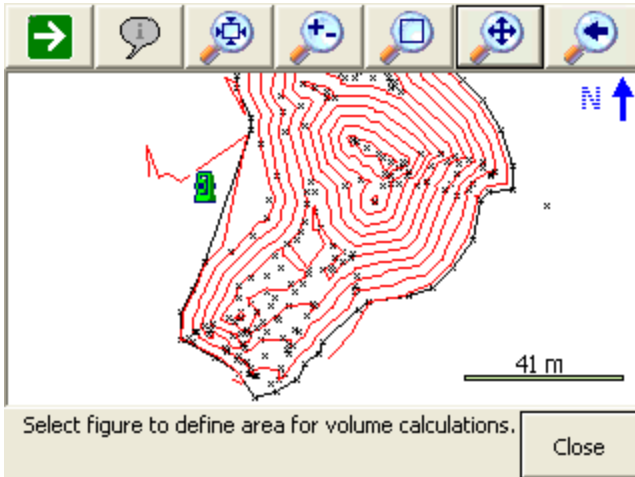

### **Calculate**

Pressing this will calculate and display the positive, negative and net volumes, the average thickness, and the area of the surface from either the selected datum elevation or reference surface, all constrained within the selected closed figure if selected.

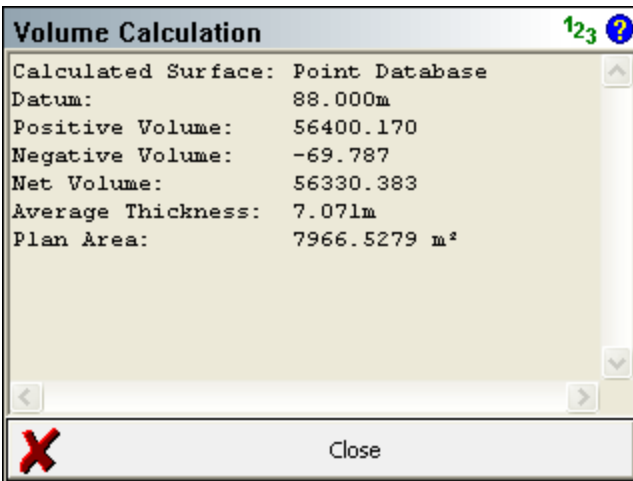

The results will also be written into the project's CogoCalcs.txt history file which can be viewed by going to Main Menu | Survey Tools | [COGO History Viewer](#).

## Realtime DTM Surface

FieldGenius creates and manipulates a 3D surface from data collected in the field or from data imported through LandXML, QSB or ASCII point files. A FieldGenius surface is a mathematical description of a surface that exactly honors all input 3D data points and lines.

A Surface represents the existing topography of a job site. Surfaces contain one or more parts such as points, break lines, triangulated irregular networks (TIN), or triangulated grids (TGRID).

A surface is not a drawing entity, rather it is a mathematical description held in the data collectors memory. Representations of a surface, such as contours, TGRIDS or TINS may be drawn into your diagram as polylines and polyface entities.

### Creating a Realtime DTM in FieldGenius

FieldGenius will compute a DTM model from points collected, staked, or imported from any ASCII file and from any existing FieldGenius project. There are no limits to the number of points that are used to create the DTM. The Automap Library controls what points and/ or lines are included or excluded from the DTM surface. The DTM is created in real time and can be appended as additional points are picked up.


To create a DTM, follow the instructions below:




From Main Menu | Data Manager | Surfaces you can turn on the **Realtime DTM Surface** by placing a checkmark in the box before the "Point Database" surface. Expanding the tree will allow you to define whether it is displayed as Contour Lines, Solid Faces, and/or Triangle Edges.

The surface can be viewed or used in volume computations immediately.

*Before turning on the Point Database surface:*

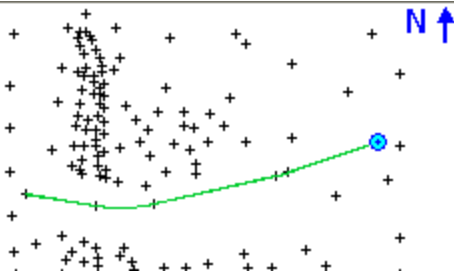

*After turning on the Point Database surface:*

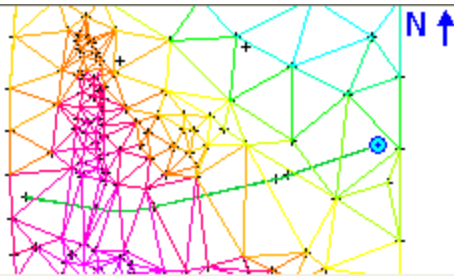


Each point in the database has an attribute called "DTM Attribute". This can be set to "donotinclude". If you set a point to this value, you will see that the surface no longer includes this point. This only applies to the current surface that is computed in FieldGenius. It does not apply to surfaces imported from a QSB or LandXML file.

---

## **What is the difference between a TIN and a TGRID?**

The user should become familiar with both options and decide which option is best suited for their project.

**TIN** honors breaklines but may be too restrictive for contours to follow the natural flow of the terrain. Contours around small hills may look jagged if too few data points were collected.

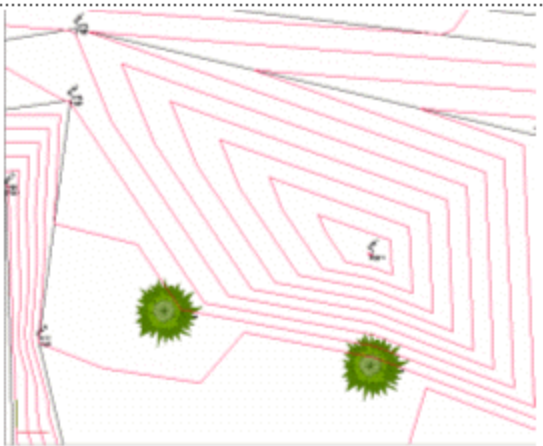

**TGRD** honors breaklines and allows the contours to follow the natural flow of the terrain. Contours around small hills will look better if the TGRD option is used.

Generally, the **TGRD** is for cases where you want curvature introduced between your data points and you have break lines. This is most easily shown with an example:




## Adding Breaklines to a Surface

If a break in the slope continuity is desired, the user **MUST ALWAYS** use the TIN or TGRD (Tri-angulated Grid) in conjunction with break lines. When modeling a surface containing break lines, a TIN or TGRD honors break lines exactly.

## What happens when you add break lines?


Break lines represent 3D continuous traces in space (think of them as a 3D polyline) which:

1. Define the surface elevation
2. Force slopes to be different on either side of the break line

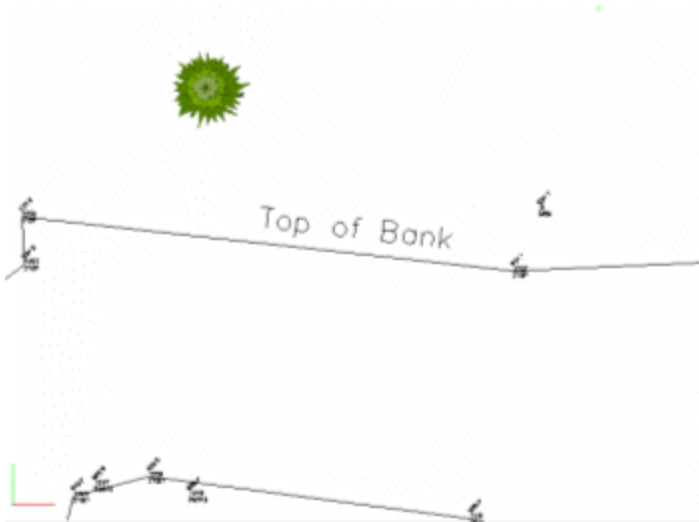


This line represents a location on the site where the slope changes from a steep hill to a relatively flat area.

Contours Generated without use of Top of Bank breakline:

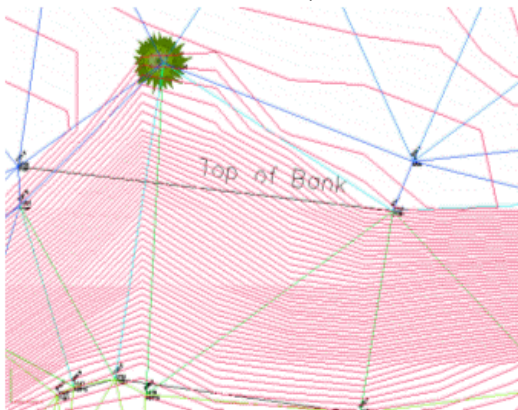

Without a breakline, the contours "flow" over the top of the bank and the contours do not look correct.

Contours generated with use of Top of Bank breakline:

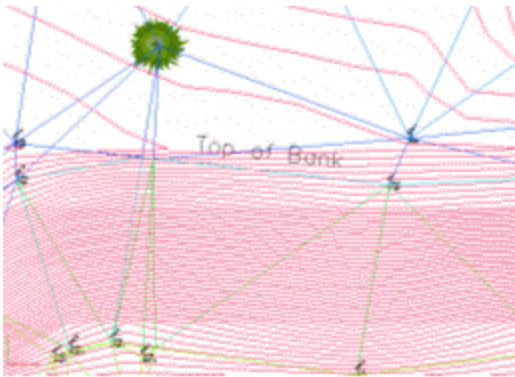

With a breakline, the contours are forced to honor the line, as a change in slope that helps the contours to look correct.

## Breakline Control

The user would want to use a figure as a break line in the triangle formation process (TIN) for the edge of pavement, but probably not for a line connecting points that are not related to the surface features. An example of this might be a chain connecting legal boundaries as they might cross over roads or creeks without consideration for the existing topography.

Breaklines are used in the creation of the DTM by forcing the triangulation to follow them. Triangles created in the DTM cannot cross a breakline. The edges of the triangles will always follow the breakline. When necessary, FieldGenius will automatically densify the DTM along the breakline to create triangles that conform to the breaklines. This helps with the creation of accurate surface models and contours. FieldGenius contains the exact same functions for surface modeling, contouring, and volumes as MicroSurvey CAD or inCAD.

## Contouring

Creating contours in FieldGenius is as simple as choosing the desired DTM surface from the dialog and checking the contour option:

The procedures for contouring a DTM surface are outlined below:

1. Open the [Surface Settings](#) dialog.
2. Type in the appropriate **Contour Interval**. The default interval is every 2 units.
3. You can control the **Minimum Elevation**. This is useful if you have some data that is

displayed at a zero elevation (example: alignment point data that is horizontal) and you want to exclude these points.

4. If you want to create a TGRID, then turn on the Gridded TIN option, or leave this off to create a TIN. The Grid Size is a ground unit value that will determine the spacing of the grid lines.
5. Press **OK** to return to the [Surface Manager](#) screen.
6. Finally, turn on the contours by expanding the Point Database surface and selecting the Contour Lines option to display them.
7. Close the Surface Manager and return to the map screen to see your contours.

## Import DTM Surface File (QSB)

[Main Menu](#) | [Data Manager](#) | [Surfaces](#) | [Load](#)

If you have a DTM surface that was created by MicroSurvey CAD or inCAD desktop software, you can import it into FieldGenius. You need to copy the QSB file to your collector before proceeding.

### Function


1. Open the [Surface Manager](#), then press the **Load** button.
2. Browse to where your DTM surface file (.QSB) is located and press the **Open** button to continue.
3. You will now see the surface list screen. From here you can turn on your layer and configure DTM settings. Please see the [Surface Sets](#) topic for more information.

## Parcels Manager (XML)

[Main Menu](#) | [Data Manager](#) | [Parcels \(XML\)](#)

When a LandXML file is imported into a FieldGenius project, if there is parcel information it can be viewed in the Parcels Manager.

By default all Parcels will be visible in the map screen but you can turn them off by deselecting the green check mark next to the parcel group.

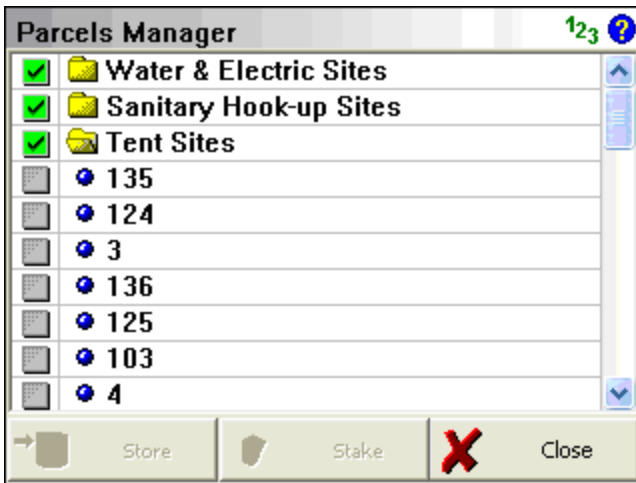

### Store

If you highlight a parcel in the list, pressing the Store button will compute and store coordinates at the corners of your parcel.

### Stake


If you press this it will open the line staking toolbar. Note: you have to press close to exit the parcel manager.

# IMPORT/EXPORT MENU

## Import/Export Menu

Main Menu | Import/Export

Use this menu to display different options for importing data into or exporting data out of your project.

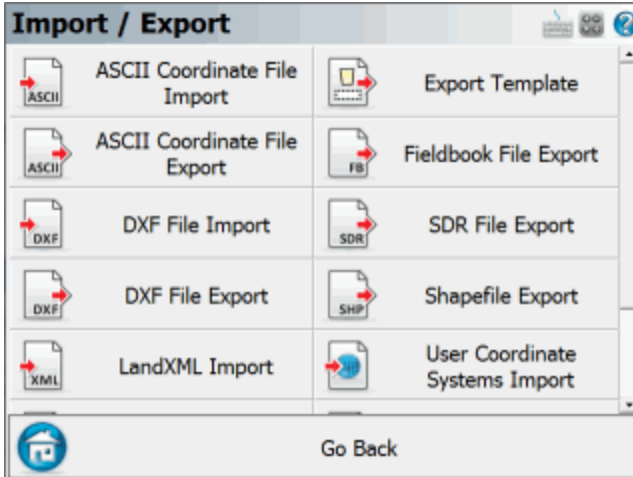

### [ASCII Coordinate File Import](#)

Use this to import an ASCII file into your project. Please see the [ASCII Coordinate File Import](#) topic for more information.

### [ASCII Coordinate File Export](#)

Use this to export an ASCII file of your points. Please see the [ASCII Coordinate File Export](#) topic for more information.

### [DXF File Import](#)

Use this to import a DXF file into your project. Please see the [DXF File Import](#) and [Map Data Layers](#) topics for more information.

### [DXF File Export](#)

Use this to export a DXF file of your current project. The DXF file will contain drawing entities of your points and lines. Please see the [DXF File Export](#) topic for more information.

### **LandXML File (COGO Points, Chains) Export**

Use this to export a LandXML file containing CgPoints and Chains. The file will be saved in your current project directory. Please see the [LandXML File Export](#) topic for more information.

### **Fieldbook File Export**

Use this to export a Softdesk FBK file that will contain you coordinates, raw observations and figure information. Please see the [Fieldbook File Export](#) topic for more information.

### **SDR File Export**

The SDR Export in FieldGenius will convert the existing raw file into a SDR 33 compatible format. Please see the [SDR File Export](#) topic for more information.

### **Shapefile Export**

Use this to export an ESRI shapefile. Please see the [Shapefile Export](#) topic for more information.

### **Import Template**

You can import a template that was previously exported using this command. Please see the [template import](#) command for more information.

### **Export Template**

You can export figures and points using this command. Please see the [Export Template](#) topic for more information.

### **Import User Coordinate Systems**

You can import a template that was previously exported using this command. Please see the [template import](#) command for more information.

### **Export User Coordinate Systems**

You can export figures and points using this command. Please see the [Export Template](#) topic for more information.

#### **Notes:**

- For importing DXF, LandXML, and raster image files, please see the [Map Data Layers](#) topic in the [Data Manager](#) menu.
- For importing DTM surface files, please see the [Surfaces](#) topic in the [Data Manager](#) menu.




# IMPORT/EXPORT MENU

## Import/Export Menu

Main Menu | Import/Export

Use this menu to display different options for importing data into or exporting data out of your project.

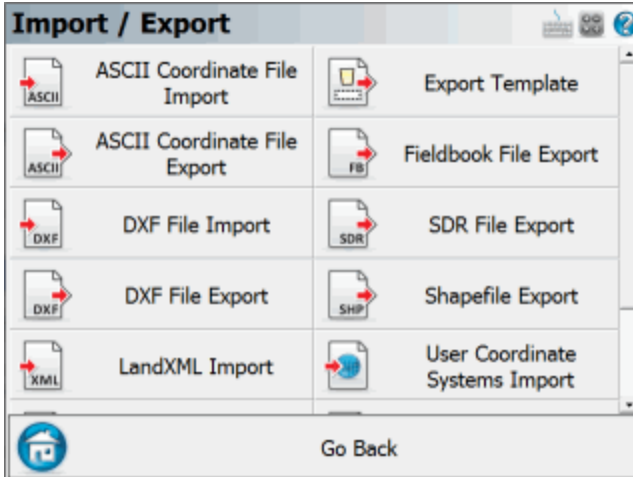

### [ASCII Coordinate File Import](#)

Use this to import an ASCII file into your project. Please see the [ASCII Coordinate File Import](#) topic for more information.

### [ASCII Coordinate File Export](#)

Use this to export an ASCII file of your points. Please see the [ASCII Coordinate File Export](#) topic for more information.

### [DXF File Import](#)

Use this to import a DXF file into your project. Please see the [DXF File Import](#) and [Map Data Layers](#) topics for more information.

### [DXF File Export](#)

Use this to export a DXF file of your current project. The DXF file will contain drawing entities of your points and lines. Please see the [DXF File Export](#) topic for more information.

### **LandXML File (COGO Points, Chains) Export**

Use this to export a LandXML file containing CgPoints and Chains. The file will be saved in your current project directory. Please see the [LandXML File Export](#) topic for more information.

### **Fieldbook File Export**

Use this to export a Softdesk FBK file that will contain you coordinates, raw observations and figure information. Please see the [Fieldbook File Export](#) topic for more information.

### **SDR File Export**

The SDR Export in FieldGenius will convert the existing raw file into a SDR 33 compatible format. Please see the [SDR File Export](#) topic for more information.

### **Shapefile Export**

Use this to export an ESRI shapefile. Please see the [Shapefile Export](#) topic for more information.

### **Import Template**

You can import a template that was previously exported using this command. Please see the [template import](#) command for more information.

### **Export Template**

You can export figures and points using this command. Please see the [Export Template](#) topic for more information.

### **Import User Coordinate Systems**

You can import a template that was previously exported using this command. Please see the [template import](#) command for more information.

### **Export User Coordinate Systems**

You can export figures and points using this command. Please see the [Export Template](#) topic for more information.


#### **Notes:**

- For importing DXF, LandXML, and raster image files, please see the [Map Data Layers](#) topic in the [Data Manager](#) menu.
- For importing DTM surface files, please see the [Surfaces](#) topic in the [Data Manager](#) menu.

## **ASCII Coordinate File Import**

**Main Menu | Import/Export | ASCII Coordinate File Import**

Use this option to import a list of coordinates to the current project.

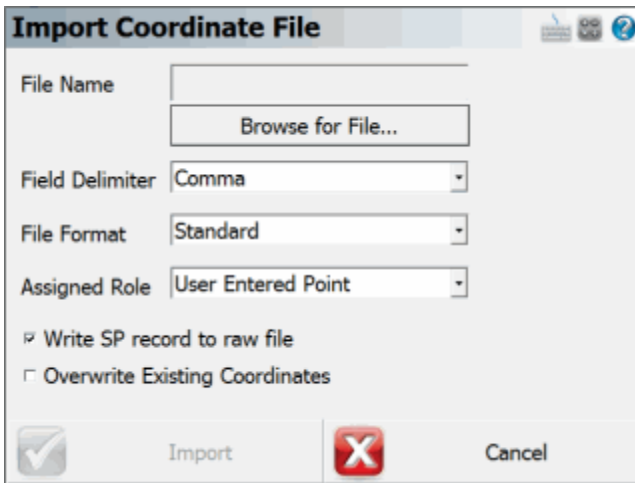

This may be required if a separate coordinate file is uploaded to the device by itself (not as part of a project with linework). This is also useful for transfer of points from one file to another.

---

## Function

1. Click on the "Browse for File..." button to navigate to and select your file.
2. Choose the field delimiter, either Comma or Space.
3. Choose the file format. See below for more information regarding file format. If you are uncertain, use the **Standard** format.
4. Use the assigned role field to select the survey role of the points being imported. If these points are to go into the staking list, then select **To Stake Out** as the survey role.
5. **Write SP (Store Point) record to raw file** will store the imported coordinates to the raw file. This is very useful if you wish to reprocess coordinates later, so we recommend that you select this when importing points.
6. **Overwrite Existing Coordinates** - allows you to control whether points will be overwritten during the import.
7. **Set as Control Points** – will set a flag in the database that will prevent these points from being edited or changed in FieldGenius (under any circumstances!)
8. Choose **OK** to import the coordinates, **Cancel** to abort the import.
9. You will be shown a confirmation of how many points were imported to the current project.

---

## File Formats

Both space and comma delimited files are supported.

---

For all formats, the order of the Northing and Easting fields are determined by setting the Coordinate Order in the [Options](#) screen.

### **Standard**

```
ID, Northing/Y or Easting/X, Easting/X or Northing/Y, Elevation, Descrip- |
tion:Note |
```

This format expects the file to be in a standard ASCII format. If your descriptions have a colon in them, then FieldGenius will store everything before the colon as a description, and everything after the colon will be considered to be a note.

### **Standard with Header**

Same as the Standard format, but the first row in the file is ignored.

### **Extended**

```
ID, Northing/Y or Easting/X, Easting/X or Northing/Y, Elevation, Descrip- |
tion, Note, Latitude, Longitude, Ellipsoidal Height, Latitude StdDev, Lon- |
gitude StdDev, Height StdDev |
```

This format is different than the standard such that notes are separate from descriptions. Also if you collected GPS data, the WGS 84 information can also be included and imported along with other information related to the GPS point.

### **Extended with Header**

Same as the Extended format, but the first row in the file is ignored.

---

## **More about the Extended Format**

If you import a FieldGenius extended file format ASCII file, FieldGenius will create EP and GS records in the raw file. Also, the coordinates will be imported and stored in the database. Importing this type of file is useful for seeding points when using the OmniStar GPS system or to create a list of geodetic and cartesian points that you can select while programming a GPS base receiver.

ID	Northing	Easting	Elevation	Description	Note	Latitude	Longitude	Ellip
100	5523097.874	311564.984	399.387	CONTROL		49.83067177	-119.6202724	
101	5523168.871	311529.912	401.188	CONTROL		49.83129864	-119.620794	
102	5523164.192	311507.476	400.85	CONTROL		49.83124955	-119.6211034	
103	5523135.07	311511.185	399.795	CONTROL		49.83098906	-119.6210377	
104	5523099.336	311521.81	399.552	CONTROL		49.83067133	-119.6208728	
105	5523074.024	311506.919	399.233	CONTROL		49.83043923	-119.6210673	
106	5523046.282	311521.379	398.049	CONTROL		49.83019451	-119.620853	
201	5523161.883	311526.004	400.632	CONTROL		49.83123463	-119.6208449	
202	5523159.786	311530.386	400.665	CONTROL		49.83121716	-119.620783	
203	5523167.28	311538.864	401.095	CONTROL		49.83128716	-119.6206689	
204	5523165.261	311551.194	400.946	CONTROL		49.8312729	-119.6204967	
205	5523172.776	311493.661	401.686	CONTROL		49.83132233	-119.6212995	

### Importing Cartesian and Geodetic Coordinates

Above is an example of an Extended ASCII file. For the format to work correctly, each point should include Cartesian and Geodetic coordinates for each point. The standard deviations are not needed unless the point is going to be used to "seed" a position for use with the OmniStarVBS system. **The Latitude and Longitude values are required to be stored in decimal degrees.**

So if this type of file is imported into FieldGenius the following will occur:

- A point is stored in the project database using the Cartesian Coordinates.
- A GS record is written in the raw file using the Cartesian Coordinates as a reference.
- An EP record is written to the raw file using the Geodetic Coordinates as a reference.

### Importing Geodetic Coordinates Only

You can create an Extended ASCII Point file that only contains a point number, description, note and Geodetic coordinates. Upon import FieldGenius will use the Geodetic coordinates and your defined coordinate system in your [coordinate system settings](#) to compute Cartesian coordinates to be stored in the database.

So if this type of file is imported into FieldGenius the following will occur:

- Using the horizontal and Vertical datum settings you've defined in your [coordinate system settings](#), FieldGenius will compute a Cartesian coordinate for each point using the Geodetic values imported from the ASCII file.
- A point is stored in the project database using the Cartesian Coordinates that was computed. The point will be assigned the point number that was imported from the ASCII file.


- A GS record is written in the raw file using the Cartesian Coordinates as a reference.
- An EP record is written to the raw file using the Geodetic Coordinates as a reference.

## ASCII Coordinate File Export

[Main Menu](#) | [Import/Export](#) | [ASCII Coordinate File Export](#)

Use this option to export a coordinate list from the current file.

This is useful for transfer of points from one file to another.

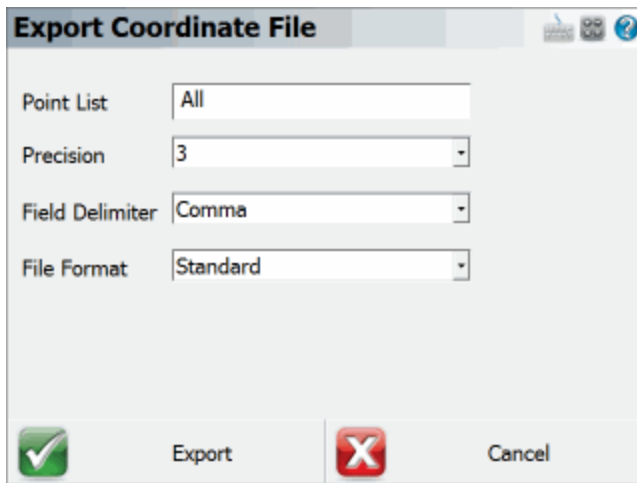

**Export Coordinate File**

Point List: All

Precision: 3

Field Delimiter: Comma

File Format: Standard

Export Cancel

### Function

1. Specify a range of point to export in the form **#.#**. Accept default of **All** if desired.
2. Specify number of decimal places to carry on the export. (maximum=6)
3. Specify if you want to export them with either a space or comma delimiter.
4. Choose the file format type that you want to use. See below for more details about the different file formats. If you are uncertain, use the **Standard** format.
5. Choose **Export** to export the coordinates, or **Cancel** to abort the export.
6. Browse to the folder where you want to save the file, enter a filename including an extension, then press **Save File**. FieldGenius will not add any extension to the filename you enter.
7. You will be shown a confirmation of how many points were exported.

## File Formats

Both space and comma delimited files are supported.

For all formats, the order of the Northing and Easting fields are determined by setting the Coordinate Order in the [Options](#) screen.

### Standard

```
ID, Northing/Y or Easting/X, Easting/X or Northing/Y, Elevation, Description:Note
```

This format will append any notes you have to your description, separated by a colon.

### Standard with Header

Same as the Standard format, but with Header data in the first row.

### Extended

```
ID, Northing/Y or Easting/X, Easting/X or Northing/Y, Elevation, Description, Note, Latitude, Longitude, EllipsoidalHeight, LatitudeStdDev, LongitudeStdDev, HeightStdDev
```

This format is different than the Standard such that notes are separated from descriptions.

If you collected GPS data, the WGS 84 information will also be exported along with other information related to the GPS point. The WGS 84 information will be extracted from your GS records in the raw file.

### Extended with Header

Same as the Extended format, but with Header data in the first row.

### GD-1

This format allows you to export your GPS measured points in a slightly different format than the Extended format. This option will scan your raw file and find all EP records and export the corresponding GS, or GK point that was stored in the database.

This option is only available for export.

```
ID, Northing/Y or Easting/X, Easting/X or Northing/Y, Elevation, Latitude (in Degrees Minutes Seconds), Longitude (in Degrees Minutes Seconds), Description
```

### GD-1 with Header

Same as the GD-1 format, but the first row in the file is ignored.

## More about the Extended Format

If you import a FieldGenius extended file format ASCII file, we will create EP and GS records in the raw file. Also, the coordinates will be imported and stored in the database. Importing this type of file is

useful for seeding points when using the OmniStar GPS system.

There is more detailed information about the extended format in the [ASCII Coordinate File Import](#) topic.

## DXF File Import

[Main Menu](#) | [Data Manager](#) | [Map Data Layers](#) | [Add File](#)

Use this function to import CAD DXF files into a FieldGenius project.

FieldGenius supports all Point nodes, Lines, Arcs, Polylines, Text and 3D Faces in the DXF file.

FieldGenius does not support Blocks or any other entities not mentioned above in the DXF file.

All items from the DXF file will be drawn in their respective layers as defined in the DXF file. These layers may be toggled on and off using FieldGenius's layer manager.

### Importing Steps

1. From the main menu, press the **Data Manager** button then the **Map Data Layers** button.
2. Press the **Add File** button on the Layer Manager.
3. Using the browse window, find the DXF file you would like to import and press the **Open File** button.
4. Use the Layer Manager to turn on or off any layers you don't want to view.
5. Press **Close** and return to the map view.
6. Press the zoom extents button to see your entire DXF file.

For more information on the layer manager please visit the [Layer Manager](#) topic.

#### Important Notes:

- Your CAD desktop system likely has a super fast processor and 1GB or more of RAM but most current Windows CE devices run at 206Mhz and have 32 or maybe 64MB of RAM. For this reason, you will not be able to manipulate a 5MB DXF file with the same speed as your desktop system so minimize the size of the DXF files for most efficient operation.

- TEXT is the biggest performance reducer in your DXF files. For best performance, minimize the amount of text in the DXF files or turn off layers containing text when not needed.



## DXF File Export

### Main Menu | Import/Export | DXF File Export

Use this to export your current FieldGenius drawing as a DXF file. This allows for easy import of line-work and nodes into most cad or graphic systems

Export Points

Point IDs    PNT\_ID

Descriptions    PNT\_DESC



Notes    PNT\_NOTE

Elevations    PNT\_ELEV

Text Height    0.200000

Export Lines

Export Contours

 Export     Cancel

## Function

1. Select the options for your DXF file.

**Export Points:** If this is checked, your coordinate point nodes will be exported to the DXF file. You can also specify what layer you want the labels to go on and a default text height.

**Export Lines:** If this is checked, all figures (lines, arcs, and splines) will be exported to the DXF file.

**Export Contours:** If this is checked, all contour lines drawn using the [Surface Manager](#) will be exported to the DXF file.

2. Click **Export**.
3. Browse to the folder where you want to save the file, enter a filename, then press Save File. FieldGenius will add a .dxf extension to the filename if you did not include it.
4. The DXF file is created and you can copy it to your desktop computer.

---

## Notes about DXF files:

- Upon export, FieldGenius will compare the figure name to see if it has a match in the AutoMap file. If it does, FieldGenius will draw the points along the figure, as well as draw the figure on the layer specified in the AutoMap library.
- Points that are exported will match the point color settings set in the Automap library.
- Figures that don't have a match in the Automap library will be drawn on a layer named "Default". Color setting will be set to 256.
- Points or nodes will be 2D or 3D depending on the Z value.
- Lines will be 2D or 3D depending on the Z values of the end points.
- Figures will be drawn as polylines.
- Curvy lines or arcs will be drawn as segmented polylines. FieldGenius will automatically interpolate an elevation along the arc or curved section of the figure at 1° intervals.
- Contours will be drawn as polylines and will be 3D based on the contour elevation.
- Points or nodes will appear as an "X" marker in the DXF file because the PDMODE variable is being set to 3 in the DXF file. In most desktop CAD programs you can change this marker type by typing PDMODE.

## LandXML File Import

[Main Menu](#) | [Import/Export](#) | [Import LandXML](#)

[Main Menu](#) | [Data Manager](#) | [Map Data Layers](#) | [Add File](#)

FieldGenius can import LandXML files. Rather than convert these files into some different format, you can read these files directly into FieldGenius.

---


### Importing a LandXML File

There are several different methods of importing a LandXML file:

- By using the Import LandXML File command.
- By using the Data Manager | Map Data Layers | Add File command.
- By placing a LandXML file into a project folder. This is normally done by desktop software like MicroSurvey CAD or inCAD. If FieldGenius finds a LandXML file that has the same name as the project, and it is in the project folder, then it will automatically be imported when you load the project.

When a LandXML file is read, it is scanned to make a list of the objects that it contains. Loading the entire file into the FieldGenius project could use many megabytes of valuable memory. Therefore, when you wish to use data from a LandXML file, you need to load it as needed. Sample LandXML files are available at the LandXML web site: [www.landxml.org](http://www.landxml.org)

One of the example files posted is subdivision-xsec.xml. We have downloaded and are now going to show the results of reading it into FieldGenius:

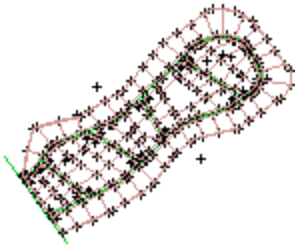

---

## LandXML Components and How to Use Them

There are many different types of objects in a LandXML file. FieldGenius will be expanding the use of these objects as the program grows.

As of the date this manual was written, the following objects are supported. This list will change, so you may notice other options on the smart menus for these objects.

### CgPoints

A LandXML file can contain many different sets of points. The LandXML specification requires that every point in a LandXML file have a different id. For example you can not have two CgPoint sets containing a point with the same id. Since a LandXML file can contain many different CgPoint sets, and these point sets may contain thousands of points, FieldGenius lists these sets in the Project Manager. When you want to see them on the screen, you need to use the Smart Menu to Load the CgPoint Sets.

By default when you import your LandXML file, the CgPoints will be displayed on the screen. CgPoints are not stored in the database but they can be used by our commands. For example you can use the Occupy Point command and select the CgPoints with the point chooser for the setup and backsight points. You can also consider them to be read only points.

### Surfaces

Surfaces can be imported into FieldGenius from a LandXML file. The surfaces can be imported in two ways:

- **Fast:** We can use the points that define the surface and let FieldGenius re-calculate the TIN model. This might be acceptable for an area where no attempt was made to edit the triangles or add break lines. FieldGenius can compute a surface in seconds from large numbers of points.
- **Maintain Triangulation:** we can force FieldGenius to read the TIN exactly as computed by the desktop software. This requires much more computing by the import program, but it will exactly maintain the triangulation in the original surface. For example, if the LandXML surface was created by using breaklines and hand editing, you will want to maintain the exact triangles for staking and viewing the surface.

You can set the import method by going to the Main Menu | Data Manager | Surfaces | [Surface Options](#).

From the [Surfaces](#) screen you can see a list of the surfaces in the XML file. Select the one you want to load.

### **Alignments, Profiles, and Cross Sections**

Alignments, cross sections, and staking of these items are some of the powerful features in FieldGenius. Almost all modern road design software will export alignments in LandXML format. We read the horizontal alignment (which is normally at elevation zero), the vertical profile, and the cross sections from LandXML files. Individual components can be selected for staking or viewing information. The Project Manager is used for visibility of these items, and you can drill down into the components right to the coordinate level.

Reading the basic alignment information is done when you import the LandXML file. Alignments generally are not too large, so we read the alignment, profile and cross sections into memory for later use. There may be several surfaces in an alignment, so you can view each cross section surface separately. Each may be staked. In this sample file, there are several alignments. Each alignment can be turned on or off, or just the cross sections for an alignment can be turned off.

Following is a tiny excerpt from the first few lines of this LandXML file. Fortunately, it is rarely necessary to open a file; however, if you open one in Internet Explorer, you will see the format. They are easily explored, because you can "collapse" sections of the file by picking on the negative signs at the beginning of the lines in Internet Explorer. In this picture, all of the file has been collapsed except for the header. It is easy to see that the file was created by Autodesk Land Desktop version 3 with Service Pack 1 installed.

```
<?xml version="1.0" ?>
- <LandXML xmlns="http://www.landxml.org/schema/LandXML-1.0"
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://www.landxml.org/schema/LandXML-1.0
  http://www.landxml.org/schema/LandXML-1.0/LandXML-1.0.xsd" version="1.0"
  time="10:08:09" readOnly="false" language="English">
  <Project name="subdivision" />
+ <Units>
+ <Application name="Land Desktop" manufacturer="Autodesk" version="3 - Service Pack
  manufacturerURL="www.autodesk.com">
+ <CgPoints>
+ <Surfaces>
+ <Parcels>
+ <Alignments>
</LandXML>
```

### Parcels/Lots

Parcels are displayed in the graphics when you import a LandXML file. You can select the lines to get basic information, and you can drill down into the Project Manager to see more details. The points that define a Parcel are stored in the CgPoints section of the LandXML file. If you want to see the point numbers on the screen, then you need to load the CgPoints. If you want to stake the points, then you need to load the CgPoints into the Points DB.

### Chains/Figures

These LandXML items may or may not appear, because a chain can cross from one CgPoints set to another. This means that if you do not have all the CgPoint sets loaded, then the chains cannot appear.

## **LandXML File Export**

### **Main Menu | Import/Export | LandXML (COGO Points, Chains) Export**

When this is used a LandXML file will be created. All the points in the current project will be exported as CgPoints and all the figures will be converted into Chains.


## Function

1. Select **LandXML (COGO Points, Chains) Export** from the **Import/Export** menu
2. Browse to the folder where you want to save the file, enter a filename, then press Save File. FieldGenius will add a .xml extension to the filename if you did not include it.

## Template Import

[Main Menu](#) | [Edit Menu](#) | [Template Import](#)

If you have a template file saved you can import it back into your project. When you start the command you will see the file browse dialog that allows you to find and open the template file. After which you will see the template import toolbar. If you need to create a template file, refer to the [Template Export](#) topic.

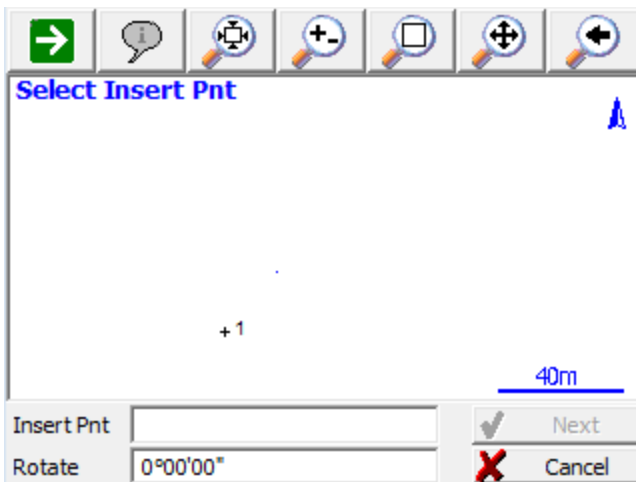


### Select Insertion Point

After you select the template you can select the insertion point in the map screen, and also define a rotation for the template. A preview of the template will be displayed in the map screen in green, press Next to continue.


### Select Origin Point

After you specify the insertion point, you can then choose the origin point. Select points (green dots) on the template preview to define a new origin position.

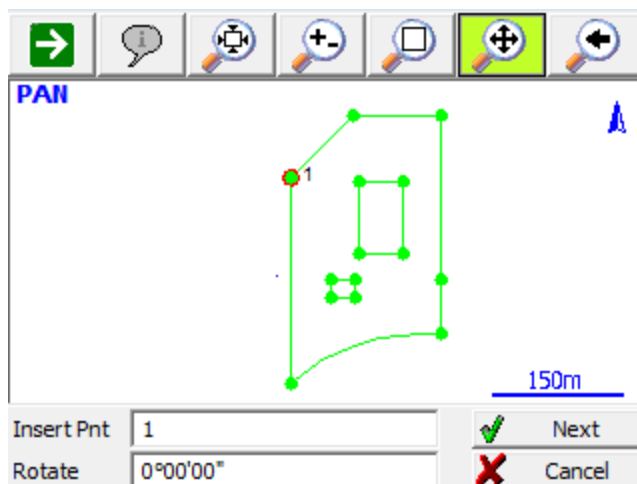

### Insert Template

Once you are satisfied with the location and rotation of the template, you can save it into the current project by pressing the Insert button. New points and line work will be added to the project for you automatically.

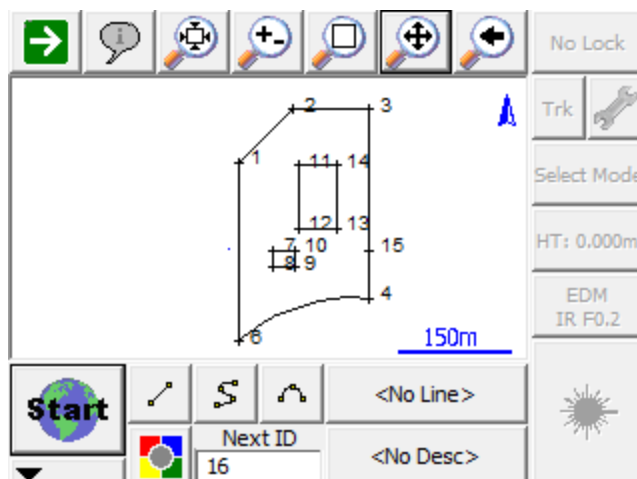


## Template Export

Main Menu | Edit Menu | Template Export

You can export and save line work (figures) and points to a file that can then be inserted into different projects. An example of how this feature can be used is when you have a building that is common to several projects. Instead of computing a new building in each project, you can do it just once, save it to a file, then insert it into your other projects.

When you start the command you will see the template export toolbar.

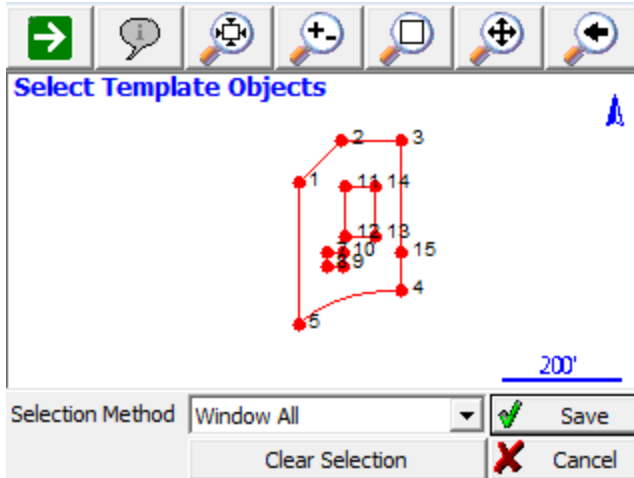

There are four options available for selecting the line work and points.

### Window All

This option lets you window the objects. All points and line work contained within the selection window will be accepted.

### Window Points

This option lets you window objects, but only coordinate points will be selected all line work is ignored.

### Single All

Use this option to manually select objects in the map view to export. You can select points or lines / arcs. If you select a line, the points that define the line will be exported as well.

### Single Points

Use this option to select point one by one in the map screen.

## Save Template

When you're done selecting your objects, you can save them to a file by pressing the Save button. Choose a location for your template, give the file a descriptive name and save it. Template files have



a ".tpl" extension.

---

## Import Template

You can then import the template into any project by using the [Template Import](#) command.

## Fieldbook File Export

### Main Menu | Import/Export | Fieldbook File Export

Use this option to export FieldGenius database points and figure information from the current project in a Fieldbook (.FBK) format for import into non-MicroSurvey desktop software such as AutoCAD's Land Development Desktop.

FieldGenius users who have MicroSurvey CAD or inCAD Desktop software will not need to use this function as our products import standard FieldGenius raw data.

This function is designed for post processing so is best used after all fieldwork is complete. The raw file observations are not included in the FBK file, you can read the FieldGenius raw file into Survey Link included with LDD. You can then make your edits to the raw file and import it to LDD.

---

## Function

1. Complete your survey project with FieldGenius.
2. Select **Fieldbook File Export** from the [Import/Export menu](#).
3. Browse to the folder where you want to save the file, enter a filename, then press **Save File**. FieldGenius will add a .fbk extension to the filename if you did not include it.

---

## Importing into LDD

To import the FBK file into LDD you will need to use the Import Field Book from the Data Collection / Input menu.

If you haven't already done so you will want to edit your Description Key list and Figure Prefix Library in LDD so the points and figures will be automatically layered for you.

## SDR File Export

### Main Menu | Import/Export | SDR File Export

The SDR Export in FieldGenius will convert the existing raw file into a SDR 33 compatible format. It is important to note that currently not all existing raw record types are exported through the SDR export.

Currently the following types are exported:

- Store Points
- Job Info
- Units
- Notes / Comments
- Occupy Setups
- Sideshots
- Stakeout shots
- Target Heights
- Resection measurements are not exported, but computed resection point exported as Store Point.
- The resulting SS or TR shot for multisets will be exported as a sideshot.
- The resulting SS or TR shot for angle or distance offsets will be exported as a sideshot.
- Calculated points will be stored as a Store Point
- Adjusted Points are exported as Store Points

The following record types are not currently exported:

- GPS Datum Settings
- GPS Transformation Parameters
- GPS Measurements

---

## Function

1. Select **SDR File Export** from the [Import/Export menu](#).
2. Browse to the folder where you want to save the file, enter a filename, then press Save File. FieldGenius will add a .sdr extension to the filename if you did not include it.

## Shapefile Export

[Main Menu](#) | [Import/Export](#) | [Shapefile Export](#)

Use this to export your points and linework in a shape file format. This can then be imported into products that support shape files. This export will create a DBF, SHP and a SHX file for the linework and points in your project.

For example, if your project name was FG Sample, the following files will be created for the linework.

FG Sample\_POLYLINE.shx

FG Sample\_POLYLINE.shp

FG Sample\_POLYLINE.dbf

For the points in your project, FieldGenius already stores points in a DBF file (FG Sample.dbf) so only two other files will be created.

FG Sample.shx

FG Sample.shp

---

## Function

1. Select **Shapefile Export** from the [Import/Export menu](#).
2. You will see a message indicating "Shapefile export complete."

---

## Importing into ESRI or other application

To open these files in a compatible product you need to ensure you have all six file saved in the same directory.

For more information on shape files, visit [www.esri.com](http://www.esri.com)

## Import / Export User Defined Coordinate Systems

User defined coordinate systems created by a user are saved in the binary mapping system files.

It is useful to be able to export these user created coordinate systems for the following reasons:

1. A backup of your user defined coordinate systems.
2. Allows you to share user defined coordinate systems with other crews.
3. Allows you to load user defined coordinate systems after installing a FieldGenius update.

### Export

When you export the user defined coordinate systems you will be able to specify a directory to save the file to and a name for the file.

Exported files will automatically be saved with a CSMAP extension such as **mycoordinatesystem.csmap**.

All user defined coordinate systems in FieldGenius will be exported to the file.

### Import

You can import coordinate systems from a previously saved file.

When you import a file you will be asked to browse to and select the file you want to import. Once selected, FieldGenius will check to make sure a user defined system doesn't already exist and if one does, you will be asked if you want to skip importing it, or overwrite the existing coordinate system.

---

## **Backups**


FieldGenius automatically creates a backup when you add or edit user defined coordinate systems. If you forgot to save your user defined coordinate systems, you may be able to restore them using a backup. Please see the [Coordinate System](#) topic for more details.

# ABOUT FIELDGENIUS

## About FieldGenius

[Main Menu](#) | [About](#)

Use this to display information about the FieldGenius version you have installed or view what modules you have registered.

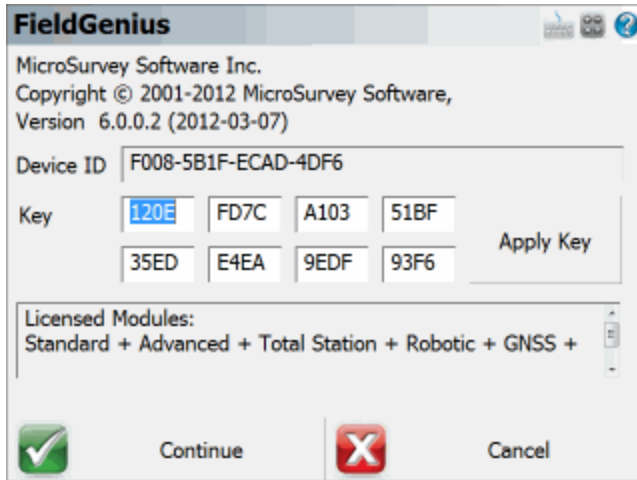

You will also see your Device ID and a series of fields where you can input the Key Code you received from MicroSurvey.

You will see an area that will show you the status of your license, including any modules that you currently have licensed. If you want to use FieldGenius in demo mode, press the **Run Demo Mode** button.

Please refer to the [Registration & Demo Mode](#) topic for further information.

---

## Target Manager

### MapView | Target Manager |


The Target Manager is a place where you can manage your EDM (electronic distance measurement) targets. You can create, edit, copy, and delete targets. The Target Manager is divided into 2 sections: Backsight and Foresight.

**Note:** Leica users should refer to the [Leica version of the Target Manager topic](#).

---

### Target Manager: Backsight

Use the Backsight screen to define your backsight target and enter a backsight target height.

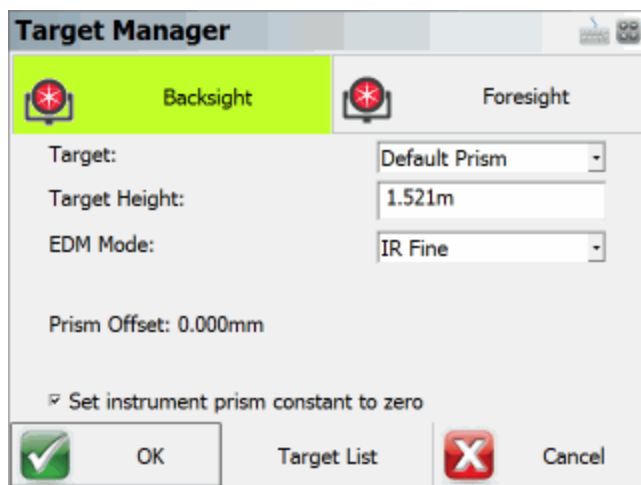

#### Target

Use this field to select a backsight target.

#### Target Height

Enter the height of your target here.

#### EDM Mode

Use this field to select the EDM mode you would like to use. Typically you will want to select an EDM mode that corresponds to your target type.

#### Prism Offset

This field will display whatever prism offset that you entered for the selected target.

### Set instrument prism constant to zero

When you connect your instrument to FieldGenius, special notes are recorded in the raw file regarding prism offsets.

If you have the "Set Instrument" toggle turned on and your instrument supports this feature, FieldGenius will set your instrument's prism offset to zero so no correction will be applied to the measurement. Then once FieldGenius receives this uncorrected measurement, it will use the values you specified in the prism offset fields and adjust the distance accordingly. For example, if you specified an offset of 30mm, FieldGenius will upload an offset of zero to your instrument and apply the 30 mm offset to the measurement after it is received. In your raw file you will see the following note:

```
|--FieldGenius Prism: 30mm Instrument Prism: 0mm |
```

Most prism offset are specified in millimeters. FieldGenius will make the necessary conversions so the proper adjustment is applied.

If FieldGenius can't set the prism offset on your instrument, it usually can't read it either. Since a prism offset wasn't uploaded, we don't know what prism offset is set on the instrument. So we indicate this by writing to the raw file that the instrument prism offset is "unknown".

```
|--FieldGenius Prism: 30mm Instrument Prism: Unknown |
```

When this happens you will usually want to confirm what offset are currently configured on your instrument in regards to prism offsets.

#### **Special Notes:**

- When using instruments that don't support uploading of prism constants, be sure not to double up your prism offsets by applying it in the instrument and FieldGenius at the same time.
- Since prism offsets are so important, on the measurement progress meter you will see what offset is being applied to your measurement.

### OK

This records the settings you have just made, closes the Target Manager, and returns you to the Map-View.

### Target List

Press this button to access the Target List. Here you can create, copy, edit, and delete targets.

### Cancel

Press this button to discard any changed made to the Backsight dialog and returns you to the Map-View.

---

## **Target Manager: Foresight**

Use the Foresight screen to select the foresight target and enter a target height.

---

**Target Manager**

**Backsight**      **Foresight**

Target: Default Prism

Target Height: 2.00

EDM Mode: IR Fine

Temporary Height: 0.000m

Prism Offset: 0.000mm

Use temporary target height

Set instrument prism constant to zero

OK      Target List      Cancel

### Target

Use this field to select a foresight target.

### Target Height

Enter the height of your foresight target here.

### EDM Mode

Use this field to select the EDM mode you would like to use. Typically you will want to select an EDM mode that corresponds to your target type.

### Temporary Height

Use this field to enter a temporary target height. To have this temporary height be used, you must place a check mark in the **Use temporary target height** check box. This will be a one-time measurement and then the system will revert back to the height defined in the **Target Height** field.

### Prism Offset

This field will display whatever prism offset that you entered for the selected target.

### Use temporary target height

Use this to specify a **one time only** target height. In other words after you take your measurement it will revert back to the previous target height automatically.

### Set instrument prism constant to zero

If this has a check mark in the box, a prism constant of zero will be uploaded to your instrument. The offsets specified in the foresight and backsight targets will be applied to the measurements when



received by FieldGenius Remove the check mark if you don't want FieldGenius to modify your instrument's prism offset. **Not all instruments support this feature.**

When you connect your instrument to FieldGenius, special notes are recorded in the raw file regarding prism offsets.

If you have the "Set Instrument" toggle turned on and your instrument supports this feature, FieldGenius will set your instrument's prism offset to zero so no correction will be applied to the measurement. Then once FieldGenius receives this uncorrected measurement, it will use the values you specified in the prism offset fields and adjust the distance accordingly. For example, if you specified an offset of 30mm, FieldGenius will upload an offset of zero to your instrument and apply the 30 mm offset to the measurement after it is received. In your raw file you will see the following note:

```
|--FieldGenius Prism: 30mm Instrument Prism: 0mm |
```

Most prism offset are specified in millimeters. FieldGenius will make the necessary conversions so the proper adjustment is applied.

If FieldGenius can't set the prism offset on your instrument, it usually can't read it either. Since a prism offset wasn't uploaded, we don't know what prism offset is set on the instrument. So we indicate this by writing to the raw file that the instrument prism offset is "unknown".

```
|--FieldGenius Prism: 30mm Instrument Prism: Unknown |
```

When this happens you will usually want to confirm what offset are currently configured on your instrument in regards to prism offsets.

**Special Notes:**

- When using instruments that don't support uploading of prism constants, be sure not to double up your prism offsets by applying it in the instrument and FieldGenius at the same time.
- Since prism offsets are so important, on the measurement progress meter you will see what offset is being applied to your measurement.

**OK**

This records the settings you have just made, closes the Target Manager, and returns you to the Map-View.

**Target List**

Press this button to access the Target List. Here you can create, copy, edit, and delete targets.

**Cancel**


Press this button to discard any changed made to the Backsight dialog and returns you to the Map-View.

---

## Target List

The Target List is where you can create, edit, copy, and delete targets. The Target List comes with 2 default targets (Default Prism and Default Reflectorless) but you can create as many more as you like. All targets are saved in the Settings.xml file and is located in the Programs folder.

[Click here for help on Leica Instrument Target List help.](#)

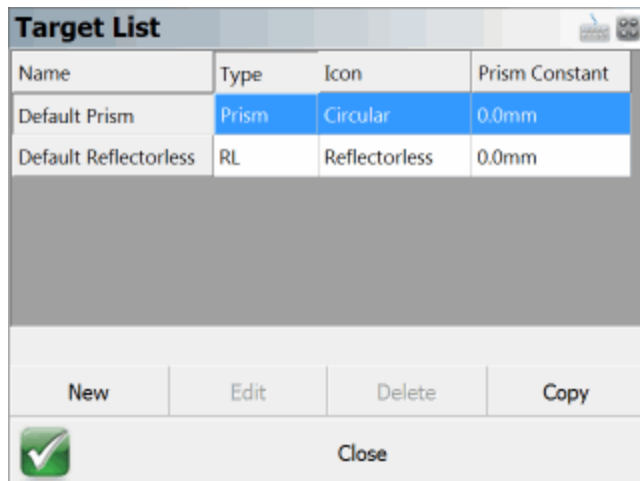

Name	Type	Icon	Prism Constant
Default Prism	Prism	Circular	0.0mm
Default Reflectorless	RL	Reflectorless	0.0mm

Buttons: New, Edit, Delete, Copy, Close

You are not permitted to delete or edit a default target but you certainly can copy one and edit the copy.

### **New**

Tap on this button to access the **New Target** dialog. Here you can create a new target.

### **Edit**

Tap on a target to select it. Then press the **Edit** button to access the **Edit Target** dialog. Default targets can not be edited.

### **Delete**

Tap on a target to select it. Then press the **Delete** button to delete the selected target. You will receive a warning message that you must acknowledge before deletion is complete. Default targets can not be deleted.

### **Copy**

Tap on a target to select it. Then press the **Copy** button. This will open the **Edit Target** dialog and you can then edit the copied parameters.

### **Close**


Pressing this button returns you to the Target Manager screen.

## New Target

[MapView](#) | [Target Manager](#) | [Target List](#) | [New](#)

Use this option to create a new target. Provide the new target with a unique name, a prism constant, and select an icon to represent your new target.

[Click here for help creating a new Leica Geosystems target.](#)

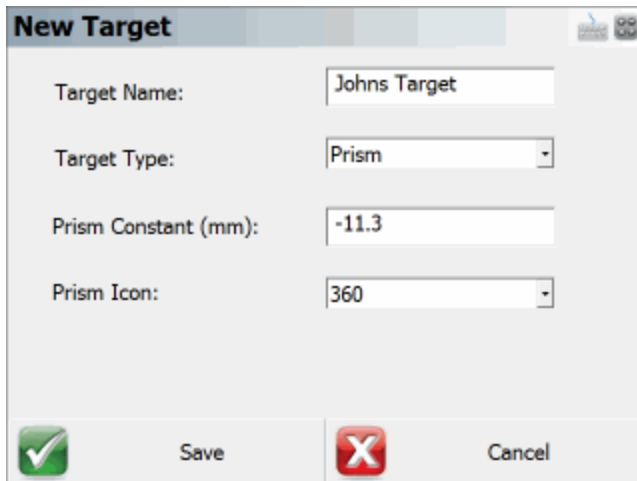

**New Target**

Target Name:

Target Type:

Prism Constant (mm):

Prism Icon:

Save  Cancel

### Target Name

Use this field to either edit or enter a new name for the target you are editing.

### Target Type

There are two target types available to select. **Prism** is to be used when you are selecting a target that has a known offset. This can be a round prism, 360, mini, etc. **RL** stands for reflectorless and you should select this target type if you are using an instrument that is reflectorless capable and you do not wish to use a designated reflector.

### Prism Constant (mm)

This defines the relation of the distance measurement to the mechanical reference point of the reflector. Your prism will have a published offset.

### Prism Icon

Use this field to select an icon for your new target.

### Save

---

Press this button to store your new changes to the Settings.xml file, and return you to the Target List screen.

### **Cancel**


Press this buton to cancel creating a new target. You will be returned to the Target List screen.

## **Edit Target**

**MapView | Target Manager | Target List**

Use this option to edit an existing target. You will also see this display after you copy an existing target.

[Click here for help on editing a Leica Geosystems target.](#)

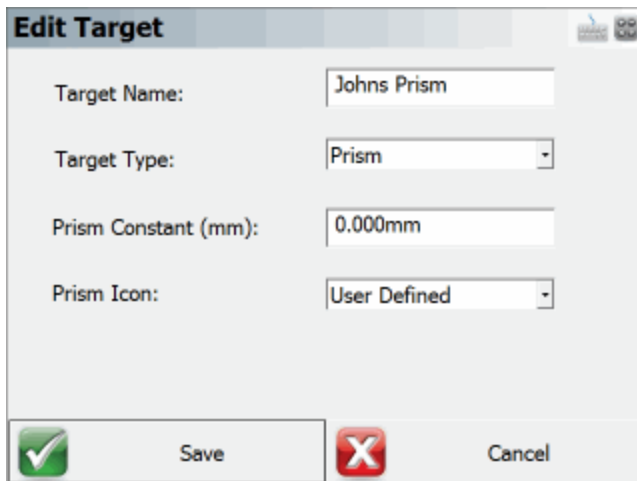

**Edit Target**

Target Name: Johns Prism

Target Type: Prism

Prism Constant (mm): 0.000mm

Prism Icon: User Defined

Save Cancel

### **Target Name**

Use this field to either edit or enter a new name for the target you are editing.

### **Target Type**

There are two target types available to select. **Prism** is to be used when you are selecting a target that has a known offset. This can be a round prism, 360, mini, etc. **RL** stands for reflectorless and you should select this target type if you are using an instrument that is reflectorless capable and you do not wish to use a designated reflector.

### **Prism Constant (mm)**

This defines the relation of the distance measurement to the mechanical reference point of the reflector. Your prism will have a published offset.

**Prism Icon**

Use this field to select an icon for your new target.

# TOTAL STATION REFERENCE

## Conventional Total Station

When connecting to a conventional total station there are a few things you need to confirm before connecting to FieldGenius.

You need to know what the communication parameters are set to on the instrument. Please take the time to find what the following settings are set to on the instrument: Baud Rate, Data Bits, Stop Bits and Parity.

Because of all the different instruments available, we can not provide help on retrieving these settings from your instrument. Please refer to your owner's manual or contact technical support from your equipment manufacturer.

### Total Station Profile

Once you know the settings, you can connect FieldGenius to the instrument. If you just installed FieldGenius you can start the program and follow the prompts until you get to the [Instrument Selection](#) screen. From there, select **Total Station** as the Instrument Type, and then press the **Add** button to create a new Instrument Profile. Name the profile for your instrument, and then press the **Edit** button to access the [Total Station Configuration](#) screen to configure your profile. From there choose the **Model and Communication** button to configure FieldGenius.

You can also access this screen by going to the **Main Menu | Settings | Instrument Selection** and choose total station.

### Select Make and Model

FieldGenius uses a smart driver that will poll the instrument to see what commands it supports. Because of this you will see that in the Model section we don't list every instrument built by the manufacturer. If you're unsure of what make and model to choose visit our website and use the [online help-desk support center](#) to do a search for your instrument.

### Communication Settings

Confirm the settings so they match the settings from your instrument. If you don't know what the settings on the instrument are, you can always try the **Default Comm Settings** button.

### Other Settings

On the [Total Station Configuration](#) screen, you can review the other options to set some additional parameters for your instrument.

## Connect to Instrument

If you're not connected to the instrument you will see a status of "**Not Connected**" displayed above the Connect to Instrument button. When you're ready to connect make sure you have done the following:

1. Powered on the instrument
2. Levelled the instrument
3. Compensated the instrument.
4. Connected the data cable from the instrument to your data collector.

Once you have done all four steps, you can press the **Connect to Instrument** button. If you see a status of "**Connected**" displayed above the Connect to Instrument button then you have successfully connected.

## Getting Started

To start taking measurement you need to exit out the Total Station Configuration screen by pressing close button. Depending on the instrument you connected to you will have different options available. Please review the [Instrument Toolbar](#) topic for more information.

Tip: You can use the enter key on your device to take a measurement. For example, if your measurement mode is set to Sideshot and you press the enter key, your instrument will take a measurement.

## Robotic Total Station

When connecting to a robotic total station there are a few things you need to confirm before connecting to FieldGenius.

You need to know what the communication parameters are set to on the instrument. Please take the time to find what the following settings are set to on the instrument: Baud Rate, Data Bits, Stop Bits and Parity.

Because of all the different instruments available, we can not provide help on retrieving these settings from your instrument. Please refer to your owner's manual or contact technical support from your equipment manufacturer.

## Create Total Station Profile

Once you know the settings, you can connect FieldGenius to the instrument. If you just installed FieldGenius you can start the program and follow the prompts until you get to the [Instrument Selection](#) screen. From there, select **Total Station** as the Instrument Type, and then press the **Add** button to

create a new Instrument Profile. Name the profile for your instrument, and then press the **Edit** button to access the [Total Station Configuration](#) screen to configure your profile. From there choose the **Model and Communication** button to configure FieldGenius.

You can also access this screen by going to the **Main Menu | Settings | Instrument Selection** and choose total station.

### **Select Make and Model**

FieldGenius uses a smart driver that will poll the instrument to see what commands it supports. Because of this you will see that in the Model section we don't list every instrument built by the manufacturer. If you're unsure of what model and make to choose visit our website and use the [online help-desk support center](#) to do a search for your instrument.

### **Communication Settings**

Confirm the settings so they match the settings from your instrument. If you don't know what the settings on the instrument are, you can always try the **Default Comm Settings** button.

### **Other Settings**

On the [Total Station Configuration](#) screen, you can review the other options to set some additional parameters for your instrument.

---

## **Connect to Instrument**

If you're not connected to the instrument you will see a status of "**Not Connected**" displayed above the Connect to Instrument button. When you're ready to connect make sure you have done the following:

1. Powered on the instrument and radios
2. Leveled the instrument
3. Compensated the instrument.
4. Connected the data cable from the instrument to one radio, and your data collector to the other radio.

Once you have done all four steps, you can press the **Connect to Instrument** button. If you see a status of "**Connected**" displayed above the Connect to Instrument button then you have successfully connected.

---

## **Getting Started**

To start taking measurement you need to exit out the Total Station Configuration screen by pressing the Connect button. Depending on the instrument you connected to you will have different options available. Please review the [Robotic Instrument Toolbar](#) topic for more information.




## Instrument Selection

[Main Menu](#) | [Settings](#) | [Instrument Selection](#)

The Instrument Selection screen allows you to choose the type of equipment you will be connecting to FieldGenius. An Instrument Profile can be created for each different instrument you will be working with, to make changing between different hardware a breeze. Once you have setup a profile for each different instrument you will be using, switching between them is a simple matter of selecting the appropriate profile and pressing **Connect**.

Note, this screen is not available if FieldGenius is running onboard your instrument.

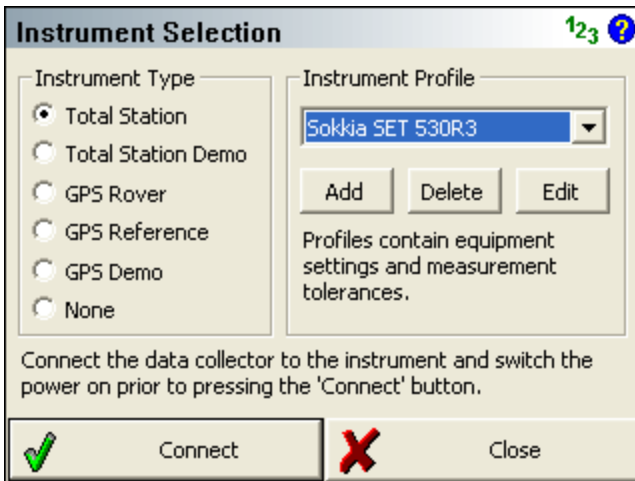

For all future projects you create with FieldGenius, when you create a new or open an existing project you will see the Instrument Selection screen with the profiles you have already created. It will default to the last Profile you used, so if you are using the same instrument just press **Connect**. If you are using different equipment, just select the appropriate Instrument Type and Profile (or add a new profile if one does not yet exist for it), then press **Connect**.

Your profiles are stored in the file ...\\MicroSurvey FieldGenius\\Programs\\MSURVEY.INI so once you have configured one data collector, you can simply copy this file onto your other data collectors to make the profiles available on them. This file should also be backed up for easy recovery.

### Total Station

When you select Total Station mode, you will be able to Add, Delete, or Edit a profile to setup parameters for connecting to your conventional and robotic total stations, as well as laser devices. See the [Total Station Configuration](#) topic for more details about configuration for your total station.

For more information on connecting to your instrument please refer to the [Conventional Total Station](#) and [Robotic Total Station](#) topics.

---

## Total Station Demo

If you choose this you will have to manually enter your shots. Manually entered shots are recorded in the raw file and points are computed based on the values you enter. A profile is not needed for this mode, just press Connect to begin using the Total Station Demo mode.

---

## GPS Rover / GPS Reference

When you set it to GPS Rover or GPS Reference you will be able to Add, Delete, or Edit a profile for your rover or reference receiver. When you edit a GPS Rover or GPS Reference profile, you will see the [Configure Rover](#) or [Configure Reference](#) screens. For more information about using FieldGenius for GPS surveying, you should review the [Starting GPS](#) topic.

If you have not purchased the GPS module for FieldGenius, then you will not have access to the GPS commands and you will see a "Requires GPS module license" message.

---

## GPS Demo

When you set it to GPS Demo you will be able to Edit and Connect to a profile for a simulated rover receiver. When you edit the RTK Demo profile, you will see the [Configure Rover](#) screen. Feel free to play with the Tolerance Mode settings, but please do not change the Model and Communications settings. For more information about using FieldGenius for GPS surveying, you should review the [Starting GPS](#) topic.

The GPS Demo will simulate connecting FieldGenius to a GPS Rover receiver. The coordinates in the GPS Demo are located outside our office in Westbank, British Columbia, Canada, so to use the GPS Demo mode you need to set your Coordinate System Settings to UTM Zones, NAD83, UTM83-11, Ellipsoidal.

---

## None

Use this option if you're not connecting anything to FieldGenius and also don't need to manually enter any shot information. With this mode, the instrument toolbar will not be displayed in the map screen.

---


## Make and Model Settings

FieldGenius includes instrument and GNSS drivers for most popular brands. This list of supported hardware is constantly changing and for a complete list of supported hardware, please visit the following webpage: [http://www.microsurvey.com/products/fieldgenius/hardware\\_table.php](http://www.microsurvey.com/products/fieldgenius/hardware_table.php)

## Total Station Profile

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Total Station](#) | [Edit](#)

This screen will help you configure your total stationing settings such as the make and model of instrument you plan on using and set any desired parameters you may need to use with your instrument. This option will only be available if you specified **Total Station** in the [Instrument Selection](#) screen and then **Edit** a profile.

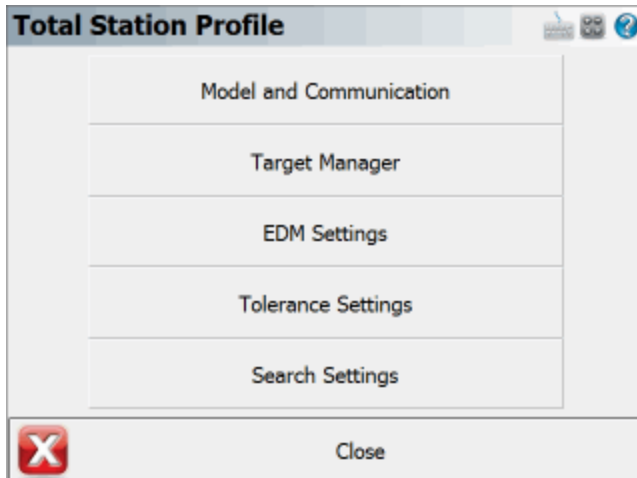

### [Model and Communication](#)

This allows you to specify the make and model of instrument that will be connected to FieldGenius. You can also specify the communication settings such as baud rate and com port. See the [Model and Communication](#) topic for more information.

### [Target Manager](#)

This allows you to create, copy, and delete targets in FieldGenius. You can define a unique backsight and foresight target for example. See the [Target Manager](#) topic for more information.

### [EDM Settings](#)

This allows you to specify if you will be using prism offsets in FieldGenius and allows you to specify tolerances that will be used to ensure your EDM measurement meet your criteria. See the [EDM Settings](#) topic for more information.

## Tolerance Settings

This allows you to specify angular distance tolerances that will be used by the traverse routines. See the [Measurement Tolerance](#) topic for more information.


## Search Settings

When using a robotic instrument, you can specify search window parameters. See the [Search Settings](#) topic for more information.

# Model and Communication

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Edit Total Station Profile](#) | [Model and Communication](#)

This is where you can specify the make and model of instrument you will be connecting to, as well as specify your communication parameters.

**Model and Communication**  123 ?

Make:  Model:

Status: **Not Connected**



 
Port:

Baud Rate:

Data Bits:

Stop Bits:

Parity:

 Connect  Radio Settings  Close

## Total Station Make

Use this to select the make of your instrument.

## Total Station Model

Use this to select the model of your instrument.

## Status



This indicates whether FieldGenius is Connected or Not Connected to your instrument.

### Port, Baud Rate, Data Bits, Stop Bits, and Parity

If you know the settings of your instrument you can set them here in FieldGenius. They have to match exactly the ones on your instrument or you will get a communications error when you try to connect.

**It is important to confirm these settings on your instrument when you're trying to connect FieldGenius for the first time!** Most connection problems occur because the user has specified parameters that don't match the ones on their instrument.

On many data collectors you can select Bluetooth as your communication port. If you select the Bluetooth port, the traditional serial communication options (Baud Rate, Data Bits, Stop Bits, Parity) will be replaced with a Bluetooth Search function.

Model and Communication  

Make

Model

Status: **Not Connected**

Port

Device: Not Selected

RC Port

Device: Not Selected

Please note that not all bluetooth-enabled devices will list Bluetooth as a Port option. In some cases you must configure and use a virtual COM port through Windows CE's internal Bluetooth Settings, for example COM6.

### Bluetooth Search

If you set the port to Bluetooth, a **Bluetooth Search** button will appear. Press the search button to find the device you want to communicate wirelessly with. All devices within range will be listed, choose the one you want to use

The device you selected will be saved into your instrument profile for future use so you do not need to Search every time.

### **Bluetooth PIN**

After initiating a Bluetooth connection, you will be prompted to enter the PIN (passkey) for the instrument you are connecting to. If your instrument does not need one just leave it blank and continue by pressing OK.

The PIN you enter will be encrypted and stored in your instrument profile.

### **RC Port**


If you are connecting with a Topcon Robot, you can specify which port on your data collector the RC unit is connected to.

### **Radio Settings**

Use this to set the communication parameters for your radios or other communication device, such as the channel or frequency. You can also use it to specify a direct connection to FieldGenius instead of using radios. Please see the [Radio Settings](#) topic for additional information.

### **Connect**

Use this to connect to your instrument after you have specified your communication settings. After pressing the Connect button FieldGenius will display a reminder screen listing some items you should check before continuing.

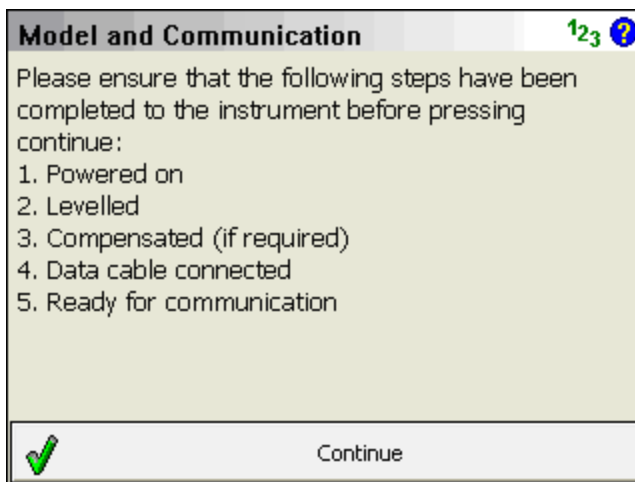

When you press Continue on the screen and you see the following message, "No communication with instrument. Check settings, cables and power." read the [No Communication](#) topic for possible causes.

FieldGenius connects successfully, the Status will change to "Connected", and if your instrument supports graphical representation of the level bubble, you will see the [Check Level](#) screen.

## Radio Configuration

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Edit Total Station Profile](#) | [Model and Communication](#) | [Radio Settings](#)

Use this to specify if you want to connect to your robotic instrument using a direct connection or through the instrument's radios. If you're using a Topcon, you can specify your RC unit as the communication device.

The screenshot shows a dialog box titled "Radio Configuration". In the top right corner, there is a green "123" and a help icon. The dialog is divided into two main sections. The "Connection" section has two radio buttons: "Direct" (which is selected and has a dotted border) and "RC-2". Below this is a "Radio" radio button. The "Settings" section contains three dropdown menus labeled "Channel", "Station Address", and "Remote Address". At the bottom of the dialog, there are two buttons: "OK" with a green checkmark icon to its left, and "Cancel" with a red "X" icon to its left.

---

## Connection

### Direct

This will allow you to connect directly to your instrument through an instrument cable.

### Radio

This will allow you to connect to your instrument using external radios. Select your radio channel, if this option is available.

**Note:** If you are using radios with your instrument but this option is disabled or not available, then pick the Direct option instead.

### RC

This will allow FieldGenius and your instrument to communicate through the RC unit.

## Settings

If you're using a Trimble or Geodimeter total station you will be able to specify the radio settings required to communicate with your instrument.

## EDM Settings

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Edit Total Station Profile](#) | [EDM Settings](#)

From here you can specify EDM settings such as prism offsets and measurement modes.

## EDM Settings

### Mode

This list will display all the measurement modes supported by your instrument. These will be the same as the ones you're used to using and you can refer to your owner manual for more information on their specifications.

### Time Out (s)

Use this to specify the length of time FieldGenius will try to receive a measurement from your instrument. You may need to set this to a higher number if you're trying to receive measurement in wooded areas or long sights.

### Use Default Time Out

If this is checked on FieldGenius will use a default time out value. If you would like to change it you need to uncheck it and update the **Time Out** field.



## **Minimum and Maximum**

You can specify the minimum and maximum distance that FieldGenius will accept as being valid. Example is if you set this the minimum to 10 feet and you measure 5 feet, FieldGenius will not record the measurement and will display a "Distance out of range" error in the status toolbar.

## **Guide Light**

If your instrument has guide lights you will be able to set their intensity modes here. Please refer to your owners manual for more information on the different intensities.

---

## **Prism Offsets**

### **Foresight Prism Offset**

Use this if you want FieldGenius to control your prism offsets for your foresight shots. The values must be entered in millimeters. A positive value will be added to the distance that is measured, whereas a negative value will be subtracted.

All measurements other than the measurements to your backsight (reference measurement) are considered to be a foresight shot.

**Note:** If you specify a prism offset here, you need to make sure the prism offsets are set to zero on your instrument. Otherwise a double offset could be applied to your measurement which will produce incorrect answers.

When you first configure FieldGenius with your instrument, you should take the time to confirm that the distances being measured are correct. You can do this by first measuring a precise distance between your current occupy point and a point that you can easily reference and take a measurement to. When you compare the distance measured by FieldGenius to your manually measured distance, they should agree very closely.

### **Backsight Prism Offset**

Use this if you want FieldGenius to control your backsight prism offsets. The values must be entered in millimeters. A positive value will be added to the distance that is measured, whereas a negative value will be subtracted.

Under normal circumstances, you will set the backsight prism offset to be equal to what you defined for the foresight prism offset. The only time these would be different is in situations where you're using different prisms that have different prism offsets. This is very common with robotic total stations where a permanent prism might be setup on the backsight, and a 360° prism is used at the pole. Typically these two configurations require different offsets be applied at the backsight and foresight shots. If you're unsure about your prism offsets, refer to your instrument's owners manual, or the dealer who sold you the instrument.

**Note:** If you specify a prism offset here, you need to make sure the prism offsets are set to zero on your instrument. Otherwise a double offset could be applied to your measurement which will produce incorrect answers.

When you first configure FieldGenius with your instrument, you should take the time to confirm that the distances being measured are correct. You can do this by first measuring a precise distance between your current occupy point and a point that you can easily reference and take a measurement to. When you compare the distance measured by FieldGenius to your manually measured distance, they should agree very closely.

### **RL (Reflectorless) Prism Offset**

Most instruments when shooting reflectorlessly apply a zero offset to the measurement. Depending on the type of material you're measuring to, some materials require an offset be applied even though you're using a reflectorless EDM mode. For example, some reflective tapes used for these types of measurement require a small offset be applied. In this case you can specify this offset and FieldGenius will automatically apply it during reflectorless measurements.

**Note:** If you specify a prism offset here, you need to make sure the prism offsets are set to zero on your instrument. Otherwise a double offset could be applied to your measurement which will produce incorrect answers.

### **Set Instrument to zero**

If this is turned on, a prism constant of zero will be uploaded to your instrument. The offsets specified in the foresight, backsight and RL fields will be applied to the measurements when received by FieldGenius. Turn this off if you don't want FieldGenius to modify your instrument's prism offset. **Not all instruments support this feature.**

When you connect your instrument to FieldGenius, special notes are recorded in the raw file regarding prism offsets.

If you have the "Set Instrument" toggle turned on and your instrument supports this feature, FieldGenius will set your instrument's prism offset to zero so no correction will be applied to the measurement. Then once FieldGenius receives this uncorrected measurement, it will use the values you specified in the prism offset fields and adjust the distance accordingly. For example, if you specified an offset of 30mm, FieldGenius will upload an offset of zero to your instrument and apply the 30 mm offset to the measurement after it is received. In your raw file you will see the following note:

```
|--FieldGenius Prism: 30mm Instrument Prism: 0mm |
```

Most prism offset are specified in millimeters. FieldGenius will make the necessary conversions so the proper adjustment is applied.

If FieldGenius can't set the prism offset on your instrument, it usually can't read it either. Since a prism offset wasn't uploaded, we don't know what prism offset is set on the instrument. So we indicate this by writing to the raw file that the instrument prism offset is "unknown".

|--FieldGenius Prism: 30mm Instrument Prism: Unknown |

When this happens you will usually want to confirm what offset are currently configured on your instrument in regards to prism offsets.

**Special Notes:**

- When using instruments that don't support uploading of prism constants, be sure not to double up your prism offsets by applying it in the instrument and FieldGenius at the same time.
- Since prism offsets are so important, on the measurement progress meter you will see what offset is being applied to your measurement.

Measuring (Prism=30mm) [20%]

## Reflectorless Settings

### Std Dev:

This applies only to Trimble instruments. See your instrument guide for information on how the standard deviation affects your reflectorless measurements.

## Measurement Tolerance

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Edit Total Station Profile](#) | [Tolerance Settings](#)

Use this to set tolerances that are used when you're using the multi-set collection function in FieldGenius.

**Measurement Tolerance** 123 ?

Horizontal Angle Tolerance (sec)  
30.0

Vertical Angle Tolerance (sec)  
30.0

Distance Tolerance  
0.010m

OK Cancel

### Horizontal Angle Tolerance (sec)

Use this to specify the tolerance for your horizontal angles in seconds. When you store your multi-set point, if the Standard Deviation exceeds this value you will be notified when you store the point.

### Vertical Angle Tolerance (sec)

Use this to specify the tolerance for your vertical angles in seconds. When you store your multi-set point, if the Standard Deviation exceeds this value you will be notified when you store the point.

### Distance Tolerance

Use this to specify the tolerance for your measured distances. When you store your multi-set point, if the Standard Deviation exceeds this value you will be notified when you store the point.

Please refer to the [Multi-Set](#) topic for more information on how to record a set.

## Search Settings

[Main Menu](#) | [Settings](#) | [Instrument Selection](#) | [Edit Total Station Profile](#) | [Search Settings](#)

When using a robotic or motorized instrument you can specify search settings for your instrument.

**Search Settings** 123 ?

Search Mode: Relative Window

Search Window Range

Horizontal:  Measure

Vertical:  Measure

Search Window Center

Horizontal:  Measure

Vertical:  Measure

Auto search for prism

✓ OK ✗ Cancel

## Search Modes

Some of FieldGenius's search modes are common to all robotic instruments, but there are a few model specific ones. The modes available are:

### Relative Window

This allows you to specify a "window" defined by measuring a point at the top right and bottom left corners. If you press the search button, the search limits will be relative to the direction the instrument is currently pointing. In other words if your **search window ranges** are 30° horizontal and 30° vertical, it will apply this to your current direction. So the search will be limited to an area 15° left, right, up and down from your current direction.

### Absolute Window

This allows you to specify an absolute search "center" for your search window. This forces Field-Genius to search in an absolute area defined by the angles set in the **search window center** fields. Furthermore, the search window range parameters apply to the search window center. For example, let's assume you defined 180° as the horizontal search window center, and the horizontal search window range is 30°. Your instrument will be forced to search in an area 15° left and right of the 180° plate reading. So if your prism is situated at a circle reading of 210°, it would never find you as the instrument would never go past a circle reading of 195° (180+15) when searching.

### RC-2 Fast Track

If you're using a Topcon instrument, you can set the search mode to RC-2. This will force the instrument to use the RC-2 system for the search.

### PS Next (CW)

This setting will appear if your Leica instrument has the power search system. Settings it to this will force the instrument to search in a clockwise direction.

### PS Next (CCW)

This setting will appear if your Leica instrument has the power search system. Settings it to this will force the instrument to search in a counter-clockwise direction.

### PS Absolute Window

This setting will appear if your Leica instrument has the power search system. This will force the power search system to do a relative search based on the **search window range**.

### RC-PR

If you're using a Sokkia SRX, you can set the search mode to RC-PR. This will force the instrument to use the RC system for the search.

---

## **Search Window Range**

Use this to define the upper right corner and lower left corner of your search window. Pressing the measure button will step you through the procedure and it will calculate the horizontal and vertical

search range. This range will be applied to the instrument's current direction when the user presses the search button.

---

### **Search Window Center**

Use this to set an absolute center for your search window. The search window range parameters will be applied to the search window values that were measured. Pressing the measure button will step you through the procedure and it will calculate the horizontal and vertical search range.

---

### **Auto search for prism**

If this is checked, then if your instrument has lost its lock on the prism, FieldGenius will automatically initiate a search for the prism when the measure button is pressed. You will see the word "Search" on the lock button at the top of the [robotic instrument toolbar](#) while a search is in progress.

---

## **No Communication**

When trying to communicate with your instrument you will sometimes see a "*No communication with instrument. Check settings, cables and power.*" error message if FieldGenius can't make a connection with your instrument.

Usually this happens when your communication parameters are not the same on the instrument and in FieldGenius. You need to check these settings again to make sure they're correct.

This can also happen if you have a bad cable. If you're using a robotic instrument you might have setup your radios incorrectly.

 
## Instrument Toolbar



When you use FieldGenius in either manual or total station mode, you will see the instrument toolbar beside the map area.



This toolbar allows you to control your [instrument settings](#), [EDM modes](#), [measurement modes](#) and [target heights](#).

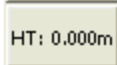


### **Auto-Center**

This toggles the auto-center feature on or off. If turned on, whenever you take a measurement, the map screen will always re-center on the measured point.



### **Instrument Settings**

 This opens the [instrument settings](#) screen where you can control specific settings for your total station such as EDM settings, Tolerance setting and Instrument Connection/Disconnection.

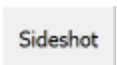


### **Measurement Mode**

This opens the [Measurement Modes](#) screen where you can select what type of measurement you want to take. The current measurement mode is always displayed on this button - for example if you're using the distance offset mode it will display "Dist Off".



### **Target Height**

 This opens the [Target Heights](#) screen where you can change the current target height. The current target height is always displayed on this button.

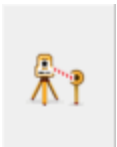


### **Measure Button**

This triggers your total station to take a measurement.

If you are using a robotic total station, please see the [Robotic Instrument Toolbar](#) topic.

If you are using GPS, please see the [GPS Toolbar](#) topic.
 
## Robotic Instrument Toolbar

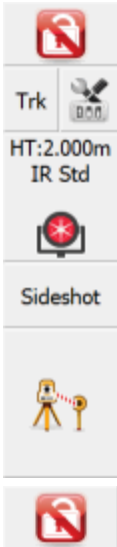

When you use FieldGenius in robotic total station mode, you will see the Robotic Instrument toolbar in the map area. Like the Instrument Toolbar, this toolbar allows you to control your instrument settings, access the [Target Manager](#), change measure modes, and make a measurement. It also lets you search and lock onto the prism.

### Lock Button

FieldGenius uses a button to trigger the instrument to search for the prism and lock onto it. You can also use this button to turn the lock off.

The button when not locked on a prism will display a **No Lock** status with a unlocked icon. To search for the prism, simply press the No Lock button.



After you have pressed the No Lock button you will see a **Search** icon on the button while the instrument searches for your prism.

When FieldGenius finds a prism and locks onto it, the button will display a **Lock** icon. To stop the instrument from tracking, you can press the Lock button again to set it to a No Lock status.



If you're using multiple prisms and you want to force FieldGenius to look for another one when you're locked onto a prism, double tapping the Lock button will force it to search for the next available prism.

Also during a search you can cancel the current search by pressing the Stop Search button on the search progress toolbar.

### Cursor Tracking



This turns the cursor tracking feature on or off. If turned on, the current position of the target will be displayed on the screen in real time. You can only use this feature once you have specified



 
an instrument setup using the Setup Occupy Point command.

Note: The cursor tracking position will use a coarse measurement to plot your position. When you are stationary, the cursor is a hollow triangle pointing towards the instrument. When you are moving, the cursor is a solid triangle pointing in the direction of travel.




### **Instrument Settings**

This opens the [Instrument Settings Toolbar](#). On this toolbar you can control specific settings for your total station such as EDM modes.

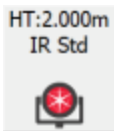


### **Target Manager**

 Press this button to access the [Target Manager](#). Here you can create, edit, copy, and delete targets.

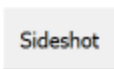

### **Measurement Mode**

 This button will open the Select Measurement Mode screen, From here you can select what type of measurement you will be using. When you choose your mode, this button will display the mode you're using. For example, if you're using the Distance Off-set mode, the button will display "Dist Off".

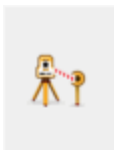

### **Measure Button**

Use this to trigger your total station to take a measurement.


If you are using a conventional non-robotic total station, please see the [Instrument Toolbar](#) topic.

If you are using GPS, please see the [GPS Toolbar](#) topic.

## **Instrument Settings**

[Main Menu](#) | [Settings](#) | [Instrument Settings](#)

[Instrument Toolbar](#) | [Instrument Settings](#)

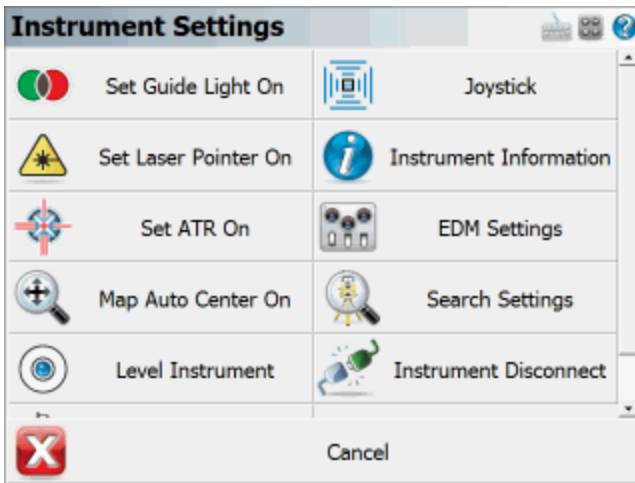

Use the vertical scroll bar along the side to access additional instrument settings if they cannot all fit on screen at the same time.

Please note that not every instrument supports each of the following functions, so you may not see all of the following buttons when connected to your total station.

### [Level Instrument](#)

This will open the [Check Level](#) screen, where you can check how level your instrument is.

### [Instrument Information](#)

When this is pressed, we will display the current battery status of your instrument. Note, not all instruments support this.

### [EDM Settings](#)

Use this to set the EDM mode for your instrument. Every manufacturer has different measurement modes available but we will list only those that your instrument supports. Please refer to your instrument manual for more information on the EDM modes your instrument supports. Any time you change your EDM Mode, FieldGenius writes a comment into the raw file indicating which mode is being used.

### [Tolerance settings](#)

This will take you to you [measurement tolerance settings](#).

### [Set Angle](#)

Use this to open the [Set Angle](#) screen where you can view the current angles and turn or flop your motorized instrument.

### **Auto-Center On / Off**

Use this to automatically center the map when a point is shot. If turned on, whenever you take a measurement, the current prism location will always appear in the center of your map display.

### **ATR On / Off**

Use this to turn on and off your instruments Auto Target Recognition feature.

### **Laser Pointer On / Off**

This turns on and off the instrument's red laser pointer.

### **Guide Lights On / Off**

This will turn on and off your instrument's guide lights.

### **Instrument Joystick**

This is the Total Station Joystick function. When activated you will be able to move your motorized instrument to the left, right, up and down by using the joystick touch-screen. There are three speeds that can be activated: slow, medium, and fast. The smaller inside blue buttons activate the slowest turn mode, and the larger outside blue buttons activate the fastest turn mode. To stop the instrument from turning, simply press the red Stop button at the center. **The directions assume you are at the pole looking at the instrument.** Pressing the right buttons will turn the instrument to your right, pressing the up buttons will turn the scope up, etc.

### **Instrument Connect / Disconnect**

Use this to connect or disconnect FieldGenius from the instrument. When you are connected to the instrument you will see the Disconnect Instrument button.

## **Target Manager**

### **MapView | Target Manager |**

The Target Manager is a place where you can manage your EDM (electronic distance measurement) targets. You can create, edit, copy, and delete targets. The Target Manager is divided into 2 sections: Backsight and Foresight.

**Note:** Leica users should refer to the [Leica version of the Target Manager topic](#).

---

### **Target Manager: Backsight**

Use the Backsight screen to define your backsight target and enter a backsight target height.

### Target

Use this field to select a backsight target.

### Target Height

Enter the height of your target here.

### EDM Mode

Use this field to select the EDM mode you would like to use. Typically you will want to select an EDM mode that corresponds to your target type.

### Prism Offset

This field will display whatever prism offset that you entered for the selected target.

### Set instrument prism constant to zero

When you connect your instrument to FieldGenius, special notes are recorded in the raw file regarding prism offsets.

If you have the "Set Instrument" toggle turned on and your instrument supports this feature, FieldGenius will set your instrument's prism offset to zero so no correction will be applied to the measurement. Then once FieldGenius receives this uncorrected measurement, it will use the values you specified in the prism offset fields and adjust the distance accordingly. For example, if you specified an offset of 30mm, FieldGenius will upload an offset of zero to your instrument and apply the 30 mm offset to the measurement after it is received. In your raw file you will see the following note:

```
|--FieldGenius Prism: 30mm Instrument Prism: 0mm |
```

Most prism offset are specified in millimeters. FieldGenius will make the necessary conversions so the proper adjustment is applied.

If FieldGenius can't set the prism offset on your instrument, it usually can't read it either. Since a prism offset wasn't uploaded, we don't know what prism offset is set on the instrument. So we indicate this by writing to the raw file that the instrument prism offset is "unknown".

```
|--FieldGenius Prism: 30mm Instrument Prism: Unknown |
```

When this happens you will usually want to confirm what offset are currently configured on your instrument in regards to prism offsets.

**Special Notes:**

- When using instruments that don't support uploading of prism constants, be sure not to double up your prism offsets by applying it in the instrument and FieldGenius at the same time.
- Since prism offsets are so important, on the measurement progress meter you will see what offset is being applied to your measurement.

OK

This records the settings you have just made, closes the Target Manager, and returns you to the Map-View.

Target List

Press this button to access the Target List. Here you can create, copy, edit, and delete targets.

Cancel

Press this button to discard any changed made to the Backsight dialog and returns you to the Map-View.

---

**Target Manager: Foresight**

Use the Foresight screen to select the foresight target and enter a target height.

**Target Manager**

**Backsight** | **Foresight**

Target: Default Prism

Target Height: 2.00

EDM Mode: IR Fine

Temporary Height: 0.000m

Prism Offset: 0.000mm

Use temporary target height

Set instrument prism constant to zero

OK | Target List | Cancel

### Target

Use this field to select a foresight target.

### Target Height

Enter the height of your foresight target here.

### EDM Mode

Use this field to select the EDM mode you would like to use. Typically you will want to select an EDM mode that corresponds to your target type.

### Temporary Height

Use this field to enter a temporary target height. To have this temporary height be used, you must place a check mark in the **Use temporary target height** check box. This will be a one-time measurement and then the system will revert back to the height defined in the **Target Height** field.

### Prism Offset

This field will display whatever prism offset that you entered for the selected target.

### Use temporary target height

Use this to specify a **one time only** target height. In other words after you take your measurement it will revert back to the previous target height automatically.

### Set instrument prism constant to zero

If this has a check mark in the box, a prism constant of zero will be uploaded to your instrument. The offsets specified in the foresight and backsight targets will be applied to the measurements when

received by FieldGenius Remove the check mark if you don't want FieldGenius to modify your instrument's prism offset. **Not all instruments support this feature.**

When you connect your instrument to FieldGenius, special notes are recorded in the raw file regarding prism offsets.

If you have the "Set Instrument" toggle turned on and your instrument supports this feature, FieldGenius will set your instrument's prism offset to zero so no correction will be applied to the measurement. Then once FieldGenius receives this uncorrected measurement, it will use the values you specified in the prism offset fields and adjust the distance accordingly. For example, if you specified an offset of 30mm, FieldGenius will upload an offset of zero to your instrument and apply the 30 mm offset to the measurement after it is received. In your raw file you will see the following note:

```
|--FieldGenius Prism: 30mm Instrument Prism: 0mm |
```

Most prism offset are specified in millimeters. FieldGenius will make the necessary conversions so the proper adjustment is applied.

If FieldGenius can't set the prism offset on your instrument, it usually can't read it either. Since a prism offset wasn't uploaded, we don't know what prism offset is set on the instrument. So we indicate this by writing to the raw file that the instrument prism offset is "unknown".

```
|--FieldGenius Prism: 30mm Instrument Prism: Unknown |
```

When this happens you will usually want to confirm what offset are currently configured on your instrument in regards to prism offsets.

**Special Notes:**

- When using instruments that don't support uploading of prism constants, be sure not to double up your prism offsets by applying it in the instrument and FieldGenius at the same time.
- Since prism offsets are so important, on the measurement progress meter you will see what offset is being applied to your measurement.

**OK**

This records the settings you have just made, closes the Target Manager, and returns you to the Map-View.

**Target List**

Press this button to access the Target List. Here you can create, copy, edit, and delete targets.

**Cancel**

Press this button to discard any changed made to the Backsight dialog and returns you to the Map-View.


# SURVEY METHODS MENU

## Survey Methods Menu

### Main Menu | Survey Methods

These are commands built into FieldGenius that will help you measure and map your points. The desired method must be selected before you begin a measurement.

For a faster way to get to this screen, you can also press the measure mode button which is located on the [instrument toolbar](#).

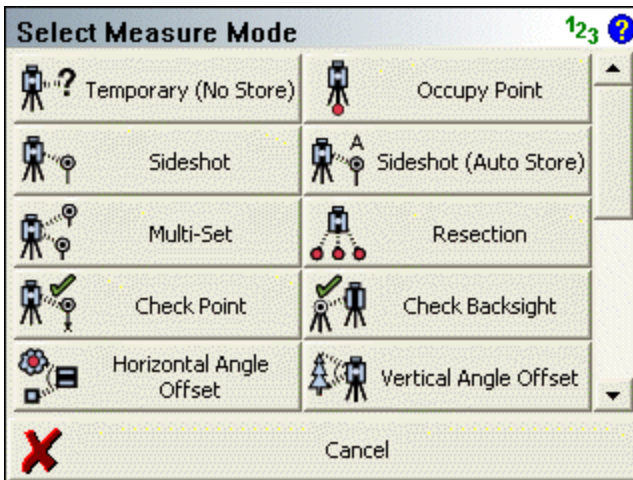

Use the vertical scroll bar along the side to access additional measurement modes if they cannot all fit on screen at the same time.

**Note:** Several of these modes will not be available until you have setup an occupy point and measured a backsight via the Occupy Point, Multi-Set, or Resection commands. Most of these modes will also not be available if you are using GPS.



### **Temporary (No Store)**

This will allow you to take a measurement without storing it. Please see the [Temporary \(No Store\)](#) topic for more information.

### **Occupy Point**

Use this to define an instrument setup. Please see the [Occupy Point](#) topic for more information.

### **Sideshot**

This mode allows you to measure a point. After the measurement, it will allow you to review your measurement data and allow you to make changes to the point id and description before it is stored. Please see the [Sideshot](#) topic for more information.

### **Sideshot (Auto Store)**

This mode allows you to measure a point using the next available point id, and the description and line toggles specified on the main map screen. Using this is a very fast method for recording your measurements. Please see the [Sideshot \(Auto Store\) following](#) topic for more information.

### **Multi-Set**

This will start the multi-set routine that will help you collect repeat observations to your backsight and a new foresight point. Please see the [Multi-Set](#) topic for more information.

### **Resection**

This will start the multiple point resection routine to allow you to determine your current instrument position by measuring to known points. Please see the [Resection](#) topic for more information.

### **Check Point**

Use this to display a check measurement to an existing point in your project. Please see the [Check Shot](#) topic for more information.

### **Check Backsight**

Use this to compare your backsight to your previously measured values. Please see the [Check Backsight](#) topic for more information.

### **Horizontal Angle Offset**

This will start the angle offset routine. Please see the [Horizontal Angle Offset](#) topic for more information.

### **Vertical Angle Offset**

This will allow you to compute the height of an object. Please see the [Vertical Angle Offset](#) topic for more information.

**Distance Offset**

This will start the distance offset routine. Please see the [Distance Offset](#) topic for more information.

**Manual Distance**

This will record a HA and VA for a shot, but the user can manually enter the distance. Please see the [Manual Distance](#) topic for more information.

**Manual Entry**

This will allow you to manually enter in a shot including HA, VA and SD. Please see the [Manual Entry](#) topic for more information

**Two Line Intersection**

This allows you to measure two baselines and FieldGenius will compute the intersection point. Please see the [Two Line Intersection](#) topic for more information.

**Line - Angle Offset**

This allows you to measure two points to define a baseline, measure an angle, and FieldGenius will compute the intersection point. Please see the [Line - Angle Offset](#) topic for more information.

**Line - Distance Offset**

This allows you to measure two points to define a baseline, then manually enter measured distances. These distances will be used to compute a new point based on the baseline. Please see the [Line - Distance Offset](#) topic for more information.

**Line - Perpendicular Point**

This allows you to measure two points to define a baseline, then you can select an existing point which will be used to compute a perpendicular intersection. Please see the [Line - Perpendicular Point](#) topic for more information.

**Trilateration**

This will allow you to compute new points by observing their distances from two known existing points. Please see the [Trilateration](#) topic for more information.

**Observe Benchmark**

Use this to check your current setup elevation, or compute a new one based on a known elevation. Please see the [Measure Benchmark](#) topic for more information.

**Add Invert**

Use this to open the invert toolbar. You will then be able to record invert measurements. Please see the [Add Invert](#) topic for more information.

### **Vertical Plane Projection**

This will allow you to compute points on a user defined vertical plane. Please see the [Vertical Plane Projection](#) topic for more information.

### **Point Scanning**

Use this to activate Point Scanning with your motorized reflectorless instrument. Please see the [Point Scanning](#) topic for more information.

## **Set Angle**

### **Instrument Settings toolbar | Set Angle**

You can access this screen by pressing the **Set Angle** button on the [instrument settings](#) toolbar.

The screenshot shows the 'Set Angle' dialog box. It features a title bar with the text 'Set Angle' and a green '123' icon next to a blue question mark icon. The main area contains two text input fields: 'Horz Angle' and 'Vert Angle'. Below these fields are six buttons arranged in a 3x2 grid: 'Move Absolute' (with a dashed line and arrow icon), 'Move Relative' (with a solid line and arrow icon), 'Turn +90°', 'Turn -90°', 'Flip Scope', and 'Read Angles'. At the bottom left is a red 'X' icon, and at the bottom right is a 'Close' button.

### **Horizontal and Vertical Angles**

Use these two fields to enter in angles that will be used by the Set Angle buttons.

### **Move Absolute**

Use this to turn the instrument to a plate reading that you've entered in the HA or VA fields. For example if you enter 45°30'30" for the HA and 90°10'00" for the VA, pressing the Absolute button will turn your instrument so the plate reading equals these values.

### **Move Relative**

Use this to turn an angle to the right or left of the current instrument plate reading. Positive values will be added to the current plate reading, negative values will be subtracted. Enter your values in the HA

and VA fields.

### Turn +90°

Pressing this will force your instrument to turn 90 degrees to the right.

### Turn -90°

Pressing this will force your instrument to turn 90 degrees to the left.

### Flip Scope

This will plunge the scope and reverse the direction for you.


### Read Angles

This will display the current horizontal and vertical angles as displayed on your instrument. This button acts as a toggle and if left on, will display the angle in real time.

## Check Level

### Instrument Settings | Level Instrument

If your instrument supports it, you can check to see how level your instrument is.

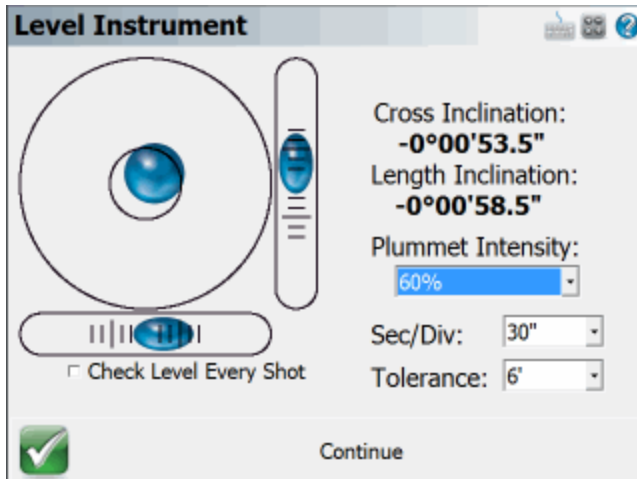

### Plummet Intensity

If your instrument has a laser plummet or laser pointer, FieldGenius can toggle those functions on or off. On some models of total station this feature is turned on automatically.

### Division

You can now adjust the sensitivity of your display to show 20, 30, and 60 second intervals.

### Tolerance

You can now set a tolerance for the level bubble sensor. If you exceed that tolerance then you will receive a warning message that indicates your instrument is out of level.

### Check Level Every Shot

Use this option to force our software to check instrument level before every measurement. The default is off.

If you're using a Trimble or Geodimeter instrument you can turn on the **Calibrate Instrument** option and when you press Close it will force the instrument to do a calibration.


---

## Select GPS Profile

This is where you can create a new profile for each rover/base receiver you will be using.

There are two ways to get to this screen.

1. You can open the profile screen for your rover or base by going to Main Menu | Settings | Instrument Selection. This will display the Instrument Selection screen which contains the GPS Rover and GPS Reference profiles.
2. If you already have your instrument type set to GPS and you're currently in the map view, you can press the **Settings** button on the [GPS toolbar](#). This will display the Instrument Selection screen which contains the GPS Rover and GPS Reference profiles.

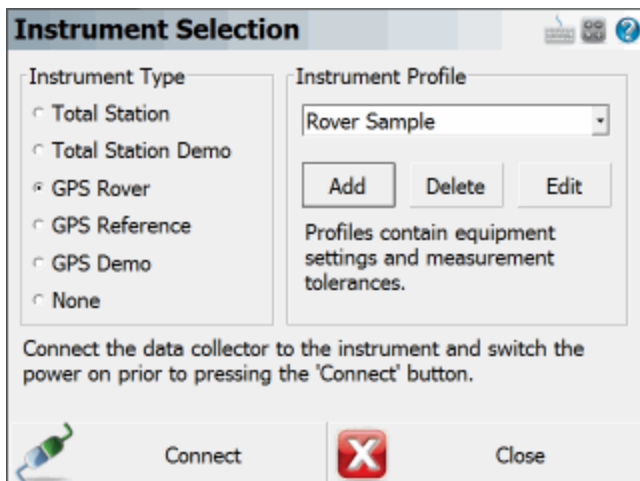

---

## Editing Profiles

On the Add Profile screen you can enter any name you wish for the profile. Profiles can be copied from one data collector to another, so you can have a "Master" profile file that is sent to all crews so they can quickly set up systems.

When you're ready to edit the settings for the profile you have selected, press the **Edit** button. This will display the GPS configuration screen for the selected rover or reference profile.

Refer to the [GPS Configuration \(Reference\)](#) or [GPS Configuration \(Rover\)](#) topics for more information on the settings available for your profiles.

Your profiles are stored in the file ...MicroSurvey FieldGenius\Programs\MSURVEY.INI so once you have configured one data collector, you can simply copy this file onto your other data collectors to make the profiles available on them. This file should also be backed up for easy recovery.

## Using Profiles for Connection

Once you've created your profiles, you can use them to connect to your receiver. Simply select the correct GPS Mode, either GPS Rover or GPS Reference, then select the profile you want to use in the profile list.

When you've physically connected the your data collector to your receiver, press the **Connect** button to start the connection process.


If it isn't successful you will see the following message "Could not detect GPS receiver! Please check configuration, cable and power." You can then press the Auto Detect Baud Rate button to force FieldGenius to automatically try different baud rate settings. If this doesn't work you should review your profile settings and ensure that you have the correct COM port selected and that you have your data collector connected to the correct port on the GPS receiver.

## GPS Demo

The GPS Demo Mode contains a profile called "RTK Demo" which can be used to explore the GPS Capabilities of FieldGenius without being connected to a receiver.

## GPS Reference Profile

The GPS Configuration for your reference unit is accessed from the [Instrument Selection](#) screen by selecting GPS Reference as the Instrument Type, then pressing the **Edit** button to configure your selected GPS Reference Profile.

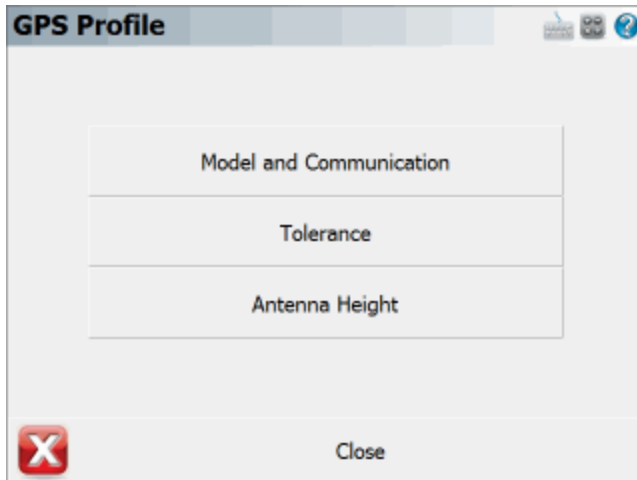

---

## **Model and Communication**

This is used to select the Make and Model of receiver, the port that the data collector is connected to and the mode that the current receiver will play in the RTK process. Please see the [GPS Model and Communication](#) topic for more information.

## **Tolerance**


This is used to enter information about the location of the reference (base) station. Please see the [GPS Tolerance \(Reference\)](#) topic for more information.

## **Antenna Height**

The antenna settings are used to calculate or enter the height of the antenna phase center above the ground. Please see the [GPS Antenna Configuration](#) topic for more information.

# **GPS Rover Profile**

The GPS Configuration for your rover unit is accessed from the [Instrument Selection](#) screen by selecting GPS Rover as the Instrument Type, then pressing the **Edit** button to configure your selected GPS Rover Profile.

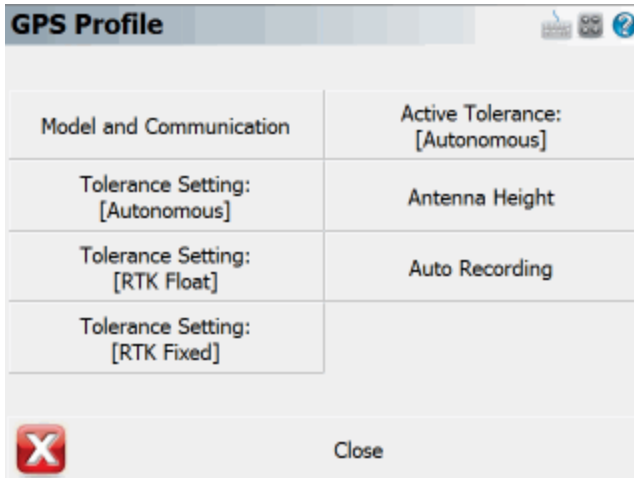

## **Model and Communication**

This is used to select the Make and Model of receiver, and the port settings that the data collector will connect with. Please see the [GPS Model and Communication](#) topic for more information.



### **Tolerance Setting: [Description] (x3)**

The three configurable tolerance modes are used to enter information used in computing the position of the rover once a measurement has begun. Please see the [GPS Tolerance Modes \(Rover\)](#) topic for more information.

### **Active Tolerance: [Description]**

This displays the current tolerance mode, which can be changed at any time during your survey by selecting the [GPS Settings](#) button in the [GPS toolbar](#). Please see the [GPS Tolerance Modes \(Rover\)](#) topic for more information

### **Antenna Height**

The antenna settings are used to calculate or enter the height of the antenna phase center above the ground. Please see the [GPS Antenna Configuration](#) topic for more information.

### **Auto Recording**


The Auto Recording settings are used for collecting data in a "Kinematic" mode. The receiver can automatically log a point every X distance or Y seconds. The user simply selects what option they prefer to use for logging Kinematic data and start the survey. Keep in mind while collecting data at higher velocities that FieldGenius receives position updates from the GPS at a maximum rate of once per second.

## **GPS Model and Communication**

The Model and Communication settings are used to select the Make and Model of receiver, the port that the data collector is connected to, and other communication parameters.

---

## Cable Connection

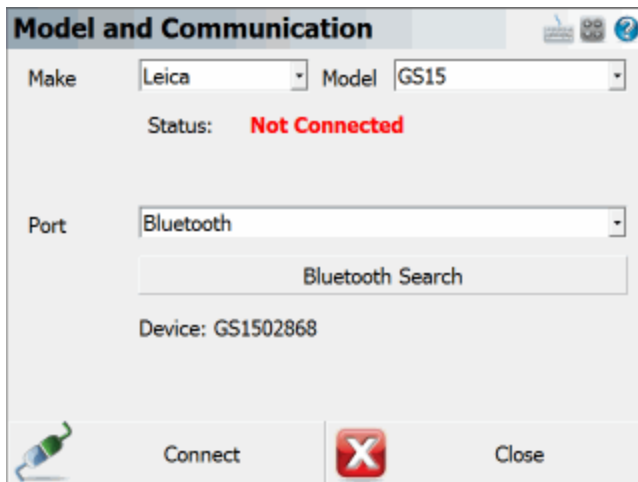

**Model and Communication**

Make: Leica Model: GS15

Status: **Not Connected**

Port: Bluetooth

Bluetooth Search

Device: GS1502868

Connect Close

### Model

Specify the make and model of receiver you are connecting to.

### Sensor Port

If your receiver has more than one data port, specify the port on the receiver that the data collector will be connected to.

### Port

Specify the port on your data collector (usually COM1) that you will connect a cable between your receiver and this port.

### Baud Rate, Data Bits, Parity, Stop Bits


Specify the communication parameters for the serial connection. If you're unsure of what baud rate your receiver is set to you might want to set the baud rate to Auto Detect. This will force FieldGenius to check for communication using all the baud rate settings and if successful, it will set this baud rate in the profile.

---

## Bluetooth Connection

### Port

On many data collectors you can select Bluetooth as your communication port. If you select the Bluetooth port, the traditional serial communication options (Baud Rate, Data Bits, Stop Bits, Parity) will be replaced with a Bluetooth Search function.

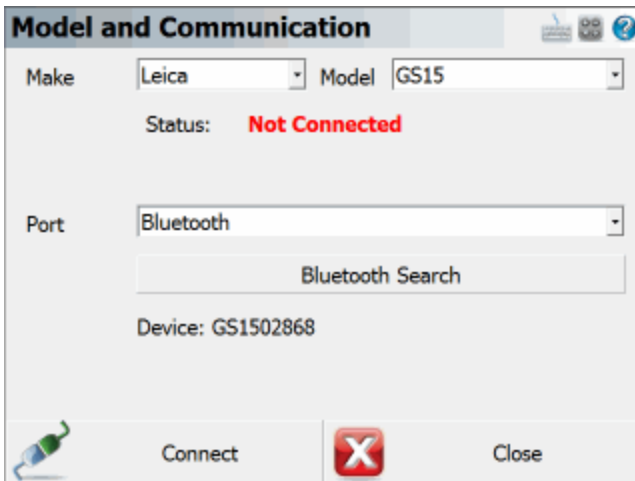

Please note that not all bluetooth-enabled devices will list Bluetooth as a Port option. In some cases you must configure and use a virtual COM port through Windows CE's internal Bluetooth Settings, for example COM6.

### **Bluetooth Search**

If you set the port to Bluetooth, a **Bluetooth Search** button will appear. Press the search button to find the device you want to communicate wirelessly with. All devices within range will be listed, choose the one you want to use

The device you selected will be saved into your instrument profile for future use so you do not need to Search every time.


### **Bluetooth PIN**

After initiating a Bluetooth connection, you will be prompted to enter the PIN (passkey) for the instrument you are connecting to. If your instrument does not need one just leave it blank and continue by pressing OK.

The PIN you enter will be encrypted and stored in your instrument profile.

---

## GPS Tolerance (Reference)

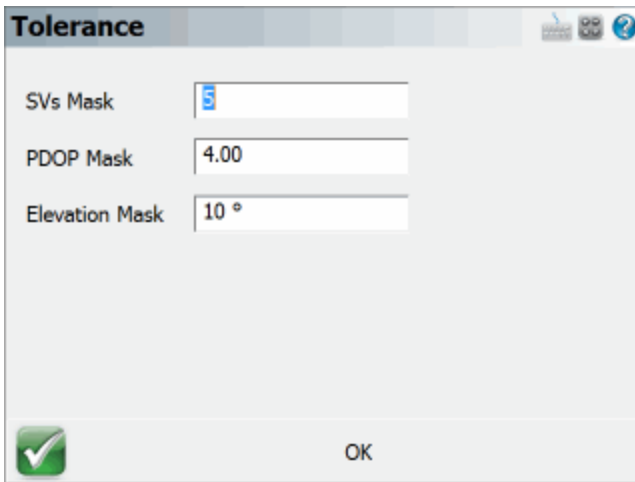

The screenshot shows a dialog box titled "Tolerance" with three input fields:

- SVs Mask: 5
- PDOP Mask: 4.00
- Elevation Mask: 10 °

At the bottom left is a green checkmark icon, and at the bottom center is an "OK" button.

### SVs Mask

The SVs Mask setting is used to establish the minimum number of satellites that are necessary to produce a solution with a valid position. The SVs must also pass the elevation mask test to be included in this number for the calculation of the rover position.

### PDOP Mask

The PDOP mask is used to control the acceptable geometry of the satellites used to compute the RTK position. If the PDOP value exceeds this number, the user will not be eligible to collect an RTK position.

### Elevation Mask


The Elevation Mask is used to determine which satellites to use in computing the differential corrections to broadcast to the rover(s). Satellites below this value will not be used in the solution. Elevation mask angles are typically equal or less than the elevation mask set for the rover system.

### Reference ID

The Reference ID will be used by the rover to determine which differential corrections it is receiving (if you have more than one reference station in use). This is useful information to know if one of the base stations goes down or experiences problems during an RTK session.

## GPS Tolerance Modes (Rover)

The tolerance modes are used to enter information used in computing the position of the rover once a GPS measurement has begun.

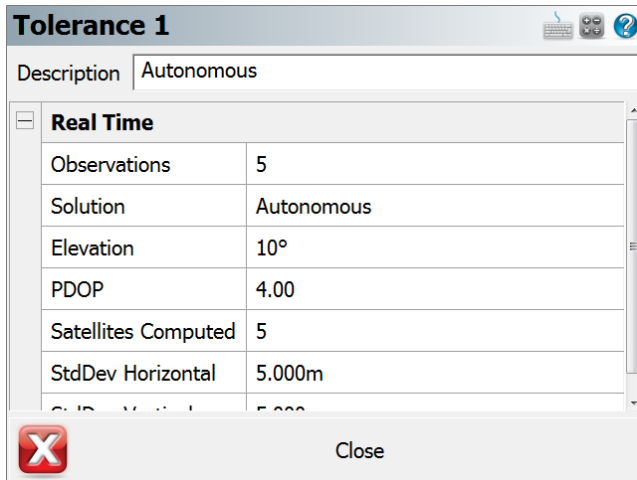

You can define three different tolerance modes that can be selected from the [GPS Tasks](#) menu while surveying. Tolerance modes are used to ensure that certain criteria are being met every time you take a measurement. The reason for three different settings is to allow you to specify different tolerances for different types of measurements you might need to make. For example, control points would need to be measured more precisely than those used for topographic measurements.

### Description

This is where you can assign a "friendly" description to your three tolerance modes to make them more easily identifiable to you - for example "Control Points" or "Topo Points".

### Masks

### Real Time Tolerances

#### Observations

This is the minimum number of observations that the receiver must collect and average in order to compute a solution.

#### Solution

Each observation must be of the specified solution type (or better). You can select from several Solution modes depending on your receiver make and model, these can be:

- 
- Autonomous
  - WAAS (Wide Area Augmentation System)
  - DGPS (differential code solution)
  - RTK Float (differential carrier solution)
  - RTK Fixed (differential carrier solution)

Please refer to your GPS manufacturer's documentation for the solutions' respective positional accuracy.

### **Elevation Mask**

The elevation mask is used to filter out satellites that are close to the horizon and are, thus, unreliable. Typical elevation mask angles can range between 10° and 20°.

### **PDOP**

The PDOP (Position Dilution Of Precision) mask is used to control the acceptable geometry of the satellites used to compute the solution. If the PDOP value exceeds this number, the user will not be eligible to collect a position. Typical PDOP masks are 5 or 6.

### **Satellites (SVs)**

The Satellites mask is used to establish the minimum number of satellites that are necessary to produce a solution with a valid position. Each satellite must also pass the elevation mask test to be included in this number for the calculation of the rover position.

### **Reference ID**

The Reference ID is used to tell the Rover which reference station (base) to use for the differential corrections. If "Any" is selected, it will use the first correction set identified for all future position solutions.

---

## **Standard Deviation**

### **Standard Deviation - Horizontal**

FieldGenius will use the instantaneous Standard Deviation values that your receiver is outputting to determine if the measurement can proceed. If the instantaneous Standard Deviation values are equal to or less than the values you've specified, then the measurement can proceed. Once this happens, FieldGenius will start averaging the measurements and will compute and display averaged Standard Deviation values. These averaged Standard Deviation values must then remain equal to or less than the values you've specified for the entire duration of the measurement, for the measurement to be accepted as being within the specified tolerances.

This is your maximum acceptable horizontal standard deviation to be maintained during the point measurement.

### **Standard Deviation - Vertical**

This is your maximum acceptable vertical standard deviation to be maintained during the point measurement.

---

## **Point Tolerance**

### **Point Tolerance - Observations**

This is the minimum number of observations that the receiver must collect and average in order to compute a solution.

### **Point Tolerance - Time**

This is the minimum time duration that the receiver must collect and average observations in order to compute a solution.

---

## **Post Processing Tolerances**

These settings apply when using FieldGenius to collect static data for later post processing.

Please note that FieldGenius does not support collecting raw data on all GPS receivers, please refer to the [Raw Data Logging](#) topic for additional details including a list of receivers which support this function.

### **Usage**

This option determines whether FieldGenius should use Post Process mode to collect static data for later post processing.

Selecting **Always** instructs FieldGenius to automatically switch into Post Process mode to collect static data for all points.

Selecting **Auto Start** instructs FieldGenius to automatically switch into Post Process mode to collect static data for the point currently being measured, if the current solution masks are not met.

Selecting **Manual** allows you to switch into Post Process mode to collect static data for any point as it is being measured, but FieldGenius will not do so automatically.

### **Time - Less than 5 SVs**

This defines the duration of the static collection if the minimum number of satellites being tracked during the static session is 4 satellites. Default = 30 minutes.

If at any time the number of satellites drops below 4 (which is the minimum number of satellites required to post process a 3D solution), the internal clock timing the static session will reset to zero and begin again.

---

### Time - Less than 6 SVs

This defines the duration of the static collection if the minimum number of satellites being tracked during the static session is 5 satellites. Default = 25 minutes.

### Time - Less than 7 SVs

This defines the duration of the static collection if the minimum number of satellites being tracked during the static session is 6 satellites. Default = 20 minutes.

### Time - Less than 8 SVs

This defines the duration of the static collection if the minimum number of satellites being tracked during the static session is 7 satellites. Default = 15 minutes.

### Time - 8 or more SVs

This defines the duration of the static collection if the minimum number of satellites being tracked during the static session is 8 or more satellites. Default = 10 minutes.

## GPS Antenna Height

The antenna settings are used to calculate or enter the height of the antenna phase center above the ground. You can enter the true height (if it is known) or enter the measured height and any horizontal or vertical offsets and have FieldGenius calculate the antenna height for you.

Antenna Height	
Model	GS15
Measured Height	2.000m
Measure Point	Bottom of antenna mount
Offsets	
Measure Point to ARP Offset - Horizontal	0.0mm
Measure Point to ARP Offset - Vertical	0.0mm
ARP to APC (L1) Offset - Vertical	202.1mm
<input checked="" type="checkbox"/> OK	

Depending on the model you've selected, manufacturer specific antenna offsets will be listed. If your specific antenna model is not listed, you can select "User Supplied" and specify appropriate offset



measurements. For more detailed information about these offsets, refer to your users guide for your receiver.


The true height is simply computed by the use of Pythagoras' theorem:

$$\text{TrueHeight} = \text{VerticalOffset} + \text{sqrt}(\text{MeasuredHeight}^2 - (\text{HorizontalOffset})^2)$$

You can change the true or measured antenna height at any time, on the [Store Point](#) screen when storing your GPS shots.

## GPS Auto Recording

The Auto Recording settings are used when collecting GPS data in a "Kinematic" mode. The receiver can automatically log a point every X distance or Y seconds. The user simply selects what option they prefer to use for logging Kinematic data and start the survey. Keep in mind while collecting data at higher velocities that FieldGenius receives position updates from the GPS at a maximum rate of once per second.

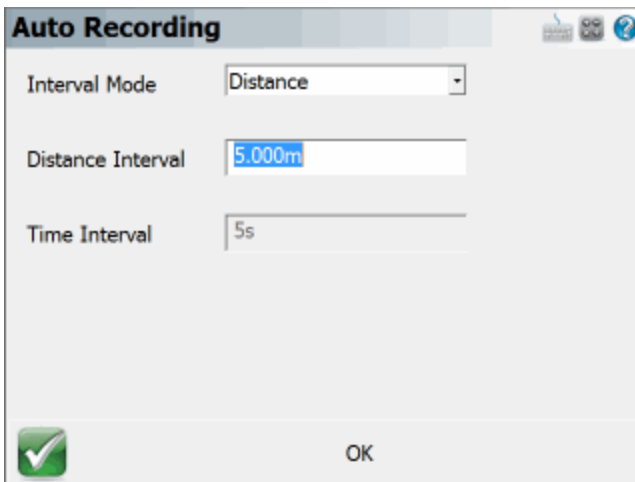

Once configured, Auto-Recording is activated on the [Rover Measurement Mode](#) screen after pressing the Measure button:

Once activated, Auto-Recording is deactivated by pressing the Measure button again.

## Overview - Reference Receiver

Before you can start your GPS survey, there are a few things you need to confirm and setup.

---

## Profile and Coordinate System Files

- You will need to determine and select the correct [coordinate system](#) and optional [geoid model](#) to use for your GPS survey work.
- Create a profile for your reference (base) and rover receivers. Profiles contain receiver settings such as baud rates and tolerance masks that are used by FieldGenius. Refer to the [Reference Configuration](#) and [Rover Configuration](#) topics for more information.

---

## Reference (Base) Connection Procedure

1. Main Menu | Settings | [Instrument Selection](#)
2. Choose **GPS Reference** as the type of instrument.
3. If you have not already done so, you need to create a profile for your reference receiver. If you have a profile already defined, select it now and then press **Connect**.
4. You will then be prompted with the [Correction Link Settings](#) where you can configure your radio settings. Press the **Connect** button to turn on your radio to prepare to begin broadcasting corrections.
5. If your profile is configured properly, you will see a message, "Press the measure button at any time to configure the reference receiver with a position and to enable the transmission of corrections." Select **Continue**.
6. You will now see the map screen. On the GPS Toolbar you can review information about receiver, sky plot list, display current position, and review DOP values.
7. When you're ready to program a position into the base receiver, all you need to do is press the **Measure** button on the [GPS Toolbar](#). There are several different options you can use to program the position and they're described in more detail in the [Program Reference Receiver](#) topic.
8. After you program the receiver with a position you can disconnect the data collector.

## Select Reference Position Modes

[Main Menu](#) | [Measure Modes](#)

[GNSS Toolbar](#) | [Measure Modes](#)


---

## GNSS Measurement Modes - Reference (Base) Receiver

When you connect to a reference receiver you need to program a position into the receiver so accurate positions can be transmitted to the rover.

You can access three different measurement modes to program your receiver with a position by selecting the Measure Modes button in the main menu, or the measure modes button on the GNSS instrument toolbar.


**Main Menu - Measure Modes**

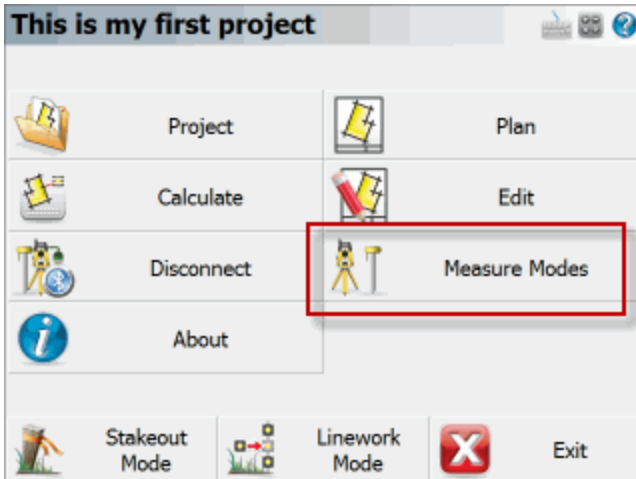

**GNSS Toolbar - Reference Measure Modes**



Selecting the Measure Modes button will display three options:

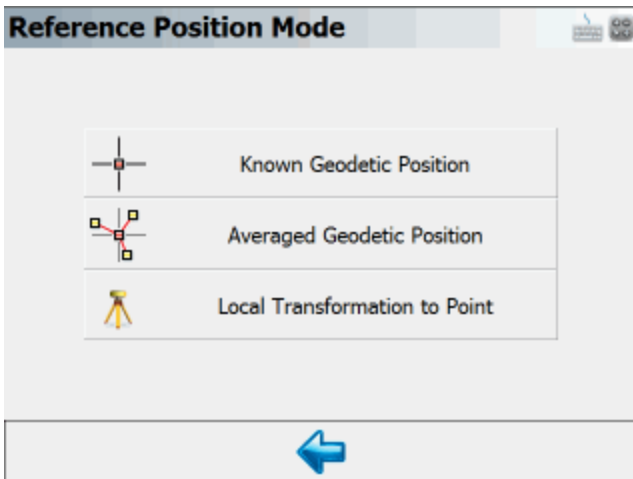

1. Known Geodetic Position
2. Averaged Geodetic Position

---

### 3. Local Transformation to Point

Please refer to the [Reference Position Modes](#) topic for more information about what the different modes can do for you.

## Overview Reference Position Modes

There are three different modes available for programming a position into your reference receiver. When you're ready to program your base receiver with a position you need to select the reference position mode then to start the process press the **Measure** button on the [GPS toolbar](#). Please review the following sections for a detailed explanation of how each mode is used. Please see the [GNSS Measurement Modes](#) topic for details on how to access these modes.

### Known Geodetic Position

Use this when you know the geodetic position of the point the base is setup on. You have two options, you can program it with a known Geodetic or known Cartesian Coordinate.

The screenshot shows a dialog box titled "Reference Position" with two columns of input fields. The "Geodetic" column has fields for Latitude (N49°49'51.44182"), Longitude (W119°37'14.86577"), and Ellipsoidal Hgt (388.29'). The "Cartesian" column has fields for Northing (18120471.61'), Easting (1022072.87'), and Orthometric Hgt (388.29'). Below the fields are two buttons: "Select Position From Database" and "Modify Antenna Height". At the bottom are "Set Position" (with a green checkmark icon) and "Cancel" (with a red X icon).

Reference Position	
<input type="radio"/> Geodetic	<input type="radio"/> Cartesian
Latitude	Northing
N49°49'51.44182"	18120471.61'
Longitude	Easting
W119°37'14.86577"	1022072.87'
Ellipsoidal Hgt	Orthometric Hgt
388.29'	388.29'
Select Position From Database	
Modify Antenna Height	
<input checked="" type="checkbox"/> Set Position	<input type="checkbox"/> Cancel

### Geodetic Coordinates

Enter the know Latitude, Longitude and Ellipsoidal Height for your base setup. The coordinates you enter here will be programmed into the receiver.

### Cartesian Coordinates

Cartesian coordinates can be SPCS, UTM coordinates or any other grid system as long as it matches the horizontal and vertical system you've defined in your GPS profile. You can not enter local coordinates as Cartesian coordinates! Doing so will cause a warning message to be displayed indicating that the coordinates you entered do not fall inside the GPS grid files you have loaded on your data collector.

### Select Position from Database

This allows you to choose a point a number of different ways. The point you select must be a grid coordinate such as a SPCS or UTM coordinate.

---

### Averaged Geodetic Position

Use this to measure and average an Autonomous Geodetic position.

**Reference Position**

Average Geodetic Position

Latitude  
N49°50'17.05539"

Longitude  
W119°36'36.22135"

Ellipsoidal Height  
1311.43'

Modify Antenna Height

Averaging 2 position epochs over 0.0 minutes.

Set Position         Cancel

It is up to you to determine how many observations or the duration of time you want to wait before accepting the averaged position. At any time you can restart the process by pressing the **Reset Average** button.

If you press **Set Position**, your receiver will be programmed with the new position and you will have the option of storing a point's position in the database.

---

### Local Transform to Point

Use this to compute a one point transformation so your GPS derived measurements can be referenced into a local system.

Reference Position	
Average Geodetic Position	
Latitude	N49°50'17.00798"
Longitude	W119°36'36.20466"
Ellipsoidal Height	1325.21'
Modify Antenna Height	
Local Transformation Point	
Point ID	1
Northing	100.00'
Easting	100.00'
Elevation	100.00'
Averaging 19 position epochs over 0.3 minutes.	
<input checked="" type="checkbox"/> Set Position	<input type="checkbox"/> Reset Average
<input type="checkbox"/> Cancel	

When this option is used, FieldGenius starts receiving data and computes an averaged Autonomous position for the base receiver. The current position, how many epochs it has received and the total elapsed time is displayed on the screen.

It is up to you to determine how many observations or the duration of time you want to wait before accepting the averaged position. At any time you can restart the process by pressing the **Reset Average** button.

You then have to define a local coordinate that you want to localize to. It is assumed that the point exists in your project. If it doesn't, simply double tap the Point ID field which will open the point tool-bar. You can use the new option to create a point or if it exists select it from the map or from the list.

When you press Set Position, FieldGenius will save the averaged location into the point database. It will then compute a one point transformation which is simply a horizontal and vertical shift from the grid coordinate system into your local system, as well as a combined scale factor. All future GPS measurements will have your new transformation parameters applied automatically.

## Overview - Rover Receiver

Before you can start your GPS survey, there are a few things you need to confirm and setup.

### Profile and Coordinate System Files

- You will need to determine and select the correct [coordinate system](#) and optional [geoid model](#) to use for your GPS survey work.

- Create a profile for your reference (base) and rover receivers. Profiles contain receiver settings such as baud rates and tolerance masks that are used by FieldGenius. Refer to the [Reference Configuration](#) and [Rover Configuration](#) topics for more information.

---

## Rover Connection Procedure

1. Main Menu | Settings | [Instrument Selection](#)
2. Choose **GPS Rover** as the type of instrument.
3. If you have not already done so, you need to create a profile for your rover receiver. If you have a profile already defined, select it now and then press **Connect**.
4. You will then be prompted with the [Correction Link Settings](#) where you can configure your radio or modem settings. Press the **Connect** button to turn on your radio or modem to begin receiving corrections.
5. With a successful connection you will see the map screen. The Measure button might say **"No Link"** to begin with, then switch to **"RTK Float"** and finally to **"RTK Fixed"**.
6. To record a position, simply press the **Measure** button on the [GPS toolbar](#). Refer to the [GPS Measurement](#) topic for more information.

## Rover Measurement Modes

[Main Menu](#) | [Survey Modes](#)

[GNSS Toolbar](#) | [Measure Modes](#)


---

### GNSS Measurement Modes - Rover Receiver

When you connect to a rover receiver you will have a choice of measurement modes available to you. You can access three different measurement modes to program your receiver with a position by selecting the Measure Modes button in the main menu, or the measure modes button on the GNSS instrument toolbar.

**Main Menu - Survey Modes**


**GNSS Toolbar - Rover Measure Modes**

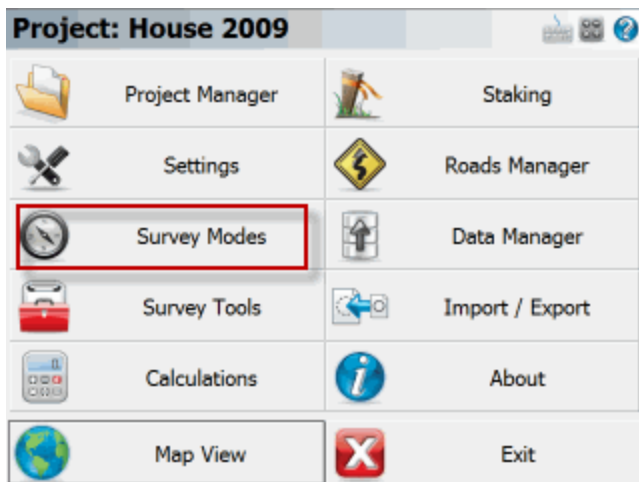

Selecting the Measure Modes button will display seven options:


1. [Standard Measurement](#)
2. [Offset Measurement](#)
3. [Auto Record Points](#)
4. [Local Transformation Point](#)
5. [Check Point](#)
6. [Trilateration](#)
7. [Add Invert](#)



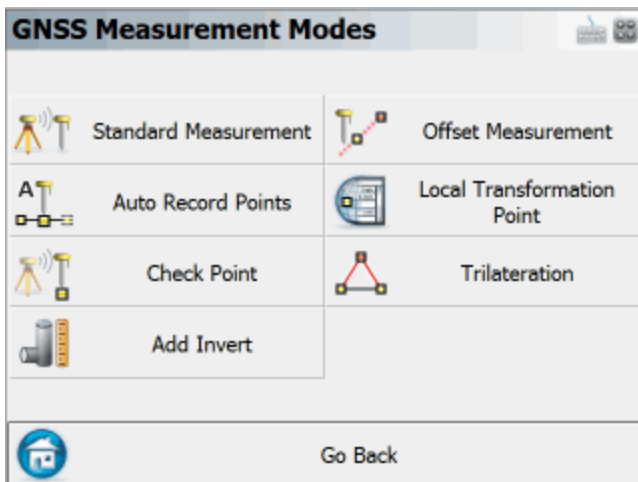

## Rover Measurement

When you have connected to your rover and you press the measure button on the [GPS Toolbar](#) you will see the GPS Measurement Screen

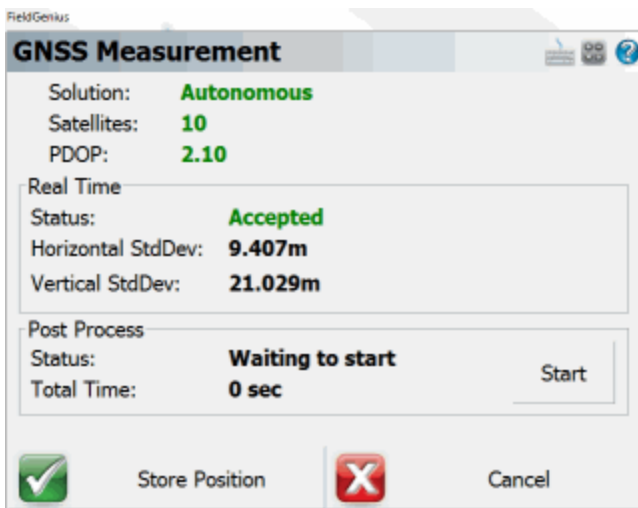

The measurement process works like this:

---

Once the satellites have been filtered out based on your [tolerance settings](#), FieldGenius will only begin collecting measurement data if all your tolerances are met. During the measurement process you might see that certain tolerances are not being satisfied, this is normal. FieldGenius will continue monitoring the measurement data and will accept measurements that pass the mask criteria.

Once the tolerances have been met, the position status will change to an **Accepted** position. Prior to accepting the position, the user can look at the RMS values for the computed position and determine if they wish to accept or reject the measurement. Pressing Cancel will exit the measure function without storing any data. Pressing [Store Position](#) will accept the position and store it in the database. You can change your true or measured Antenna Height on the Store Point screen.

By default, if you have some transformation parameters defined, they will be applied to the measurement prior to storing it.

If your current tolerance settings are not met, FieldGenius can switch from Real Time mode to Post Process mode to collect static data for that point for later post processing back in the office. This switch from Real Time mode to Post Process mode can occur automatically or manually, depending on your Post Process [tolerance settings](#). The duration of the Post Process measurement is specified in your tolerance settings, and depends on the minimum number of satellites tracked during the entire Post Process session.

## GNSS Measurement Mode Offset

When this mode is enabled after you complete the measurement you will be prompted to enter a direction, horizontal distance and vertical distance. These three entries will be used to compute a new position for the offset point.

The screenshot shows a software dialog box titled "GNSS Measurement". It contains three input fields for data entry: "Direction" (0°00'00"), "Horizontal Distance" (0.000m), and "Vertical Distance" (0.000m). At the bottom of the dialog, there are two buttons: "Store Position" (with a green checkmark icon) and "Cancel" (with a red X icon).

## Measurement Mode Local Transformation Point

### Use For Local Transformation

To help you localize quickly, you can use this option. What will happen is after the measurement has been stored, we will automatically add this point to the GPS Local Transformation calibration point list. The point will be considered a measured point, and so you will be asked to define the control point that this point is to be constrained to.

GPS Local Transformation	
Edit Control	Calculate Scale (GPS)    Adjust Points
Origin North	0.00'
Origin East	0.00'
Trans North	0.00'
Trans East	0.00'
Rotation	0°00'00"
Scale	1.0000000000
Trans Height	0.00'

Close

Example: You've localized to a local system using a one point transformation so you can visually see in the map where your other points should be. You then decide to stake one of them so you can navigate to it. When you find the second point, you want to measure it's location and use it as one of the transformation points. Simply turn on the "Use for Local Transformation" parameter and FieldGenius will automatically store the point's Cartesian position, and automatically add it to your transformation points list.

When you use this option, FieldGenius will automatically ignore any transformation parameter you have defined and will store the "raw" GPS derived measurement.

Please review the [Local Transformation](#) topic for more details.

## Check Point

[Main Menu](#) | [Survey Methods](#) | [Check Point](#)

Use this to measure a check shot to an existing point. When you start the command you will see the point chooser appear where you can create a new point or pick an existing one from a list or from the screen. After you choose your point you will be ready to measure. You will note the measure mode

---

will be set to **Check Pnt** and if you need to cancel the operation you can do it by pressing the measure mode button and choose to cancel it.

## Check Point Summary

When you're ready to record the shot press the **Measure** button on the instrument toolbar. You will be presented with a screen that compares your measured values to the ones that were computed for the check shot point.

Check Point	
Identifier:	5
Description:	
Delta Northing:	-0.01'
Delta Easting:	-0.01'
Delta Elevation:	4.92'
Delta Horizontal:	0.02'
Observed Point	
Northing:	1044.05'
Easting:	952.20'
Elevation:	100.00'

Buttons: Store Point Close

The deltas that are displayed are computed by subtracting the shot coordinates from the known coordinates. In other words if you add the deltas to the shot point coordinates you will end up at the known point.

## Store Point

Pressing this will exit the function and write several notes to the raw file summarizing your check shot, and allow you to store the shot using the [Store/Edit Point](#) screen.

```
--Check Point
-- Check Point ID: 110
-- Check Point dNorthing: -4.59'
-- Check Point dEasting: -1.82'
-- Check Point dElevation: -4.96'
-- Check Point dHorizontal: 4.94'
-- Observed Values: HA 45°00'00.0" VA 90°00'00.0" SD 23.00' HR 5.00'
-- Observed Point Northing: 5016.26'
-- Observed Point Easting: 5016.26'
-- Observed Point Elevation: 95.00'
```

## Close

This will exit the check shot function and not write anything to the raw file or storing a new point.

## GPS Toolbar



Once the user has selected a GPS receiver and communication has been established, the GPS toolbar will appear on the [main interface](#).

**NOTE:** You will only see the GPS toolbar if you selected GPS Reference, GPS Rover, or GPS Demo as your instrument type. If you have selected a GPS Profile but are not yet connected to the receiver, most of these buttons will be disabled.



### Auto-Center

Single-tapping this button will re-center the display on the current position of your receiver.

 
Double-tapping this button will set the system into an auto-pan mode where the display will always be centered on the current position. When active, single-tapping this button once more will disable the auto-pan mode.



### GPS Settings

If you press this button while you are connected to a receiver, you will see the [GPS Settings](#) screen. At any time this button can be used to adjust or stop your GPS survey.

If you press this button without being connected to a receiver, you will see the [Instrument Selection](#) screen where you can edit your GPS profiles or connect to your receiver.

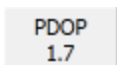

### DOP Values

This displays the current DOP (Dilution of Precision) values. Pressing this button will cycle through the PDOP, HDOP and VDOP. The PDOP is the default setting as this is most often used to ascertain the quality of the satellite geometry.



### Satellite Plot/Satellite List

This shows the total number of satellites the receiver is currently using in its solution. Press this to view a [sky plot](#) of the current SVs visible to the rover, or to access the [Satellite List](#).

---

Standard  
Measure

### **GNSS Measurement Modes Menu**

This menu contains all the available measurement modes that can be used with your GNSS receiver. Please review the GNSS Measurement Modes topic for more details.



### **Measure**

This is the measure button.

This button also indicates the current solution type. This tells the user if the solution is Fixed, Float, WAAS, DGPS or Autonomous. This button will also indicate to the user if the corrections from the reference station have been discontinued by denoting "No Link".

Please refer to the [GPS Measurement](#) topic for more information.

If you are using a conventional non-robotic total station, please see the [Instrument Toolbar](#) topic.

If you are using a robotic total station, please see the [Robotic Instrument Toolbar](#) topic.


## **Correction Link**

The Link Configure screen is used to configure the radio or GSM link for transmitting or receiving RTK corrections. The mode will vary depending on your receiver type. The Setup button allows the user to go into further device details including channels and frequencies for radios and GSM modems.

If you need to connect to a NTRIP caster, you can also access that in the setup screen.

### **Accessing Link Configure**

To access this screen you need to first connect to a reference or rover receiver. Once connected you can access this dialog. Please review the [Reference \(Base\) Receiver Overview](#) or the [Rover Receiver Overview](#) topics for more details about work flow.

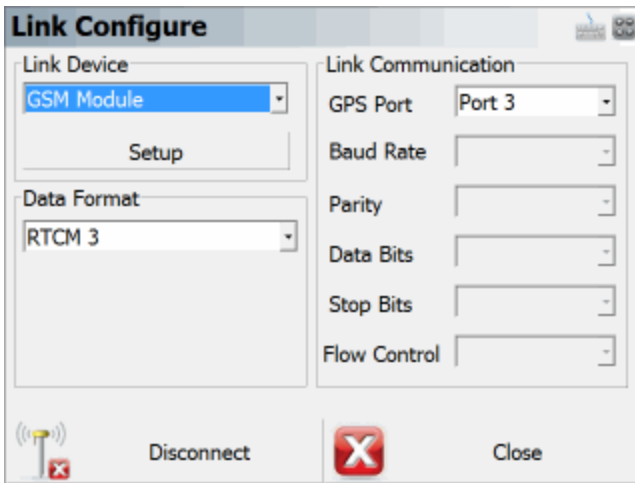

### Mode

Select the appropriate Correction Link mode, such as Radio, Modem, or None.

### Setup

When you press the Setup button on the dialog above, the Radio Setup or Modem Setup screen will appear. Choose the radio make and model from the pulldown and set the channel or frequency, the radio will be programmed by FieldGenius to the channel or frequency selected (on some models). If you are using an NTRIP or GPRS server, enter your internet and server credentials here.

### Enable WAAS Option

The option to enable WAAS solution is available depending on your receiver type. FieldGenius will indicate if WAAS is available for the selected receiver type.

### Message Type

The message type is used in determining what data streams are sent from the reference station to the rover. They can be RTCM, CMR or a proprietary format.

### Communication Parameters


The communication parameters are used for interaction between the receiver and the communication device. Refer to the communication device's documentation for additional instructions and settings.


## **Correction Information**

[GPS Toolbar](#) | [Settings](#) | [Link Information](#)

---

The Correction Information screen is accessed from the [GPS Settings](#) screen. It displays information about the correction message being received by your receiver via a radio link from a base receiver, or via a cellular modem link from an NTRIP or GPRS server.

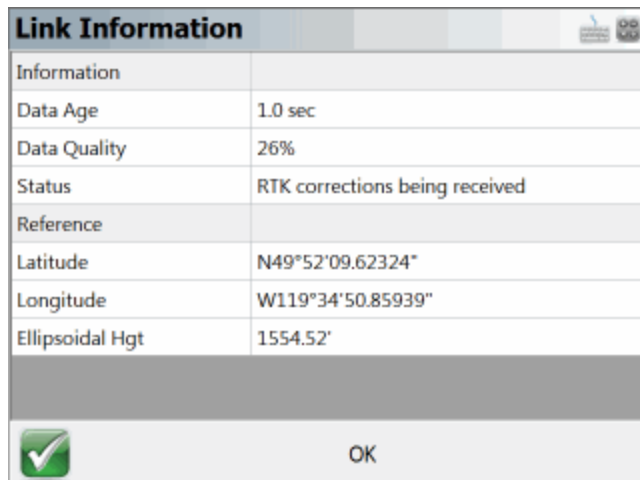

Link Information	
Information	
Data Age	1.0 sec
Data Quality	26%
Status	RTK corrections being received
Reference	
Latitude	N49°52'09.62324"
Longitude	W119°34'50.85939"
Ellipsoidal Hgt	1554.52'
 OK	

For information on configuring your correction link please see the [Correction Link](#) topic.

## GPS Satellite Plot




8

To access this screen, press the Satellite button on the GPS Toolbar.

The Satellite Plot screen is a graphical representation of the current GNSS satellite constellation. It shows all visible satellites including both GPS and Glonass. Those satellites being used in the current solution are indicated with a black dot, and those being ignored are indicated with a white dot.

Each satellite is displayed with its PRN (identification) number, and the Elevation Mask specified in your current [Tolerance Mode](#) is indicated by a red dashed line.



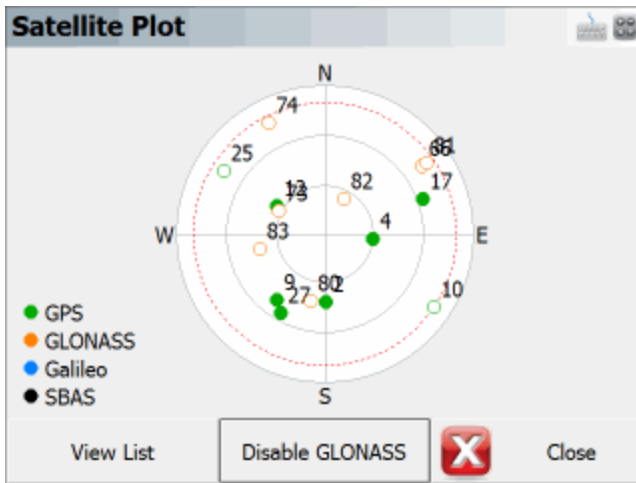

Press the **View List** button to open the [Satellite List](#) screen.

Press the **Close** button to return to the map screen.

## GPS Satellite List



To access this screen, press the Satellite button on the GPS Toolbar, then press the **View List** button on the [Satellite Plot](#) screen.

The Satellite List screen displays information on the current GNSS satellite constellation. It shows all visible satellites including both GPS and Glonass. Those satellites being used in the current solution are indicated with a checkmark, and those being ignored are indicated with an X.

Each satellite is displayed with its PRN (identification) number, Azimuth and Elevation, and Signal-to-Noise Ratio.

PRN	System	Azimuth	Elevation
<input checked="" type="checkbox"/> 2	GPS	178°	49°
<input checked="" type="checkbox"/> 4	GPS	95°	60°
<input checked="" type="checkbox"/> 9	GPS	216°	40°
<input checked="" type="checkbox"/> 10	GPS	123°	11°
<input checked="" type="checkbox"/> 12	GPS	300°	56°
<input checked="" type="checkbox"/> 17	GPS	70°	26°
<input checked="" type="checkbox"/> 25	GPS	302°	18°
<input checked="" type="checkbox"/> 27	GPS	209°	35°

View Plot    Disable GLONASS       Close

Press the **View Plot** button to open the [Satellite Plot](#) screen.  
 Press the **Close** button to return to the map screen.

## GPS Settings




The GPS Settings screen is accessed from the [GPS Toolbar](#).

Instrument Settings	
Sensor Configure	Tolerance: [Autonomous]
Sensor Information	Raw Data Logging
Link Configure	Reset RTK Filters
Link Information	Select MountPoint
Position Information	Instrument Disconnect
Cancel	


## Sensor Configure

This will allow you to make changes to most of the settings in your [reference](#) or [rover profile](#), including configuring the three tolerance modes, selecting the active tolerance mode, configuring the antenna height, and configuring the auto-recording options. (The Model and Communication options cannot be configured while you are connected to your GPS receiver.)

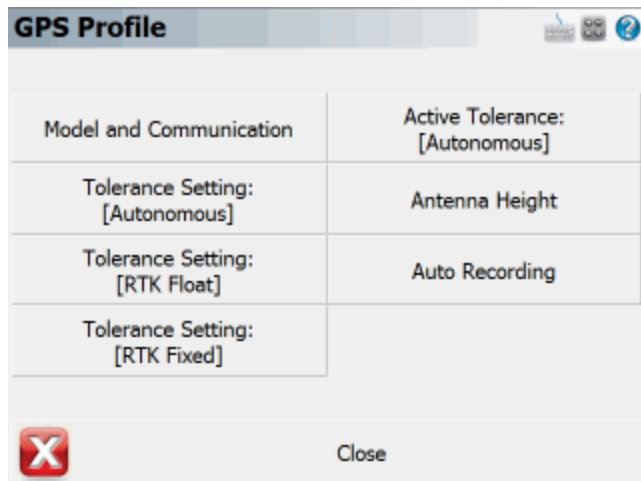

## Sensor Information

The [Sensor Information](#) screen displays detailed information about the hardware you are connected to.

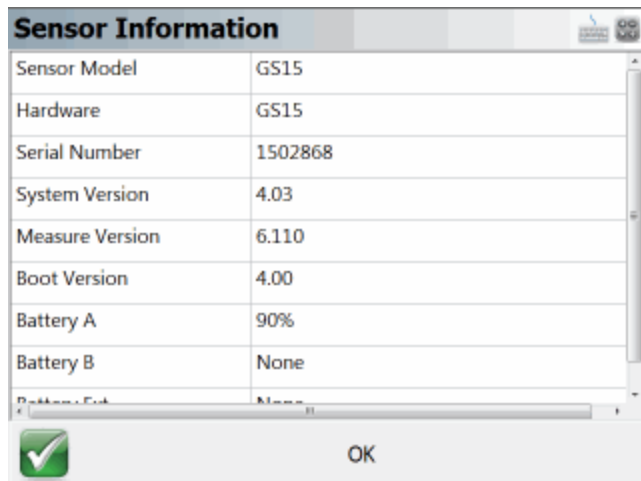

---

## Link Configure

This turns on your GPS Receiver's [radio or modem](#) to begin receiving RTK corrections, from either a base receiver or an NTRIP or GPRS server.

**Link Configure**

Link Device: GSM Module (dropdown) [Setup]

Data Format: RTCM 3 (dropdown)

Link Communication:

- GPS Port: Port 3 (dropdown)
- Baud Rate: (dropdown)
- Parity: (dropdown)
- Data Bits: (dropdown)
- Stop Bits: (dropdown)
- Flow Control: (dropdown)

Disconnect [Close]

---

## Link Information

The [Link Information](#) screen displays detailed real-time information about the correction message being received by your receiver via a radio link from a base receiver, or via a cellular modem link from an NTRIP or GPRS server.

**Link Information**


Information	
Data Age	1.0 sec
Data Quality	26%
Status	RTK corrections being received
Reference	
Latitude	N49°52'09.62324"
Longitude	W119°34'50.85939"
Ellipsoidal Hgt	1554.52'

[OK]

## Position Information

The [Position Information](#) screen displays detailed real-time information about your current position.


Position Information	
Latitude	N49°50'16.96183"
Longitude	W119°36'35.98857"
Ellipsoidal Height	1322.34'
Antenna Hgt (Meas)	0.00'
Baseline Length	Not Applicable
Northing	18122968.03'
Easting	1024710.58'
Elevation	1322.34'
Horz System	UTM83-11
Vert System	Ellipsoidal

 OK

## Antenna Height

The [Antenna Height](#) screen allows you to configure the antenna height of your GPS receiver.

Antenna Height	
Model	GS15
Measured Height	2.000m
Measure Point	Bottom of antenna mount
Offsets	
Measure Point to ARP Offset - Horizontal	0.0mm
Measure Point to ARP Offset - Vertical	0.0mm
ARP to APC (L1) Offset - Vertical	202.1mm


 OK

## Active Tolerance Mode

This button indicates which of the three [tolerance modes](#) setup in your Rover Profile is currently being used. Press this button to select the active tolerance mode. To configure the three tolerance modes,

---


see the "Sensor Configure" button described above.

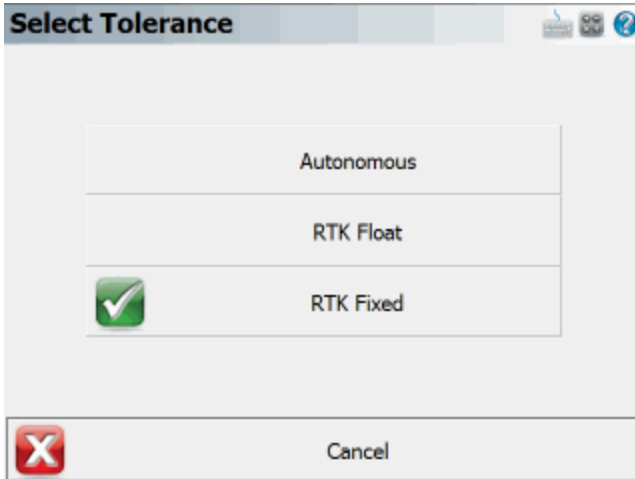

---

## Raw Data Logging

The [Raw Data Logging](#) screen is used to start and stop raw data logging on your GPS reference or rover receiver, for later post-processing.

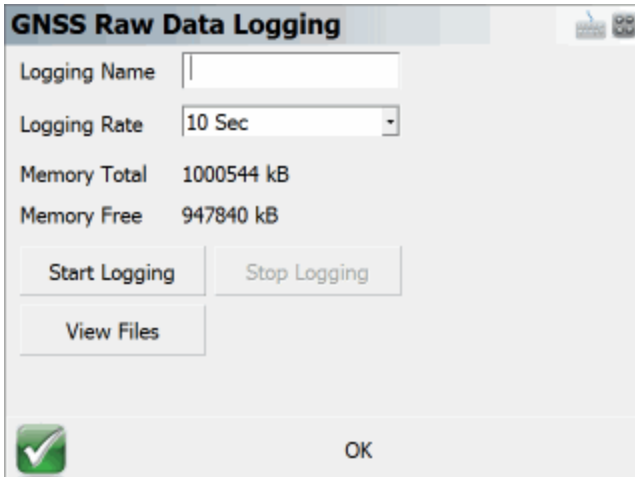

---

## Reset RTK Filters

Use this to reset the RTK solution in your receiver, to force it to recalculate a new solution and resolve any ambiguities again from scratch. This has the same effect as inverting your receiver to reset the solution.

## Select Mount Point

Use this to select a different mount point from the NTRIP caster you are currently connected to.


## Instrument Disconnect

Use this to disconnect from your receiver. If you are connected to a reference receiver, corrections will continue to be transmitted after you disconnect.

# Sensor Information

[GPS Toolbar](#) | [Settings](#) | [Sensor Information](#)

The Sensor Information screen is accessed from the [GPS Settings](#) screen. It displays information about the hardware you are connected to. The specific information available will vary by model, but typically you will see the make and model of your receiver, its serial number, battery status, firmware information, and more.

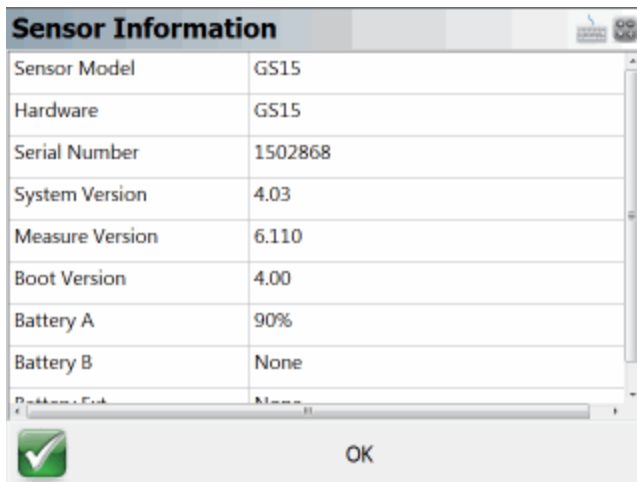

Sensor Information	
Sensor Model	GS15
Hardware	GS15
Serial Number	1502868
System Version	4.03
Measure Version	6.110
Boot Version	4.00
Battery A	90%
Battery B	None


Buttons: OK

# Position Information

[GPS Toolbar](#) | [Settings](#) | [Position Information](#)

The Position Information screen is accessed from the [GPS Settings](#) screen. It displays detailed information about your current position.

Position Information	
Latitude	N49°50'16.96183"
Longitude	W119°36'35.98857"
Ellipsoidal Height	1322.34'
Antenna Hgt (Meas)	0.00'
Baseline Length	Not Applicable
Northing	18122968.03'
Easting	1024710.58'
Elevation	1322.34'
Horz System	UTM83-11
Vert System	Ellipsoidal


OK

The following information is displayed and updates in realtime:


- Geodetic Position (Latitude, Longitude, Ellipsoid Height)
- Measured Antenna Height
- Baseline Length
- Cartesian Position (Northing, Easting, Elevation)
- Coordinate Systems (Horizontal and Vertical)
- Solution Type
- Standard Deviation
- PDOP
- Number of Satellites
- UTC Date and Time

## Raw Data Logging

[GPS Toolbar](#) | [Settings](#) | [Raw Data Logging](#)

Use this to start and stop raw data logging on your GPS reference or rover receiver, for later post-processing of your point data. You can log raw data on the receiver while you carry on with your survey in FieldGenius.



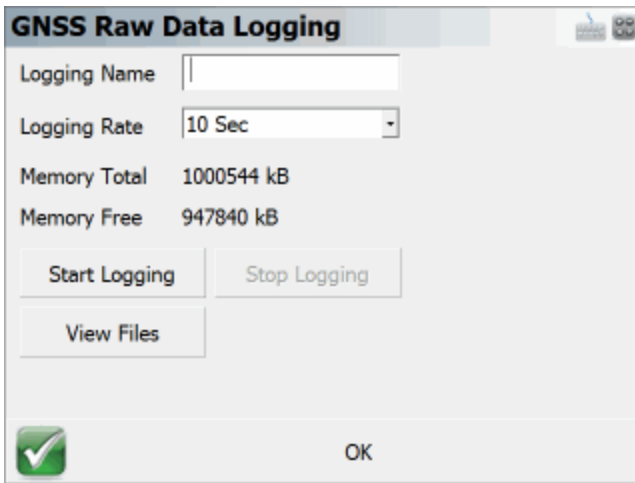

Note: FieldGenius can not control the data logging on all models of GPS receivers. Currently, we support data logging on the:

Altus APS-3	Magellan PM500	Sokkia GSR2600
Altus APS-3 Rev 2	NavCom SF-3040	Sokkia Radian IS
Ashtech ProMark 500/800	NavCom SF-3050	Topcon HiPer
GeoMax 10/20	NovAtel DL4	Topcon GR-3
Javad Triumph-1	Pentax G3100-R1	Topcon Legacy
Leica 1200	Pentax SMT888-3G	Topcon Odyssey
Leica GS15	Pentax SMT888-3G Rev 2	Trimble 4700/4800
Leica GS10	Prexiso G4/G5	Trimble 5700/R7
Leica SmartRover	Sokkia GRX1	Trimble 5800/R8
Leica GPS900		

## Command Console

[GPS Toolbar](#) | [Settings](#) | [Command Console](#)

The Command Console screen is accessed from the [GPS Settings](#) screen. It allows you to send commands to your receiver to configure settings, or other related tasks.

You must determine the exact syntax to enter in the console and you can usually gather this information from your GPS manufacturer.

### Send

This will send the parameters that you've entered to your receiver.


---

## Run Script

This allows you to import and read a text file that has a sequence of commands that you would like to upload to your receiver.

## Clear Console


This will clear console of all parameters sent and received from your receiver.

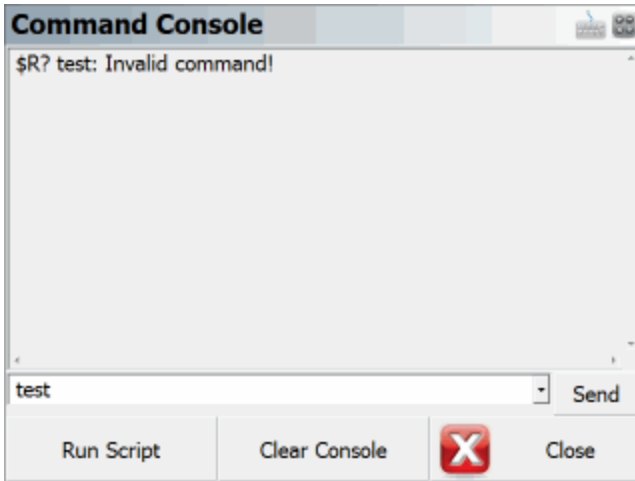

# Coordinate System Settings

[Main Menu](#) | [Settings](#) | [Coordinate System](#)

The datum settings are used to transform GPS derived curvilinear coordinates (latitude, longitude and ellipsoidal height) into Cartesian coordinates (northing/y, easting/x, and ellipsoid or orthometric height) for presentation on the drawing window and data storage.

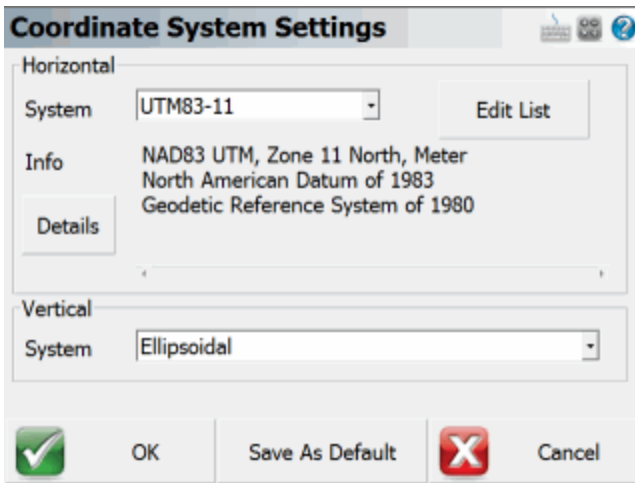

### Horizontal Group

This is where you define the coordinate system for your project.

### Edit List

The **Edit List** button is used to create predefined or user-defined coordinate systems, create new coordinate systems, copy predefined systems, and edit or delete existing systems. When pressed, the Coordinate System List dialog will appear.

A **predefined coordinate system** is one that already exists and comes installed in FieldGenius by default, a **user-defined system** is one that you have created.

### Details

This accesses a summary of all the parameters being used by the selected coordinate system. The following information is displayed:

1. What projection and parameters are being used?
2. What datum transformation method and parameters are being used?
3. What ellipsoid and parameters are being used? See section 4 for more details.

### Vertical Group

This is where you define the vertical system also known as a geoid model for your project.

The default is ellipsoidal. If needed you can copy geoid separation files (a.k.a a geoid model) into the FieldGenius mapping directory. Any new files you copy to the mapping directory can be selected here. Please review the [Geoid Model](#) topic for more details.

---

## Save As Defaults

Saves the Horizontal and Vertical systems to the msurvey.ini file as defaults to be used for all new projects.


---

## Select Horizontal Coordinate System

FieldGenius ships with a default coordinate system definition of UTM NAD83 zone 11. You can change this at any time.

The Coordinate System List dialog is where you can select an existing coordinate system or create a new user-defined coordinate system and add them to a "favourites" list.

This list allows you to define the coordinate systems you use most often for easy access from the Coordinate System Settings screen.

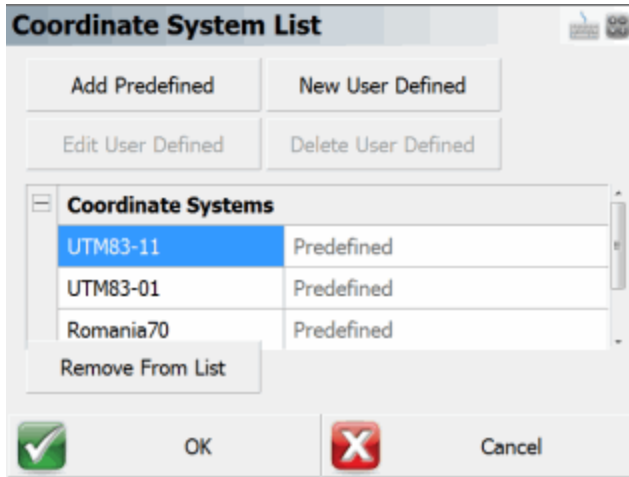

## Add Predefined

Press this button to access a list of existing coordinate system. See the Add Predefined System section below for more details.

## New User-Defined

This allows you to add a user-defined coordinate system to the coordinate system list. See the Add user-defined System section below for more details.

## Edit User-Defined

This allows you to review and edit a user-defined coordinate system. Select a user-defined coordinate system from the list, and press the **Edit User-Defined** button. Doing so will display the Edit User-

Defined System dialog.

Some predefined coordinate systems are read only and can't be edited. You will see a warning message when attempting to copy or edit system that can not be edited.

### **Delete User Defined**

Pressing the button will delete the selected user-defined coordinate system. You will need to confirm that you want to delete it from the database. Since there is no und, you may want to use the [User Coordinate System Export](#) routine to save a backup copy of your coordinate system before deleting anything.

Some predefined coordinate systems are read only and can't be deleted. They can however be removed from the favourites list by using the **Remove From List** button.

### **Remove From List**

If you select either a user-defined or predefined coordinate system and press this button, the selected coordinate system will be removed from the coordinate system list. It isn't deleted or removed from the mapping database.

### **OK Button**

This will save the coordinate system favourites list to the msurvey.ini file.


### **Cancel Button**

This will exit the dialog and will save nothing. You will be automatically returned to the Coordinate System Settings dialog.

---

## **Add Predefined System**

When the **Add Predefined** button is selected you will be able to select an existing coordinate system from the mapping database.

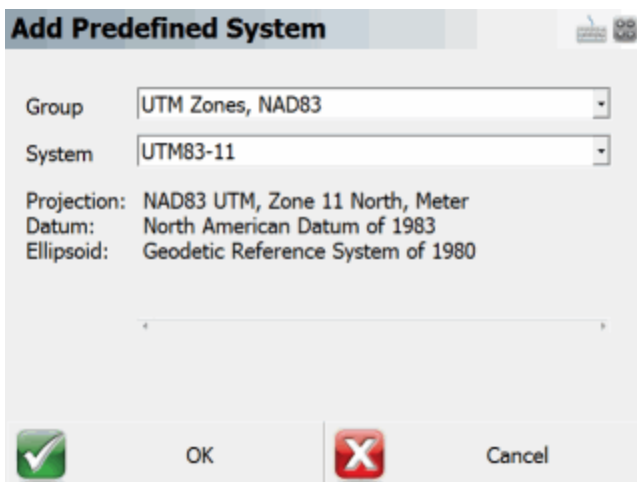

### Group and System Options

Coordinate systems are grouped into countries or mapping systems. Select the country or system that you are surveying in and then choose the coordinate system in the System drop down list.

### Information Section

This section (below the System field) displays the projection, datum, and ellipsoid information related to this coordinate system.

### Ok Button

This will add the selected coordinate system to the favourites list.

### Cancel Button

This will cancel without saving. User returned back to the Select Coordinate System dialog.

---

## New/ Edit user-defined System

From this dialog you will either create a brand new coordinate system or edit an existing one you previously saved.

New User-Defined System	
System Name:	<input type="text"/>
Description:	<input type="text"/>
<input type="checkbox"/> <b>Ellipsoid Parameters</b>	
Equatorial Radius (a)	<input type="text"/>
Polar Radius (b)	<input type="text"/>
Inverse Flattening (1/f)	Invalid
<input type="checkbox"/> <b>Datum Parameters</b>	
Datum Type	<Select Type>
<input checked="" type="checkbox"/>	OK
<input type="checkbox"/>	Cancel

### System Name and Description

Enter a name for your coordinate system and optionally enter a meaningful name that helps describe it. The system name must have colon in the name.

### Ellipsoid Parameters

To define the ellipsoid for the coordinate system you must enter the known equatorial and polar radiuses for the ellipsoid. The Inverse Flattening is not editable and will be computed automatically and can be used a check.

- Equatorial Radius (a)
- Polar Radius (b)
- Inverse Flattening (1/f) - Always a read only value, automatically computed from the two ellipsoid radiuses.

### Datum Parameters

There are 7 datum types to select from:

- Three Parameter
- Four Parameter
- Six Parameter
- Seven Parameter
- Bursa / Wolf

- 
- DMA Molodensky
  - None

If none is selected then no transformation parameters will be applied to the coordinate system transformation.

If a datum other than none is selected then the user will be able to enter the following parameters:

- Delta X (m)
- Delta Y (m)
- Delta Z (m)
- X Rotation (“)
- Y Rotation (“)
- Z Rotation (“)
- Scale (PPM)

### **Projection Parameters**

The user can select one of nineteen projections.

- Lambert Conformal Conic (One Standard Parallels)
- Lambert Conformal Conic (Two Standard Parallels)
- Transverse Mercator or Gauss Kruger
- Universal Transverse Mercator
- Albers Equal Area Conic
- Rectified Skew Orthomorphic, Azimuth at Projection Center
- Mercator Cylindrical Projection with Standard Parallel
- Mercator Cylindrical Projection with Scale Reduction
- Lambert Azimuthal Equal Area
- Lambert Azimuthal Equidistant
- Miller Cylindrical
- Oblique Sterographic
- Polar Sterographic
- Sinusoidal Projection, Optionally Interrupted
- Equidistant Cylindrical



- Cassini
- Robinson Cylindrical
- Bonne Pseudoconical
- Krovac Oblique Conformal Conic, Czechoslovakia

Typical projection parameters for most cases are:

- Scale Factor
- Central Meridian
- Origin Latitude
- Origin Longitude
- False Northing
- False Easting

### **Ok Button**

This will save the user-defined parameters to the CS-MAP coordinate system database files (coord-sys, datum and ellipsoid)

### **Cancel Button**

This will cancel the current operation and nothing will be saved.

---

## **Automatic Backup**

Whenever you add or edit a user-defined coordinate system, FieldGenius will automatically create and save your parameters to a file named **user-coordsys-backup.csmmap** to the mapping directory.

This backup file stores your user-defined coordinate systems. If you accidentally remove or overwrite your user-defined coordinate systems, you can re-import them from this backup file using the [Import user-defined Coordinate System](#) command.

---

## **Localization (Site Calibration)**

Further coordinate transformations can be accomplished with the use of the Local Transformation function of FieldGenius. For localizing on a user-defined coordinate system, see the [GPS Site Calibration](#) section below.

These settings are stored in your project's .ini file, allowing you to easily use different coordinate systems for different projects.

---

## **Additional Grid Shift Files and Geoids**

Additional grid shift files or geoids can be downloaded from the MicroSurvey helpdesk.

---

World Geoid models we support can be found [here](#).

World grid shift files we support can be found [here](#).

## **Older FieldGenius Mapping Files**

Many of the horizontal datums and vertical geoid models require the use of "grid" files for coordinate computations. A desktop application has been provided with FieldGenius to extract user-defined areas from the original files to create smaller more manageable files for the data collector.

See the topic on [Datum Grid Editor](#) for more information.

## **Datum Grid Editor**

This is a desktop program that is installed on your desktop computer. You can start it by running "Datum Grid Editor" under the MicroSurvey\FieldGenius 2012 program group on your system.

**Special NOTE:** Software versions newer than 2011 don't require the use of this program. All necessary files are installed with versions newer than 2011.

### **Versions Newer than 2011**

As mentioned above if you are using a software versions newer than 2011 all necessary files for your coordinate systems are installed automatically for you with the following exceptions:

- Grid Shift Files - In some countries, or areas, the use of grid shift files are required to accurately compute a horizontal position. These additional grid shift files are not installed and need to be downloaded from the MicroSurvey website. Please review the [Grid Shift Files](#) topic for more information.
- Geoid Models - If you require orthometric heights you will need to download a geoid model for your area. Please review the [Geoid Models](#) topic for more information.

### **Pre 2011 Versions**

Older versions of our software (older than 2011) require the use of the Datum Grid Editor. The GPS module of FieldGenius requires geodetic datum transformation grids and geoid model grids in order to precisely determine positions and calculate orthometric heights in the user's coordinate system.


Usually these grids are supplied by national organizations such as the National Geodetic Survey (USA) or the Geodetic Survey Division of Canada and the data files can be upwards to 15 megabytes in size.

Older data collectors are restricted in storage resources and cannot handle the large sizes of the grid files; therefore it is necessary to create smaller more manageable files. The Datum Grid Editor is a

companion utility for FieldGenius to build smaller sub grids from the original grids while preserving integrity.

The process of building sub grids needs to be repeated only when performing GPS surveys in locations which exceed the area of the original sub grids. The Datum Grid Editor is installed on the desktop machine and is available for download from our website [www.microsurvey.com](http://www.microsurvey.com).

When it starts, you will see the following dialog:

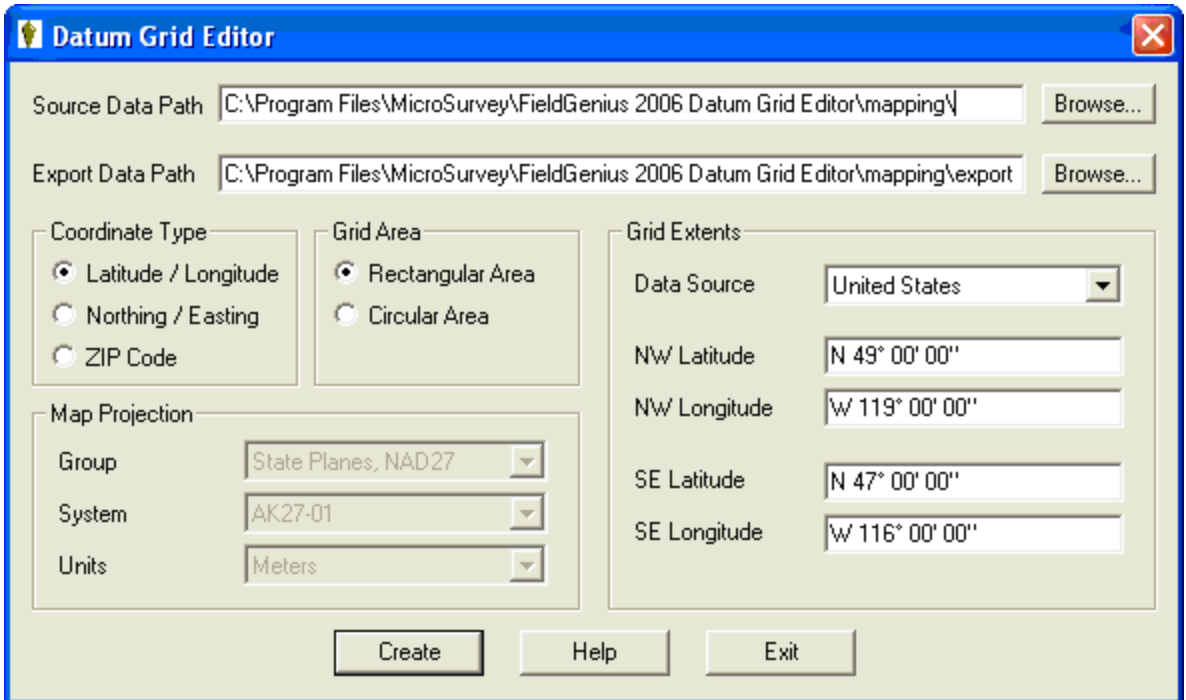

### Data Paths

Installation of the Datum Grid Editor utility will include recent grid data for both the United States and Canada. The edit box for the source data path will contain the installed path for the datum configuration files and the respective national grid data. Newly built grids will be written to the path defined by the edit box for the export data path. The installation process will have created a specific export path. Paths can be modified by changing the contents of the edit boxes or by pressing the adjoining browse button and selecting the path from the presented directory tree.

### Coordinate Type

Coordinates for defining the extents of the user sub grid can be either geodetic (latitude and longitude) or Cartesian (northing and easting). The contents of the Map Projection section and Grid Extents

---

section will reflect the selected coordinate type. You can also specify a ZIP code that will define the center of your sub grid.

### **Grid Area**

The user sub grid extents can be entered as a rectangle where the diagonal corners of the northwest boundary and southeast boundary are used. Alternatively a central coordinate can be used with a bounding radius. Selection of either boundary method will be shown as parameters in the Grid Extents section.

### **Map Projection**

If using Cartesian coordinates (northing and easting) for defining the boundary of the sub grid, it will be necessary to select the appropriate map projection for deriving geodetic coordinates used with internal computations. The group field contains various national and regional coordinate systems composed of map projection and related horizontal datum. Each group will be composed of zones or sub coordinate systems and will be updated in the system field as the group field is changed. Finally the linear unit can be selected for the coordinate entry.

### **Grid Extents**

The data source from which the sub grid is to be built must be selected and is defined by national organization. All necessary grids and supporting files will be built for FieldGenius including horizontal datum transformations, vertical datum transformations and geoid models. Be aware of the fact that the source data for both Canada and the United States extend beyond their political boundaries and therefore the choice of the source data is critical to avoid coordinate deviations.

The remainder of this section contains the boundary information for the user grid and its format will depend on the selected coordinate type and the selected grid area. Linear Cartesian coordinates do not need to be appended with a unit designator. Geodetic coordinates must be delimited with spaces to denote direction, degrees, minutes and seconds. Listed below are possible entries for geodetic coordinates with all being equivalent in value:

N 49 12 9.0 (direction, degrees, minutes, decimal seconds)


N 49 12.15 (direction, degrees, decimal minutes)

N 49.2025 (direction, decimal degrees)

### **Grid Creation**


Once all parameters have been carefully selected, the sub grids can be produced by pressing the **Create** button. The time period for building the grids will depend on the area of the chosen grids and completion will be indicated by the following dialog which reiterates the grid extents and the total size of the sub grids and supporting files.

If the source path or export path described above are invalid, the appropriate message box will be presented to denote the error.

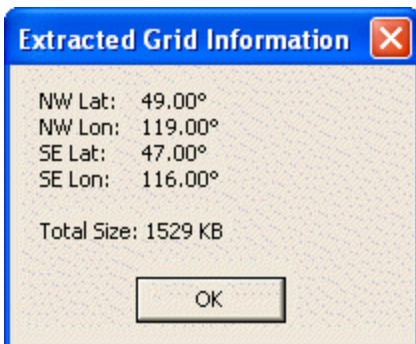


### Transferring Data

The final step in creating sub grids is transferring the entire contents of the defined export path to the data collector. [Microsoft ActiveSync](#) provides easy access to **Explore** the contents of the data collector.

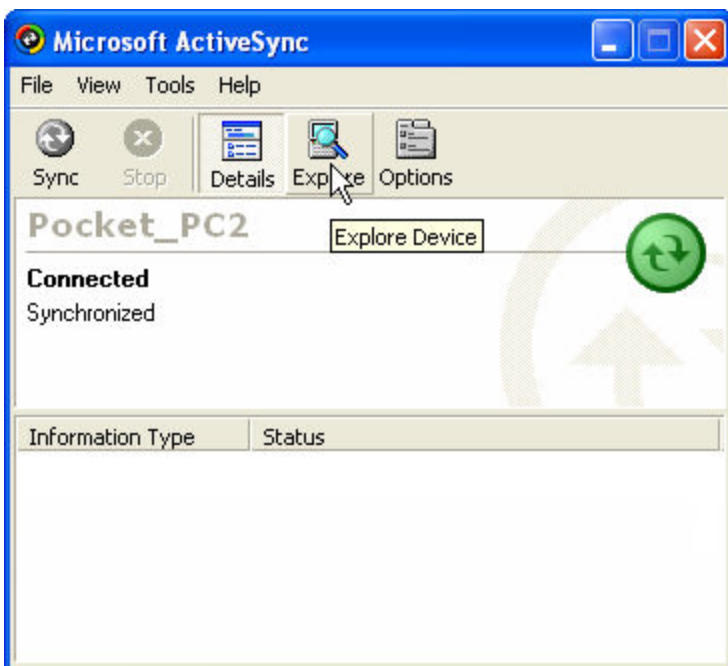

After cutting or copying the contents of the export path, use the explorer to paste the files into the ...\\MicroSurvey FieldGenius\\Programs\\Mapping\\ path on the data collector. If prompted to overwrite the existing files while pasting, respond with yes.

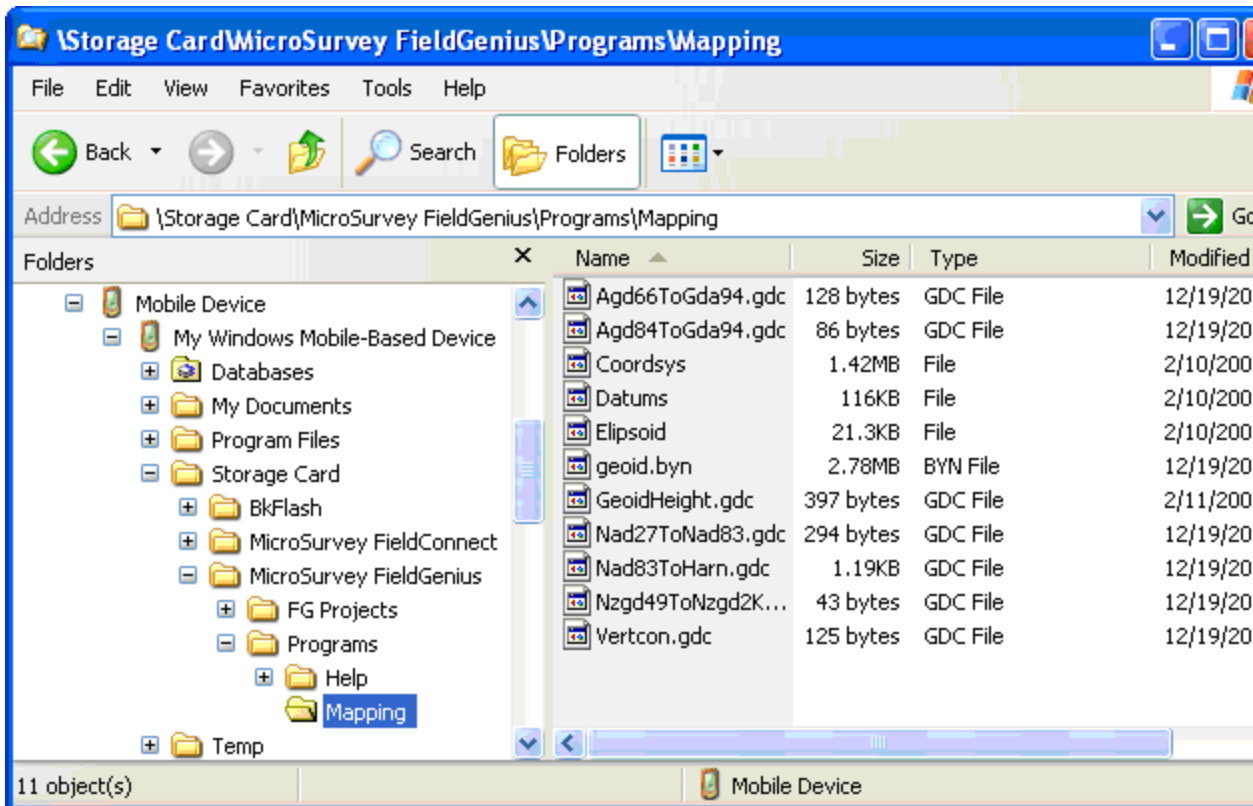

NOTE: the path shown may not exactly match your device. Make sure you know where FieldGenius is installed in your data collector. It might be in SystemCF, C\_Drive, Disk, Storage Card, SD Card, Built-in Storage, Program Files, or some other memory location.

## Import / Export User Defined Coordinate Systems

User defined coordinate systems created by a user are saved in the binary mapping system files.

It is useful to be able to export these user created coordinate systems for the following reasons:

1. A backup of your user defined coordinate systems.
2. Allows you to share user defined coordinate systems with other crews.
3. Allows you to load user defined coordinate systems after installing a FieldGenius update.

## **Export**

When you export the user defined coordinate systems you will be able to specify a directory to save the file to and a name for the file.

Exported files will automatically be saved with a CSMAP extension such as **mycoordinatesystem.csmap**.

All user defined coordinate systems in FieldGenius will be exported to the file.

## **Import**

You can import coordinate systems from a previously saved file.

When you import a file you will be asked to browse to and select the file you want to import. Once selected, FieldGenius will check to make sure a user defined system doesn't already exist and if one does, you will be asked if you want to skip importing it, or overwrite the existing coordinate system.

## **Backups**

FieldGenius automatically creates a backup when you add or edit user defined coordinate systems. If you forgot to save your user defined coordinate systems, you may be able to restore them using a backup. Please see the [Coordinate System](#) topic for more details.

## **Geoid Models**

Geoid models are used by FieldGenius to convert ellipsoid heights to orthometric heights. FieldGenius will by default use ellipsoid heights but you can define a geoid model to be used instead if orthometric heights are desired.

Geoid models are not installed by default and must be downloaded from the MicroSurvey website. Geoid models are available for most regions around the world.

## **Download Geoid Files**

### **Canadian Geoid Models:**

<http://www.microsurvey.com/helpdesk2/index.php?/Knowledgebase/Article/View/490/0/canadian-geoid-models-download>

### **United States Geoid Models:**

<http://www.microsurvey.com/helpdesk2/index.php?/Knowledgebase/Article/View/1040/0/usa-geoid-models>

### **World Geoid Models**

<http://www.microsurvey.com/helpdesk2/index.php?/Knowledgebase/Article/View/479/0/world-geoid-models-download>

---

## Copy Geoid Files to Data Collector

Once you download the required geoid file for your area you will need to copy it to the data collector(s) that will be used. All geoid model files need to be copied to the installation directory in the mapping folder. For example: \MicroSurvey FieldGenius\Mapping\.

## Select Geoid Model

Once the necessary geoid model is copied to the data collector you have to define in your project which geoid model to use. You can define this by selecting the geoid model in the Vertical Systems section of the [Coordinate Systems](#) dialog.

## Grid Shift Files

In some countries, or areas, the use of grid shift files are required to accurately compute a horizontal position. When projecting a dataset between two different datums, a transformation is required.

Both equation-based and grid-based transformation methods are supported FieldGenius. An equation-based transformation can use either a 3-parameter (dX, dY, dZ) or a 7-parameter shift (dX, dY, dZ, rX, rY, rZ, ds) to translate between coordinates. A grid-based transformation uses binary files and interpolations that calculate the differences between the two geographic coordinate systems.

We have created country specific grid shift files and these additional grid shift files are not installed by default and need to be downloaded from the MicroSurvey website.

### [Download Files and Instructions](#)

Please review the following MicroSurvey Helpdesk article for instructions and country specific grid shift files.

<http://www.microsurvey.com/helpdesk2/index.php?/Knowledgebase/Article/View/499/47/country-specific-grid-shift-files>

## GPS Local Transformation

[Main Menu](#) | [Survey Tools](#) | [GPS Local Transformation](#)

FieldGenius includes a flexible localization utility. The first thing you need to do is specify the points that will be constrained. You can do this by using the **Edit Control** button. Once you've specified your constrain points, you can press the Calculate Parameters button to compute transformation parameters. The parameters will then be saved to the raw file when the OK button is pressed.



GPS Local Transformation	
Edit Control	Calculate Scale (GPS)
Origin North	0.00'
Origin East	0.00'
Trans North	0.00'
Trans East	0.00'
Rotation	0°00'00"
Scale	1.0000000000
Trans Height	0.00'

Close

## Control Points

You can think of the control points as a "fixed" coordinate system that you are wanting to transform your measurement to. For example if you are using a GPS receiver and you want to localize to a local system, your local points would be considered control points for the constraining. The points you derive with GPS need to be transformed, so these are the measured points.

All you need to do is press the **Edit Control** button to display the constrain point screen. Using the Add and Edit Control buttons you can define what points you want to use for control. You can then specify what point you want to constrain the control to, and you can also select what component of the measured point to use, either it's horizontal position, vertical position or both. An "X" indicates that the particular component should not be used in the transformation calculation.

Delta values are shown to help you determine how well your points match up with one another. Once you specify your constrain points, you can press the Calculate Parameters button which will compute the transformation parameters. The deltas shown are the differences between the control points and the measured points if the transformation parameters were applied.

When you're satisfied with the transformation parameters, the control point pairs and transformation parameters will be saved to the raw file upon exit.

## Transformation Settings

### Calculate Parameters

Use this to compute the transformation parameters. You have to have constrain point pairs defined before you will see anything calculated.

---

### **Calculate Scale (GPS)**

When this is used it will compute the combined scale factor at your current position. This can be used while you're connected to either a base or rover receiver. The combined scale factor is computed by multiplying the map scale by the ellipsoid scale factor. The combined factor can then be applied to grid distances to get ground distances.

While programming the base, if you use the one point localization option to help you localize into a user defined local system, FieldGenius will automatically compute a combined scale factor and a translation. For the most part, the scale factor will not change very much over the workable range of your RTK system. But if you want to update the combined scale factor you can.

### **Adjust Points**

Use this to compute new coordinates for your GPS derived points. Each GPS observation you store is saved in the raw file as an EP record, which is essentially a WGS84 position. If you want FieldGenius to compute new Cartesian or local coordinates for the GPS observations, you can. Simply press the Calculate Params button and FieldGenius will scan your raw file and will recompute new coordinates using the EP records, and will apply your transformation parameters to the coordinates.

An example where this could be used is after you've measured some constrain points to help you localize to a user (local) coordinate system. After you compute your transformation parameters you will still have two coordinate systems, one with the local coordinates and one with the GPS (UTM or SPCS) coordinates. It is usually beneficial to transform the GPS derived constrain points so they are now in the local system.

### **Do Not Calculate Scale (Checkbox)**

If this is checked, FieldGenius will not compute a scale factor and will force it to a value of 1.0.

### **Do Not Calculate Vertical Slopes (Checkbox)**

If this is checked then FieldGenius will not compute any slope values.

---

## **Parameters**

### **Origin North and East**

This is the centroid of the measured coordinates, or simply the average northing and easting of your measured constrain points.

### **Trans North and East**

If you move the measured points, so that the centroid of your measured points is equal with the origin of the local system. The translation north and east is the shift amount that needs to be applied to your measured points to move them into the local system.

### **Rotation**

This is the rotation amount between your measured and local systems.

### **Scale**

This is the scale difference between your measured and local systems.

If you turn on "Do not calculate scale" these values will be equal to 1.0.

### **Trans Height**

This is the vertical shift that will be applied to the transformation. It is computed by averaging the elevation differences between your point pairs. Positive translation heights will be added while negative heights will be subtracted.

### **Slope North & Slope East**

This is an indication of or much your measured system is inclined in the north and east directions. The value that is displayed is the slope of each direction. For example if the difference in elevation along the north axis of your measured system is 3 meters, and the length of it is 19 meters, the slope of the axis will be (rise over run) or 0.15789. Negative slopes indicate that it is inclined downward from the origin, and positive slopes are inclined upwards.

You should only use vertical slopes if you do not have a geoid model to use for your point's elevations. Use this feature with care as it can cause distortions in your elevations if it is used incorrectly.

You can force FieldGenius to not compute these values by turning on the "Do no calculate vertical slopes" toggle.

---

## **Impact on new measurements**

Once the transformation parameters have been adequately determined, all future GPS measured coordinates will automatically be transformed. All constrained point pairs will be saved along with the transformation parameters for the current project upon exiting the utility and will be saved to the raw file.

### **Notes:**

- Only use a local transformation if necessary.
- GPS heights should be applied with a suitable geoid model. If possible only use vertical bias (Trans Height) because solving for slope North and slope East with inadequate control can severely distort the parameters.
- Use redundancy for confirming parameters.

---

## **Raw File Information**

Whenever you compute transformation parameters, they're automatically written to the raw file when you exit the command.

---

Once the parameters are saved, they will automatically be read in again if you use the Transformation Command. FieldGenius will always start at the top of your raw file and will process the calibration records as they're found.

The control points you define are saved as a CT record and will always have an associated RP record. RP records store the measured coordinate that you defined for the control point.

Following the calibration points are a HA and VA records which store the transformation parameters that were computed. Following is an example of what you might see in your raw file.

```
--Calibration Points
CT,PN15,DM4,RH6.708,RV0.000
RP,PN15,N 11.0000,E 30.0000,EL0.0000,--
CT,PN16,DM4,RH5.243,RV0.000
RP,PN16,N 30.0000,E 30.0000,EL0.0000,--
CT,PN17,DM4,RH6.708,RV0.000
RP,PN17,N 30.0000,E 11.0000,EL0.0000,--
HA,N 23.6667,E 23.6667,TH6.6667,TE6.6667,RT0.000000000,SC1.0000000000
VA,PV3,N 23.6667,E 23.6667,LZ0.0000,SO0.00000,SA0.00000,GN
```

An important thing to remember is that if any of the original measured points you used in the calibration change, you need to go back into the transformation command and edit the corresponding control point. You need to re-define the measured coordinates for the control point, then press the **Calc Parameters** button to update the transformation parameters.

## Local Transformation

Due to a variety of reasons, it may be necessary to adjust position coordinates for distortions which can include scale, rotation, translation in northing and translation in easting. The flexibility of FieldGenius's local transformation utility allows it to be used for a variety of applications and applied to positions derived from GPS or terrestrial observations. For GPS applications there are two possible reasons for the need of a transformation:

1. Translating from Local System to Plan System

GPS receivers by default generate geodetic coordinates (latitude, longitude and ellipsoidal height) and the process of converting to Cartesian coordinates (northing, easting and orthometric height) or local system is done with existing well defined map projection systems such as Universal Transverse Mercator (UTM) or the State Plane Coordinate System (SPCS). Selection of the map projection in FieldGenius is done within the Datum page of the GPS Configuration and a local zone is selected to minimize scale and meridian convergence distortion. Most land, boundary or property surveys are unique with regards to their generalized plane and coordinate origin for each project. The coordinate system for these surveys is often referred to

as a plan system with coordinate magnitudes being kept small for ease of recording and calculations. The majority of projects can suffice with a simple translation in northing and easting to produce plan system coordinates from GPS determined local system coordinates. The translation is easily determined by comparing a plan system coordinate and a local system coordinated for a single point.

## 2. Consideration for Scale and Rotation

Projects with larger extents need to take into consideration the curvature of the earth's surface which can be handled by the application of scale and rotation transformations plus the previously mentioned translations. In the case of mixing GPS observations and terrestrial observations it does become important to apply a transformation, especially in scale, due to the fact that there is a difference in distance between positions measured on the ellipsoid and the terrain surface. As seen in Figure 1, coordinates derived from GPS are always referenced to the surface of the ellipsoid as per the application of map projections. When the two points on the ellipsoid are projected upwards along the ellipsoid normals onto the earth's surface, they diverge, and a terrestrial distance observed between the points will be greater than the computed distance of the same two points on the ellipsoid. The effects of this zenith divergence becomes more evident as distance between the two points becomes greater and for larger terrain heights above the ellipsoidal surface.

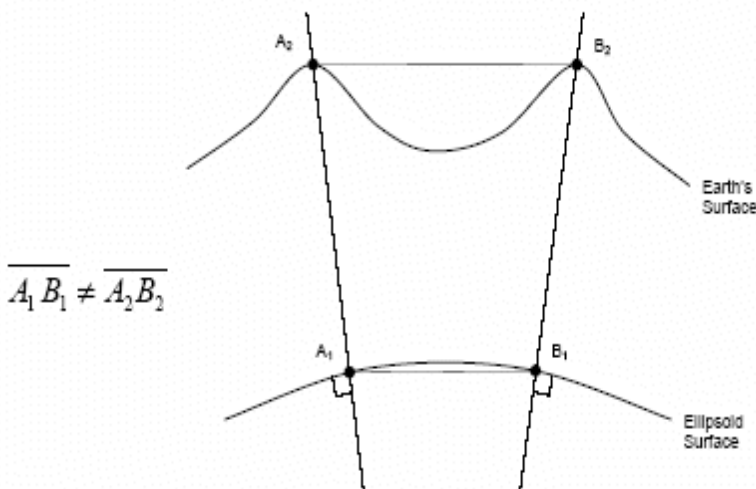


Figure 1. Divergence of Ellipsoid Normals.

---

## Transformation Concepts

In order for the transformation parameters to be resolved, a sufficient number of control points are required with coordinates in both the plan system and local system. The determination of a four parameter transformation (two translations, scale and rotation) on a horizontal plane requires at minimum two physical points with each having two sets of corresponding coordinates as illustrated in Figure 2. Points A1 and B1 exist in what is termed the local system and are transformed into the plan system points of A2 and B2. The use of more coordinate observations will provide redundancy and the means to identify outliers for elimination. Solving for over constrained parameters is done with the application of least squares to provide the most rigorous minimization of residuals. Once transformation parameters have been resolved, newly observed or existing coordinates can easily be converted to the plan coordinate system.

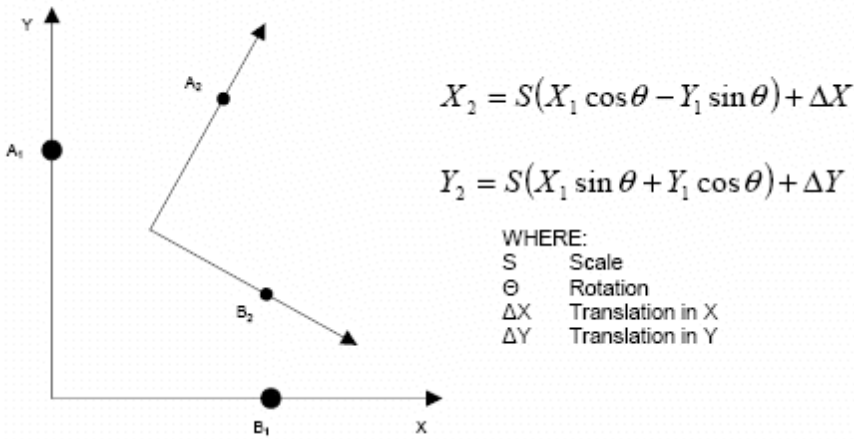


Figure 2. Horizontal Four Parameter Transformation.

The selection of control points for determining the transformation parameters are critical in reducing a colinearity condition along a particular axis. Colinearity will present itself if the control points are concentrated in a linear fashion as shown in Figure 3 (Poor Design) and thus weaken the parameters in a perpendicular direction. Control points should extend to the corners of the project boundary and be extended with equal distances in both horizontal directions.

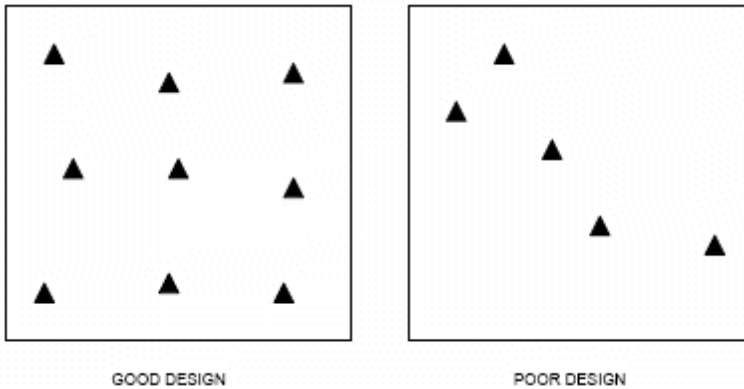


Figure 3. Transformation Control Design.

---

### Vertical Transformation

The vertical transformation function of FieldGenius operates independently of the horizontal transformation. A sloped plane is calculated from the residuals of the constrained point pairs to determine a vertical bias, slope in X and slope in Y. To determine a vertical bias at least one point pair must be constrained and for all three parameters to be determined at least three point pairs must be constrained.

The use of the vertical transformation function should be restricted to cases where a geoid model is not available or there is a known problem with an existing geoid model.

---

### Local Transformation Example A

For this example the simple case of translating the GPS derived coordinates to the desired plan coordinates will be used. The example will demonstrate how FieldGenius can be used to determine and apply the transformation parameters. A project is created consisting of four points in the plan system as denoted in Figure 4 and the corresponding coordinate listing shown in Table 1.

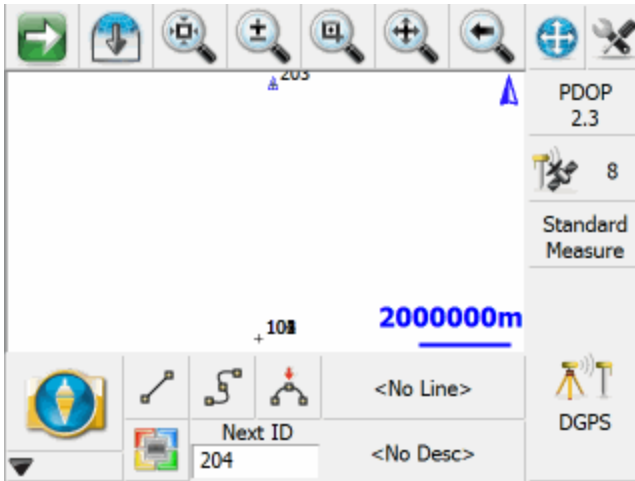


Figure 4. FieldGenius Project with Points in the Plan System.

Point	Northing	Easting
101	1000.000 m	1000.000 m
102	1000.000 m	1200.000 m
103	1200.000 m	1200.000 m
104	1200.000 m	1000.000 m

Table 1. Plan System Points.

The GPS reference station will need to occupy a point within the project area which can be an existing plan system point (101-104) or a new point set up randomly somewhere in the project area. For either setup of the reference station, the GPS antenna should have an unobstructed view to the satellite constellation to ensure that the rover station operates at its full potential. If the reference station is unable to occupy a plan system point, the rover station can instead measure an existing plan system point with local system coordinates and for this example that case will be assumed. Using FieldGenius to configure the GPS reference station, a suitable map projection is selected and the reference station position will be determined autonomously.

Once the reference station is operating and transmitting corrections, the rover station is used to measure plan system point 103 and the new local system point is assigned point number 203. Table 2 indicates the measured coordinates of point 203 in the local system which corresponds to point number 103 in the plan system. Figure 6 illustrates that FieldGenius now has points in two different coordinate systems as indicated by the large separation.

Figure 6. FieldGenius with Two Coordinate Systems.



<b>Point</b>	<b>Northing</b>	<b>Easting</b>
203	5523295.939 m	311585.808 m

Table 2. Local System Point.

Now that points exist in each of the coordinate systems the local transformation parameters can be determined and applied. Transformation Settings can be accessed from the **Main Menu | Survey Tools | GPS Local Transformation**. Initially the transformation parameters of translation in northing, translation in easting, scale and rotation will be null and any transformation will not be applied to GPS positions as indicated in Figure 7.

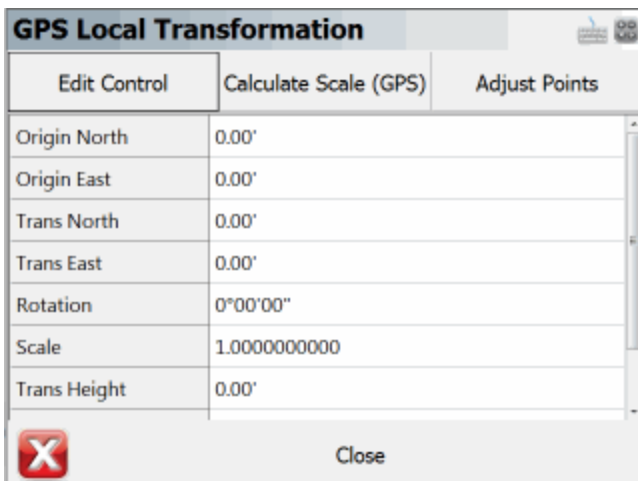


Figure 7. FieldGenius Default Transformation Parameters.

From the Local Transformation Setup select the **Edit Control** button for the entry of control and measured point pairs to be used in the determination of the transformation parameters.

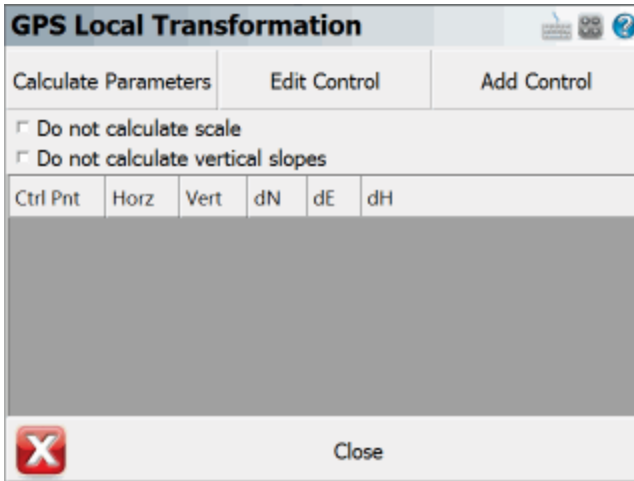


Figure 8: FieldGenius Default Control-Measured Point Pairs.

Select the **Add Control** button to enter the control and measured points. As seen in Figure 9 point 203 is selected as a measured (local coordinate) point and corresponding point 103 is entered as a control system point. The check boxes for constraining to horizontal and vertical are left enabled.

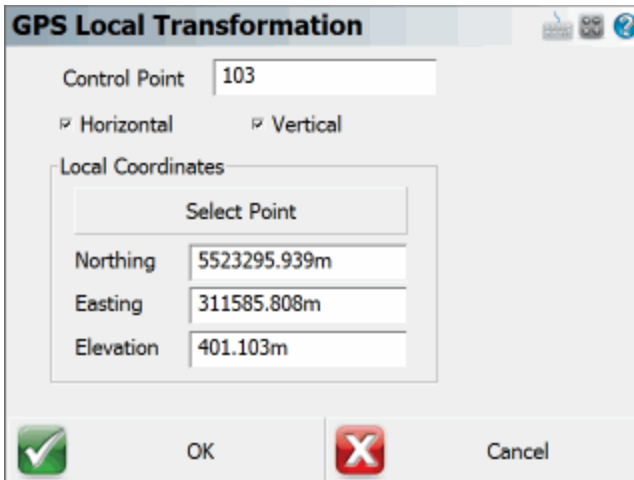


Figure 9: FieldGenius Control Point Pair Definition.

Select the **Calculate Parameters** button to have FieldGenius calculate new transformation parameters based on the control pair that has been added. The following tabular columns denote residuals in northing, easting and height and for this case are all zero due to the transformation being minimally constrained.

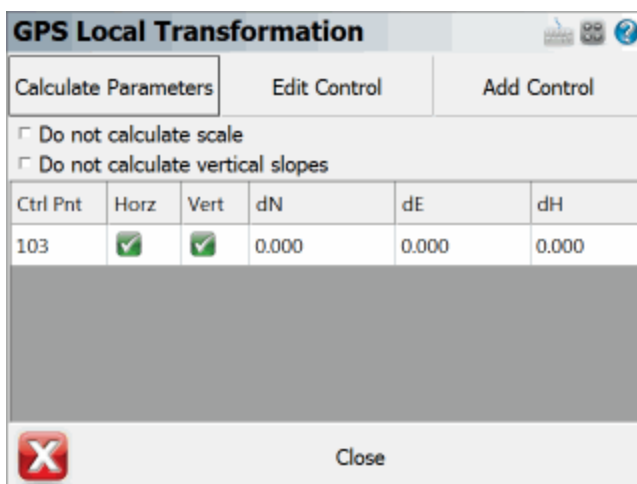


Figure 10: FieldGenius Constrained Points for Transformation.

The calculated transformation parameters can be viewed by choosing **Close** and returning to the Parameters page. Since only one point pair is being constrained, the utility has only determined a translation in northing, translation in easting and vertical bias. The addition of more point pairs would allow for scale, rotation and slopes in X and Y to be determined.


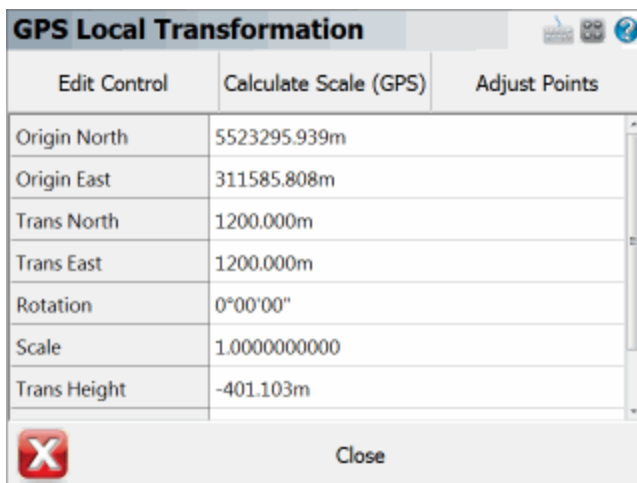


Figure 11. FieldGenius Calculated Transformation Parameters.

The map view of FieldGenius will now show the effect of the transformation by showing the new position of the GPS position cursor and denoting new coordinate values. Returning to point 103 with the

rover station will verify the transformation process. New points measured with GPS will reflect the

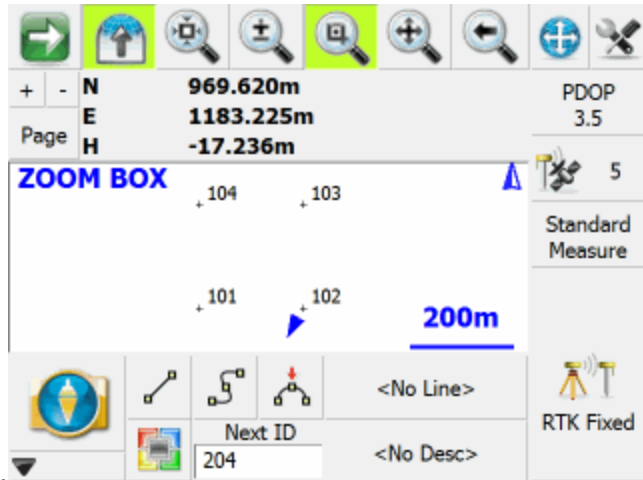

applied transformation parameters.

Figure 12. FieldGenius Transformation in Effect.

The GPS measured observations at this point are still stored in the project database as a cartesian coordinate. It is sometimes beneficial to have FieldGenius re-compute the coordinates for these points by using the Adjust button in the Transformation Settings screen. This will force FieldGenius to scan your raw file and convert all the GPS derived points into your local system.

## Local Transformation Example B

This example will investigate the process of transforming a set of existing terrestrially derived positions so that they are constrained to a set of GPS derived positions. The process of transforming points is reversed from previous discussions and will therefore imply that the GPS derived coordinates are in the plan system and the terrestrially derived positions are in the local system. Another consideration for this example is that the project area is relatively large and more than one point pair will require to be constrained to determine all four parameters and for redundancy. Determination of the transformation parameters will account for the geodetic implications of the earth's curvature and meridian convergence. The existing FieldGenius project is illustrated in Figure 13 with the 100's series points having been established with a total station.

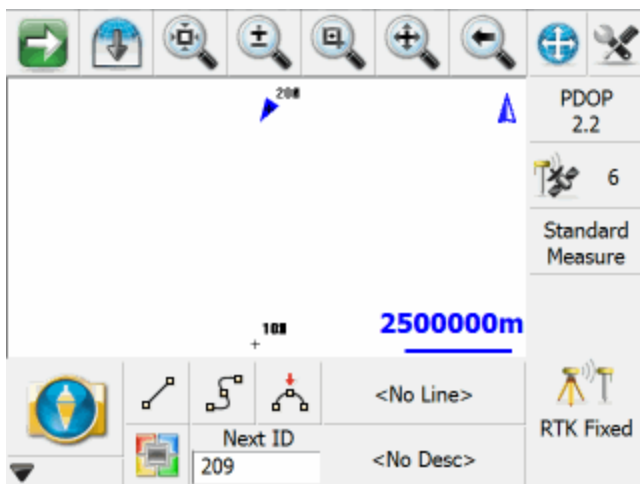


Figure 13. FieldGenius Project with Points in the Local System.

The GPS reference station occupies a national geodetic control point and has been configured with the corresponding published coordinates. The GPS rover station is used to measure points 102, 104, 106 and 108 to establish coordinates in the plan system and these new points are respectively named 202, 204, 206 and 208 (Table 3).

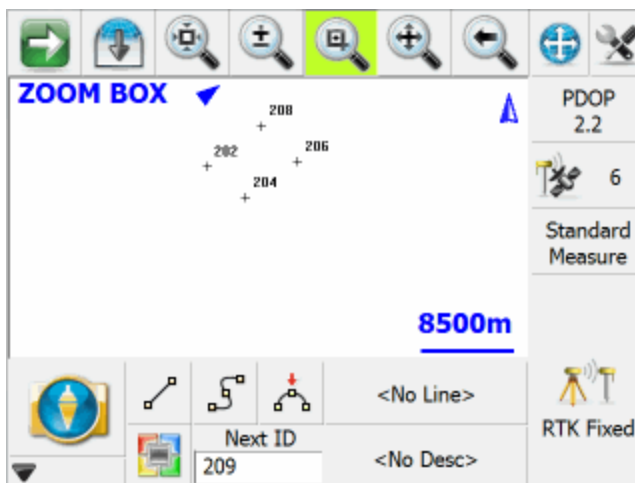


Figure 14. FieldGenius Project with Points in the Plan System.

Local System (Conventional Points)				Plan System (GPS Points)			
Point	Northing	Easting	Height	Point	Northing	Easting	Height
101	10820.603	3060.696	383.133				
102	6765.098	1674.638	384.936	202	5516443.987	311551.600	384.94
103	3325.620	2136.657	384.589				
104	3941.646	5216.788	383.543	204	5513620.403	315093.864	383.55
105	3736.304	8810.273	383.299				
106	7227.118	9939.654	382.980	206	5516905.954	319816.969	382.98
107	11539.300	9323.628	381.795				
108	10461.255	6654.182	384.380	208	5520140.241	316531.321	384.37

Table 3. Coordinate Listing.

Now that coordinates have been established in both the plan system and local system, the Transformation Setup is started from the Point menu of FieldGenius. Transformation Settings can be accessed from the **Main Menu | Survey Tools | GPS Local Transformation**. Figure 15 shows the Constrain page after the point pairs have been entered and their corresponding computed residuals. With four point pairs being used the horizontal transformation has a redundancy of two point pairs and the vertical transformation has a redundancy of one point pair. The residuals are within acceptable limits and do not necessitate the removal of point pairs.

GPS Local Transformation						
Calculate Parameters		Edit Control		Add Control		
<input checked="" type="checkbox"/> Do not calculate scale						
<input checked="" type="checkbox"/> Do not calculate vertical slopes						
Ctrl Pnt	Horz	Vert	dN	dE	dH	
202	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0.003	0.159	-0.002	
204	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0.114	0.028	-0.015	
206	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0.007	-0.191	0.005	
208	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-0.124	0.004	0.012	
Close						

Figure 15. FieldGenius Constrained Points for Transformation.

Viewing the Parameters page, as indicated in Figure 16, will provide feedback of the calculated horizontal and vertical transformation parameters.


GPS Local Transformation	
Edit Control	Calculate Scale (GPS)
Origin North	7098.779m
Origin East	5871.316m
Trans North	5516777.646m
Trans East	315748.438m
Rotation	0°00'01"
Scale	1.0000000000
Trans Height	0.008m
 Close	

Figure 16. FieldGenius Calculated Parameters.

Using the calculated transformation parameters the control system points (101–108) can be transformed. First you need to open the coordinate database by going to **Main Menu | Data Manager | Coordinate database**. Click the Find button and enter a point range 101-108 to select these points. The list of terrestrially derived points is entered as shown in Figure 17.

Point Database			
Point ID	Northing	Easting	Elevation
101	10820.603m	3060.696m	383.133m
102	6765.098m	1674.638m	384.936m
103	3325.620m	2136.657m	384.589m
104	3941.646m	5216.788m	383.534m
105	3736.304m	8810.273m	383.299m
106	7227.118m	9939.654m	382.980m
107	11539.300m	9323.628m	381.795m



 Edit    Delete    Add    Find    

Figure 17. Transforming Existing Points to the Control System.

To apply the transformation parameters to the local points, go to the second set of buttons by pressing the **green arrow** and then the **Local Transform** button.

---

After successfully transforming the points 101 through 108 from the local system to the plan system which was constrained to the GPS point 202 through 208 the results can be seen in Figure 18. The diagram illustrates the matching of points 102, 104, 106 and 108 with corresponding points 202, 204, 206 and 208 respectively.

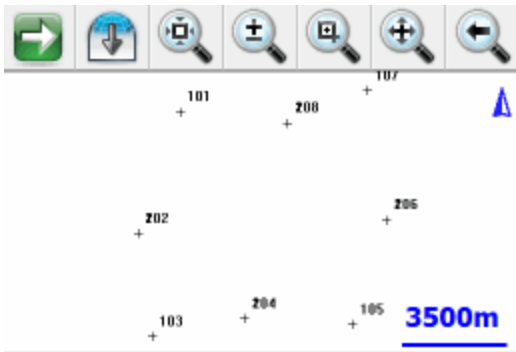


Figure 18. Results of the Transformation.

---

## Local Transformation Example C

Two approaches can be used in applying the Local Transformation utility; parameters can be manually entered or automatically computed given a set of control points. The explanation of the use of FieldGenius's Local Transformation is best described with an example of integrating GPS observations and terrestrial observations and using the utility to compute the parameters.

---

### Terrestrial Observations

The example project has a local user defined system that was uploaded to the data collector. Below you will find the coordinate listing for this user coordinate system. For the rest of the example we will refer to this as the Plan System.

We will make the assumption that the plan system is to be held fixed, that is we want to transform our GPS derived UTM coordinates into the user (plan) system.




Point ID	Northing	Easting	Elevation	Description
100	4937.480	5033.487	399.387	
101	5009.092	4999.688	401.188	
102	5004.814	4977.172	400.850	
103	4975.631	4980.361	399.795	
104	4939.713	4990.346	399.552	
105	4914.671	4975.005	399.233	
106	4886.675	4988.968	398.049	
201	5002.175	4995.656	400.632	
202	5000.000	5000.000	400.665	
203	5007.341	5008.610	401.095	
204	5005.103	5020.902	400.946	
205	5013.644	4963.513	401.686	

## GPS Observations

This project is going to be surveyed using a RTK system so measurement were made to some of the plan points and tagged with a new point number. The GPS derived coordinates are in the 1000 range. Their coordinates are listed below and for the remainder of this topic we will refer to this coordinate system as the local system.

Point ID	Northing	Easting	Elevation	Description
1000	5523156.277	311533.446	400.536	HUB:TEMP
1001	5523168.850	311529.902	401.204	NAIL
1102	5523164.198	311507.469	400.863	NAIL
1103	5523135.089	311511.178	399.787	NAIL
1105	5523074.026	311506.904	399.243	NAIL
1106	5523046.273	311521.362	398.068	NAIL
1202	5523159.787	311530.386	400.664	HUB
1203	5523167.281	311538.852	401.104	NAIL
1204	5523165.231	311551.178	400.957	NAIL
50	5523150.433	311520.031	399.906	MH

If you do a zoom extents in the project, you will see the two coordinate systems.

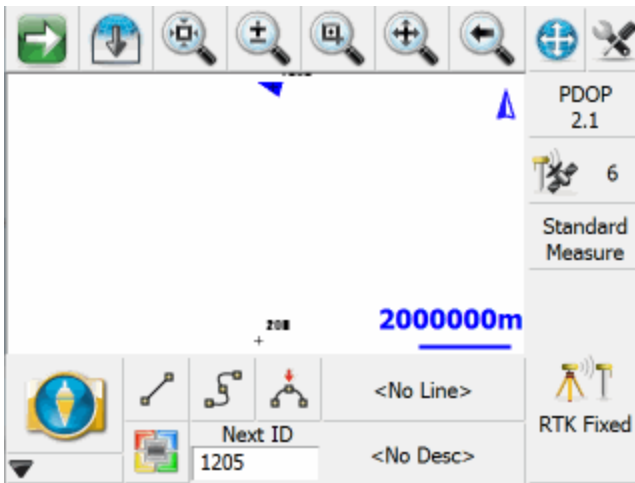

## Adjustment Analysis

The program assumes the following:

The coordinates of the plan system are considered fixed and error free.

Equal weighting is applied to all "measured" coordinates in the local system that are used to calculate the solution

Completion of the gps observations to the control stations will produce a list of point pairs with the terrestrial determined points (100-205) being termed control points and the GPS determined points (1000-1204) being termed local points. The computed transformation parameters will provide the transformation to go from measured local points to resulting plan points. The transformation utility in Field-Genius is started by going to the **Main Menu | Survey Tools | GPS Local Transformation** button.

GPS Local Transformation	
Edit Control	Calculate Scale (GPS)
Origin North	0.00'
Origin East	0.00'
Trans North	0.00'
Trans East	0.00'
Rotation	0°00'00"
Scale	1.0000000000
Trans Height	0.00'

Close

To begin computing the transformation you need to define the point pairs. You can do this by pressing the **Edit Control** button which will open the point pair's screen. Use the Add Control button to add control points to the list and to define the measured coordinate the control point should be constrained to. Note: Control points are points that reside in the plan system and are considered to be fixed.

In this example, control points 100, 101, 102, 103, 105, 106, 202, 203, and 204 were paired with the measured local points 1000, 1001, 1102, 1103, 1105, 1106, 1202, 1203, and 1204 respectively.

After all of the control station pairs have been entered, you need to compute the transformation parameters. To update the grid of the constraint pairs so it displays the transformation parameters and residuals, press the **Calc Parameters** button. You will see the transformation parameters update with new values. Instantly we can tell that there is a mistake with one of the point pairs as the scale value should be closer to a value of 1.

**GPS Local Transformation**


Origin North	5523137.446m
Origin East	311525.631m
Trans North	4971.201m
Trans East	4998.244m
Rotation	4°26'29"
Scale	0.9553438784
Trans Height	-0.135m

Upon returning to the control point list you will notice that the delta northing is large for the first point pair, so let's exclude it from the solution by turning off the green checkmarks. Highlight row 100 then press **Edit Control** and uncheck the Horizontal and Vertical options. Once you do this you will have to use the **Calc Params** button again to compute a new solution. In our example that helped tighten up the residuals.


**GPS Local Transformation**

Do not calculate scale  
 Do not calculate vertical slopes

Ctrl Pnt	Horz	Vert	dN	dE	dH
100	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	51.079	-26.406	0.970
101	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-8.295	4.947	-0.156
102	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-6.789	5.752	-0.065
103	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-5.606	3.942	-0.083
105	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-2.491	0.710	-0.011

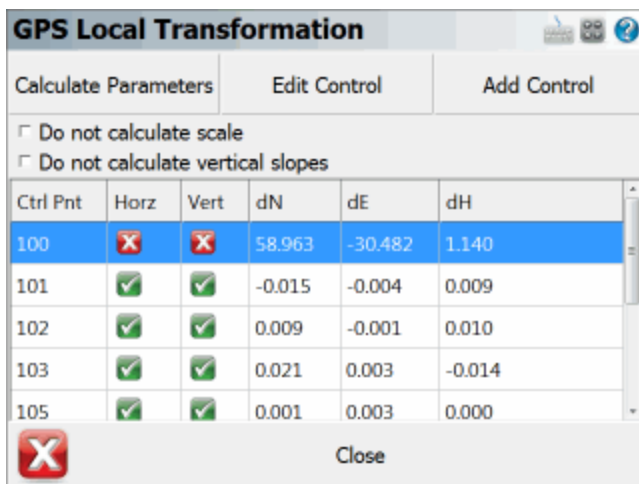

Enabling or disabling constraints in either the horizontal or vertical components for determining the transformation parameters is done with the **Edit Control** button. The last three columns of dN, dE and dH represents the residuals between the control coordinates and the transformed local (measured) coordinates in northing, easting and height.

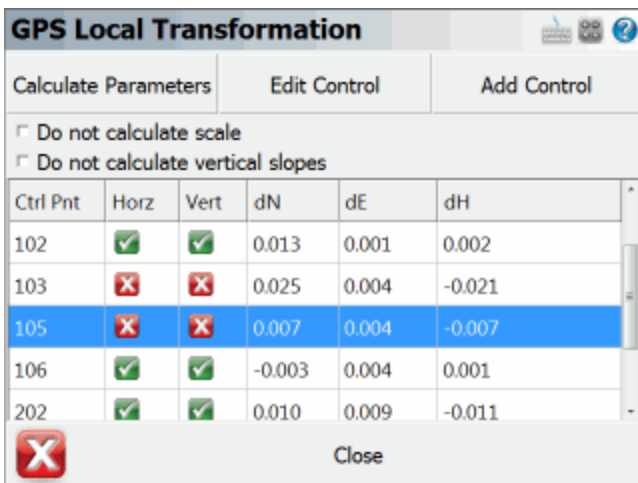


Since this network is over constrained, it is possible to reserve a couple of point pairs as check values in testing the parameters of the horizontal transformation. Pairs 103/1103 and 105/1105 have been randomly selected as test pairs and have been deselected as constraints in the horizontal and vertical component.

These two test pairs will not be used in the computation of the horizontal transformation parameters but the transformation parameters will be applied to the measured points (1103 and 1105) to produce the residuals as shown. In this case we see that the residuals are acceptable and thus it can be assumed that the determined transformation parameters are reliable.


## Adjustment Results

Upon satisfaction of the applied constraints and relevant residuals, the transformation parameters can be viewed or modified. As indicated in Figure 9, the four horizontal transformation parameters (translation in northing, translation in easting, scale and rotation) and the three vertical transformation parameters (bias, slope in X, and slope in Y) are shown in the grid list.

GPS Local Transformation	
Edit Control	Calculate Scale (GPS)    Adjust Points
Origin North	5523145.270m
Origin East	311529.858m
Trans North	4985.504m
Trans East	4999.223m
Rotation	1°00'59"
Scale	1.0000135774
Trans Height	-0.011m

 Close

GPS Local Transformation	
Edit Control	Calculate Scale (GPS)    Adjust Points
Trans North	4985.504m
Trans East	4999.223m
Rotation	1°00'59"
Scale	1.0000135774
Trans Height	-0.011m
Slope North	0.00007
Slope East	0.00006

 Close

When you press the **Calc Parameters** button it uses the point pairs that you've defined to calculate the transformation parameters. The values that are computed can be modified by the user. You can do "what if" scenarios by changing any of the values and checking the residuals on the control screen. You can always revert back to the default calculated values by pressing the **Calc Parameters** button again.

The number of horizontal transformation parameters can be decreased to three from four by fixing the scale to unity using the Do not calculate scale check box.

For the vertical component the determination of the parameters can be reduced to solving only for a vertical translation by toggling the parameter "**Do not calculate vertical slopes**". Upon enabling this, the parameters North Slope and East Slope will be automatically set to zero.

# ROADS


## Roads Manager

### Main Menu | Roads Manager

To stake an alignment you first need to define the geometry that defines the horizontal and vertical element. You can also define a template that will be used to define cross sections at specific stations along the alignment.

FieldGenius can use the following three methods to define an alignment.

1. Manual Entry – You can manually enter the data to define the alignment.
2. Import XML – You can import a LandXML file that contains your alignment data.

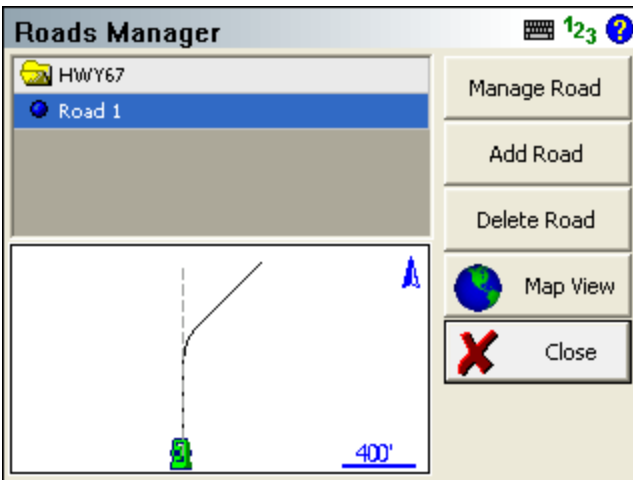

By default you will see an alignment in the list with the current project name. A project can contain multiple roads, and each road can contain the following elements.

- **Horizontal Element:** This can contain straight tangents, curves and spirals.
- **Vertical Element:** This can contain grade breaks, parabolic curves and non-symmetrical curves.
- **Templates:** Template can contain horizontal and vertical offsets, as well as widening and super elevation data.



- **XML Cross Sections:** XML cross sections define specific stations along an alignment. These sections contain horizontal, vertical and template data. XML cross sections are created using desktop software which is then imported into FieldGenius.

### Manage Road

This option is only available once you've created a road using the New Road button or imported an XML file. To input or review alignment data, press the Manage Road button to access the Road Settings screen.

If you imported a LandXML file, or manually inputted a road you can stake it by pressing this button. As a minimum you need to have the following before the stake command will continue.

- XML Cross sections
- Horizontal C/L, Vertical Profile and template.
- Horizontal C/L and DTM Surface

### Add Road

Use this button to create a new road. You can create as many roads as needed and they will be stored in an XML file that will reside in the project directory.

### Delete Road

Use this to delete a road. You first need to highlight the road you want to delete, and then press the button to remove the road from the alignment. This road will be permanently deleted and can not be undone.

### Map View

Use this button to display the map view. From this view you can use the zoom controls to zoom around your drawing so you can find important or relevant data for your alignment such as a POB point. Press the Close View button to return back to the Roads Manager.

#### [Tell me more about ...](#)

[Road Settings](#)

[Manual Entry - Alignment C/L](#)

[Manual Entry - Vertical Profile](#)

[Manual Entry - Template](#)

[LandXML Cross Sections](#)

[Alignment DTM Surface](#)

[Alignment Staking - Part 1](#)

[Alignment Staking - Part 2](#)


[Alignment Slope Staking](#)


## Manage Road


The road settings screen is used to help you create, review or modify road elements.

**Road: Road 1** ⌨️ 🖱️ ?

Start Station	<input type="text" value="0+000.000"/>	Easting	<input type="text" value="5524047.598m"/>
<input type="checkbox"/> Start Pnt	<input type="text"/>	Northing	<input type="text" value="312307.876m"/>
▼ Alignment C/L	<input type="text" value="150.000m"/>		
▼ Vertical Profile	<input type="text" value="Profile 1"/>		
▼ Template	<input type="text" value="Template 1"/>		
▼ Cross-Sections	<input type="text"/>		
▼ DTM Surface	<input type="text"/>		

 OK

 Stake Road

 Cancel

From this screen you can do any one of the following:

- Define start station
- Define start point or start coordinates
- Define the [horizontal element](#)
- Define the [vertical profile](#)
- Choose either a [template](#) or [XML cross sections](#)
- Choose an optional [DTM surface](#)

### Define Start Station

Each road has to have a starting station defined. The starting station will place the station sign automatically for you after you enter the station. Stations generally are measured in 100 foot intervals when working in feet, and measured in 1000 metre intervals when in metric projects.

There are three station format settings that you can choose from: 0+000.000, 0+00.00, or 0.000. You can change this by going to the Main Menu | Settings | [Options](#) or by pressing the **Alignment C/L** button and selecting **Settings**.

**Note:** Positive or negative start stations are valid.

## Define Start Point or Coordinates

Every road that you create needs to have a starting location defined. You have two options available to define this location.

### Start ID

If you have a point stored in your project's database that is also the start point for the alignment, you can use this point as the start location. Simply enter the point number in the **Start Pnt** field, or use the point chooser to select it from the map. Once you've selected the point, the point's Northing and Easting values will be displayed. At this point, the elevation is not needed because the profile is what defines the elevations along the road.

When you use the point chooser or enter a point id, all that will happen is the coordinates for the point are written to the alignment file. The next time you open the alignment file, you will no longer see the point ID that was used, you will only see the coordinate values.

### Enter Coordinates

If you don't have a point that defines the start location, you can define it by entering a Northing and Easting value. You have to leave Start ID field blank if you want to enter coordinates.

## Manual Entry - Alignment C/L

**Main Menu | Roads Manager | Edit Road | Alignment C/L**


To define the centerline data press the **Alignment C/L** button which will open a menu. On this menu select **Edit** to open the C/L Editor.

If you're entering a new road the C/L Editor will not have any elements listed. In the example shown below there are three elements defined; 2 tangents and 1 curve element. In the element list, it will always display the length of the element and its end station. Furthermore, all elements that are defined will be displayed in the Map so you can visually confirm that the geometry is correct.

### Delete C/L Alignment

You can not delete a C/L Alignment once it has been created.

Alignment: Road 1 <span style="float: right;">123 ?</span>		
Element	Length	End Station
<input checked="" type="radio"/> Line	500.5000	105+00.500
<input checked="" type="radio"/> Curve	157.0796	106+57.580
<input checked="" type="radio"/> Line	933.2410	115+90.821

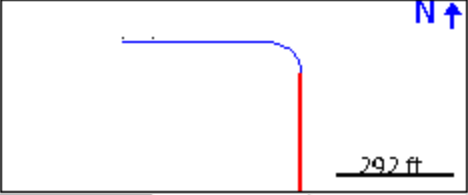

The C/L Editor can display a view of the map along the bottom. This view can be toggled on and off by pressing the **Show Map/Hide Map** button.

If you would like to zoom into or pan around the map, press the **Map View** button which will display zoom and pan controls. Press the Close View button when you want to return the C/L Editor.

## Adding an Element

To add an element to a road you need to use the **Add Element** button. Once you press this you will see 5 options appear that will help you define the different elements supported by FieldGenius.

- Line (Tangent)
- Curve
- Spiral
- Spiral-Curve-Spiral
- Chain

**Tip:** When you're prompted for a distance or direction, you can always use the [distance](#) and [direction](#) recall features just like you would for COGO calculations.

## Line (Tangent) Element

In the Line Element editor, gray fields indicate fields that can not be edited. All other non gray fields can be edited by the user. When you enter your known values and have confirmed their correctness, press OK to save these values, or press Cancel to exit without saving.

A tangent is defined by a direction and length. There are four ways you can define the tangent and they are explained in further detail below.

Line [Tangent] Editor	
Start Station	100+00.000
Start Pt ID	
Start Northing	4980.000'
Start Easting	5000.000'
Direction	S90°00'00"E
Length	500.500'
End Northing	4980.000'
End Easting	5500.500'
End Station	105+00.500

OK
  Cancel

### Direction and Length

If you know these two values, you can enter them in their respective fields. You will see that the end coordinates and end station will be computed automatically.

### End Nothing and End Easting.

If you know the coordinates for the end of the tangent, you can enter them in the End Northing and End Easting fields. Once you've done this, the direction, length and end station fields will be updated automatically.

### Direction and End Station



If you know the direction and end station of the tangent, enter these known values in their respective fields. Once you've done this, the length and end coordinate fields will be updated automatically.

### End Point ID

If you have a point in the project database that defines the end of the tangent, you can enter the point number in the ID field, or use the point chooser to select it from the map. Once you've done this, the direction, length, end coordinates and end station fields will automatically be updated.

## **Curve Element**

When you select this option you will see the curve editor with most of the fields being empty.

Curve Editor	
Radius - Arc Length	
Arc Direction	Right
Arc Length	0.000'
Arc Radius	0.000'
Arc Chord Length	
Arc Chord Bear	
Arc Delta Angle	
Deg of Curve [arc]	
Deg of Curve [chord]	
Tangent Length	
 OK	 Cancel

### Define Known Data

You first have to define what known information you want to use to compute the curve. If you click on the drop down list you will see a list of all the options that can be used to compute the unknown values.

### Enter the Known Data

Once you define the known data format, you will see grayed out fields which indicate they can't be edited. White areas indicate fields that can be edited, and these fields will match what you defined in the first step.

1. You always have to define the direction for the curve, either right or left.
2. Enter your know values.
3. You don't have to specify the PC point, the function will assume that you're beginning at the end of the last leg.
4. A PC Tangent direction will automatically be computed based on the previous tangent. You can always over ride this value if you need to define a non-tangent curve.
5. Press **OK** to save your inputted values, **Cancel** to exit without saving.

### Spiral Element

When you select this option your will see the spiral editor. This will help you define a spiral segment for your alignment.

Spiral Editor	
Spiral Direction	Right
Radius Start	Infinite
Radius End	0.000'
Spiral Length	0.000'
Spiral Angle	
Starting Station	105+00.500
Starting Northing	4980.000'
Starting Easting	5500.500'
Starting Tangent	S90°00'00"E
Ending Station	105+00.500

OK Cancel

### Define Known Data

To solve for this type of element you need to know:

- Spiral Direction
- End Radius
- Spiral Length

In the editor, gray fields indicate fields that can not be edited. All other non gray fields can be edited by the user.

Press **OK** to save your inputted values, **Cancel** to exit without saving.

### Spiral – Curve – Spiral

When you select this option you will see the Spiral – Curve – Spiral editor.

Spiral-Curve-Spiral Editor	
Curve Direction	Right
Spiral In Length	0.000'
Spiral Out Length	0.000'
Curve Radius	0.000'
Curve Length	0.000'
TS Station	109+86.371
TS Northing	4579.248'
TS Easting	5650.000'
TS Tangent	180°00'00"
SC Station	109+86.371
<input type="checkbox"/> OK <input checked="" type="checkbox"/> Cancel	

### Define Known Data

To solve for this type of element you need to know:

- Spiral Direction
- Spiral In Length
- Spiral Out Length
- Curve Radius
- Curve Length

In the editor, gray fields indicate fields that can not be edited. All other non gray fields can be edited by the user.

Press **OK** to save your inputted values, **Cancel** to exit without saving.

### Chain

Use this option if you want to select points or figures in your drawing to define the centerline and the profile (optional).

When you select the **Add Figure** option you will be taken to the map screen where you can select a figure.

You can also add points individually by using the **Add Points(s)** button.

Press **OK** to save the chain, press **Cancel** to exit without saving.

#### Note:



You should only select Tangent sections for a Chain. If you Add a Figure which contains arcs or splines, the chain will straight-line any curved segments, so the resulting Chain length and stationing will not be the same as the original Figure.

### Chain Element

When you return to the road editor you will see that a chain element has been created. Chain elements differ from regular elements in that even though a chain can be made up of line and curve elements, it will appear in the list as a chain.

Alignment: Road 1 123 ?

Element	Length	End Station
Chain	246.2220	102+46.222

OK
Hide Map
Map View
Cancel

Add Element
Delete Element
Edit Element

### Auto Profile

After you press OK, you will be asked if you would like to create a vertical profile based on the chain point's elevation. If you select Yes, then you will be prompted for a Profile Name.

### Vertical Profile

As mentioned above, a vertical profile can optionally be created automatically. If this option is chosen by the user, PVI points will be created for the profile. Each PVI point represents the points that make up the chain.

Profile: Profile 1 123 ?

Elem	Station	Elev	Slope %
PVI	0+00.000	100.000'	
PVI	2+27.600	110.000'	4.3937
PVI	2+66.540	112.546'	6.5383
PVI	3+04.130	115.000'	6.5283

## Manual Entry - Vertical Profile

[Main Menu](#) | [Roads Manager](#) | [Edit Road](#) | [Vertical Profile](#)

To create your vertical profile for your alignment, press the **Vertical Profile** button. When you do this you will see two options: New and Edit. Press **New** to create a new profile. If you want to edit an existing profile, then you need to select the profile, and then press the **Edit** button.

### Delete Profile

You can not delete a profile once it is created.

### Profile Editor Overview

When you create a new profile you will see the profile editor. The **Add Element** button is the command center for you profiles and it allows you to add profile elements:

- PVI
- Parabolic Curve
- Unsymmetric Parabolic Curve

Once created, you can always edit and delete each element.

### Station Check

Use this button to calculate an elevation along your vertical profile at the station you define. In the example below you will see the station entered was 3+50, and the computed elevation is 137.50.

The station check button can be used with all vertical element types.

Profile: Profile 1 123 ?

Elem	Station	Elev	Slope %
PVI	1+00.000	100.000'	
PVI	3+00.000	150.000'	25.0000
PVI	4+00.000	125.000'	-25.0000
PVI	5+00.000	130.000'	5.0000

Check Station:  Add Element

Elevation:  Delete


OK  
   
   
  Cancel

### High / Low Display

When you use the High / Low button it will compute the high and low points for your vertical profile.

Profile: Profile 1 123 ?

Extremum	Station	Elev
Low	1+00.000	100.000'
High	3+00.000	150.000'
Low	4+00.000	125.000'
High	5+00.000	130.000'

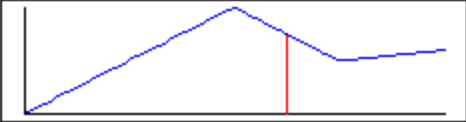


OK  
   
   
  Cancel

In the example above you can see that the high and low points are listed in the grid. This option can be used to display the high / low information for all vertical profile elements.

### PVI Element

PVI elements are essentially straight grade segments that change direction at grade breaks. Each grade break (PVI) has to be defined by a station and elevation.

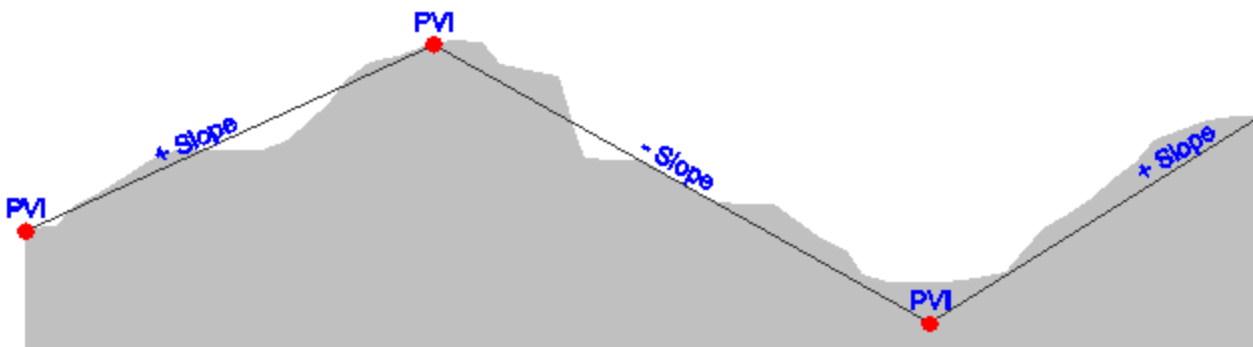

When you select to add a PVI element you will have two fields available where the station and the elevation at that station can be entered. Once you have a minimum of two PVI points, the slope of the line will be displayed.

Profile: Profile 1 123 ?

Elem	Station	Elev	Slope %
PVI	10+00.000	100.000'	
PVI	30+00.000	150.000'	2.5000
PVI	40+00.000	125.000'	-2.5000
PVI	50+00.000	130.000'	0.5000

< [Progress Bar] >

▼ Add Element

Delete

✓ OK
Sta Check
High/Low
✗ Cancel

## Parabolic Curve Element

This option allows you to enter an equal tangent vertical parabolic curve. At a minimum you need to know the **PVI Station**, **PVI Elevation**, and **Curve Length** for your vertical curve. Furthermore if this is a new profile you need to define a PVI point before the vertical curve, as well as define a PVI, Parabolic, or Unsymmetrical Parabolic curve after the vertical curve. Elements are needed before and after the vertical curve element so the profile editor can calculate the tangents.

Profile: Profile 1				123 ?	
Elem	Station	Elev	Slope %	Length	Len Out
PVI	0+00.000	125.000'			
Para	5+00.000	150.000'	5.0000	250.000'	
PVI	8+00.000	130.000'	-6.6667		

The graph displays a blue parabolic curve representing a vertical curve. A vertical red line is drawn at station 5+00.000, indicating the station check point. The curve starts at a PVI at station 0+00.000 and ends at another PVI at station 8+00.000.

Buttons: Add Element, Delete, OK, Sta Check, High/Low, Cancel

In the example you will see that a PVI was established for the beginning of the vertical profile. Then the PVI for the vertical curve was defined, as well as another parabolic curve. You will also notice that if you click a Para element, its location will be displayed in the display area.

**Station Check**


You can also do a station check on a parabolic vertical curve. Simply press the Sta Check button and enter the station you would like to compute an elevation for.

**High / Low Calculation**

With all vertical curves, the high or low point can be computed. For example, if we use the High/Low button to compute this information you will see the high point is at station 4+82.143 at an elevation of 146.429'.

Profile: Profile 1 123 ?

Extremum	Station	Elev
Low	0+00.000	125.000'
High	4+82.143	146.429'
Low	8+00.000	130.000'

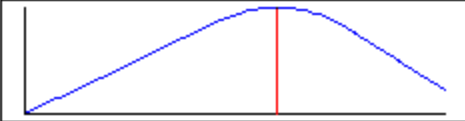


✓ OK
Sta Check
High/Low
✗ Cancel

## Unsymmetrical Parabolic Curve Element

This option allows you to enter an unequal tangent vertical parabolic curve. As a minimum you need to know the **PVI Station**, **PVI Elevation**, **Curve Length In**, and **Curve Length Out** for your vertical curve. Furthermore if this is a new profile you need to define a PVI point before the vertical curve, as well as define a PVI, Parabolic, or Unsymmetrical Parabolic curve after the vertical curve. Elements are needed before and after the vertical curve element so the profile editor can calculate the tangents.

Profile: Profile 1 123 ?

Elem	Station	Elev	Slope %	Length	Len Out
PVI	80+00.000	757.240'			
Unsym	87+00.000	743.240'	-2.0000	400.00'	600.00'
PVI	100+00....	764.040'	1.6000		

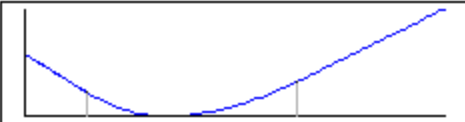

✓ OK
Sta Check
High/Low
✗ Cancel

In the example you will see that a PVI was established for the beginning of the vertical profile. Then the PVI for the unsymmetrical vertical curve was defined, as well as another PVI element. You will also notice that if you click an Unsym element, its location will be displayed in the display area.

### Station Check

You can also do a station check on an unsymmetrical vertical curve. Simply press the Sta Check button and enter the station you would like to compute an elevation for.

### High / Low Calculation

With all vertical curves, the high or low point can be computed. For example, if we use the High/Low button to compute this information you will see the low point is at station 86+70.370 at an elevation of 747.536'.

The screenshot shows a software window titled "Profile: Profile 1" with a green "123" and a question mark icon in the top right corner. Below the title is a table with three columns: "Extremum", "Station", and "Elev". The table contains three rows of data. The second row, representing the low point, is highlighted in blue. Below the table is a graph showing a parabolic curve. To the right of the graph are two buttons: "Add Element" and "Delete". At the bottom of the window is a row of four buttons: "OK" (with a green checkmark icon), "Sta Check", "High/Low" (highlighted in yellow), and "Cancel" (with a red X icon).

Extremum	Station	Elev
High	80+00.000	757.240'
Low	86+70.370	747.536'
High	100+00.000	764.040'

## Manual Entry - Template

Main Menu | Roads Manager | Edit Road | Template

You can define templates that will be used to create a cross section along your alignment. You can create new templates, and edit existing ones you've created. Each template can have unlimited zones right or left of the centerline. Each template can contain zone modifiers that can help you define sections that need widening or superelevation.

When you create a new template you will be asked for a template name. After you enter the name you will see the Template editor.

Template: Template 2 123 ?

Zone View  View Zone Modifiers

Left  Right


Station

Left Zones	Width	Vert Type	Slope

OK Commands Section View Cancel

## Add Zones

Many software programs refer to templates as having segments, in FieldGenius they are referred to as zones. Zones contain horizontal and vertical components, and these zones are located on the right or left of the template centerline.

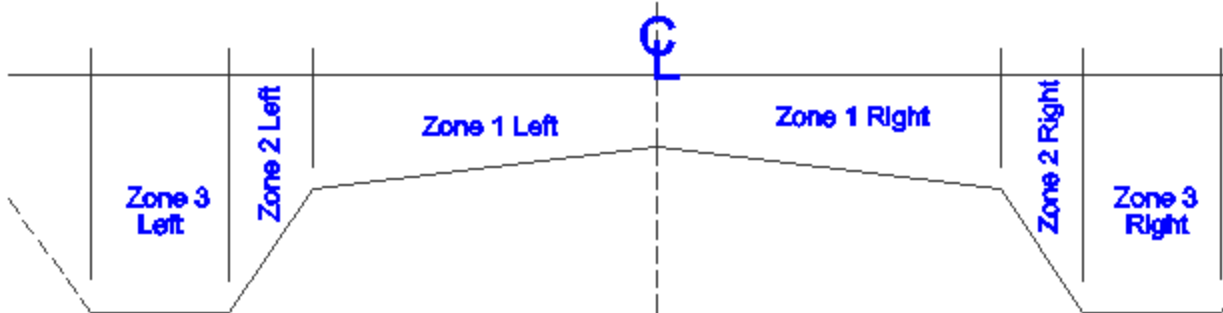

You first need to define what side of the centerline your zone belongs to: **Left** or **Right**.

Once you do that you can choose the **Add Zone** command from the **Commands** button.

When you select the add zone command you will see your first zone item appear in the grid area. You need to enter a horizontal width distance and then specify how you will be defining the slope for the zone. The slope for the zone can be defined by entering a slope value (%) or a vertical distance also referred to as a delta Z. In the example shown below you will see that three zones have been defined for the left side of the template.

By default all new zones are attached to the zone found furthest from the centerline.



**Template: Surface 1** 123 ?

Zone View  View Zone Modifiers

Left  Right

Station

Left Zones	Width	Vert Type	Slope	Vert Dist
zone1	12.000'	Vert D... ▾	-2.500%	-0.30'
zone2	3.000'	Vert D... ▾	-83.333%	-2.50'
zone3	5.000'	Slope ▾	0.000%	0.00'

## Delete Zones

Any zone that is highlighted in the zone list can be deleted by using the **Delete Zone** command. There is no undo, so be careful when you use this command.

## Clear All

At any time, you can clear the zone list so you can start over. To do this use the **Clear Zone** command. There is no undo, so be careful when you use this command.

## Mirror Zones

There are two variations of this command. You can mirror your zones from left to right, or right to left. In our example from above, when the **Mirror Left to Right** command is used, the zones are duplicated on the right side of the template.


**Template: Surface 1** 123 ?

Zone View  View Zone Modifiers

Left  Right

Station

Left Zones	Width	Vert Type	Slope
zone1	12.000'	Vert D...	-2.500%
zone2	3.000'	Vert D	-83.333%



OK
  Commands
  Section View
  Cancel

**Note:** Depending on what side you're displaying, you will only see the zones listed for that side of the template. To see the zones for the other side you need to change to the opposite side using the Left Zone and Right Zone buttons.

## Move Zone

Zones can be shifted around by moving them in or out from the centerline. To do this, use the **Move In** and **Move Out** commands.

## View Zone Modifiers



The template you define is a typical cross section for the entire alignment. You can define changes to the template at specific stations and these changes are referred to as **Zone Modifiers**. Zone modifiers modify the typical template to allow for deviations such as road widening and super elevations.

This tool is meant to be used when you've defined zone modifiers. Please see the advanced template editing for more information.

## Advanced Zone Edit

Advanced editing of your zones is available to give you even more power and flexibility. Being able to modify the zones at specific stations, allow you to create template transitions, widenings and super-elevation transitions.

You first need to highlight the zone you want to modify in the zone list. Once you do that press the **Advanced Zone Edit...** command. This will then display the zone editor for the zone you've selected, in this example it is zone 3.

Zone : zone3		Help
Slopes (0)	Cut/Fill (0)	Widths (0)
Zone Name	zone3	
Zone Priority	3000	
Start Station	5+00.00	
Start Width	5.00'	
Start Slope	0.000%	
Start DeltaZ	0.00'	
Add	Clear	Delete
 OK	 Cancel	

By default when you create a zone, the width, delta elevation and slope are used from the beginning of the zone to the end. The start and end stations are determined by start and end station defined in the horizontal alignment.

### Slopes Modifier

When you use this button you will see the slope modifier page. On this page you can define different modifiers that change the slope or delta Z value for the zone.

### Cut/Fill Modifier

When you use this button you will see the cut/fill modifier page. On this page you can define different modifiers that change the cut / fill value for the zone.

**Note: This function is currently not implemented fully and is reserved for a future version. Cut/Fill Slope values from the hinge point can be set in the [Options](#) screen.**

### Widths Modifier


When you use this button you will see the widths modifier page. On this page you can define different modifiers that change the width value for the zone.

## Advanced Template Editing


### Advanced Zone Edit – Widening Example

In this example we will use the template example from the Template section. We want to widen the template at a specific station and change the grade of the template.

The original zone 3 has a constant elevation and width from beginning to end, but we want to modify it to include a section that has a slope and width difference.

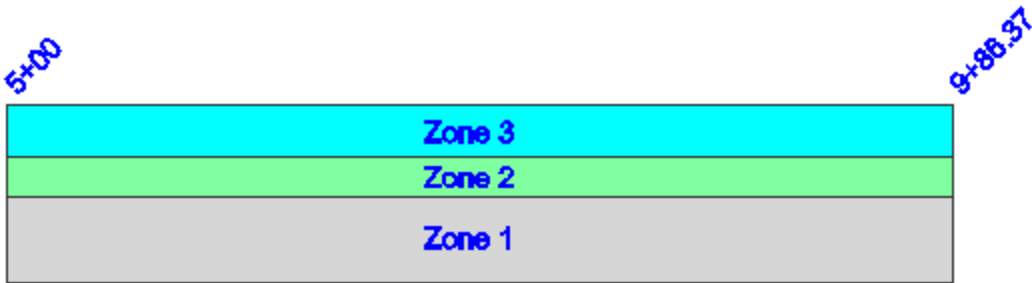

The new zone 3 will look like the following example. From station 6+00 to 7+00 the width of the zone transitions from a width of 5' to 10' and the elevation transitions from 0 down to -2'. Then from station 8+00 to 9+00 it transitions back to the normal width and grade.

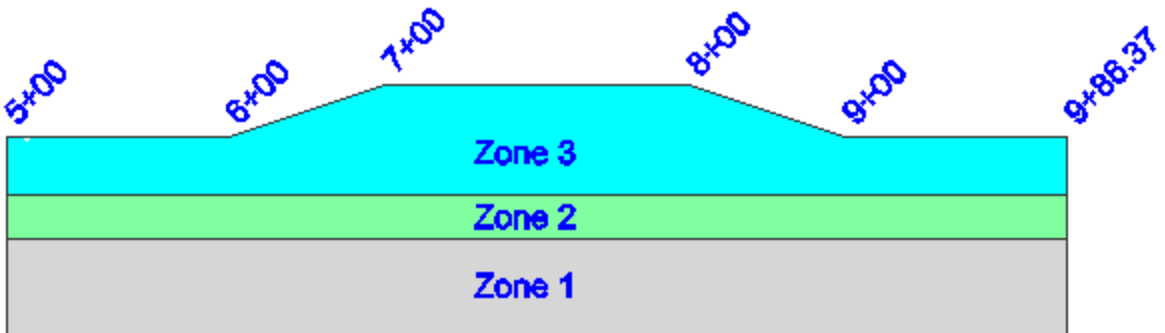

## Slope Modifier

First you need to highlight the zone that you want to add modifiers to.

Then select the **Advanced Zone Edit** command from the commands button. This will open the zone modifier screen for the zone. In our example, we'll be modifying zone 3 on the left side of the template.

To add slope modifiers, press the **Slopes (#)** button. From here you can press the Add button to add modifiers for the zone. The following table shows the information that would have been inputted.

You have to define if you are entering a relative vertical change, or want FieldGenius to compute it for you using a slope percent and horizontal distance for the zone. You can do this by selecting the Vert Type and set it to Vertical Distance or Slope.

Start Station	Start Slope	Start Delta Z	End Station	End Slope	End Delta Z
6+00	0.0%	0.00	7+00	-20.0%	-2.00
7+00	-20.0%	-2.00	8+00	-20.0%	-2.00
8+00	-20.0%	-2.00	9+00	0.0%	0.00

Press **Ok** to save the modifiers.

## Widths Modifier

First you need to highlight the zone that you want to add modifiers to.

Then select the **Advanced Zone Edit** command from the commands button. This will open the zone modifier screen for the zone. In our example, we'll be modifying zone 3 on the left side of the template.

To add width modifiers, press the **Widths (#)** button. From here you can press the Add button to add modifiers for the zone. The following table shows the information that would have been inputted.

**Zone: Zone 3** 123 ?

Slopes (0)	Cut/Fill (0)	Widths (3)
------------	--------------	------------

Start Sta...	Start Wi...	End Stat...	End Width
6+00.00	5.00'	7+00.00	10.00'
7+00.00	10.00'	8+00.00	10.00'
8+00.00	10.00'	9+00.00	5.00'

Add	Clear	Delete
-----	-------	--------

<b>OK</b>	<b>Cancel</b>
-----------	---------------

Press **Ok** to save the modifiers.

## Checking Width Modifiers

At any time from the Template editor you can confirm that your modifiers are correct by using the station slider.

If we use our example from above, and want to preview the template at station 6+00, you can do so by entering it in the station field.

**Template: Surface 1** 123 ?

Zone View  View Zone Modifiers

Left  Right

Station 6+00.00

Left Zones	Width	Vert Type	Slope
Zone 1	12.00'	Vert Dist	-2.500%
Zone 2	3.00'	Vert Dist	-83.333%

OK Commands Section View Cancel

If we check station 7+00 you will see that the zone now extends further and drops down.

**Template: Surface 1** 123 ?

Zone View  View Zone Modifiers

Left  Right

Station 7+00.00


Left Zones	Width	Vert Type	Slope
Zone 1	12.00'	Vert Dist	-2.500%
Zone 2	3.00'	Vert Dist	-83.333%

OK Commands Section View Cancel

## Advanced Zone Editing – Superelevation

In this example we will use the template example from the Template section. We want to add superelevation data to our template so it can be staked in the field. FieldGenius can not calculate superelevations; you need to know what delta z or slope the zone should be transitioning for your superelevation section.

To do this we will be adding slope modifiers to Zone 1 L and Zone 1 R.

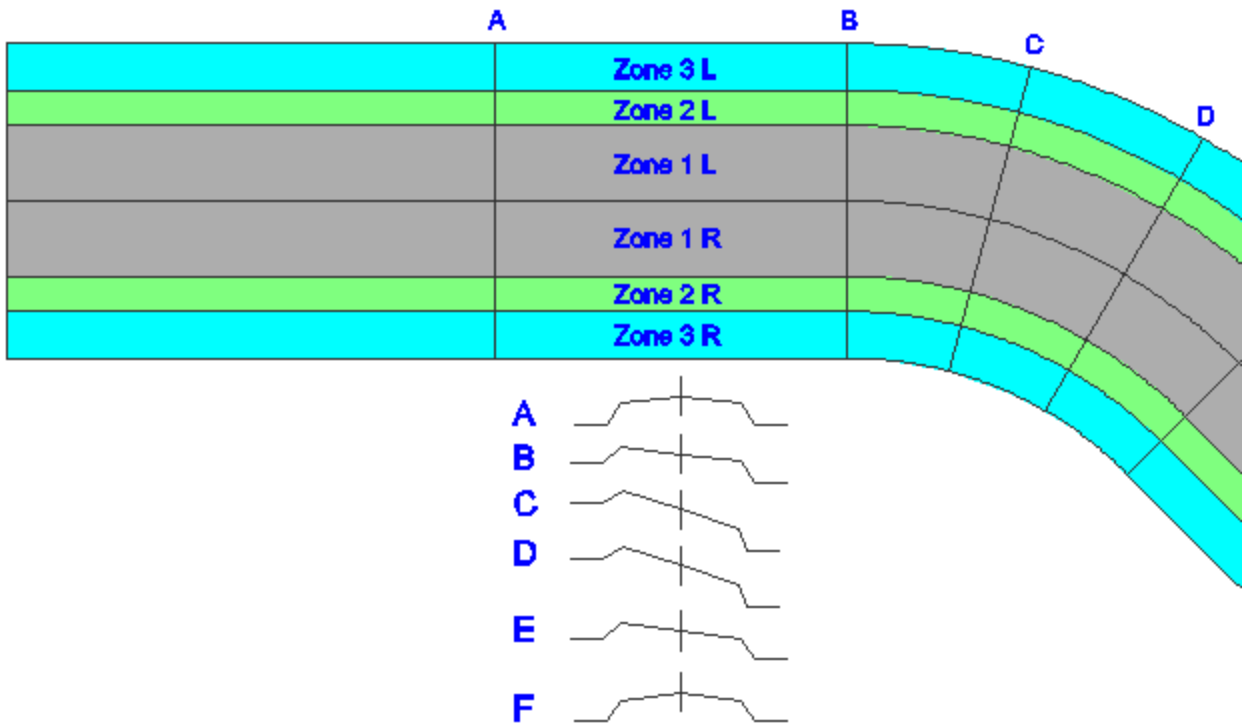

Labels A to F show the stations where we will be adding modifiers to modify the template so the road transitions from normal crown to full superelevation and back. **Note:** In this example the superelevation is exaggerated for ease of viewing.

## Slope Modifier

First you need to highlight the zone that you want to add modifiers to.

Then select the **Advanced Zone Edit** command from the commands button. This will open the zone modifier screen for the zone. In our example, we'll be modifying zone 3 on the left side of the template.

To add slope modifiers, press the **Slopes (#)** button. From here you can press the Add button to add modifiers for the zone. The following table shows the information that would have been inputted.

**Left Side Zone 1**

Start Station	Start Slope	Start Delta Z	End Station	End Slope	End Delta Z
900	-6.7%	-0.80	1000	6.7%	0.80
1000	-13.3%	-1.60	1078.54	13.3%	1.60
1078.54	-26.7%	-3.20	1157.08	13.3%	1.60
1157.08	-26.7%	-3.20	1235.62	6.7%	0.80
1235.62	-13.3%	-1.60	1300	-6.7%	-0.80

**Right Side Zone 1**

Start Station	Start Slope	Start Delta Z	End Station	End Slope	End Delta Z
900	-6.7%	-0.80	1000	-13.3%	-1.60
1000	-13.3%	-1.60	1078.54	-26.7%	-3.20
1078.54	-26.7%	-3.20	1157.08	-26.7%	-3.20
1157.08	-26.7%	-3.20	1235.62	-13.3%	-1.60
1235.62	-13.3%	-1.60	1300	-6.7%	-0.80

Press **Ok** to save the modifiers.

## Checking Width Modifiers

At any time from the Template editor you can confirm that your modifiers are correct by using the station slider.

If we use our example from above, and want to preview the template at station 9+00, you can do so by entering it in the station field. You will see at this station we have a typical road cross section.

**Template: Surface 1** 123 ?

Zone View  View Zone Modifiers

Left  Right


Station

Right Zo...	Width	Vert Type	Slope
<input checked="" type="radio"/> Zone 1	12.00'	Vert Dist	-6.667%
<input type="radio"/> Zone 2	3.00'	Vert Dist	-83.333%

The diagram shows a cross-section of a road with a central crown and sloping sides. A blue line represents the surface profile, with a red dot indicating the current station position at 9+00.00.

If we check station 10+78.54 you will see that we are at the full superelevation section.



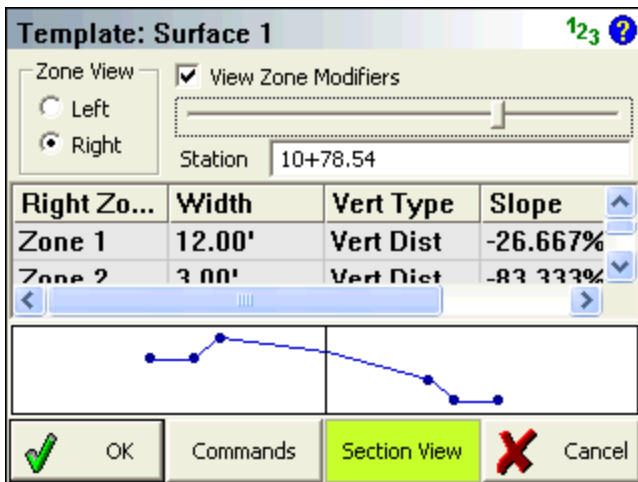


## LandXML Cross Sections

[Main Menu](#) | [Roads Manager](#) | [Edit Road](#) | [Cross-Sections](#)

LandXML cross sections are created with desktop software such as Eagle Point, Caice, LDD and many others.

If you import a LandXML file that has cross sections in it, you can immediately go to the Roads Manager and select the road to stake. You will see the roads in the Cross-Sections list. Choose one, then press the Stake Roads button you will see the stake Alignment screen.

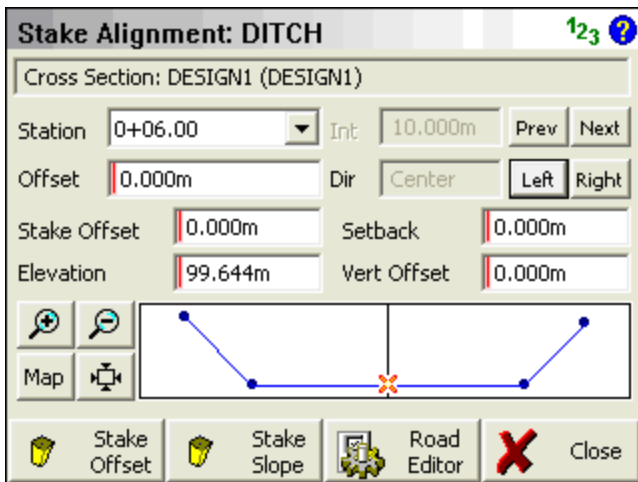

Please see the [Stake Alignment](#) section for more information about using this command.

## Alignment DTM Surface

**Main Menu | Roads Manager | Edit Road | DTM Surface**

If you've imported a surface file, either through the [QSB or LandXML importer](#), you can stake to the surface along a defined horizontal alignment.

All you need to do is define the alignment using the **Alignment C/L** button then select a surface from the surface drop down list found next to the **DTM Surface** button.

When you press the **Stake Road** button you will see the alignment screen. In the area where you would normally see your cross section or template, you will now see the surface at the stake station you have defined.

If you enter a Design Offset, it will compute an elevation based on the surface.

**Stake Alignment: Road 1** 123 ?

Template:

Station  Int

Offset  Dir

Stake Offset  Setback

Elevation  Vert Offset

## Alignment Staking - Part 1

There are two things that have to happen before you can stake a road.

1. You have to create an alignment, vertical profile and a template. Or...
2. Import a LandXML file and use XML cross sections to stake from.

## Stake from Alignment, Profile and Template.

If you've taken the time to define your alignment, you need to select the vertical profile and template that you want to stake from in the road settings screen.

**Road: Road 1** 123 ?

Start Station  Northing

Start Pnt  Easting

▼ Alignment C/L

▼ Vertical Profile

▼ Template

▼ Cross-Sections

▼ DTM Surface

OK Stake Road Cancel

Use the **Stake Road** button to start the road staking which will display the Stake Alignment screen.

**Stake Alignment: Road 1** 123 ?

Template: Template 1

Station  Int

Offset  Dir

Stake Offset  Setback

Elevation  Vert Offset

Stake Offset Stake Slope Road Editor Close

## Station and Station Interval

If you enter a station interval, it will move forward and back along the alignment by this amount when you use the **Prev** and **Next** buttons. This interval will start from the station that is currently entered in the Stake Station field.


## Stake Station


You can also manually enter the station you would like to stake by entering it in the Station field.

## Design Offsets

### **Move Along Template**

You can move along the template by using the **Left** and **Right** buttons. As you do this the offset from the centerline will be displayed in the Offset field. Furthermore you will see what side of the template you're on by looking at the direction field. You will also note in the template preview, the "x" visually marks the design offset.

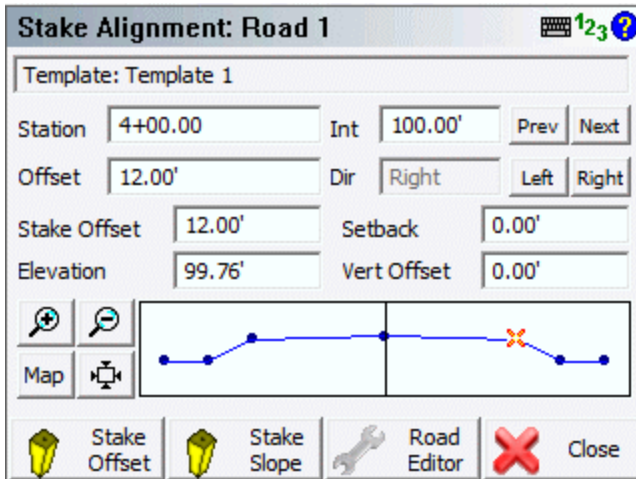

**Stake Alignment: Road 1**  123 ?





Template: Template 1





Station  Int

Offset  Dir

Stake Offset  Setback

Elevation  Vert Offset

 Stake Offset  Stake Slope  Road Editor  Close

### **Define an Offset**

You can define your own offset to stake by entering the value in the Offset field. To enter a Left offset, use a negative value.

**Stake Alignment: Road 1** 123 ?

Template: Template 1

Station  Int

Offset  Dir

Stake Offset  Setback

Elevation  Vert Offset

## Stake Offset and Setback

### Stake Offset

By default the Stake Offset will equal the Offset value. The stake offset is designed to help you enter the offset that you want to stake your point at. Sometimes, the contractor asks you to stake a point at a certain distance from the centerline, this will help you do that.

### Setback

The setback and stake offset fields work in conjunction with one another. You will note that as you enter a stake offset, a value is computed in the setback field. This value is computed by subtracting the Stake Offset from the Design Offset.

If you know that the offset or setback for a template point is to be a specific value, enter the value in the setback field; the stake offset field will update automatically.

**Stake Alignment: Road 1** 123 ?








Template: Template 1

Station: 4+00.00    Int: 100.00'    Prev    Next

Offset: 12.00'    Dir: Right    Left    Right

Stake Offset: 15.00'    Setback: 3.00'

Elevation: 99.76'    Vert Offset: 0.00'

Map       

Stake Offset    Stake Slope    Road Editor    Close

You will note that when a setback or stake offset is defined, you will see an orange circle in the preview screen. This circle indicates the location of the setback.

**Note:** If you want to make sure that you're staking nothing but design points along the template, then make sure the Setback field is equal to 0.0.

## Elevation and Vertical Offset

### Elevation

The field will show you the computed elevation on the template at the design offset specified. This value can be changed to allow you stake a different elevation.

### Vertical Offset

This field works in conjunction with the elevation field. If the user enters a different elevation than the one that was computed on the template, the difference between the elevations is shown in the vertical offset field.

If you know what the vertical offset is for the point you're staking on the template, you can enter it in this field. You will see the elevation for the point update to reflect the offset you defined.

**Stake Alignment: Road 1**

Template: Template 1

Station: 4+00.00 Int: 100.00' Prev Next

Offset: 12.00' Dir: Right Left Right

Stake Offset: 12.00' Setback: 0.00'

Elevation: 97.76' Vert Offset: -2.00'

Map

Stake Offset Stake Slope Road Editor Close

In the template preview screen you will see an orange circle. This circle indicates the location of the vertical offset point that will be staked.

**Note:** If you want to make sure that you're staking nothing but design points along the template, then make sure the Setback field is equal to 0.0.

### Template Preview

You can zoom into your template using the zoom controls. You can also pan the template by tapping on it and dragging it on the screen.

Use the Map button to display the location of the template along your alignment. This will be displayed in the map view window.

### Stake Offset

Once you've defined that point you want to stake, you can select the **Stake Offset** button to start the staking process. When you press this button you will see the staking toolbar. For an explanation of the staking toolbar and alignment staking, please refer to the next section, [Alignment Staking - Part 2](#).

### Stake Slope

This is the **Stake Slope** toggle. Normally you will slope stake from the hinge point on the template, but it is totally up to you. The slope staking feature can be used from any point on the template.

### Road Settings

Press this button to return to the road settings screen.

## Stake from LandXML Cross Sections

To stake cross sections from a LandXML file you first need to import it using the LandXML importer found in the Import Menu.

You can then select the alignment from the map screen to open the Roads Manager, or you can access it from the **Roads Menu**. In this menu you can select the alignment that has the cross sections, and then press the **Road Settings** button.


You then have to select the cross section that you want to use by selecting it in the cross sections field.

When you press the **Stake Road** button you will see the Stake Alignment screen which is described in detail above.


## Alignment Offset Staking

Continued from [Alignment Staking...](#)




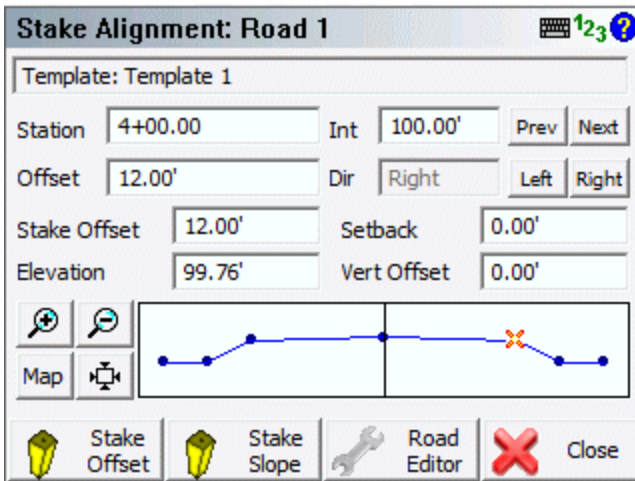

From the stake alignment screen, when you press the **Stake Offset** button if you are staking with a robotic instrument or GPS you will immediately see the staking toolbar. If you are staking with a conventional instrument you will see the turn-to information first, directing you to the design point.

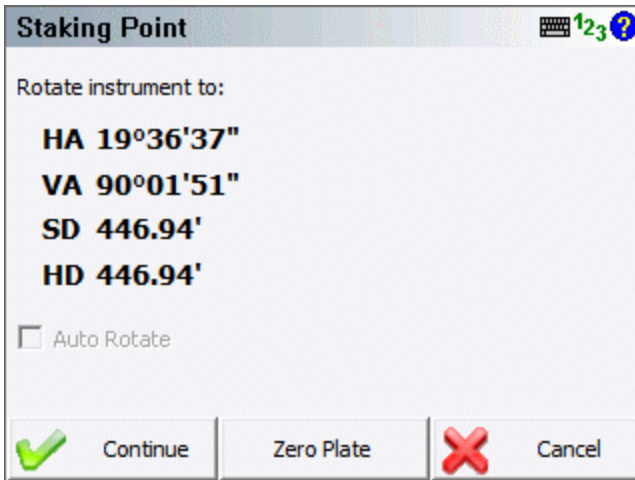

The alignment offset staking process is very similar to normal [point staking](#). What is different is you will see the station/offset information about where the prism is in relation to the alignment and more importantly, to the point you're staking.

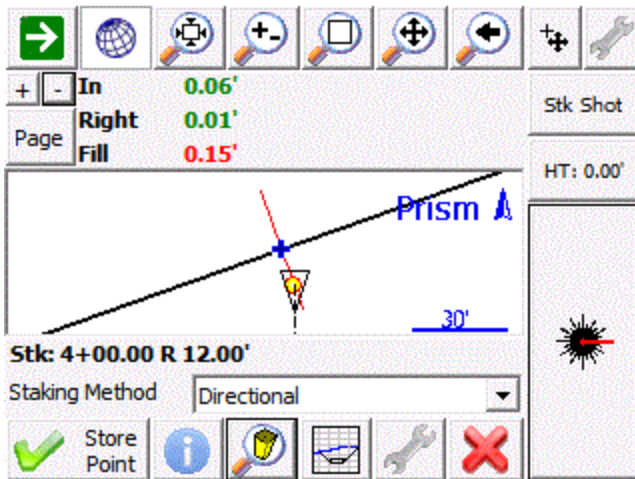

### Staking Method

**Turn an Angle:** You will see the horizontal angles to the design point and to your actual measurement. This is useful for getting online (left/right) with a conventional total station.

**Directional:** You will see the move distances (In/Out/Left/Right or N/S/E/W, as well as Cut/Fill) guiding you from the actual measurement to the design point.

**Radial:** You will see a direction and distance guiding you from the actual measurement to the design point.

**Stationing - Absolute:** You will see the offset of the actual measurement along the alignment.


**Stationing - Relative:** You will see the move distances guiding you along the alignment from the actual measurement to the design point.

### Staking Information

The **station/offset of the design point** is indicated directly on the staking toolbar, and also in the Staking Information screen which you can access by pressing the Info button in the staking toolbar.

The **station/offset of the actual measurement** is available in the Staking Information screen.


The **move or rotate information** which will guide you from the actual measurement to the design point is indicated in the [observation toolbar](#). You can press the Page button to toggle between various information if you do not see these values. If your measurement is within your defined tolerance of the design point then the text will be green, if not then the text will be red. This information is also available in the Staking Information screen. The type of information shown will vary based on your current Staking Method.

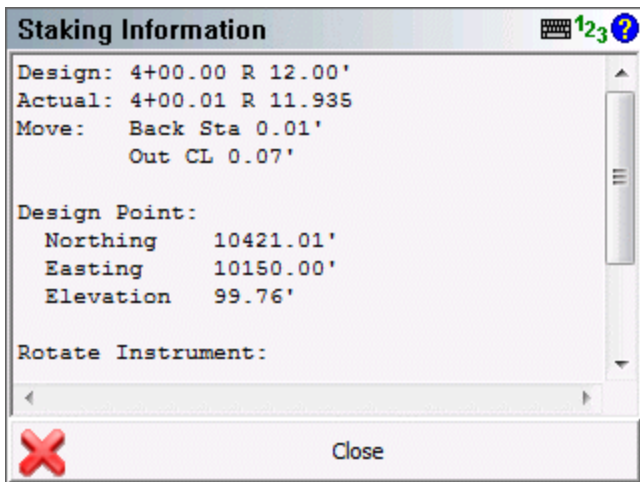

### Template Preview




At anytime during your staking you can press the Profile button to see the actual rod position which will be shows as an orange circle, in relation to the template defined for the alignment.

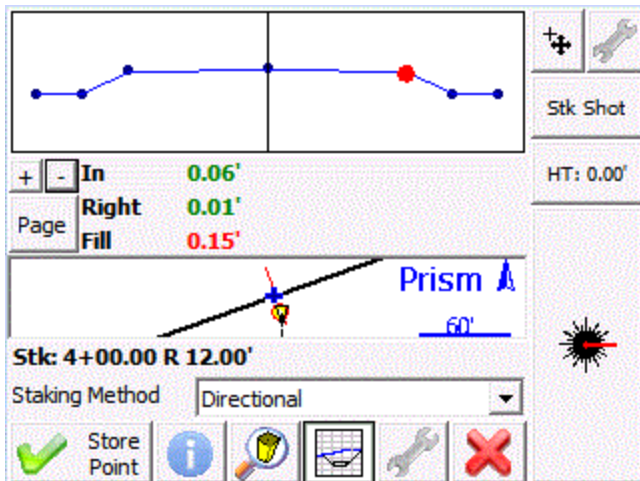

### Zoom Stake


If you press the Zoom Stake button in the staking toolbar, you will be zoomed in to show you both the design point and the actual measurement. The green circular area surrounding the design point reflects the area where you are within the defined staking tolerances.

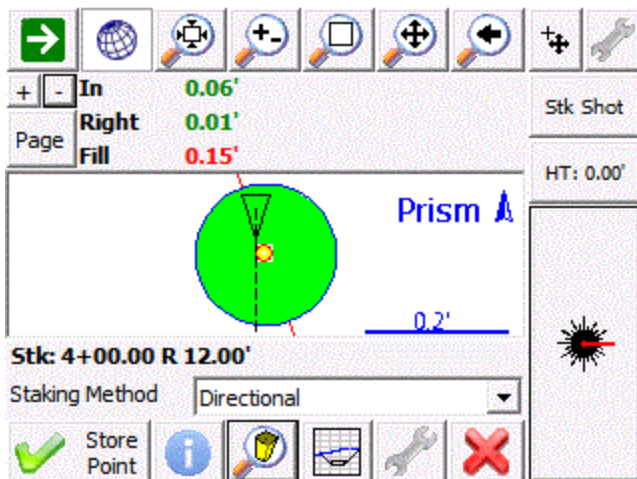

### Store Point

When you are ready to store the stake point press the **Store Point** button. You will then see the results for your stakeout.

If you are using GPS to stake the alignment, then you will not see the Store Point button. Instead, press the Measure button to trigger a measurement and then store the resulting shot.

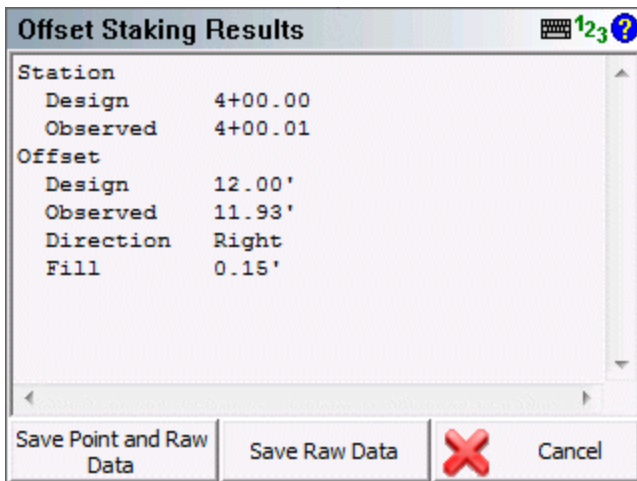

Press **Save Point and Raw Data** to store a point for this shot and to write your stake and cut sheet records to the raw file. By default the description for the stored stake point will equal the station and offset that was being staked.

Press **Save Raw Data** to write your stake and cut sheet records to the raw file, without storing a point.

If you press **Cancel**, nothing is stored or written to the raw file.

### Records written to raw file

Following are the records that are written to the raw file when you store a point.

If you do not store a point then the SP (Store Point) record is not recorded as no point was stored in the database.


```

SP,PN4,N 20000.0068,E 5000.0099,EL100.1038,--0+00.00 C 0.000
CF,ST0.000,OD1,OLO.010,EL100.1038,GD100.0000
OE,ST0.000,OE0.010
DE,PN,N 20000.000,E 5000.000,EL100.000,--
SD,ND-0.007,ED-0.010,LD-0.104
SK,OP1,FP4,AR201.48000,ZE93.10000,SD269.6600,--0+00.00 C 0.000
    
```

## Alignment Slope Staking


Continued from [Alignment Staking...](#)

When you're staking a point from a template, you can select the **Stake Slope** button from any point. However, you will usually slope stake from the hinge points on your template.

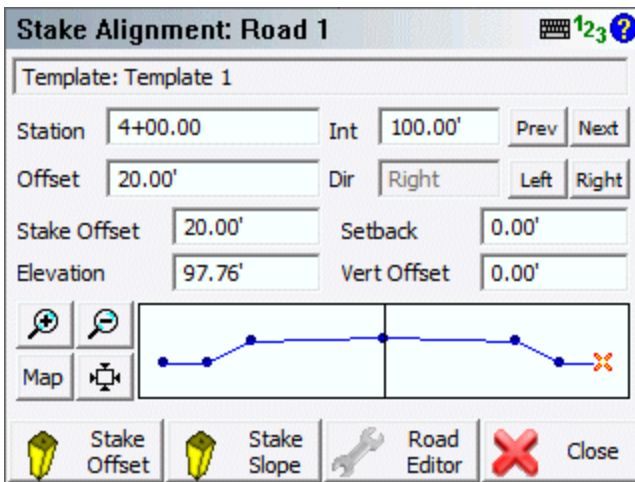


When you start slope staking and you measure your first shot, the program computes an intersection between a horizontal plane containing the measurement and the slope defined in the [stake settings](#) from the hinge point. FieldGenius will then compute a best guess location for the catch point and will tell you how much you need to move. After you measure a second shot, FieldGenius will create an


imaginary line between the two shots and intersects the slope from the hinge point. It then computes a new solution for the catch point.

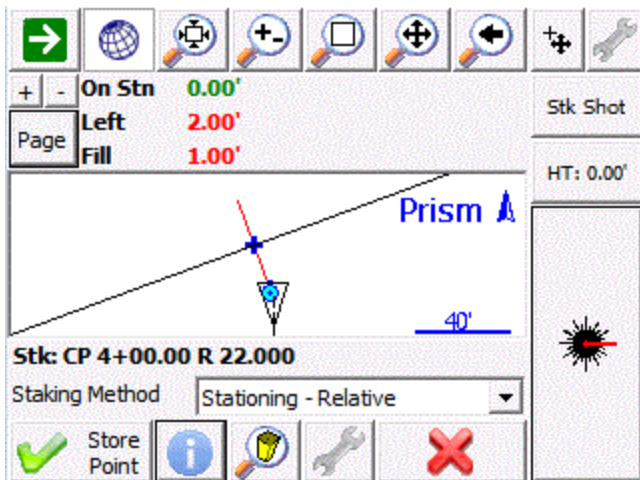

At anytime during your staking you can press the Profile button to see the actual rod position which will be shows as an orange circle. You will also see the slope lines from the hinge point.

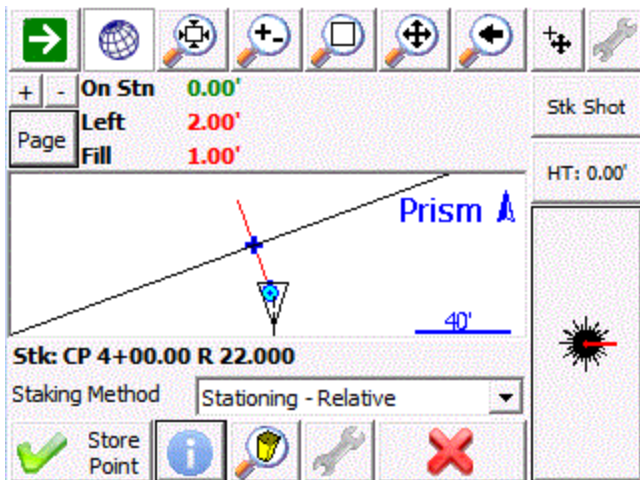


When you get near the catch point if you press the Zoom Stake button you will see a green circle in the map view representing the area within your specified staking tolerances.

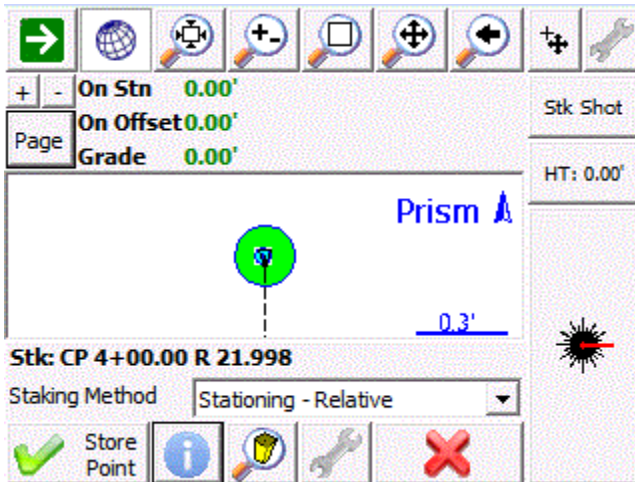

### Slope Staking Results

When you store your catch point position you will see the results screen. This screen will always report the following:

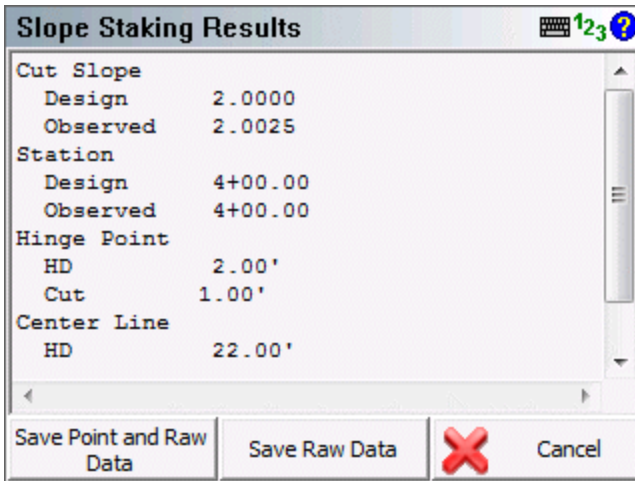

**Cut or Fill Slope:** The first line will always tell you if you staked a cut slope or fill slope. It will also display the design slope that was specified and record the actual computed slope that was staked.

**Station:** This will display the station of the template or cross section, and will show the actual station staked at the catch point.

**Hinge Point:** This is the distance from the rod position to the hinge point. It will also indicate the vertical distance from rod position to the hinge point. A cut indicates that the hinge point is lower; fill indicates that it is higher than the current rod position.

**Center Line:** This is the distance from the rod position to the centerline. It will also indicate the vertical distance from rod position to the centerline. A cut indicates that the centerline is lower; fill indicates that it is higher than the current rod position.

### **Save Shot**

Press **Save Point and Raw Data** store a point for this shot and to write your stake and cut sheet records to the raw file. By default the description for the stored stake point will equal the station and offset that was being slope staked. An example of an auto generated description is **CP 4+00.00 R 22.000**. The CP stands for Catch Point.

Press **Save Raw Data** to write your stake and cut sheet records to the raw file, without storing a point.

If you press **Cancel**, nothing is stored or written to the raw file.

### **Records written to raw file**

Following are the records that are written to the raw file when you store a point.

If you do not store the staked point, the SP (Store Point) record will not be recorded as no point was stored in the database.

```

|SP,PN81,N 5002.9770,E 4997.8367,EL99.9829,--CP 0+12.00 L 1.000
|SL,ST12.000,OD2,EL99.983,GD99.983,AS0.005,HH0.985,VH0.966,HC1.985,VC0.966,C-
|FO,DS1.000000,OB1.019583
|SK,OP100,FP81,AR282.28000,ZE90.16000,SD3.6800,--CP 0+12.00 L 1.000


```

### **Slope Staking with Offset/Setback**


In the Stake Alignment screen if you specify a stake offset or a setback distance, after you store your catch point position you will be asked if you want "Continue with staking the catch point setback?" If you press **No**, then this will be cancelled.

When you press **Yes**, you will then see the "Turn To" screen which will stake a position that is offset from the computed catch point. This offset will be equal to the offset you specified in the alignment screen.




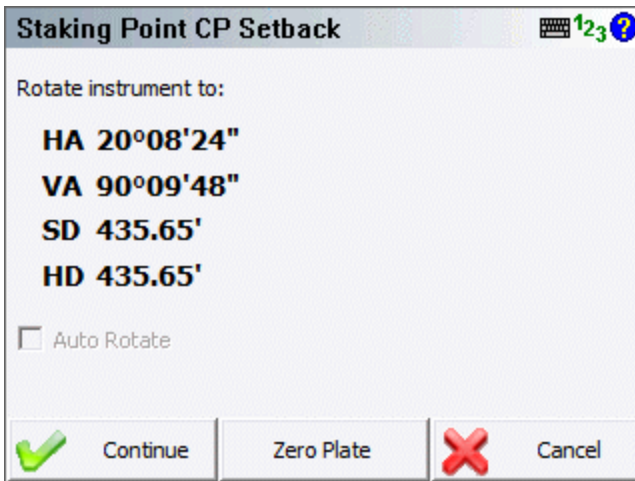


Now on the staking toolbar you will see the word **Stk: Pnt CP Setback** which indicates you're currently staking a slope stake setback point.

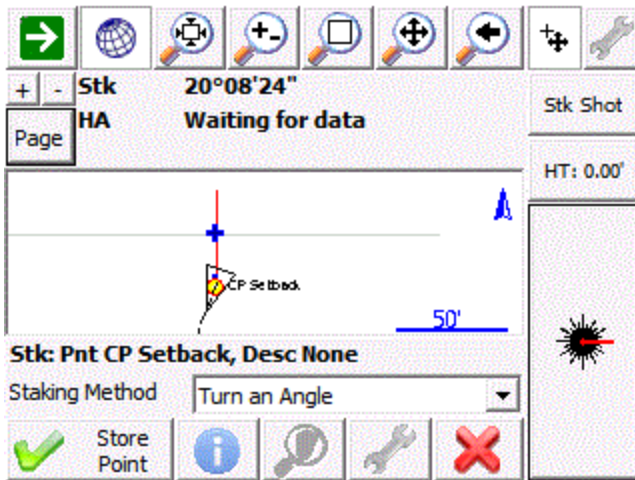

When you get to the offset position and store the point you will see the results screen once again. This time, the offsets to the hinge point and centerline will include the offset distance.

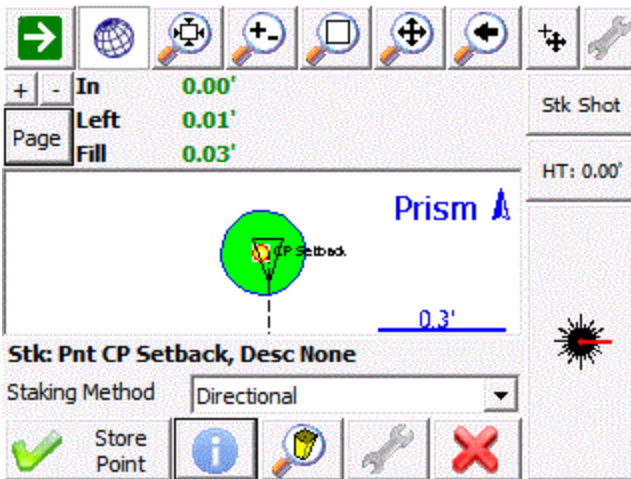

The vertical distances that are reported on the results screen are not computed using the current rod position. These values will be in relation to the actual catch point that was staked.

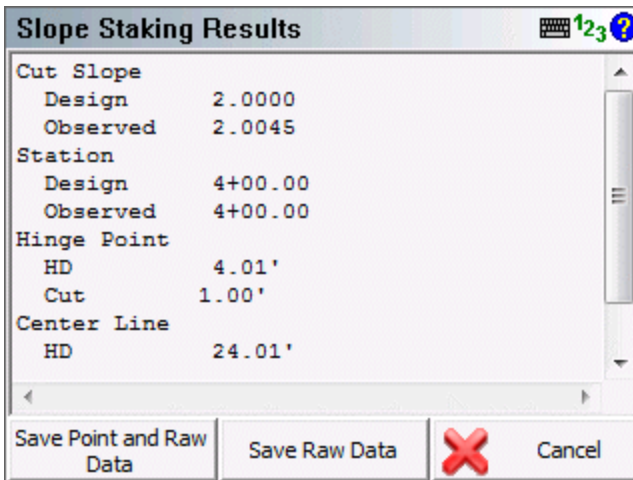

When you store the point you will see that the description that is auto generated for the point will be similar to the following example. **REF CP 4+00.00 R 24.00**

### Records written to raw file

Following are the records that are written to the raw file when you store a point.

If you have the Store Staked Point toggle turned off in the stake settings screen, you will see that no SP record is recorded as no point was stored in the database.

```
|SP,PN5004,N 5007.7522,E 5001.5139,EL100.1445,--CP 0+06.00 L 1.000 |
```

```
|SL,ST6.000,OD2,EL100.144,GD100.144,AS-  
0.002,HH0.498,VH0.501,HC1.498,VC0.501,CF0,DS1.000000,OB0.994169  
SK,OP101,FP5004,AR353.45220,ZE90.23420,SD13.9200,--CP 0+06.00 L 1.000  
SP,PN82,N 5007.2194,E 5002.2307,EL102.2842,--REF CP 0+06.00 L 2.000  
SR,ST6.000,OD2,EL102.284,GD100.144,AS-  
0.002,HH2.390,VH0.501,HC2.387,VC0.501,CF0,DS1.000000,OB0.994169,OL1.000  
DE,PNCP Setback,N 5007.078,E 5002.253,EL100.144,--  
SD,ND-0.141,ED0.022,LD-2.140  
SK,OP101,FP82,AR351.10340,ZE82.00000,SD14.6850,--REF CP 0+06.00 L 2.000
```

---

# CONNECTING TO COMPUTER

## Microsoft ActiveSync / Windows Mobile Device Center

Microsoft ActiveSync and Microsoft Windows Mobile Device Center facilitate communication between your PC and your handheld device.

If you are using Windows XP or earlier, **Microsoft ActiveSync** has to be installed on your computer so you can download data between your hand held and desktop computers. The current version (at time of printing) is ActiveSync 4.5. You may have to use an earlier version if you are running Windows 95 or 98. Check the web page noted below for more information.

If you are using Windows Vista, **Microsoft Windows Mobile Device Center** has to be installed on your computer, rather than Microsoft ActiveSync. The current version (at time of printing) is Windows Mobile Device Center 6.1.

---

## Installing ActiveSync / Windows Mobile Device Center

### Installing From Web

Microsoft ActiveSync or Microsoft Windows Mobile Device Center might already be installed on your computer; you can confirm this by looking for it in your Windows Start Menu.

If you do not have Microsoft ActiveSync or the Windows Mobile Device Center installed, you can download and install the latest version from Microsoft's website at this address:

<http://www.microsoft.com/windowsmobile/activesync/default.mspx>

**Note:** You may be asked to reboot your system once the installation is complete.

---

### Installing From CD

Microsoft ActiveSync or Microsoft Windows Mobile Device Center might be already be installed on your computer, you can confirm this by looking for it in your Windows Start Menu.

If you do not have Microsoft ActiveSync or the Windows Mobile Device Center installed, and you don't have access to the internet, it can be installed from your FieldGenius CD. You can browse into the FieldGenius folder on your CD and run one of the following files:

**MSASYNC.EXE** (for Windows XP or earlier)

**MSWMDC32.EXE** (for Windows Vista 32-bit)

**MSWMDC64.EXE**(for Windows Vista 64-bit)

**Note:** You may be asked to reboot your system once the installation is complete.

## Connecting ActiveSync / Windows Mobile Device Center

---


### Get Connected

---

We now need to establish a connection between your data collector and desktop computer as prompted by the ActiveSync or Windows Mobile Device Center Connection Wizard. The following screenshots are specific to ActiveSync, but the Mobile Device Center is almost identical.

After the install is complete, ActiveSync will display a Get Connected screen.

If ActiveSync was already installed, you can start it by going to your Start menu | All Programs | Microsoft ActiveSync. The Get Connected Wizard should appear. If it does not, go to the ActiveSync **File** menu and select **Get Connected**.

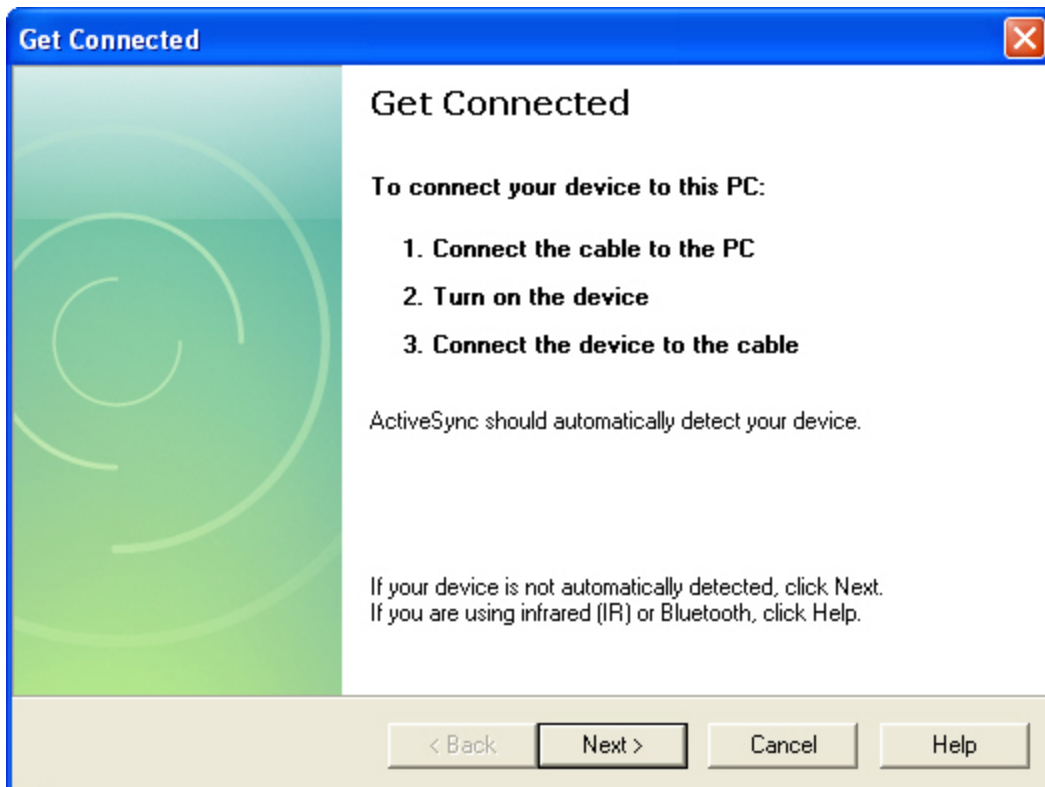

Connect your handheld data collector to your desktop or laptop computer using the supplied cradle and/or cables.

Power ON the data collector and click **Next** on the Get Connected Wizard. Some devices require you to tap a **PC Link** icon on the device while the Get Connected function is in operation.

When communication is established, you will be prompted to set up a partnership between your data collector and the desktop computer.

Note: If your device does not connect as shown, turn the device off, and then back on again to retry

## Establish a Guest Connection


After you successfully connect to your computer, you will be asked to setup a partnership. Choose **Guest Partnership** then click **Next** to continue.

**Note:**


You can setup a Standard Partnership if desired, but this is not necessary and adds complexity. We recommend using a Guest Partnership.



Or if you are using a handheld device running Windows Mobile 5.0 or newer, you may instead see the Synchronization Setup Wizard, simply press **Cancel** to use a guest connection.

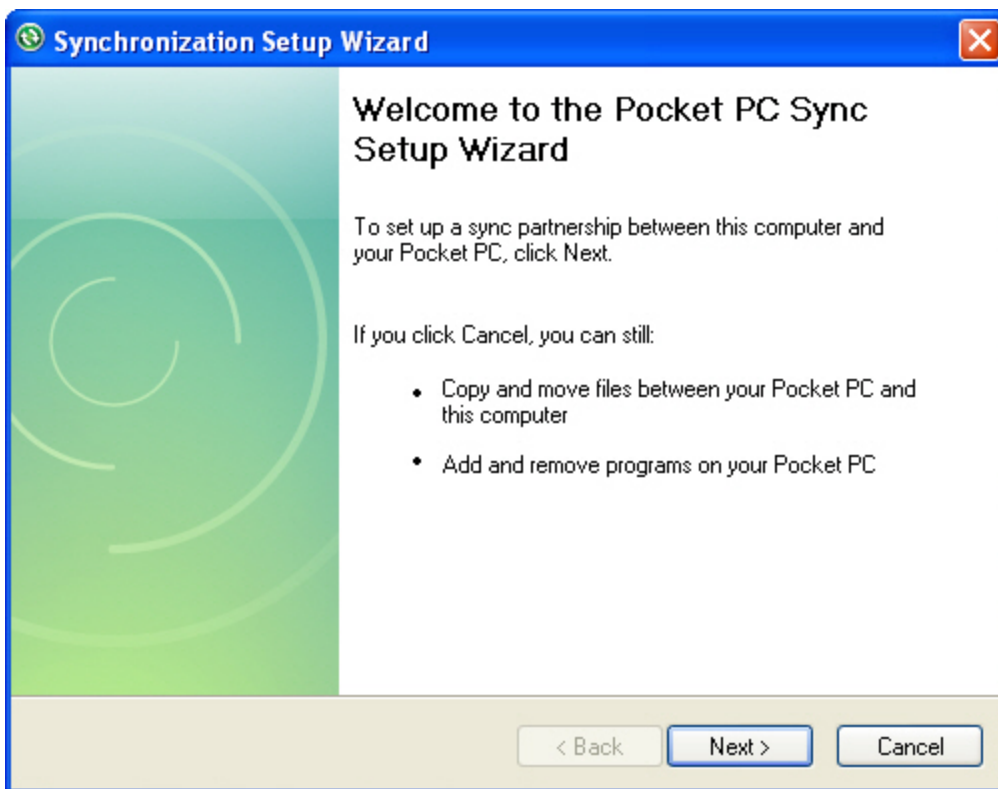

ActiveSync should now display as shown below:

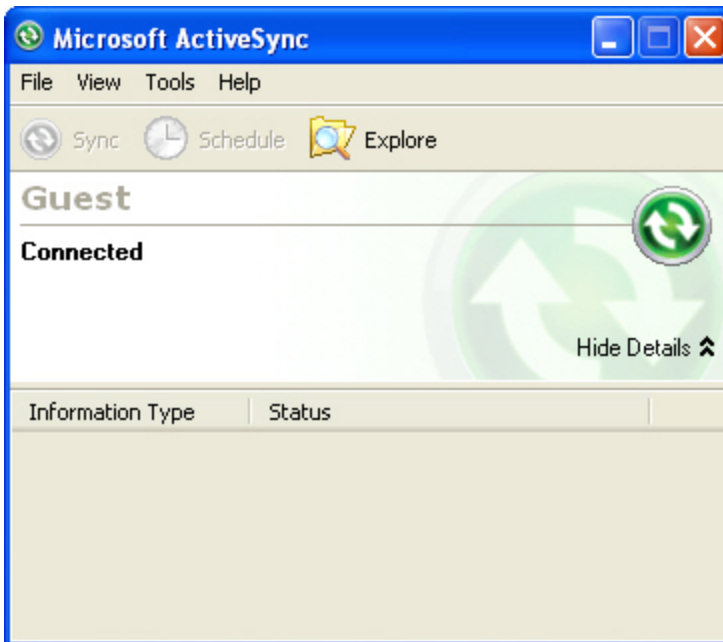

You are now ready to move on to the next step - [MicroSurvey Transfer Program](#)

**Note:**

A small circular ActiveSync icon will appear in the lower right corner of your desktop (like the one at right in the above image). This will display in gray when ActiveSync is inactive but will change to green when your device is connected.


## MicroSurvey Transfer

We provide a free transfer tool with FieldGenius to help you copy projects to and from your data collector. The program is called MicroSurvey Transfer and it can be download from our website or installed directly off of the CD provided with FieldGenius.

Once installed all you need is to connect your handheld computer to your desktop computer via an [ActiveSync or Windows Mobile Device Center](#) connection. ActiveSync is a Microsoft Windows product which establishes a serial or USB connection between your data collector and your computer.

Once connected, you can start the MicroSurvey Transfer program.



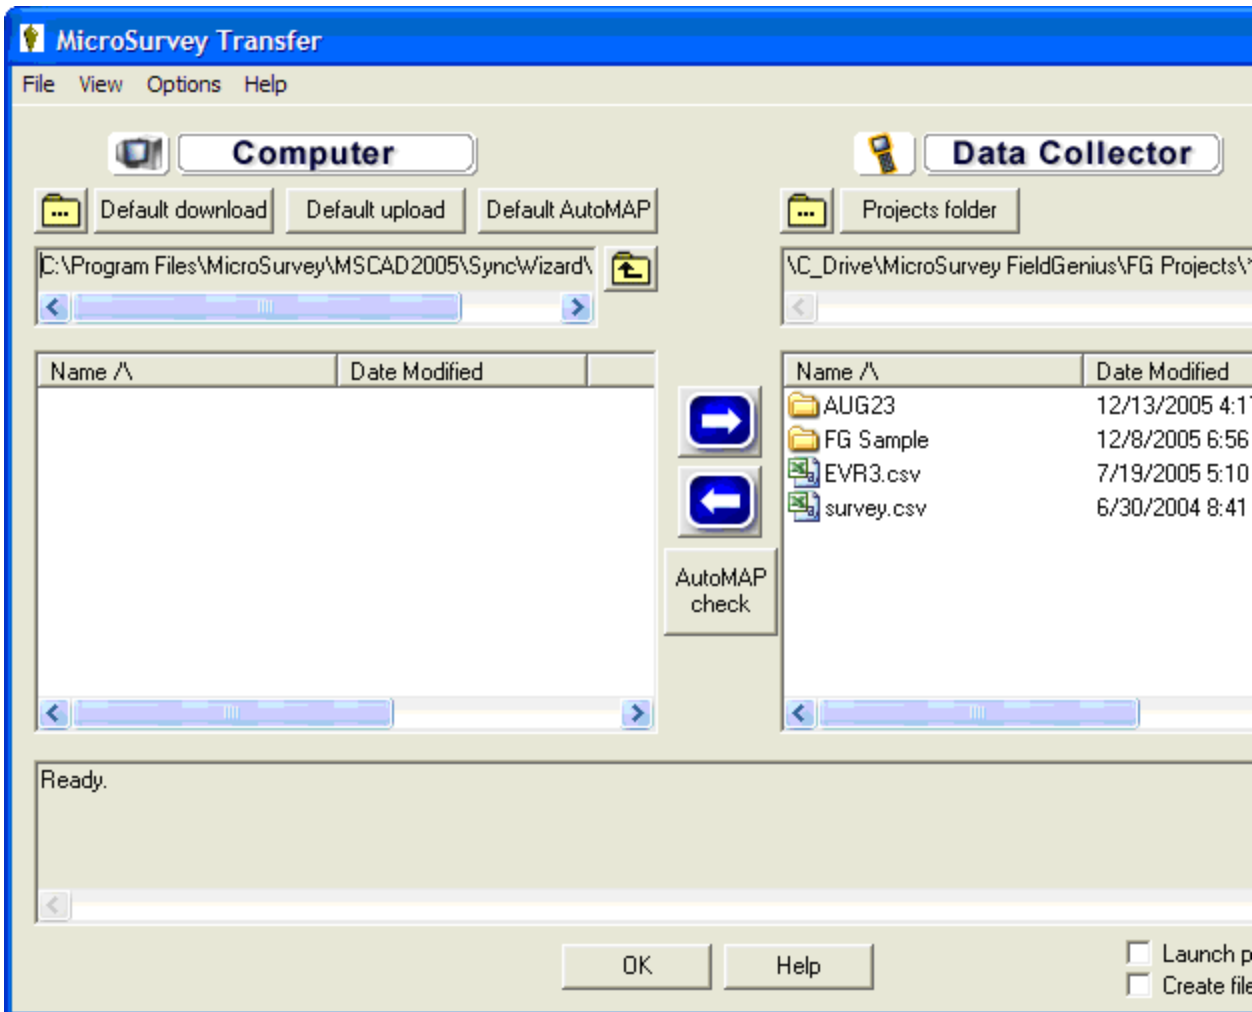

The program has been designed to streamline the transfer of projects and files back and forth between you data collector and computer.

For more details, please refer to the Help file included with the MicroSurvey Transfer program.

## Synchronize with MicroSurvey CAD or inCAD

To import your projects into your MicroSurvey CAD or inCAD desktop product, please refer to the **FieldGenius SyncWizard** topic in the MicroSurvey CAD or inCAD help file.



FieldGenius 2004/2005 projects can only be imported directly into MicroSurvey CAD 2004 or later, or inCAD 2004 or later.

FieldGenius 2006 (and newer) projects with an unencrypted raw file (\*.raw) can only be imported into MicroSurvey CAD 2005 SP1.2 or later, or inCAD 2006 or later.

FieldGenius 2007 (and newer) projects with an encrypted raw file (\*.rae) can only be imported into MicroSurvey CAD 2008 or newer.



# RAW FILE REFERENCE

## Raw File Record Types

To increase our compatibility with other data collectors and desktop systems, FieldGenius uses the TDS RW5 raw file format. The raw file contains virtually all the measurements made in the field and is a complete history of what was recorded.

For more information on the raw data record format, or for additional record types, please review the Raw Data Record Specification document from Tripod Data Systems, Inc. It is available for download at [www.tdsway.com](http://www.tdsway.com)

### Conventional Raw Data Records

#### -- - Note or Comment Records

A comment in the raw file will be depicted with a record type of two dashes. Text found after the dash is the comment.

Comments are ignored during processing of the raw file and are used only for information purposes only. You can add a comment to the raw file by using the Add Comment button in the [Survey / Traverse Menu](#).

```
|-- This is a comment |
```

#### BK - Backsight Record

A backsight record is written to the raw file when you complete an occupy point command. Please review the [Setup Occupy Point](#) topic for more information.

Field headers:

OP: Occupy point

BP: Back point

BS: Backsight

BC: Back circle

```
|BK,OP101,BP100,BS0.00000,BC0.00000 |
```

#### CF - Cut Sheet

When you stake out a point, a CF record will be recorded in the raw file.

ST: Station

OD: Offset direction (ENUM)

OL: Offset length

EL: Elevation

GD: Grade (design)

---

## DE - Design Point / Location

During a stakeout the point you're staking will be recorded in the raw file with as DE record.

PN: Point name (*design point, may be blank*)

N : Northing

E : Easting

EL: Elevation

--: Description (*design point description, may be blank*)

---

## JB - Job Record

Every time a raw file is created or opened a JB record will be written to the file.

Field headers:

NM: Job name

DT: Date

TM: Time

!JB,NMTraverse1,DT03-05-2004,TM14:07:52

!

---

## LS - Line of Sight (Instrument and Target Height)

HI: Height of instrument

HR: Height of rod

!LS,HI1.500,HR1.500

!

---

## MO - Mode Setup Record

Every time a raw file is created or opened a MO record will be written to the file.

Field headers:

AD: Azimuth direction - (0 = North) (1 = South)

UN: Distance unit - (0 = Feet) (1=Meter) (2=US Survey Feet)

SF: Scale factor

EC: Earth curvature - (0 = off) (1=On)

EO: EDM offset (inch) (Default string "0.0") \*\*Not used by FieldGenius

AU: Angle unit - (0=Degree) (1=Grads)

```
|MO,AD0,UN1,SF1.000000,EC0,EO0.0,AU0
```

```
|
```

---

## OC - Occupy Point Record

When you complete the occupy point command an OC record will be written to the raw file. Please review the [Setup Occupy Point](#) topic for more information.

Field headers:

OP: Point number

N : Northing (the header is N space)

E : Easting (the header is E space)

EL: Elevation

--: Description

```
|OC,OP101,N 1000.0000,E 1000.0000,EL10.0000,--
```

```
|
```

---

## OF - Off Center Shot Record

When you use any of the offset shot commands an OF record will be written to the raw file. Two types of measurements will create offset records and they are the Angle Offset and Distance Offset measurement modes. Please see the Measurement Modes topic for more information.

Field headers:

AR: Angle right

ZE: Zenith

SD: Slope distance

OL: Offset length

HD: Horizontal distance

VD: Vertical distance

LR: Left/Right Offset

```
|OF,AR90.00000,ZE90.00000,SD50.0000
|OF,ZE60.00000,--Vert Angle Offset
```

```
|
|
```

```
|OF,OL45.00000,--Right Angle Offset  
|OF,HD-10.0000,--Horizontal Distance Offset  
|OF,LR0.0000,--Left / Right Offset  
|OF,VD0.0000,--Elevation Offset
```

Offset shots will always contain the original measurement plus the offset information. You will also see a SS record accompany the OF records and it will contain the reduced measurement. Following is an example of a distance offset where an offset of -10 was entered:

```
|OF,AR180.00000,ZE90.00000,SD50.0000  
|OF,HD-10.0000,--Horizontal Distance Offset  
|OF,LR0.0000,--Left / Right Offset  
|OF,VD0.0000,--Elevation Offset  
|LS,HI1.500,HR1.500  
|SS,OP1,FP5,AR180.00000,ZE90.00000,SD40.0000,--<No Desc>
```

---

## RB – Repeat Backsight

When using the multiset function, a RB record will be recorded to the raw file for each backsight shot you measure. Please refer to the [Multi-Set](#) topic for more information.

Field headers:

OP: Occupied point

BP: Backsight point

AR: Angle right

ZE: Zenith angle

SD: Slope distance

HR: Height of rod

```
|RB,OP333,BP100,AR79.48560,ZE93.42500,SD1.9700,HR1.500,--
```

---

## RF - Repeat Foresight

When you use the multiset function, a RF record will be recorded to the raw file for each foresight shot you measure. Please refer to the [Multi-Set](#) topic for more information.

OP: Occupied point

FP: Foresight point

AR: Angle right

ZE: Zenith angle

SD: Slope distance

HR: Height of rod at the foresight

**--: Description**

```
|RF,OP333,FP888,AR20.45530,ZE89.56080,SD1.9800,HR1.500,--<No Desc>
```

**RE - Remote Elevation**

When you use the Benchmark Shot function a RE record will be recorded in the raw file. RE records will be accompanied by a SP record.

The FE value will be defined by the Benchmark Method selected by the user as being either an existing point or a user entered value. Please refer to the [Measure Benchmark](#) topic for more information.

OP: Occupied point

FE: Foresight elevation

ZE: Zenith angle

SD: Slope distance

--: (always "Remote elev")

```
|RE,OP1,FE10.000,ZE90.00000,SD50.0000,--Remote elev
```

**RS - Resection**

When you use the resection function a RS record will be recorded for each observation made to your control points. Please refer to the Resection topic for more information.

PN: Point number

CR: Circular reading

ZE: Zenith (or VA, CE)

SD: Slope distance (or HD)

```
|RS,PN103,CR2.42220,ZE90.00000,SD25.0980
```

When you complete a resection the control points you used will be written as SP records and after the RS records you will see one final SP for the computed resection point. An example of a resection is shown below:

```
|--Resection
|SP,PN103,N 3135.070,E 1511.185,EL399.795,--:
|SP,PN100,N 3097.874,E 1564.984,EL399.387,--:
|LS,HI1.300,HR0.000
|RS,PN103,CR2.42220,ZE90.00000,SD25.0980
|RS,PN100,CR102.26120,ZE90.00000,SD56.3050
|SP,PN999,N 3110.000,E 1510.000,EL398.291,--
```



## **SD - Stakeout Deltas**

When you complete a stakeout by pressing the store point command a SD record will be written to the raw file. It is the difference between the design location (DE record) and the actual point staked (SP record).

ND: Delta northing

ED: Delta easting

LD: Delta elevation

---

## **SK - Stake Out Record**

When you stake out a point and use the Store Point command a SK record will be written to the raw file. This is the raw observation that was recorded when you stored you stake point.

OP: Occupy point

FP: Foresight point

AR: Angle right

ZE: Zenith

SD: Slope distance

```
|SK,OP251,FP10000,AR175.00000,ZE90.00000,SD6.0000,--Design Point: 342 |
```

---

## **SL - Slope Staking Record**

ST: Station

OD: Offset direction (ENUM)

EL: Actual catch point elevation

GD: Grade (design elevation of the catch point based on the slope line)

AS: Ahead on station (positive when rod is beyond design station, negative when before station)

HH: Horizontal distance to hinge point (always positive)

VH: Vertical distance to hinge point (positive when rod is above hinge)

HC: Horizontal distance to center line (always positive)

VC: Vertical distance to center point (positive when rod is above center point)

CF: Slope used (ENUM)

DS: Design slope

OB: Observed slope

---

## SP - Store Point

Many routines in FieldGenius will write a SP record to the raw file. SP records contain coordinate information that can be used for setups, resections, etc...

PN: Point number

N: Northing

E: Easting

EL: Elevation

--: Description

```
|SP,PN103,N 3135.070,E 1511.185,EL399.795,--:
```

```
|
```

---

## SS - Sideshot

When you record a shot a SS record will be recorded in the raw file. Many other functions also create a SS record such as when offset and multi set shots are reduced.

OP: Occupy point

FP: Foresight point

AR: Angle right

ZE: Zenith

SD: Slope distance

--: Description

```
|SS,OP1,FP7,AR176.11093,ZE90.00000,SD60.1332,--<No Desc>
```

```
|
```

---

## TR - Traverse Shot

When you record your shot as a Traverse shot, a TR record will be recorded to the raw file. Please refer to the Measurement Info and [Traverse Report](#) topics for more information.

OP: Occupy point

FP: Foresight point

AR: Angle right

ZE: Zenith

SD: Slope distance

--: Description

!TR,OP1,FP7,AR176.11093,ZE90.00000,SD60.1332,--<No Desc>

!

---

## GPS Raw Data Records

---

### AH - GPS Antenna Height

DC: Derivation Code (ENUM)

MA: Measured antenna height

ME: Measure Method (ENUM)

RA: Reduced antenna height (to phase center)

---

### BL - GPS Base Line

DC: Derivation

PN: Point Name

DX: Base line Delta X

DY: Base line Delta Y

DZ: Base line Delta Z

-- : Description (Feature Code)

GM: GPS Measure Method (ENUM)

CL: Classification

HP: Horizontal Precision

VP: Vertical Precision

---

### BP - Set Base Receiver Position

PN : Point Name

LA: Latitude

LN: Longitude

HT: Ellipsoid Height

SG: Setup Group (default = 0)

---

### CS - Coordinate System Identity

CO: Coordinate system option (ENUM)

ZG: Zone group (system) name

ZN: Zone name

DN: Datum name

---

## **CT - Calibration Point**

PN: Point Name

DM: Dimensions used (ENUM)

RH: Horizontal residual

RV: Vertical residual

---

## **CV - RMS Covariance of GPR Position**

DC: Derivation (ENUM)

SV: Minimum number of SV during observation

SC: Error Scale

XX: Variance X

XY: Covariance X,Y

XZ: Covariance X,Z

YY: Variance Y

YZ: Covariance Y,Z

ZZ: Variance Z

---

## **EP - Geodetic Position**

When you save the location of a point, its geodetic position is also recorded.

TM: Time

LA: Latitude

LN: Longitude

HT: Ellipsoid Height

RH: Horizontal RMS returned from receiver

RV: Vertical RMS returned from receiver

DH: HDOP if receiver returns this info

DV: VDOP if receiver returns this info

GM: GPS Method (ENUM)

CL: Classification (ENUM)

---

## **HA - Horizontal Calibration (Adjust)**

N : Origin north

E : Origin east

TH: Translation north

TE: Translation east

RT: Rotation about origin

SF: Scale factor at origin

---

## **GS - GPS Store Point**

This is similar to a regular SP (store point) record but the GS indicates that it is create by GPS.

PN: Point Name

N : Local Northing

E : Local Easting

EL: Local Elevation

-- : Description

---

## **RP - Local coordinates of calibration point**

N : Northing

E : Easting

EL: Elevation

-- : Description

---

## **VA - Vertical Calibration (Adjust)**

PV: Type of vertical adjustment (ENUM)

N : Origin north (*may be blank*)

E : Origin east (*may be blank*)

LZ: Constant adjustment – translation Z (*may be blank*)

SO: Slope north (*may be blank*)

SA: Slope east (*may be blank*)

GN: Geoid Model Name



# INDEX

-			
-- - Note or Comment Record	500		
<b>3</b>			
3D View Toolbar	60		
3-Point Arcs	98		
<b>A</b>			
About Menu	333		
Acres	248		
Activation	27		
Active Figure	92, 97		
Active Linework	85		
Active Tolerance Mode	405		
ActiveSync	492, 496		
Add Invert	193		
Adjust Traverse	217		
Advanced Template Editing	467		
AH - GPS Antenna Height	507		
Alignment DTM Surface	474		
Alignment Slope Staking	485		
Alignment Staking	474, 480		
Alignments	114, 324, 448		
Angle Balance	217		
Angle Offset	171, 174		
Angle Unit	131		
Antenna Height	384, 405		
Arc Mode	107, 205		
Arcs	98		
Area Calculator	248		
Area Volume	303		
ASCII Coordinate File	314, 318, 340		
ATR	361		
Attributes	82		
Audio Notes	81		
Auto Recording	385		
Auto Store	157		
Auto-Center	62, 359, 361		
AutoMap Library	72, 103		
Automatic Save	43		
Autonomous	389		
average	71		
Averaged Geodetic Position	388		
Averaging	71		
<b>B</b>			
Backsight	149, 170, 334, 363		
Backsight Measure Mode	152		
Backsight Summary	153		
Backup Coordinate System	331, 422		
Balance Traverse	217		
Base Receiver	385, 388		
Base Receiver Setup	386		
Base Setup	385		
Base Tolerances	380		
Benchmark	192		
BK - Backsight Record	500		
BL - GPS Base Line	507		



Bluetooth	349, 378
BP - Set Base Receiver Position	507
Breaklines	305
Buttons	42
By Distance	80

**C**

Calculations Menu	231
Calculator	43, 247-248, 257-258, 260
Calibrate Instrument	373
Cartesian Coordinate	258
Caster	407
Centerline Alignment	451
CF - Cut Sheet	500
CgPoints	323
Chains	325
Check Backsight	170
Check instrument level	373
Check Level	372
Check Point	169, 395
Close Traverse	212
Closing Figures	100
Code-Free Linework	85
Codes	72
COGO	232, 236
COGO History Viewer	211
COGO Results	211
CogoCalcs.txt	211
Command Console	409
Command Line	409
Comment	84

Common Buttons	42
Communication Link	398
Compass Balance	217
Complete Figure	101
Complex Figure	100
Configure Reference	380
Connect Points	108, 206
Connect Points Mode	108, 206
Connect/Disconnect	361
Contact Information	12
Contour Interval	301
Contours	308
Conventional Total Station	342
Convert Line-Spine	99
Coordinate Calculator	258
Coordinate Conversion	258
Coordinate Database	288
Coordinate System	331, 422
Coordinate System Settings	134, 410
Coordinate Systems - Geoids	418, 423
Coordinate Systems - Grid Shift Files	424
Copy	338
Correction Information	404
Correction Link	398
Corrections	385, 398
Cross Section	463
Cross Sections	324, 467, 473
CS - Coordinate System Identity	507
CT - Calibration Point	508
Cursor Tracking	63, 360
Curvature and Refraction	132

Curve Calculator	247	DOP	65, 397
Cut Sheet Reports	282	Down/Out	239
CV - RMS Covariance of GPR Position	508	Download	492, 496
<b>D</b>		DP Record	208
Data Collector Models	24	Draw Figures Manually	108, 206
Data Entry	43	Draw Option Defaults	103
Data Manager Menu	287	Drawing Tool	105, 203
Datum	134, 410	DTM	297, 309, 474
Datum Grid Editor	418	DXF	87, 89, 290, 320-321
DBF File	82	DXF Files	87
DE - Design Point / Location	501	<b>E</b>	
Default Keyboard Shortcuts	142	Edit Points	200
Default Prism	338	Edit Road	450
Default Reflectorless)	338	Edit Target	340
Delete Last Saved Point	208	EDM Mode	334, 361, 364
Delete Point	208	EDM Settings	352
Deleting Figures	102	Elevations - GNSS / GPS	423
Demo Mode	27	Ellipsoid	134, 258, 410
Descriptions	72	Ellipsoid Height	423
Direction Entry	49	embeddedCAD	497
Direction Format	131	End Figure	101
Direction Units	49	End-User License Agreement	3
Disclaimer and Limited Warranty	3	EP - Geodetic Position	508
Disconnect GPS	407	Equal Partitions	80
Display Settings	118	ESRI	82, 331
Display Toolbar	56	Exit	111
Distance Entry	45	Export	282, 311, 313, 318, 321, 325, 329-330
Distance Offset	175	Export User Defined	331, 422
Distance Unit	130	Extended Edit Fields	43
Distance Units	45		

<b>F</b>		Sensor Information	407
FBK File	329	GPS Demo	134, 346
FEA File	82	GPS Local Transformation	221, 424
Feature List Editor	82	GPS Model and Communication	377
Fieldbook File	329	GPS Profile	133, 346
Figure Direction Marker	95	GPS Raw Data Records	507
Figure List	97	GPS Reference Profile	375
Figures 85, 87, 91-92, 95-102, 110, 325		GPS Rover	381
Figures Draw Manually	108, 206	GPS Rover Profile	376
Figures Toolbar	88	GPS Settings	402
File Types	42	GPS Tasks	402
Files	29, 112	GPS Toolbar	65, 397
Foresight	334, 363	Grid Shift Files	424
<b>G</b>		GS - GPS Store Point	509
Geodetic Coordinate	258	GSM	407
Geodimeter	342-343	GSM modems	398
Geoid	134, 258, 410	Guide Lights	361
Geoid Files	418	<b>H</b>	
Geoids	423	HA - Horizontal Calibration (Adjust)	509
Georeferenced Images	290	Hardware Requirements	24
GIS	82	Hectares	248
GNSS	424	height	336, 366
GNSS Measurement Modes	386	Helmerts Transformation	225
GPS 65, 374, 380-381, 384-385, 393, 397-398, 400-402, 424, 428		Horizontal Angle Offset	171
Correction Information	399	<b>I</b>	
Position Information	407	icon	339
Raw Data Logging	408	Images	290
Satellite List	401	Import	290, 309, 311, 313-314, 320, 322,

	340, 497	LandXML	114, 290, 309, 322, 325, 448
Import User Defined	331, 422	LandXML Cross Sections	473
Import/Export Menu	311, 313	Laser Plummet	372
inCAD	496-497	Laser Pointer	361, 372
Installation	26	Layers Manager	290
Instrument Settings	62, 359	Layout Elevation	285
Instrument Configuration	347	LDD	329
Instrument Selection	132, 345	Leica	342-343
Instrument Settings	64, 361	Level Bubble	361, 372-373
Instrument Settings Toolbar	361	Level Bubble - check with every shot	373
Instrument Toolbar	62, 359	Level Bubble Tolerance	373
Intersection	179	License Agreement	3
Introduction	24	Licensing	333
Inverse	236	Line Mode	106, 204
Invert	193	Line Toolbar	88
		Line-Angle Offset	181
<b>J</b>		Line-Distance Offset	183
JB - Job Record	501	Line-Perpendicular Point	187
Job Information	145	Lines	87, 91
Joystick Control	361	Linework	85
JPG/JPEG	290	Link Configure	404
		Link Information	404
<b>K</b>		Local Transformation	221, 225, 393, 424, 428
Keyboard Shortcuts	142	Local Transformation to Point	388
Keypad	43-44	Lock	63, 360
Kinematic	385	Lots	325
Known Geodetic Position	388	LS - Line of Sight (Instrument and Target Height)	501
<b>L</b>			
Land Development Desktop	329		

<b>M</b>			
Main Interface	54	Mini Toolbar Control	61
Main Menu Button	111	MO - Mode Setup Record	501
Make and Model Settings	346	Model and Communication	348
Manage Road	450	Modem Settings	398
Manual Distance	177	Mount Point	407
Manual Entry	178	MSCAD	496-497
Manual Entry - Alignment C/L	451	Multiple prisms	63, 360
Manual Entry - Template	463	Multi-Set	158
Manual Entry - Vertical Profile	458	Multi-Set Tolerance	355
Map Data Layers Manager	290	<b>N</b>	
Map Select Toolbar	66	Nautiz X7	82
Map View	54	New	34
Masks	380	New Figure	96
mcvariable		New Road	450
Primary.ProductNameDesktop	103	New Target	338-339
Measure	62, 64, 359, 361	Nikon	342
Measure Backsight	149	No Communication	358
Measure Benchmark	192	No Lock	63, 360
Measure Distance	67	No Store	149
Measurement	393	Notes	80
Measurement Mode	62, 359	NTRIP	398, 407
Measurement Mode	64, 361	<b>O</b>	
Measurement Modes GNSS	386	Observation Toolbar	57
Measurement Tolerance	355	OC - Occupy Point Record	502
Microsoft ActiveSync	492	Occupy	149
Microsoft Windows Mobile Device Center	492	OF - Off Center Shot Record	502
MicroSurvey CAD	496-497	Offset	171, 174-175, 179, 181, 183, 187, 239
MicroSurvey Software Inc.	12		





---

Satellite Plot	65, 397, 400	Shapefile	330
Save	43	Shift	242, 334, 363
Save as Default Settings	132	Shift Files	424
Save Coordinate System	331, 422	Shortcuts	142
Save Template	328	Sideshot	156
Scale	242	Sideshot (Auto Store)	157
Scale Factor	131	SIP	44
Scientific Calculator	260	SK - Stake Out Record	505
Scripts	409	Skymap	400
SD - Stakeout Deltas	505	SL - Slope Staking Record	505
SDR	329	Slope Staking	485
Search	63, 360	Smart Tags	110
search	63, 360	Sokkia	329, 342
Search Settings	356	SP - Store Point	506
Sections	473	Splines	99
Seed Position	314	Split Lines/Arcs	79
Select GPS Profile	374	SS - Sideshot	506
Select Line Toolbar	89	Stake Alignment	282, 480
Select Point Toolbar	70	Stake Arc	274
Send commands	409	Stake Elevation	285
Sensitivity Level Bubble	373	Stake Line	274
Sensor Configure	403	Stake Offset	480
Sensor Information	403	Stake Point	267
Set Angle	371	Stake Surface	278
Set instrument prism constant to zero	335, 364	Staking	270, 474, 480, 485
Sets	158	Staking List	279
Settings	118	Staking Menu	266
Settings Menu	117	Staking Reports	282
Setup	149	Standard Deviation	166
Sewer	114, 448	Start Button	111
		Starting	26

---



Station/Offset	239	Temporary	336, 366
StdDev	166	Temporary (No Store)	149
Store Point	67	Text Notes	81
Store Points	200	TGRID	304
Supported Devices	24	TIF/TIFF	290
Surface	309	TIN	304
Surface Manager	298	Tolerance Level Bubble	373
Surface Settings	300	Tolerance Modes	381
Surface Volume	303	Tolerances	380
Surfaces	297, 323	Topcon	342-343
Survey Methods Menu	146, 368	Topo Toolbar	58
Survey Tools Menu	199	Total Station	342
Switching Active Figures	97	Total Station Configuration	347
Synchronize	497	Total Station Demo	133, 346
SyncWizard	497	Total Station Make and Model	346
Syntax	409	Total Station Profile	133, 345
		TR - Traverse Shot	506
		Transfer	496
		Transform	290
		Transform Points	225
		Transformation	221, 393, 424, 428
		Translate	242
		Transmit Corrections	385
		Traverse	157
		Traverse / Intersection	232
		Traverse Adjustment	217
		Traverse Report	212
		Triangle Calculator	257
		Trilateration	190
		Trimble	342-343
		Turn	371
<b>T</b>			
Target	340		
Target Height	62, 334, 359, 363		
Target Height	62, 334, 359, 364		
Target List	334, 338-339, 363		
Target Manager	63-64, 334, 339, 360-361, 363		
target type	339		
TDS	500		
Technical Support	10		
Template	463		
Template Export	327		
Template Import	326		
Templates	467, 473		

---

Turn Instrument	361	Zoom	56
Turn to Point	67		
Two Line Intersection	179		

**U**

Unit Settings	130
Units	45, 49
Upload	492, 496
User Defined	134, 410
User Defined Coordinate Systems	331, 422
Using Active Figures	92

**V**

VA - Vertical Calibration (Adjust)	509
Version	333
Vertical Angle Offset	174
Vertical Balance	217
Vertical Plane Projection	194
Vertical Profile	458
Volume	302

**W**

Windows Mobile Device Center	492, 496
------------------------------	----------

**X**

XML	114, 290, 309, 322, 325, 448, 473
-----	-----------------------------------

**Z**

Zeiss	342-343
-------	---------

